PIONEER
The Art of Entertainment

Service Manual

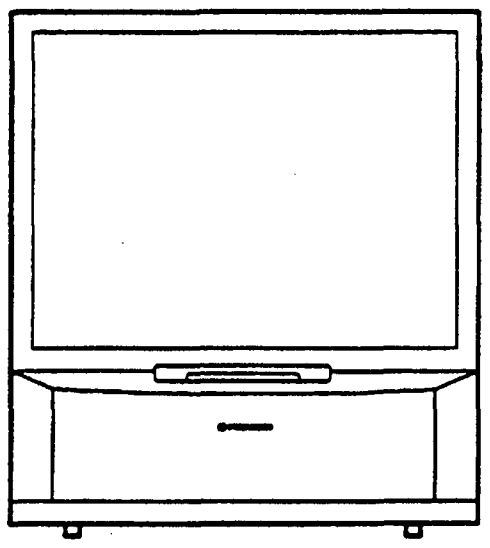

ORDER NO.
ARP2952

PROJECTION MONITOR RECEIVER

SD-P50A3-K

SD-P55A3-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model		Power Requirement	Remarks
	SD-P50A3-K	SD-P55A3-K		
KUXC	○	○	AC120V	

CONTENTS

1. SAFETY INFORMATION 2
2. EXPLODED VIEWS AND PARTS LIST 5
3. SCHEMATIC DIAGRAM 14
4. PCB CONNECTION DIAGRAM 57
5. PCB PARTS LIST 89
6. ADJUSTMENT 96
7. GENERAL INFORMATION 126
   7.1 PARTS 126
      7.1.1 IC 126
   7.2 DISASSEMBLY/ASSEMBLY 129
   7.3 REPLACEMENT 130
   7.4 MEASURING METHOD 131
   7.5 WIRING DIAGRAM 131
   7.6 BLOCK DIAGRAM 132
8. PANEL FACILITIES AND SPECIFICATIONS .. 135

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 501 Orchard Road, #10-00 Lane Crawford Place, Singapore 0923

© PIONEER ELECTRONIC CORPORATION 1997

O - IZG APR. 1997 Printed in Belgium

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safety repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safety, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).
When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

1.1 SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis or picture tube.
The following precautions should be observed :

1. Do not install, remove, or handle the picture tube in any manner unless shatterproof goggles are worn. People not so equipped should be kept away while picture tubes are handled.
   Keep picture tube away from the while handling.
2. When service is required, even though the PROJECTION MONITOR RECEIVER an isolation transformer should be inserted between power line and the set in safety before any service is performed.
3. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
4. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
5. Always use the manufacture's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's.
   Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
6. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacture has become defective, or inadvertently defeated during servicing.

Therefore, the following checks should be performed for the continued protection of the customer and service technician.

Leakage Current Cold Check

With the AC plug removed from the 120V AC 60Hz source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis should have a minimum resistor reading of 0.3MΩ and a maximum resistor reading of 5MΩ. Any resistor value below or above this range indicates an abnormality which requires corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into a 120V AC 60Hz outlet (do not use an isolation transformer for this check). Turn the AC power switch on.

Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 0.5mA.

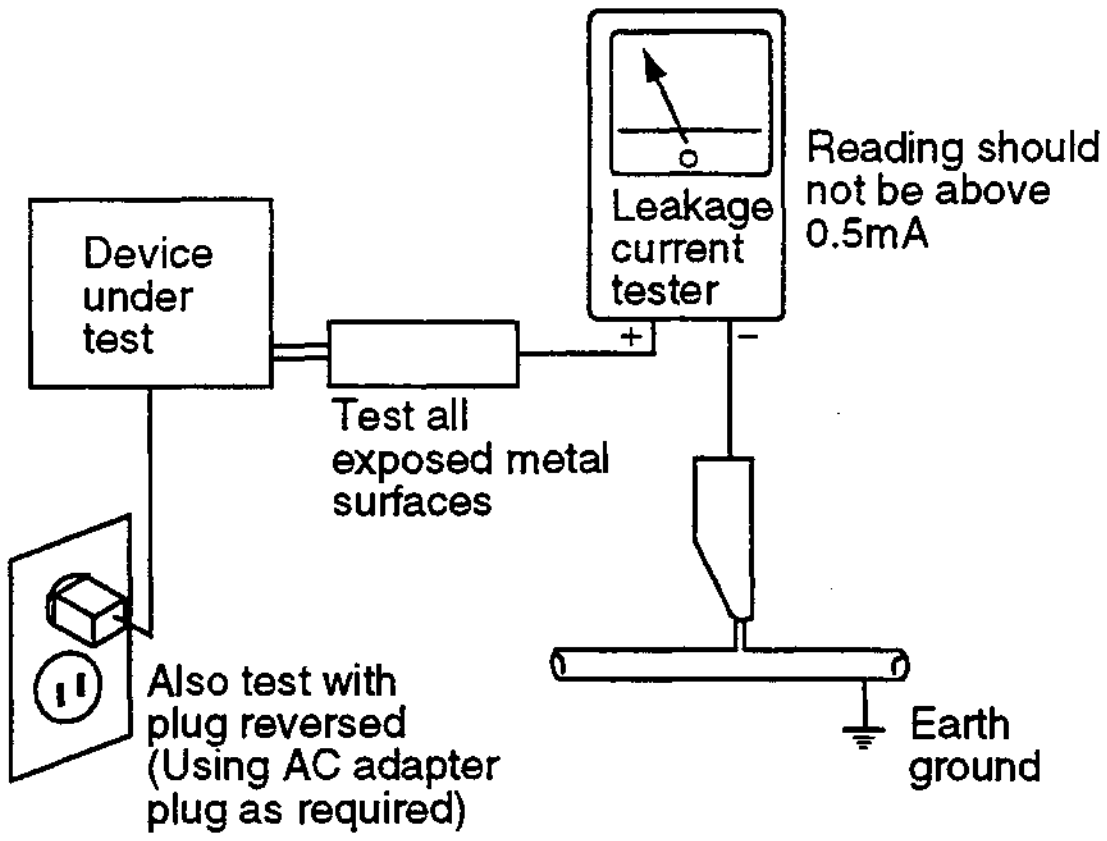
Reading should not be above 0.5mA
Leakage current tester
Device under test
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE SET TO THE CUSTOMER.

High Voltage

This set is provided with a X-ray protection for clearly indicating that voltage has increased in excess of a predetermined value. Comply with all notes described in this Service Manual regarding this hold down circuit when servicing, so that this X-ray protection may correctly be operated.

Serviceman Warning

In the status of the black picture (video muting is being applied) when no signal is input, high voltage of this set during operation is less than 30.5kV. In case any component having some relation to the high voltage is replaced, confirm that the high voltage is lower than 30.5kV in the status of the black picture when no signal is input.

To measure H. V. use a high impedance H. V. meter. Connect (–) to earth and (+) to the FBT anode cable connector. (Refer to page 131.)

X-radiation

TUBE : The primary source of X-radiation in this set is the picture tube.

For continued X-radiation protection, the replacement tube must be the same type as the original, PIONEER approved type.

The picture tube (CRT Assy R, G, B) used in this set holds complete guarantee against X-ray radiation when the X-ray is sealed (See page 4). Accordingly, when the current in flowing to the picture tube (CRT Assy R, G, B), be sure to perform it by putting the tube into X-ray sealed applied state. Avoid absolutely to flow the current to the picture tube (CRT Assy R, G, B) itself. Moreover, when the voltage of the high voltage circuit becomes abnormally a little higher, the picture tube radiates X-rays.

Accordingly, when servicing the high voltage circuit be sure to replace as an assy with the POWER SUPPLY SERVICE Assy in the manner in which has been adjusted to perform normal operation.

1.2 PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, X-radiation, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

1.3 CHARGED SECTION, HIGH VOLTAGE GENERATING POINT AND X-RAY PROTECTION

■ Charged section

The circuit in which the commercial AC power is used as it is without passing through the power supply transformer. If the charged section is touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply, In this case, be sure to connect the set via an insulated transformer and supply the current.

■ Charged section (Power supply primary side)

1. The primary side of the POWER SUPPLY SERVICE Assy
2. AC Power Cord

■ part is charged section.

▨ part is the high voltage generating points other than the charged section.

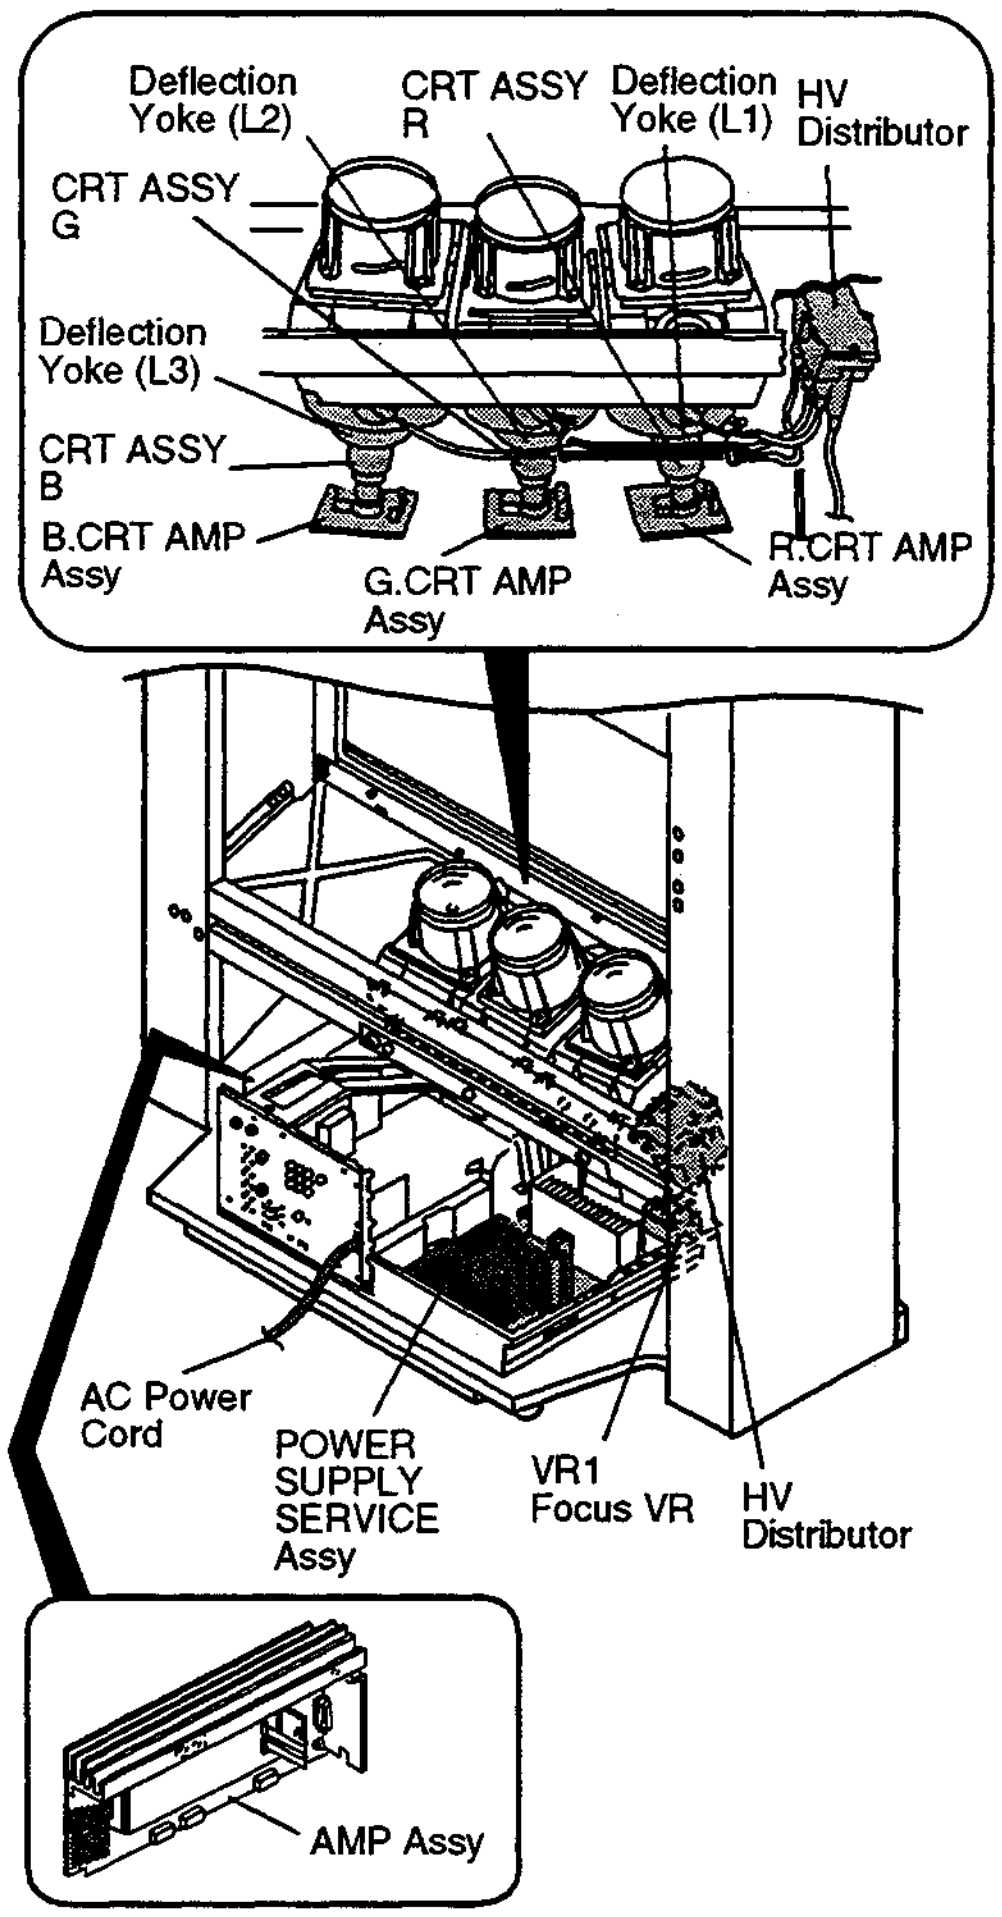

Fig. 1 Charged section and high voltage generating point

■ High voltage generating point

The place where voltage of over 100V is generated.

1. Charged section
2. POWER SUPPLY SERVICE Assy (including FBT) (30.0kV, 220V, 135V)
3. R. CRT AMP Assy (10.5kV, 220V)
4. G. CRT AMP Assy (10.5kV, 220V)
5. B. CRT AMP Assy (10.5kV, 220V)
6. CRT Assy R (30.0kV)
7. CRT Assy G (30.0kV)
8. CRT Assy B (30.0kV)
9. Focus Variable Resistor (VR1) (10.5kV)
10. Deflection Yokes (L1, L2 and L3) (Approx. 1100V at peak)
11. HV Distributer
12. Velocity Modulation Block of the AMP Assy (135V)

■ X-ray protection

- Regarding the parts which are relative to radiation of X-rays (There is the danger to radiate X-ray from the individual CRT Assy R, G, B), there are notifications of caution in the individual schematic diagrams. Be sure to read them for safety's sake.
- The component parts for X-ray protection are as follows: When the current flows to the CRT Assy R, G, B, be sure to perform it with these parts being attached. Protection from the X-ray radiation is maintained in the state in which these parts have been installed to the CRT Assy R, G, B. Accordingly, never supply current only to the CRT Assy R, G, B.

  Moreover, the anode voltage of the CRT Assy R, G, B should always be kept not higher than the predetermined value (in the minimum brightness and picture state when non signal input is less than 30.5kV). Be sure to drive the CRT Assy R, G, B by using a completely functional POWER SUPPLY SERVICE Assy (including HV Distributor) which have been adjusted completely in the combined state. (When the voltage abnormally becomes high, the X-ray protection circuit will operate.)

1. CRT Assy R, G, B (Do not dismantle CRT assemblies under any circumstances).
2. Each Lens Assy

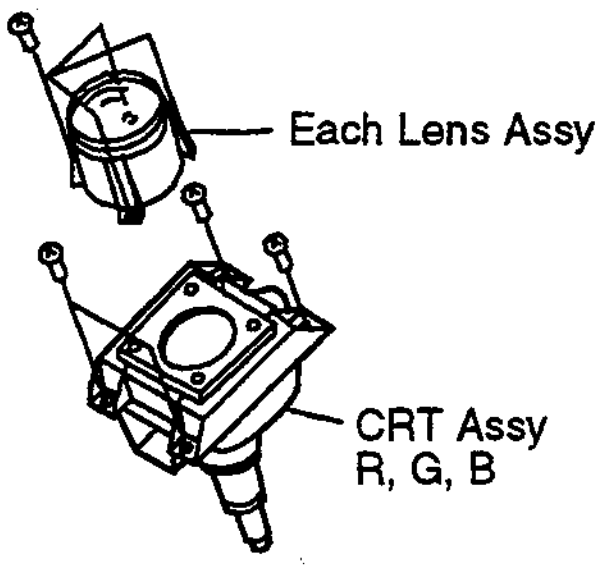

Fig. 2 Component parts for X-ray protection

2. EXPLODED VIEWS AND PARTS LIST

NOTES: • *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Parts marked by ☆ are important parts which relate in X-rays radiation. If any of these parts need to be replaced, always replace with specified parts.*
- *Screws adjacent to ▼ mark on the product are used for disassembly.*

2.1 PACKING

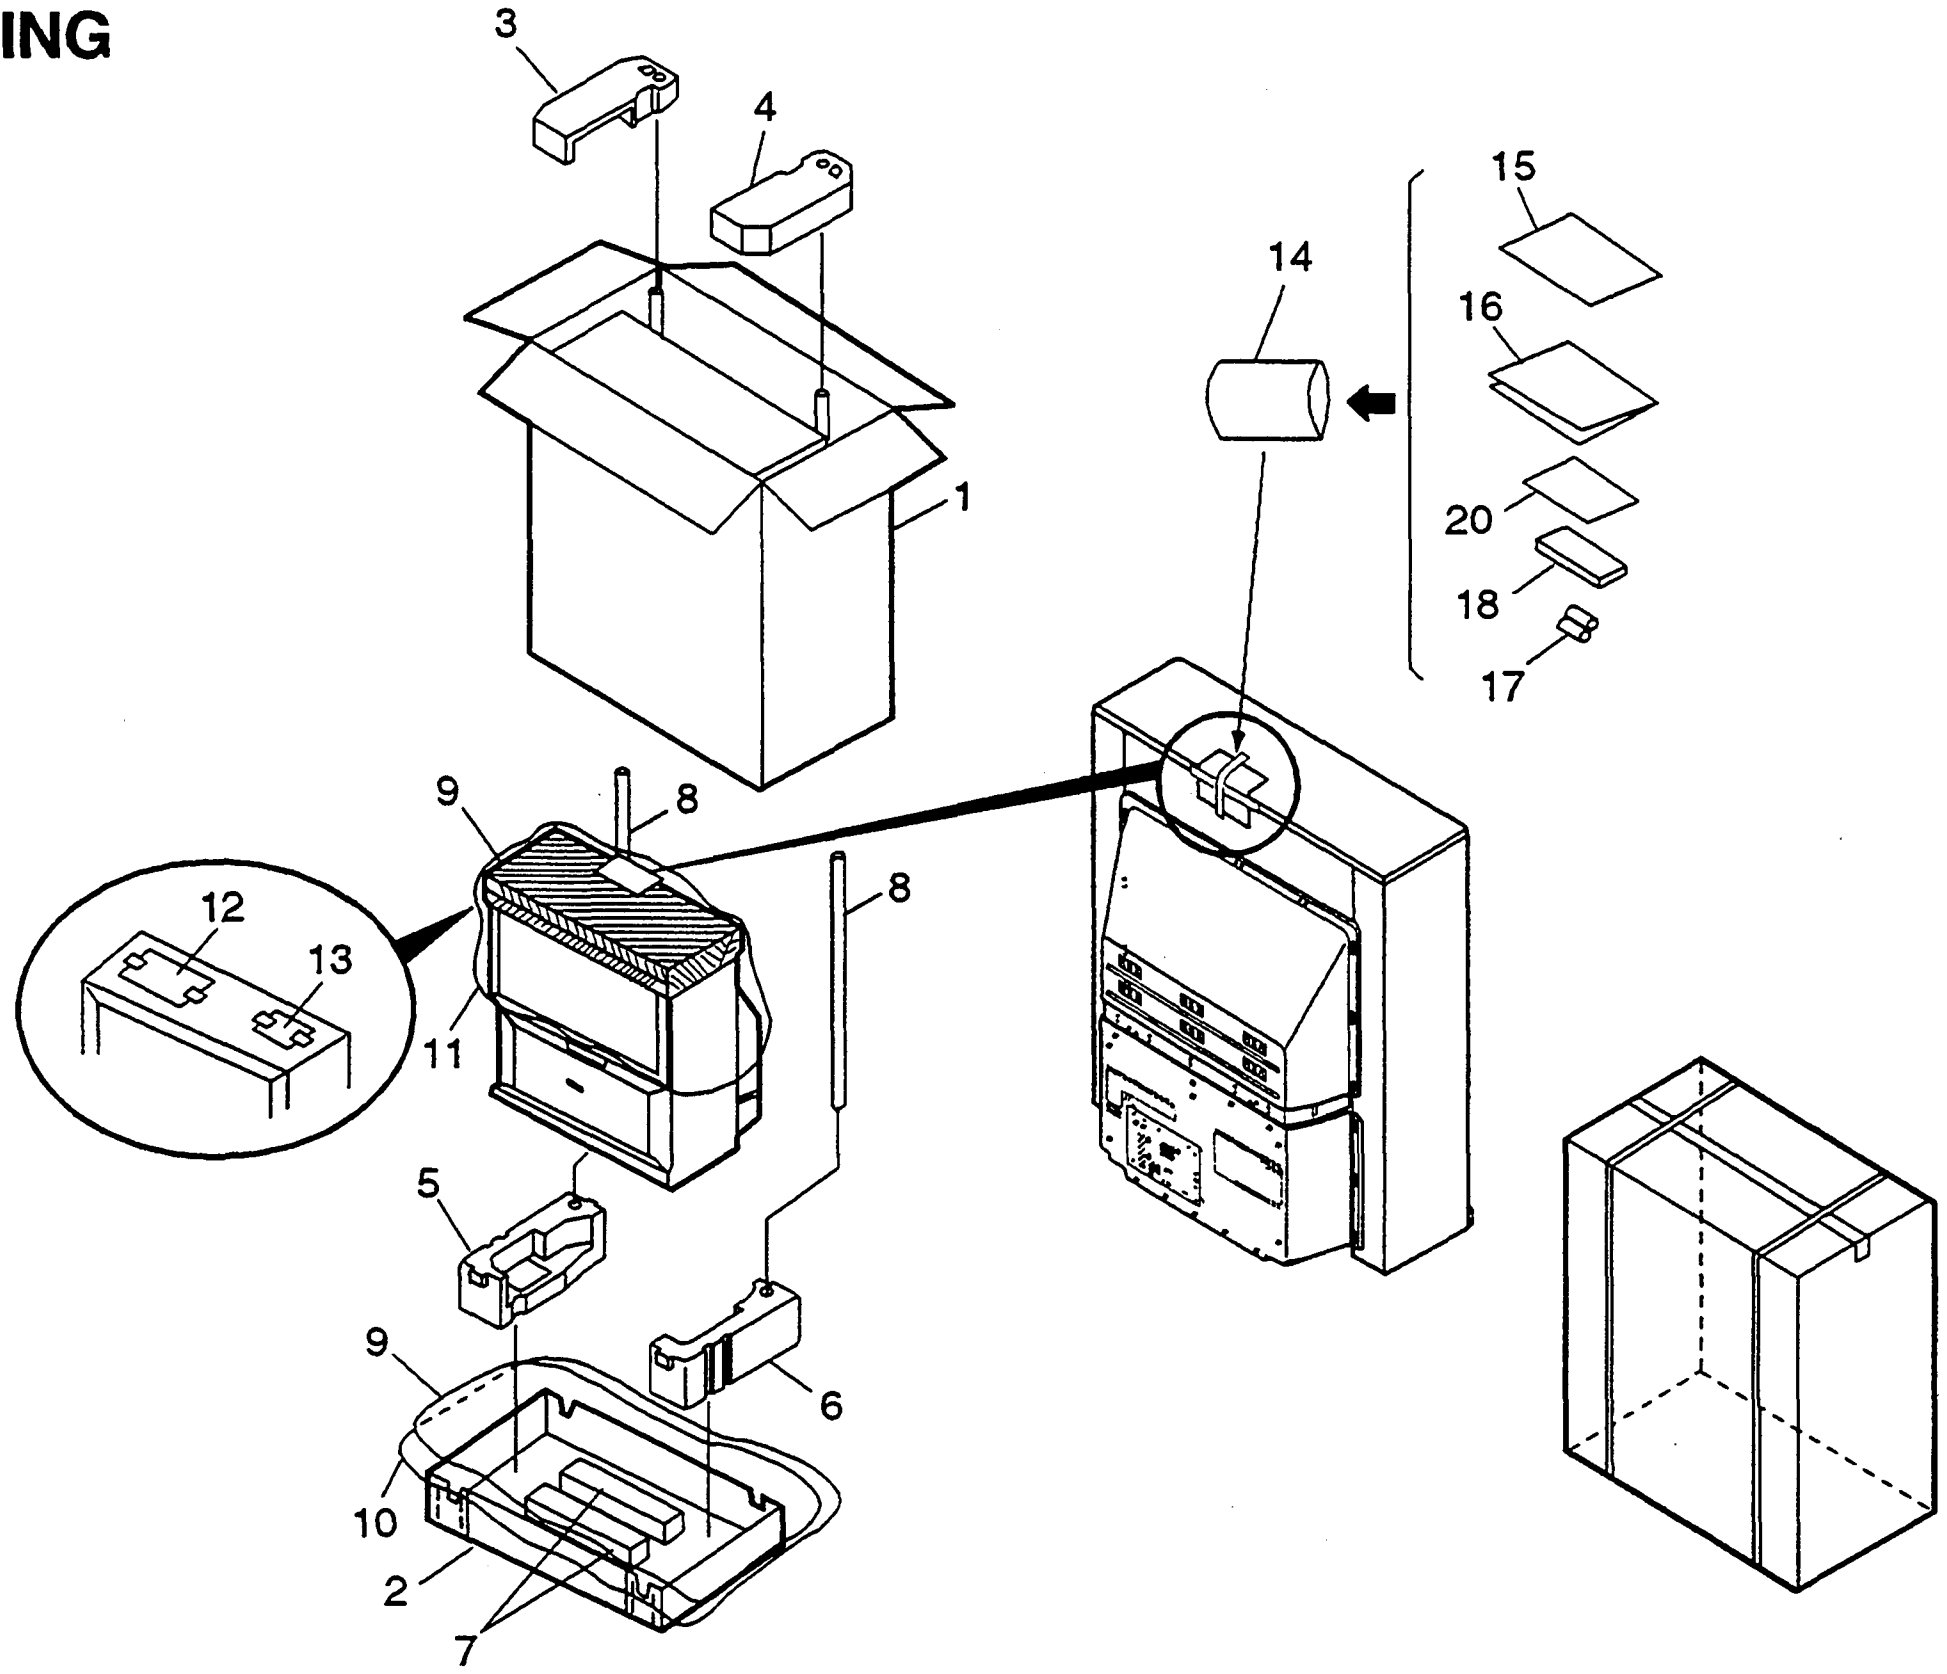

(1) PARTS LIST

Mark	No.	Description	Part No.
	1	Upper Carton	See Contrast table (2)
	2	Under Carton	See Contrast table (2)
	3	Upper Pad L	AHA2163
	4	Upper Pad R	AHA2164
	5	Under Pad L	AHA2165
	6	Under Pad R	AHA2166
	7	Under Cushion	AHA2167
	8	Paper Tube	See Contrast table (2)
NSP	9	Packing Sheet	AHG1268
NSP	10	Vinyl Sheet	AHG1270
NSP	11	Vinyl Sheet	AHG1266
	12	CONVER Attention Card	ARM1120
	13	Caster Caution Card	ARM1125
NSP	14	Literature Bag	AHG1222
NSP	15	Warranty Card	ARY1050
	16	Operating Instructions (English)	ARB1510
NSP	17	Alkaline Dry Cell Battery (LR6, AA)	AEX1018
	18	Remote Control Unit (CU-SD103)	AXD1429
	19	Battery Cover	AZA7031
NSP	20	Caution Card	ARM1057

(2) CONTRAST TABLE

SD-P50A3-K/KUXC and SD-P55A3-K/KUXC have the same construction except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			SD-P50A3-K/KUXC	SD-P55A3-K/KUXC	
	1	Upper Carton	AHD2884	AHD2885	
	2	Under Carton	AHD2887	AHD2888	
	8	Paper Tube	AHB1182	AHB1183	

2.2 FRONT VIEW (1)

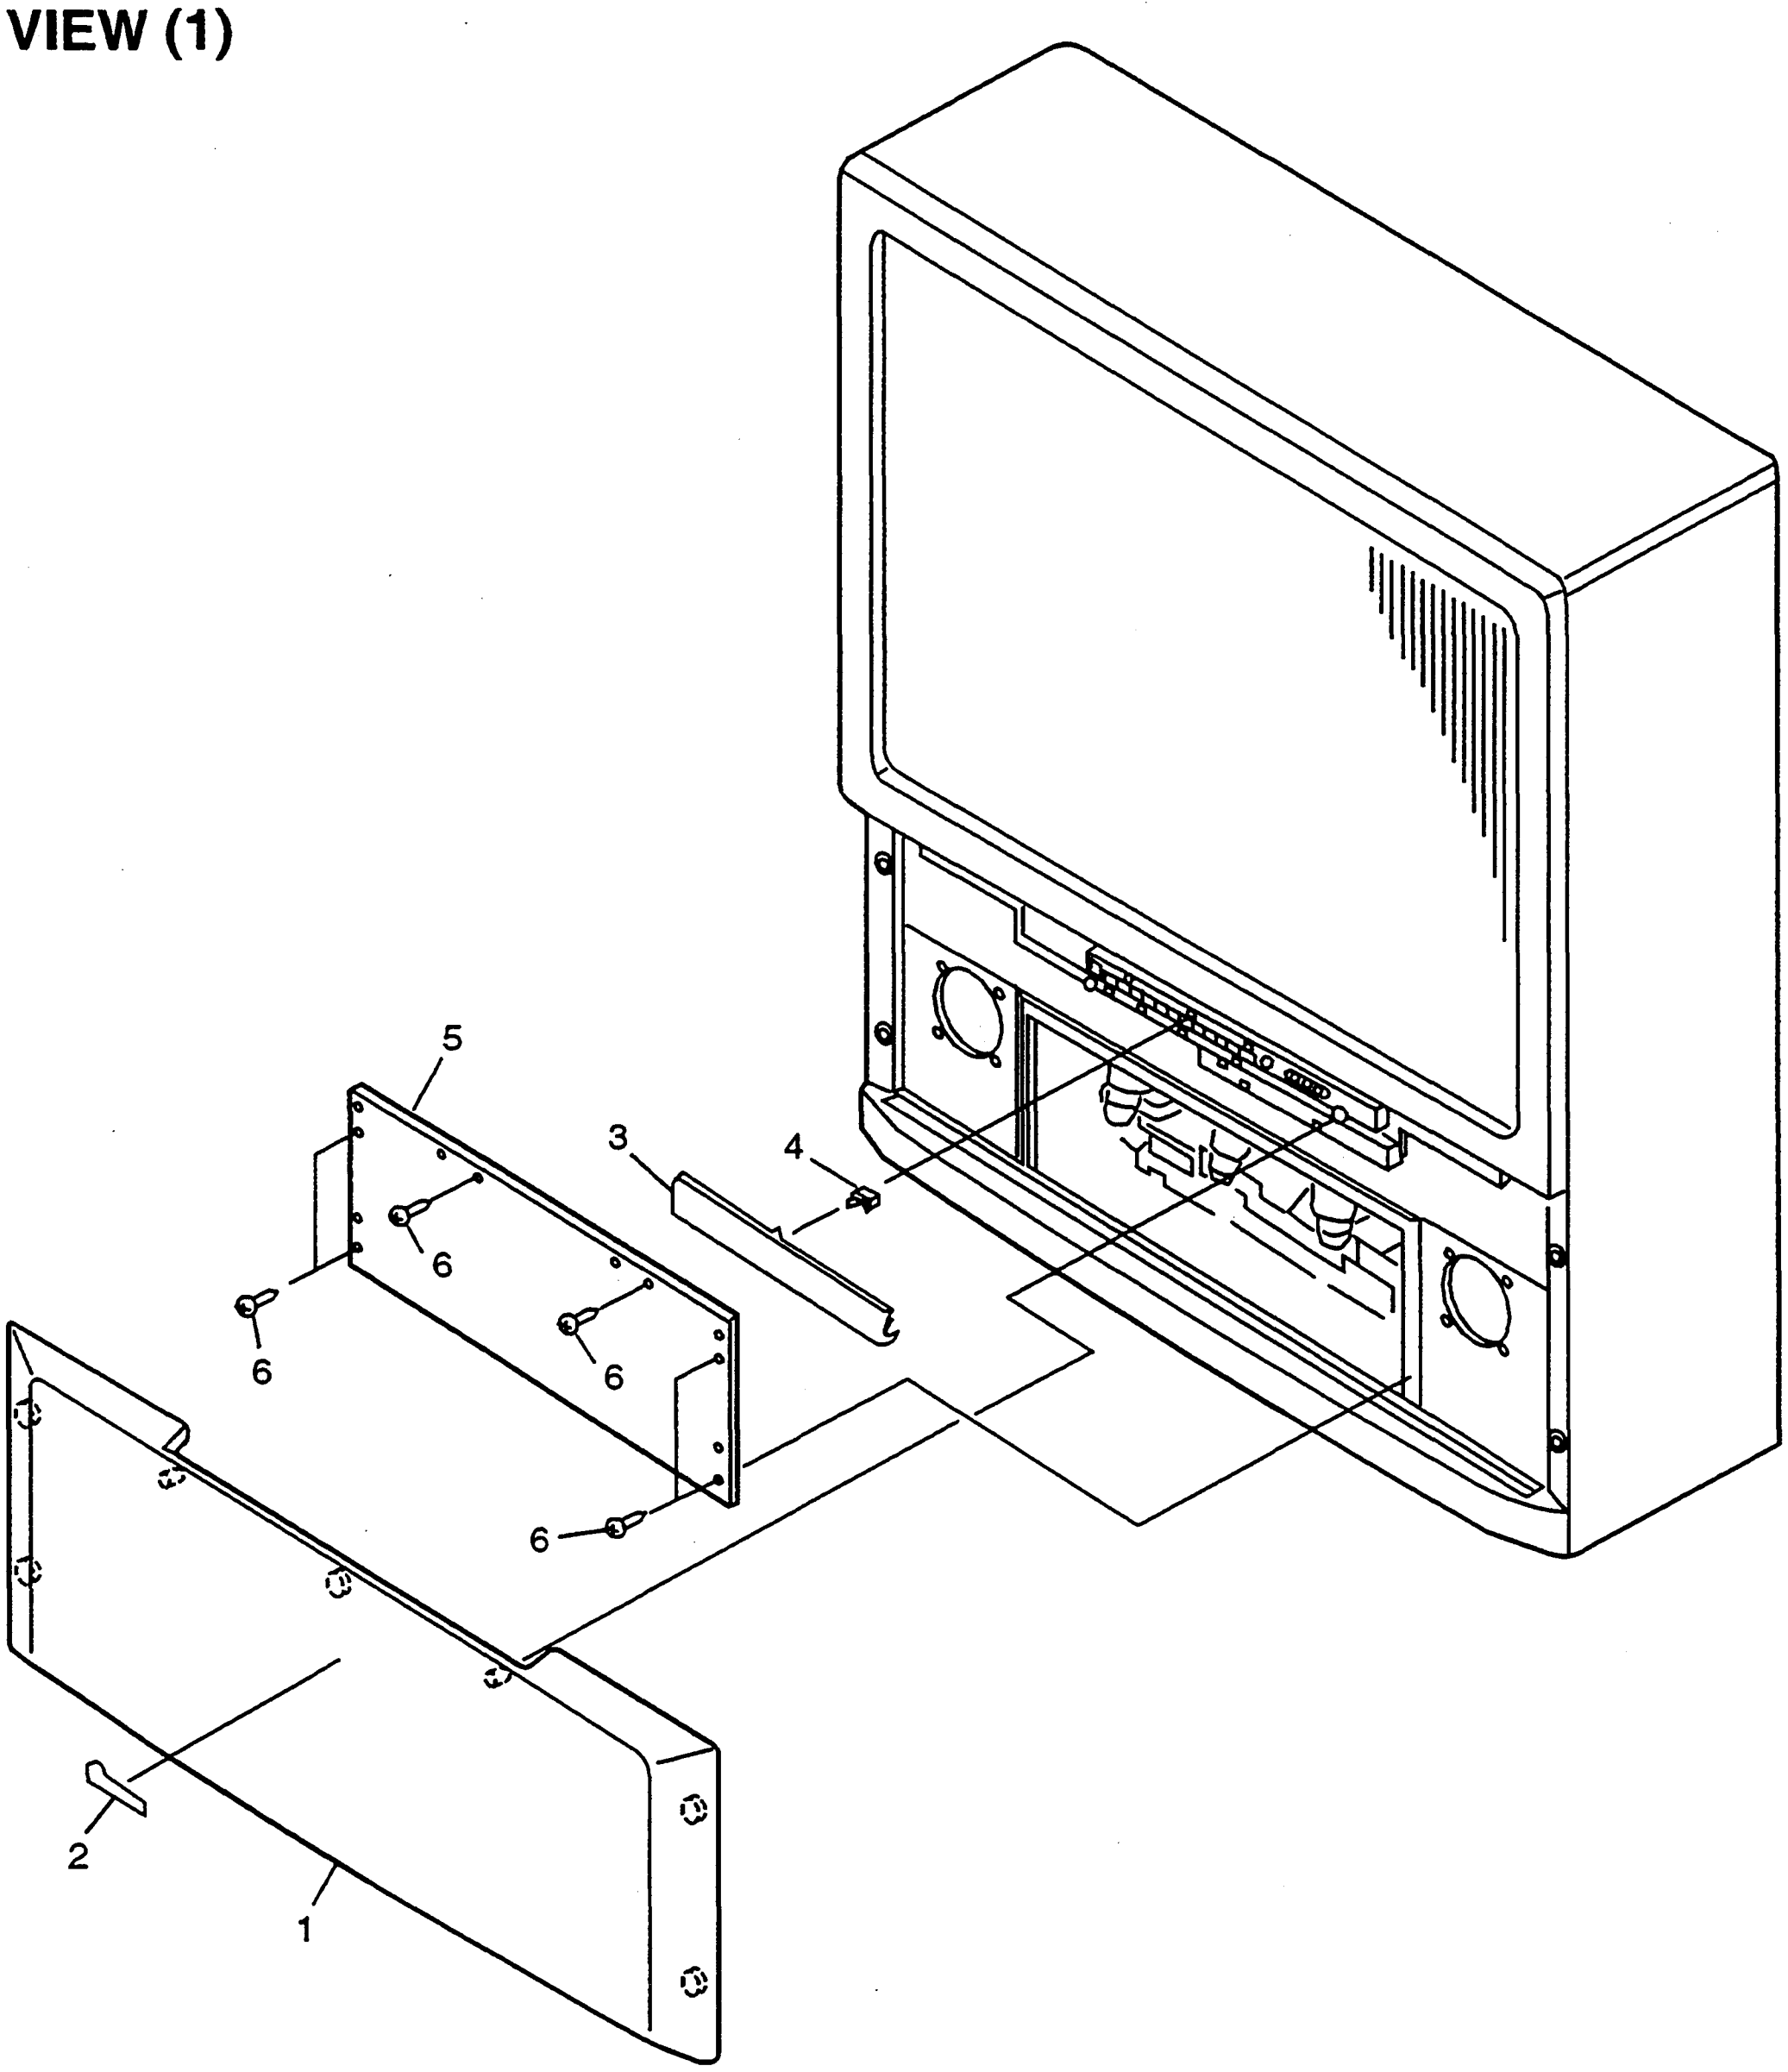

(1) PARTS LIST

Mark	No.	Description	Part No.
	1	Grille	See Contrast table (2)
	2	Badge	AAM1074
	3	Door	See Contrast table (2)
	4	Catcher	AEC1609
	5	Blind Plate	AMM2765
	6	Screw	ABA1241

(2) CONTRAST TABLE

SD-P50A3-K/KUXC and SD-P55A3-K/KUXC have the same construction except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			SD-P50A3-K/KUXC	SD-P55A3-K/KUXC	
	1	Grille	AMR2917	AMR2918	
	3	Door	AAN1431	AAN1432	

2.3 SCREEN FRAME BLOCK

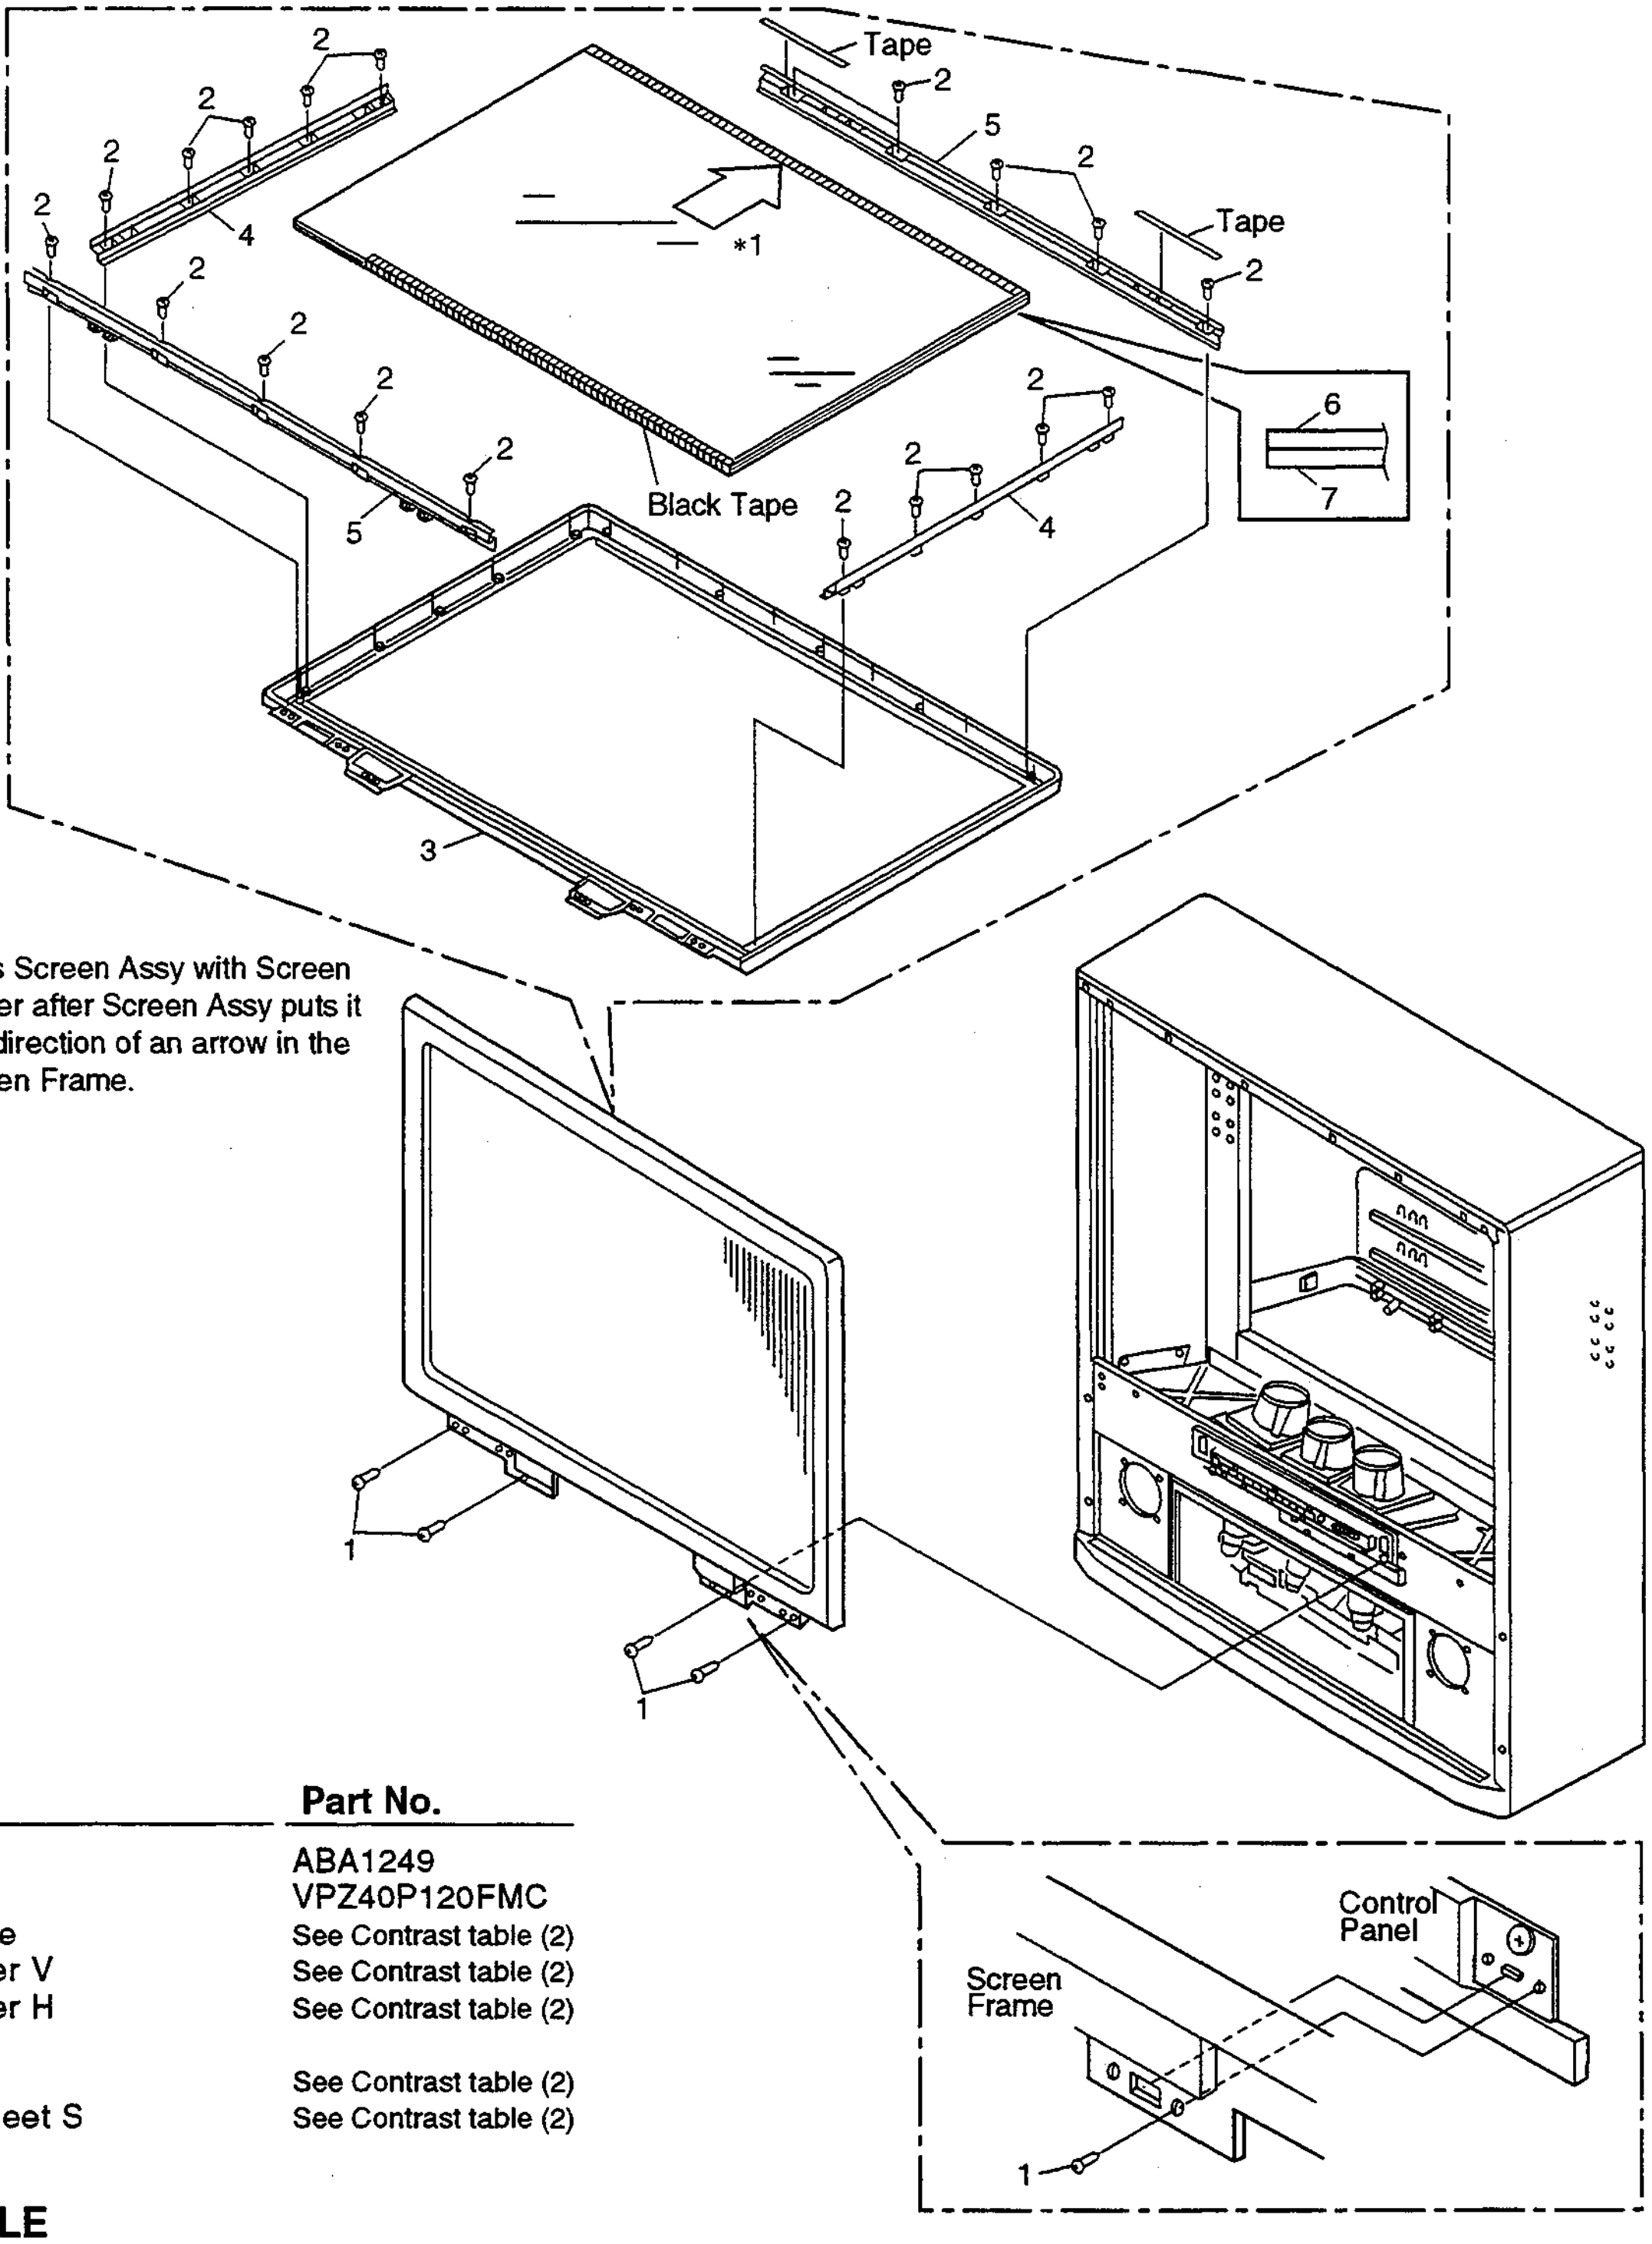

*1 : Fixes Screen Assy with Screen Holder after Screen Assy puts it in a direction of an arrow in the Screen Frame.

(1) PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ABA1249
	2	Screw	VPZ40P120FMC
	3	Screen Frame	See Contrast table (2)
NSP	4	Screen Holder V	See Contrast table (2)
NSP	5	Screen Holder H	See Contrast table (2)
	6	Fresnel S	See Contrast table (2)
	7	Lenticular Sheet S	See Contrast table (2)

(2) CONTRAST TABLE

SD-P50A3-K/KUXC and SD-P55A3-K/KUXC have the same construction except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			SD-P50A3-K/KUXC	SD-P55A3-K/KUXC	
	3	Screen Frame	AMB2599	AMB2600	
NSP	4	Screen Holder V	ANG2143	ANG2145	
NSP	5	Screen Holder H	ANG2142	ANG2144	
	6	Fresnel S	AMR2979	AMR2980	
	7	Lenticular Sheet S	AMR2976	AMR2977	

2.4 FRONT VIEW (2)

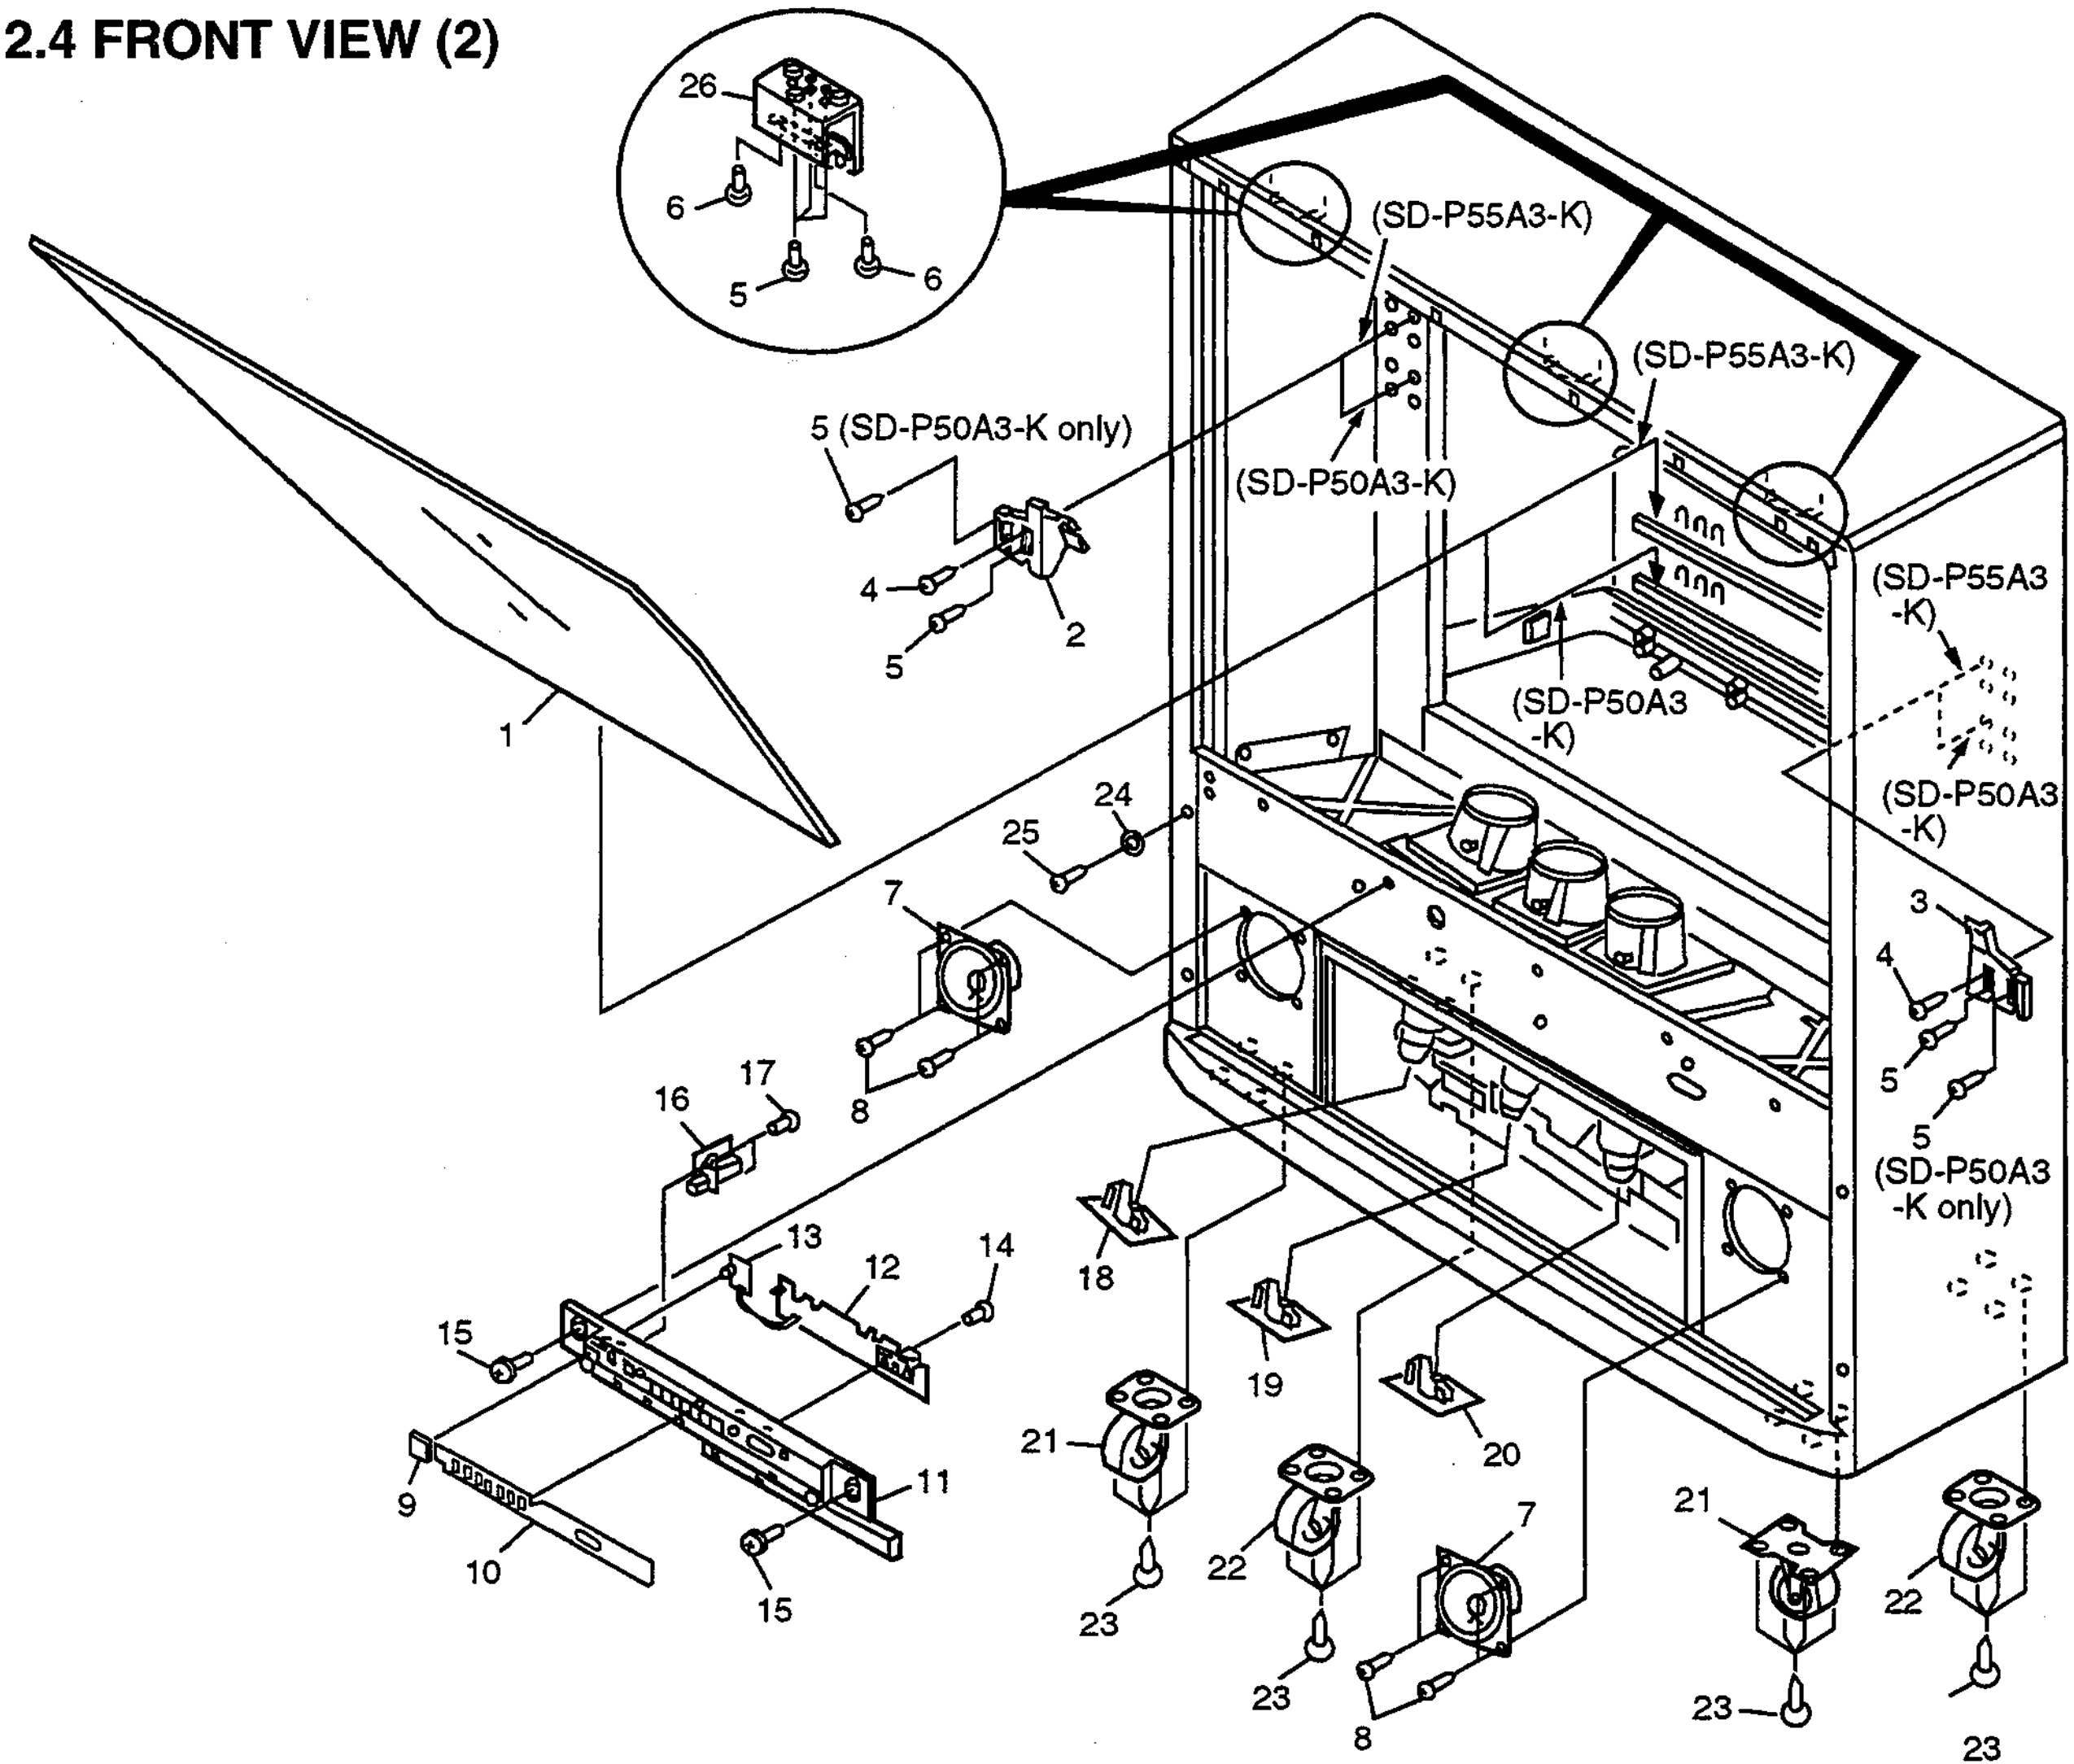
26
6
5
6
(SD-P55A3-K)
(SD-P55A3-K)
5 (SD-P50A3-K only)
(SD-P50A3-K)
4
5
2
1
(SD-P55A3 -K)
(SD-P50A3 -K)
(SD-P50A3 -K)
24
25
7
3
4
5
5 (SD-P50A3 -K only)
17
16
8
13
12
14
18
15
19
21
20
11
9
10
15
23
22
7
21
23
8
23
22
23

(1) PARTS LIST

Mark	No.	Description	Part No.
	1	Mirror	See Contrast table (2)
	2	Mirror Side Holder L	AMR2921
	3	Mirror Side Hoder R	AMR2922
	4	Screw	VPZ40P120FMC
	5	Screw	ABA1124
	6	Screw	ABA1239
	7	Speaker	APV1047
	8	Screw	ABA1240
	9	Indicator Panel	AAK2687
	10	Control Sheet	AAK2686
	11	Control Panel	AMB2602
	12	Front Control Assy	AWZ6186
	13	Indicator Assy	AWZ6187
	14	Screw	ABZ30P120FZK
	15	Screw	ABA1234
	16	POWER SW Assy	AWZ6188
	17	Screw	BPZ30P120FMC
	18	R. CRT AMP Assy	AWZ6191
	19	G. CRT AMP Assy	AWZ6192
	20	B. CRT AMP Assy	AWZ6193
	21	Caster (Front)	AMR2863
	22	Caster (Rear)	AMR2547
	23	Screw	ABA1126
	24	Magic Tape	AEC1394
	25	Screw	BYC35P160FZB
	26	Mirror Holder	AMR2920

(2) CONTRAST TABLE

SD-P50A3-K/KUXC and SD-P55A3-K/KUXC have the same construction except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			SD-P50A3-K/KUXC	SD-P55A3-K/KUXC	
	1	Mirror	AMR2937	AMR2938	

2.5 REAR VIEW (1)

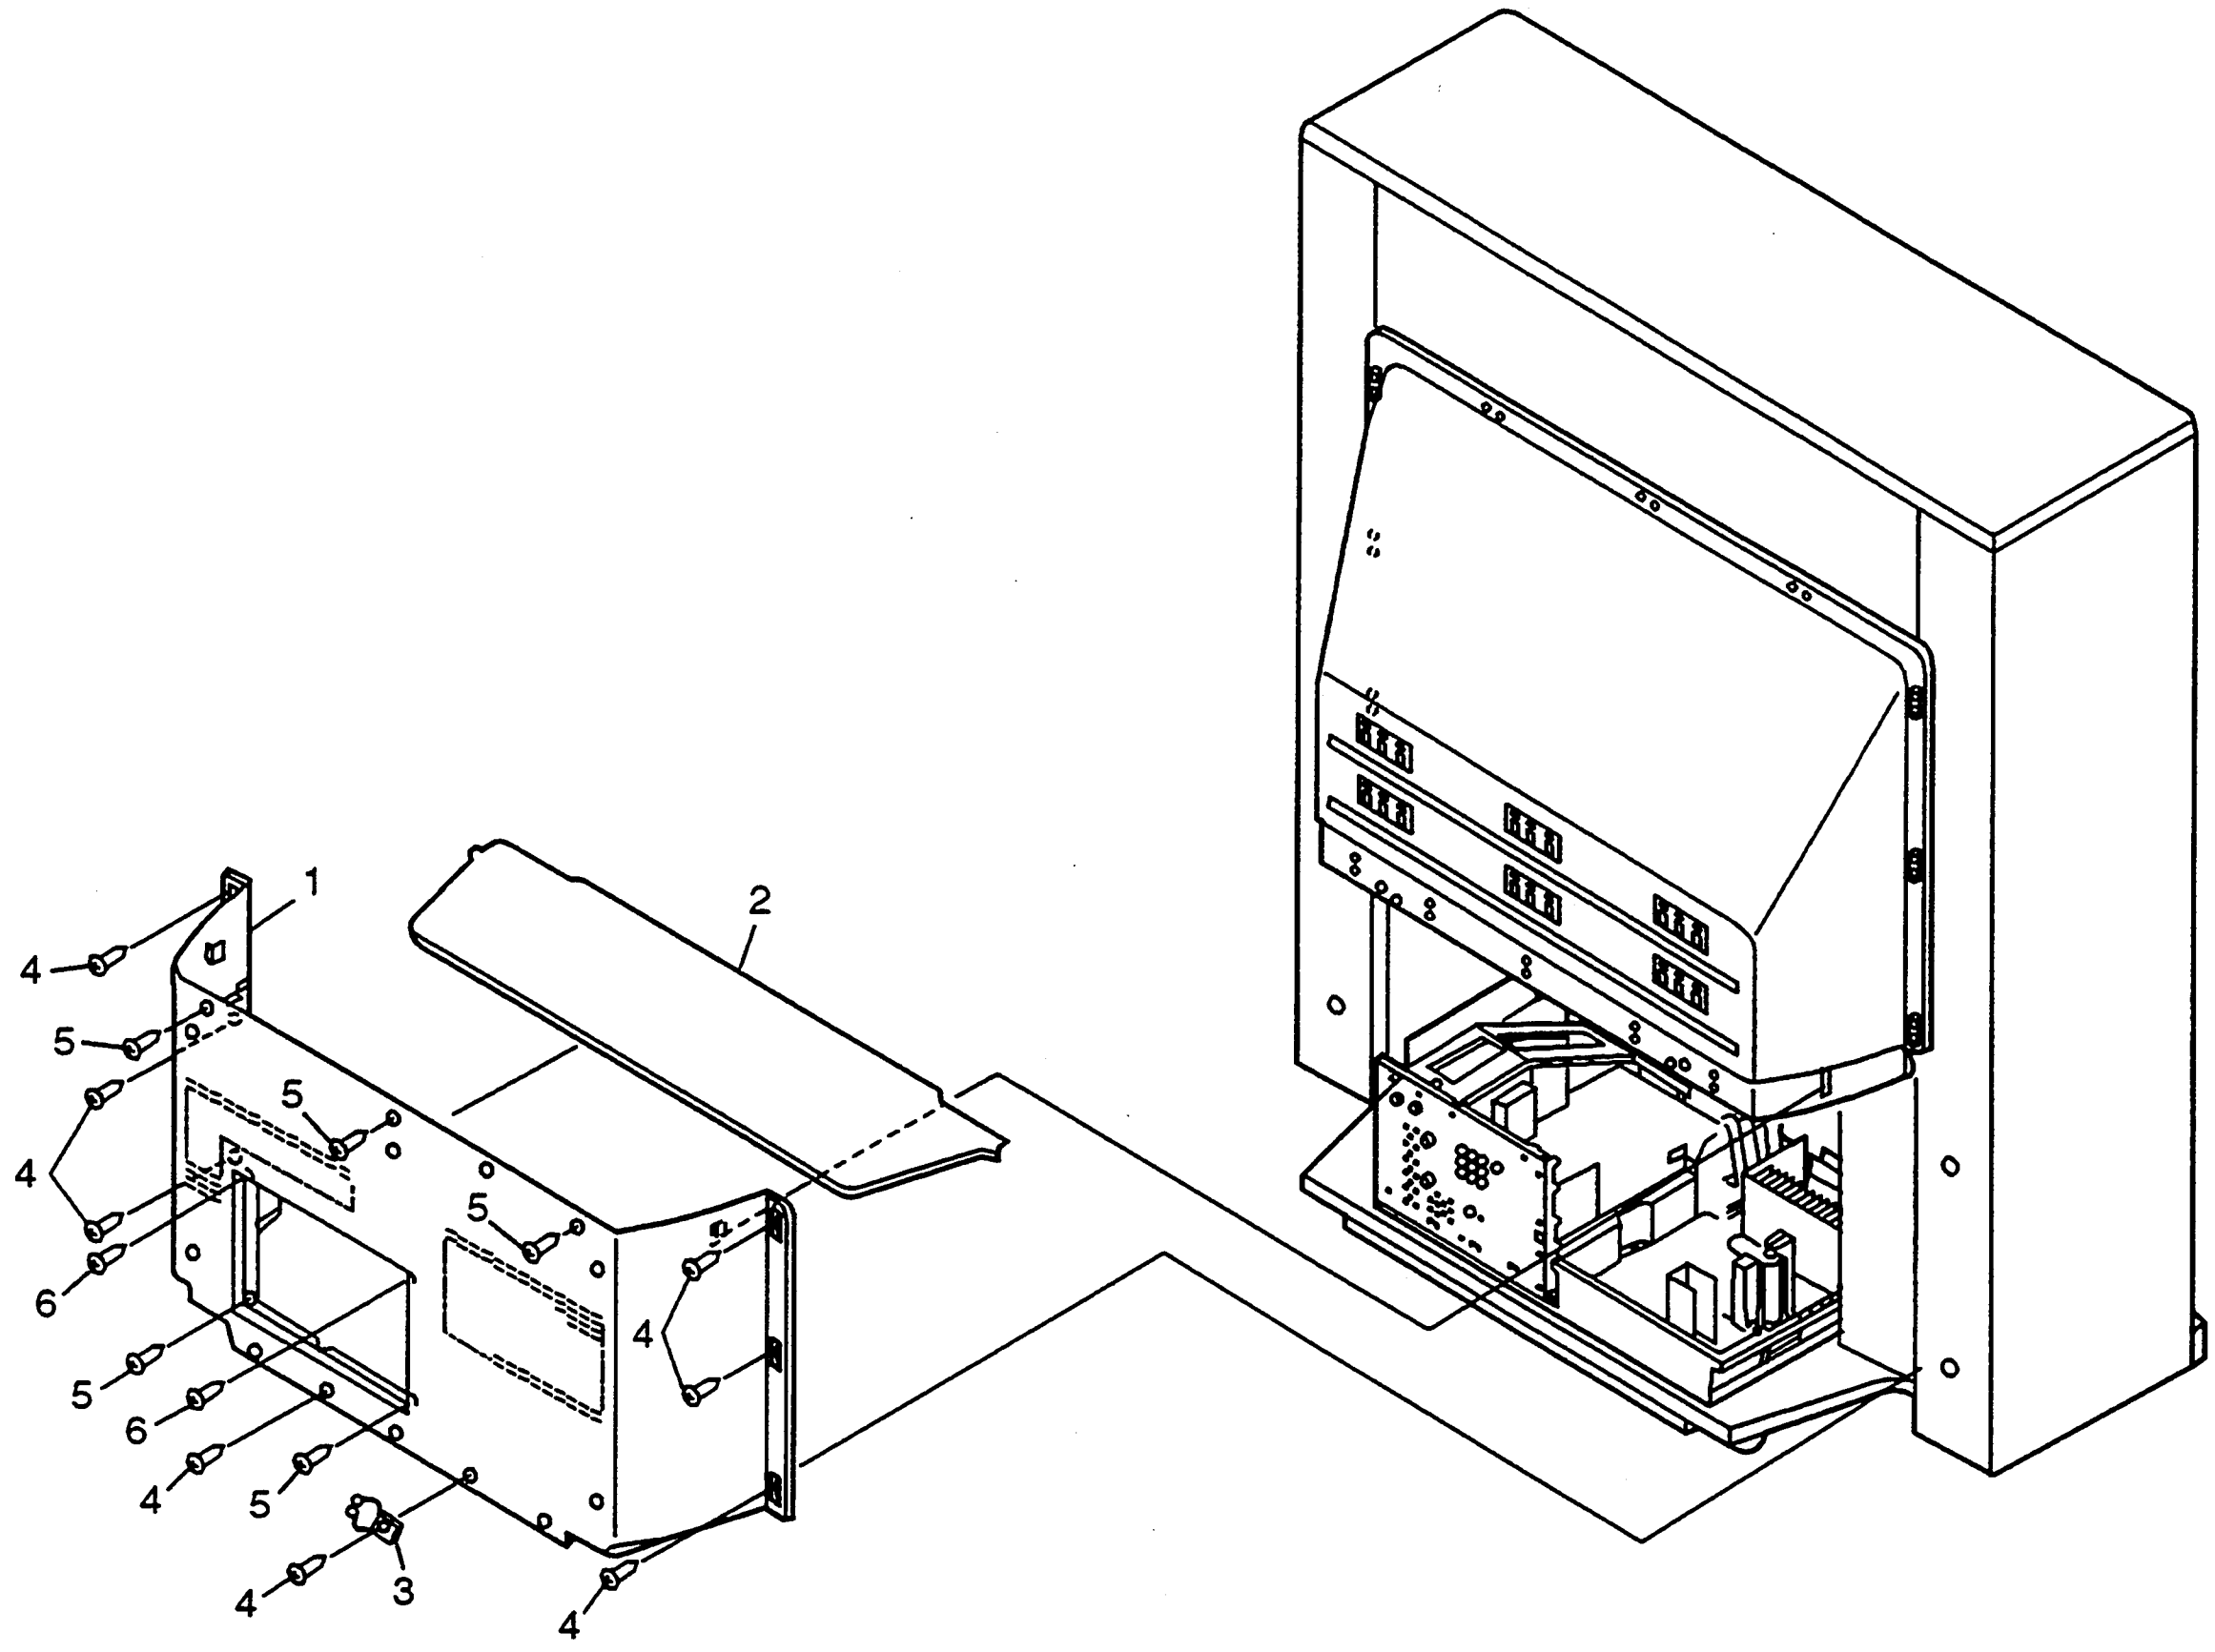
1
2
3
4
4
4
4
4
4
4
4
5
5
5
5
5
5
6
6

Parts List

Mark	No.	Description	Part No.
	1	Rear Cover	AME2299
NSP	2	Back Cover Panel	AMM2772
NSP	3	Purse Lock	AEC1263
	4	Screw	ABA1240
	5	Screw	ABA1235
	6	Screw	ABA1149

2.6 REAR VIEW (2)

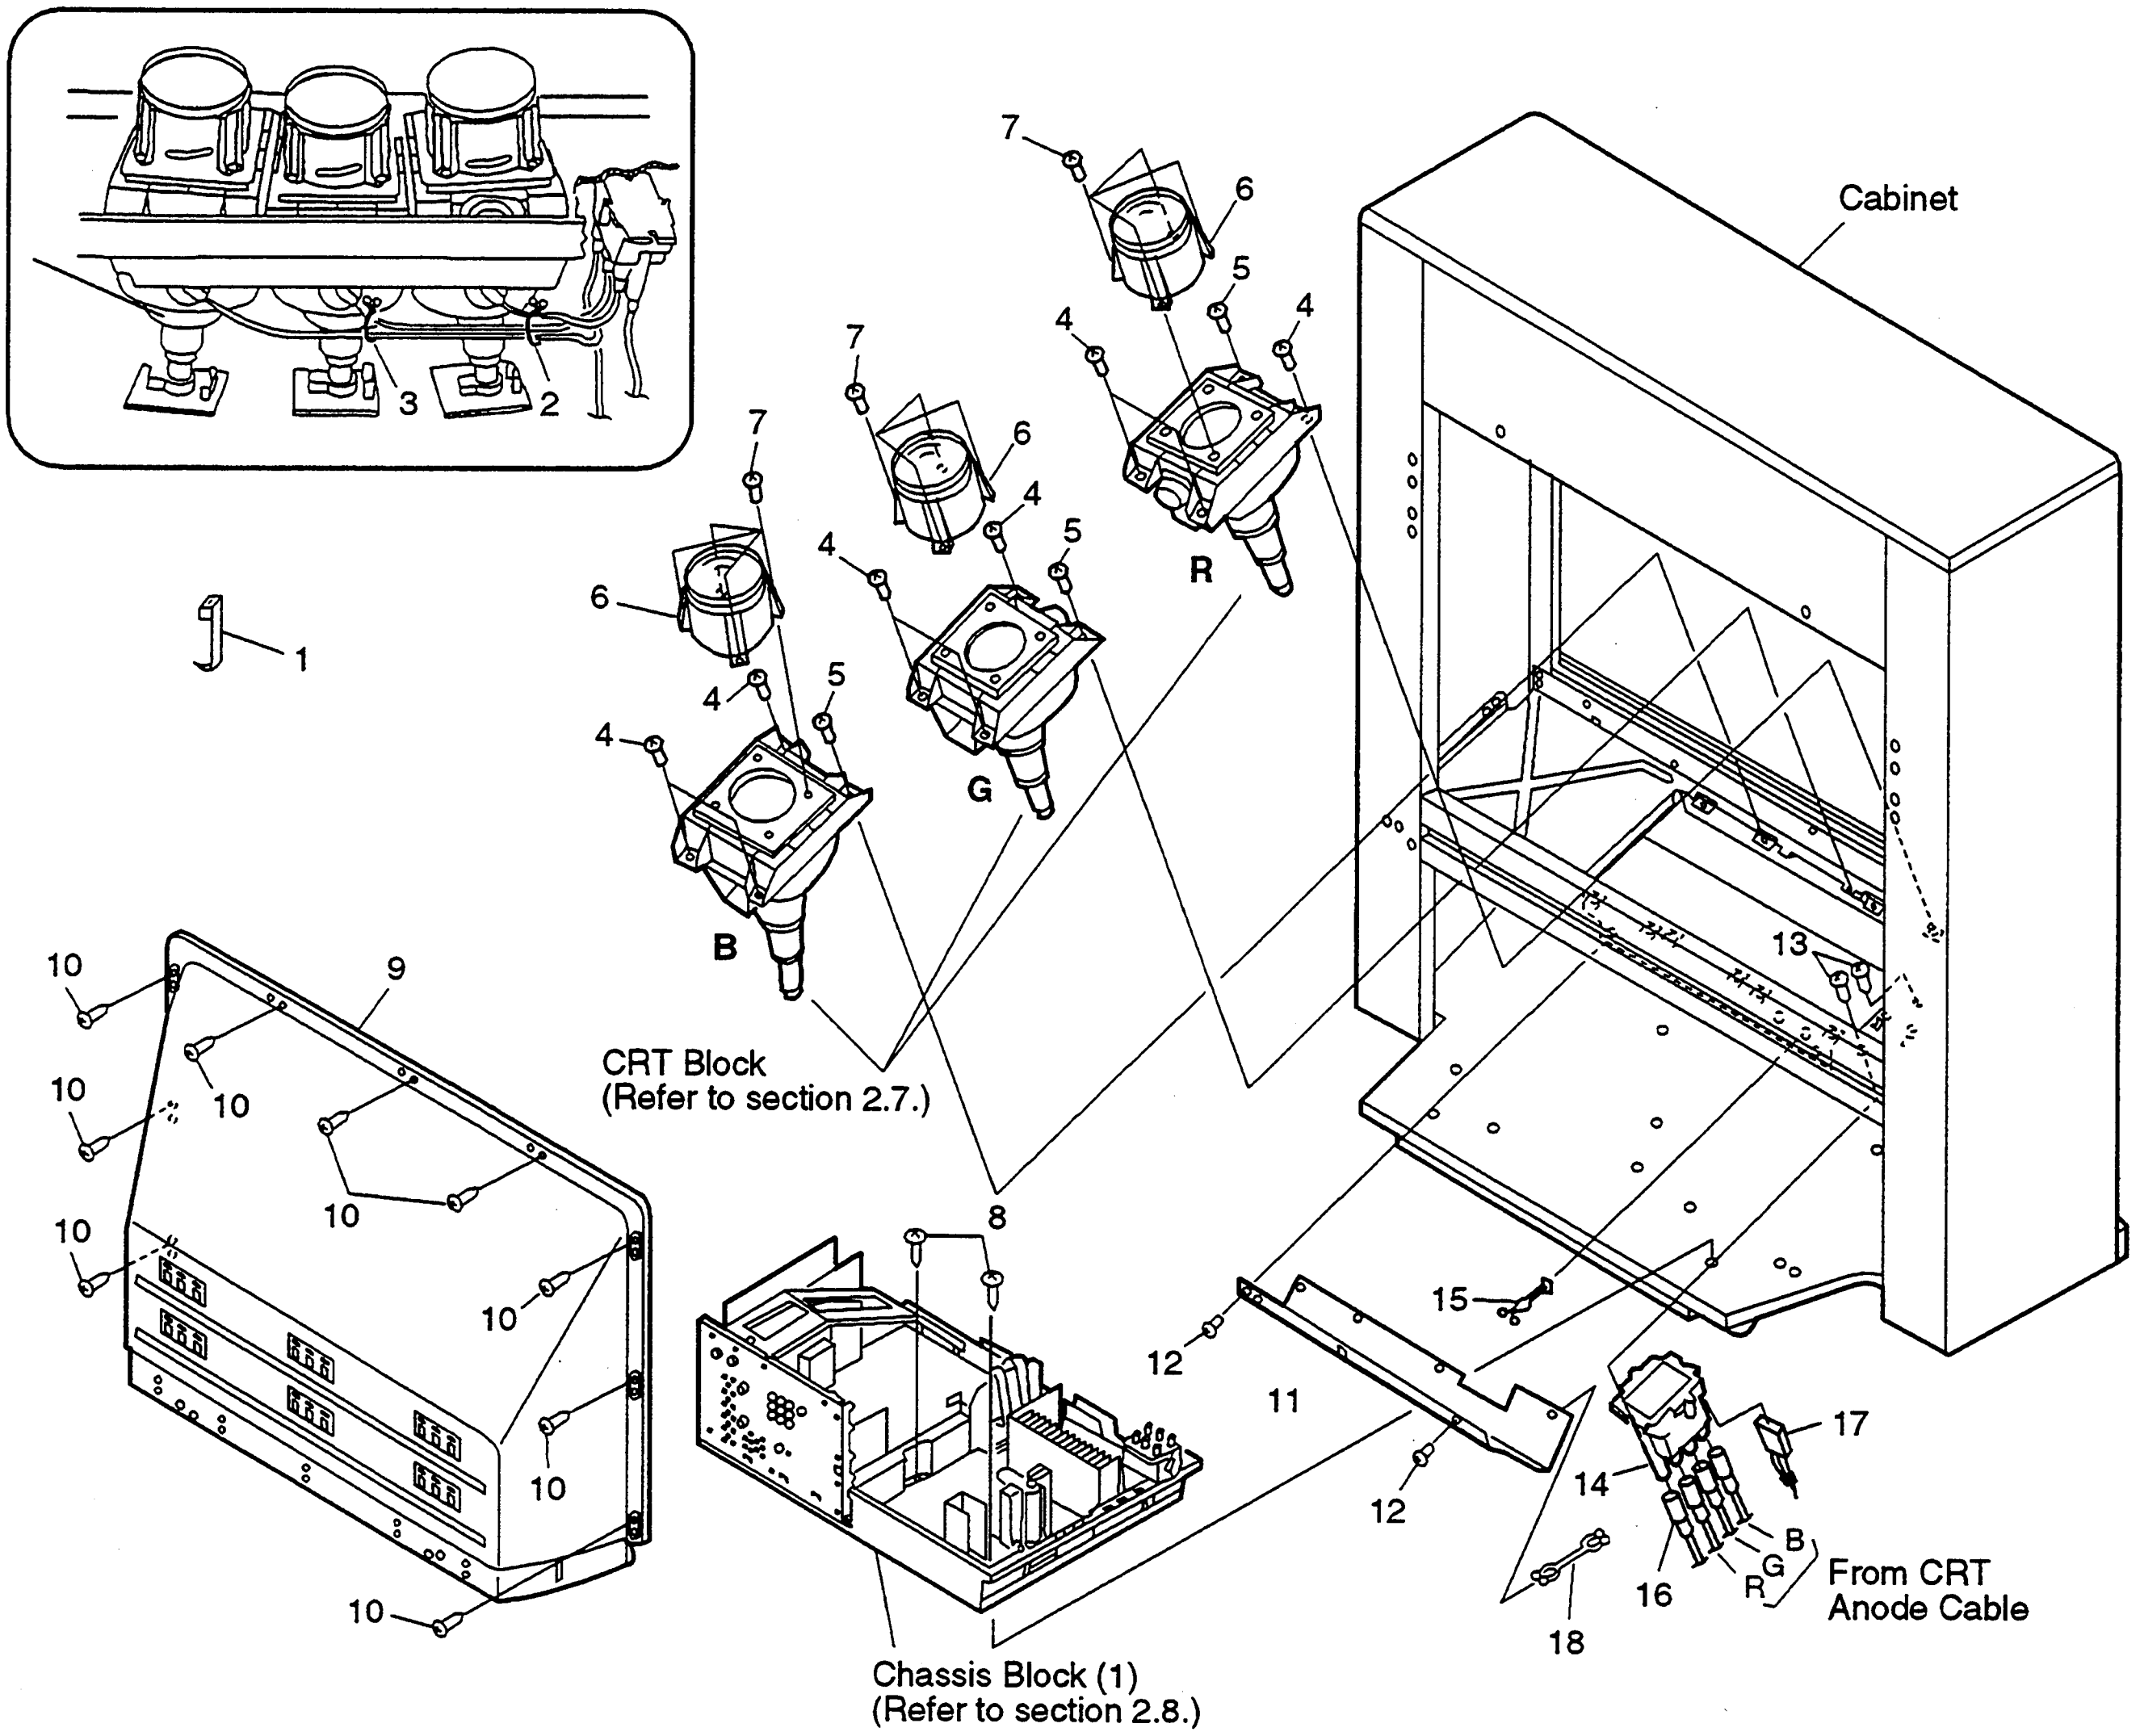
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
R
G
B
Cabinet
CRT Block
(Refer to section 2.7.)
Chassis Block (1)
(Refer to section 2.8.)
From CRT
Anode Cable

Parts List

Mark	No.	Description	Part No.
	1	Binder	AEC-093
	2	Purse Lock	AEC1540
NSP	3	Purse Lock S	AEC1261
	4	Screw	ABA1168
	5	Screw	FBT40P120FZK
☆	6	Lens Assy	AMR2833
	7	Screw	AMZ40P080FZK
	8	Screw	BYC40P350FZK
	9	Mirror Case	AME2298
	10	Screw	ABA1240

Mark	No.	Description	Part No.
	11	Tray	AMR2936
	12	Screw	ABZ30P120FZK
	13	Screw	VPZ40P120FMC
NSP ⚠	14	HV Distributor	AXW1046
NSP	15	Lead Clamper	AEC1611
	16	HV Cable (J26)	ADY1032
	17	HV Return Wire (J27)	ADX2338
	18	Cable Clip	AEC1708

2.7 CRT BLOCK

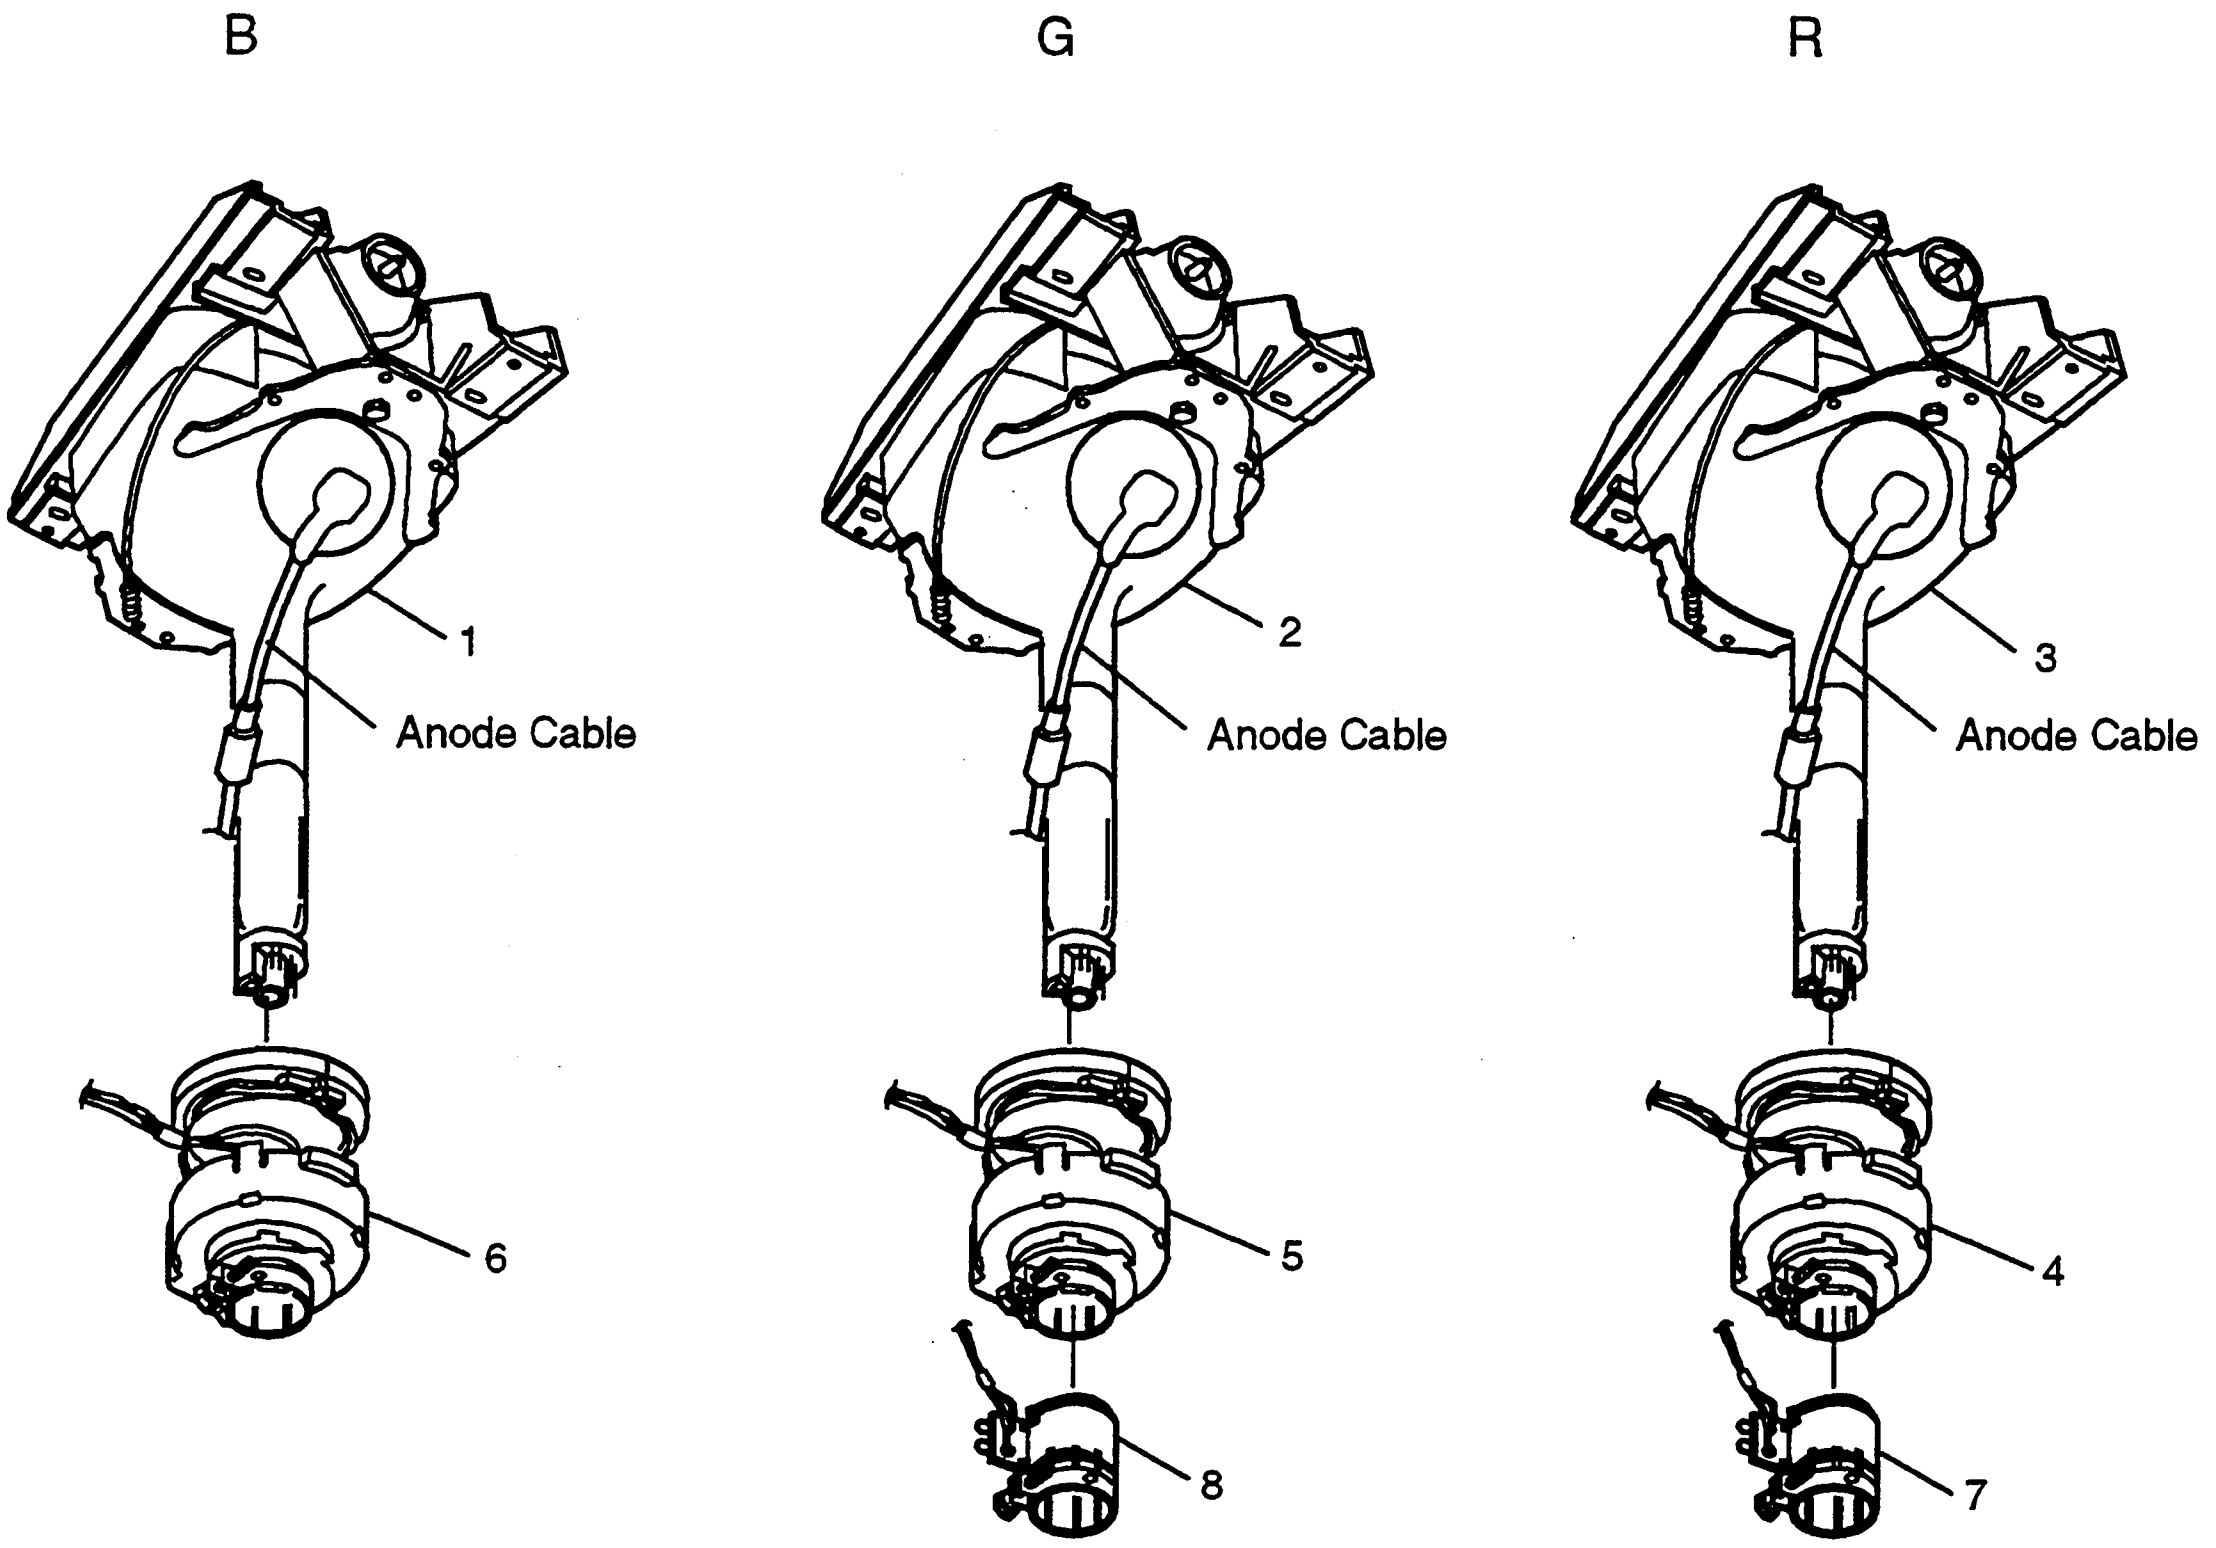

(1) PARTS LIST

Mark	No.	Description	Part No.
☆	1	CRT Service Assy B	See Contrast table (2)
☆	2	CRT Service Assy G	AWY1388
☆	3	CRT Service Assy R	See Contrast table (2)
⚠	4	Deflection Yoke (L2)	ATL1130
⚠	5	Deflection Yoke (L3)	ATL1130
⚠	6	Deflection Yoke (L4)	ATL1130
⚠	7	VM Coil (L5)	ATL1133
⚠	8	VM Coil (L6)	ATL1133

(1) CONTRAST TABLE

SD-P50A3-K/KUXC and SD-P55A3-K/KUXC have the same construction except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			SD-P50A3-K/KUXC	SD-P55A3-K/KUXC	
☆	1	CRT Service Assy B	AWY1389	AWY1391	
☆	3	CRT Service Assy R	AWY1387	AWY1390	

2.8 CHASSIS BLOCK (1)

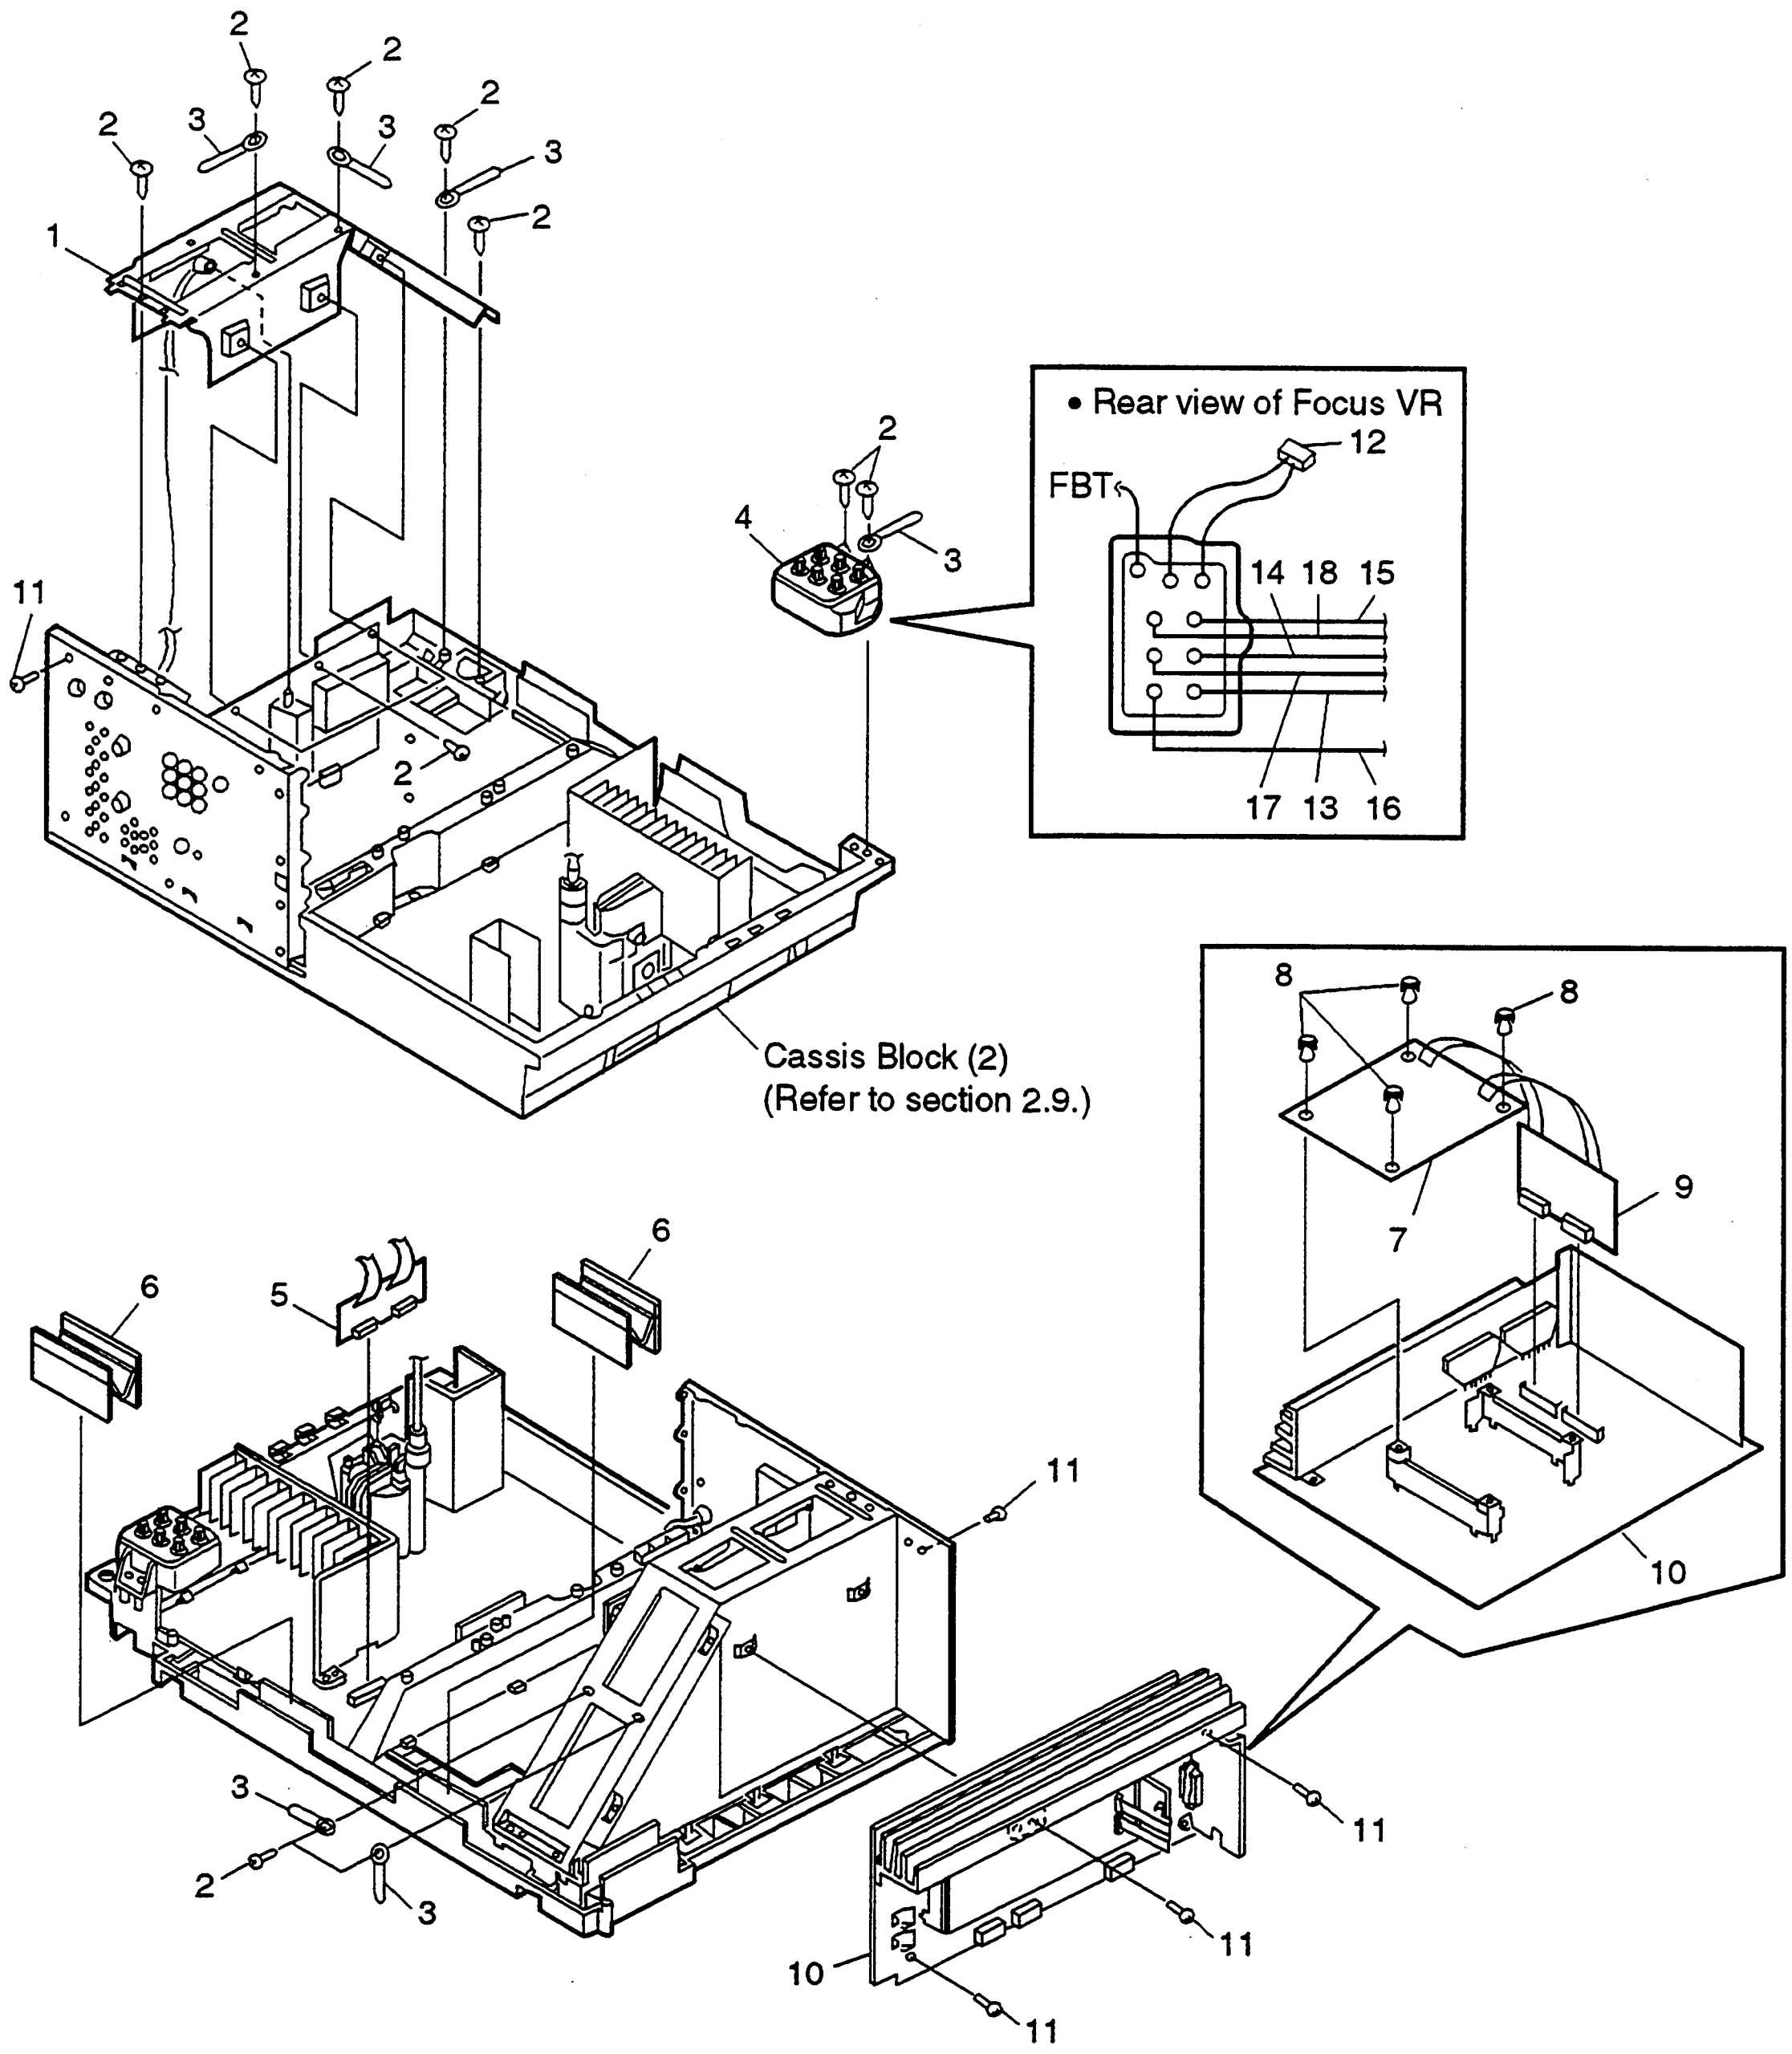
2
2
2
2
3
3
3
2
1
• Rear view of Focus VR
12
FBT
2
4
3
14 18 15
17 13 16
11
2
Cassis Block (2)
(Refer to section 2.9.)
8
8
9
7
6
6
5
11
10
3
2
3
11
11
10
11

Parts List

Mark	No.	Description	Part No.
NSP	1	PCB Frame	ANG2141
	2	Screw	BBZ30P140FZK
	3	Binder	AEP-215
⚠	4	Focus VR (VR1)	ACX1096
	5	CONNECTOR A Assy	AWZ6189
	6	Wire Holder	AMR2832
	7	CONVER CONTROL Assy	AWZ6195
	8	Rivet	AEC-441
	9	CONNECTOR B Assy	AWZ6196
	10	AMP Assy	AWZ6190
	11	Screw	ABZ30P120FZK
	12	4P Housing Wire (J11)	ADX2230
	13	1P Lead Wire (J4)	ADX2289
	14	1P Lead Wire (J5)	ADX2290
	15	1P Lead Wire (J6)	ADX2291
	16	1P Lead Wire (J7)	ADX2231
	17	1P Lead Wire (J8)	ADX2232
	18	1P Lead Wire (J9)	ADX2233

2.9 CHASSIS BLOCK (2)

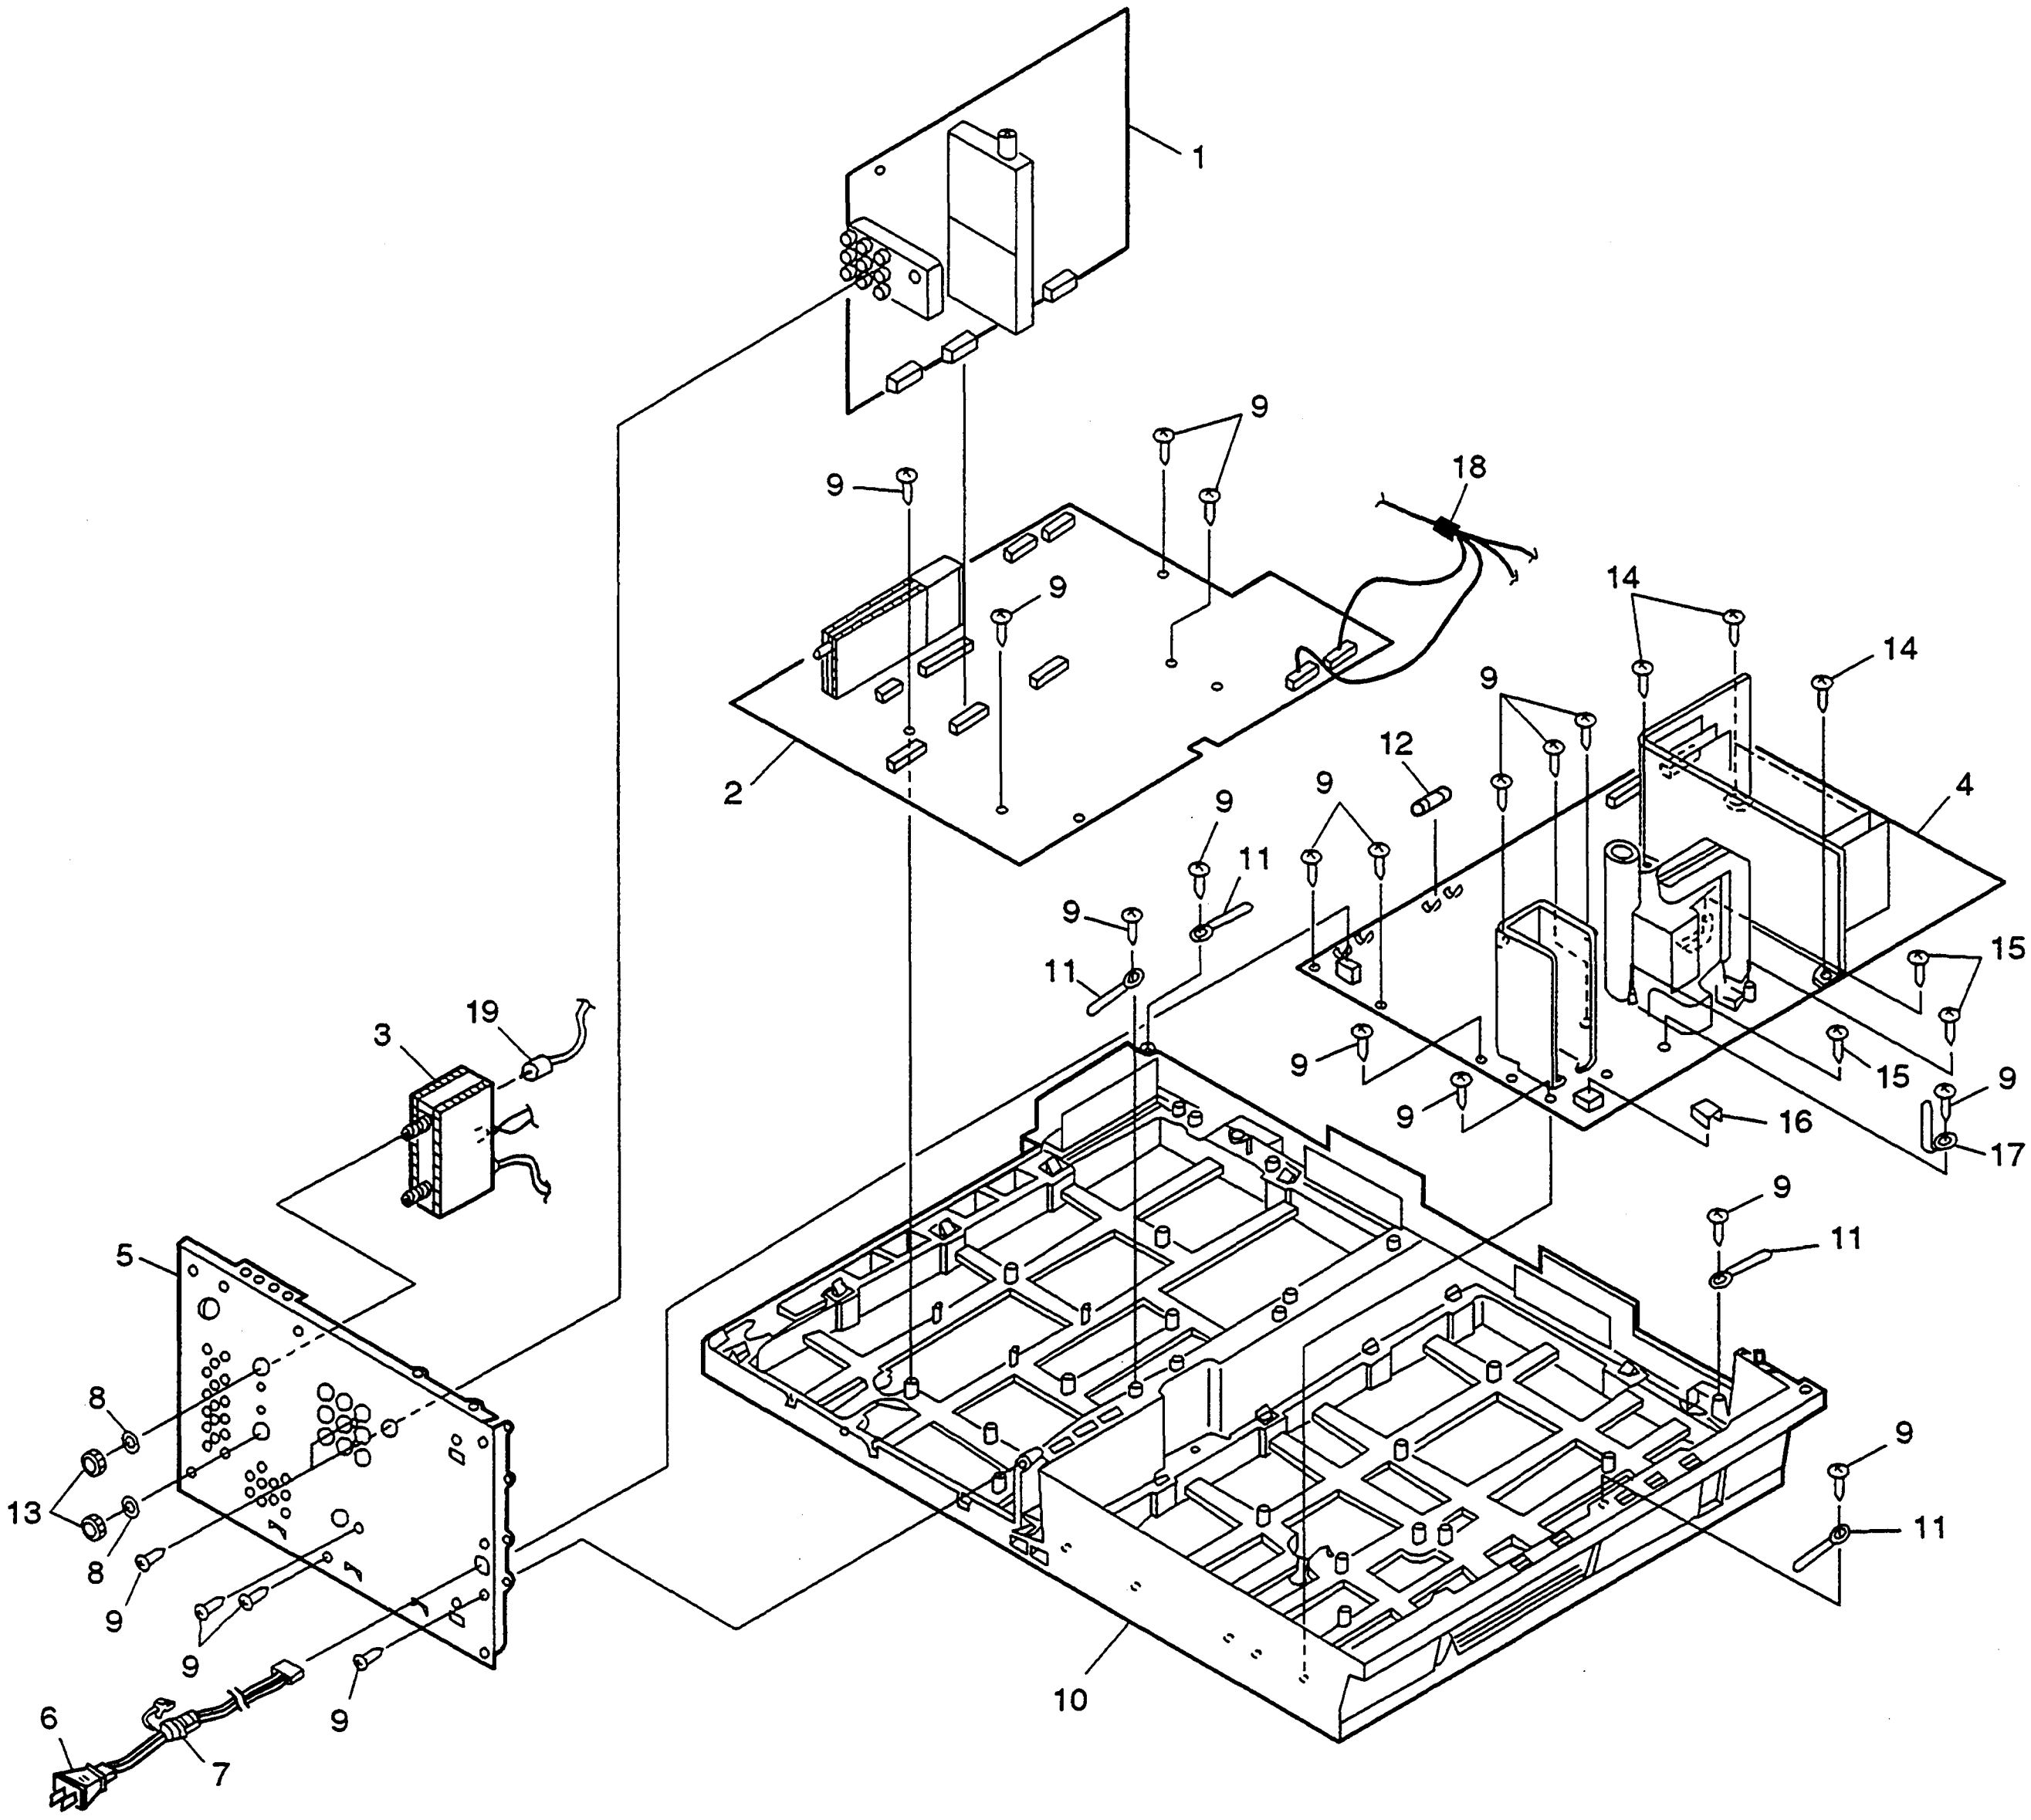
1
9
9
9
9
18
14
14
9
12
9
9
11
4
9
11
15
2
19
3
9
9
15
9
16
9
17
9
11
5
8
13
8
9
9
9
9
11
6
7
10

Parts List

Mark	No.	Description	Part No.
	1	AV I/O Assy	AWZ6197
	2	TUNER • VIDEO Assy	AWZ6185
	3	RF Switch	AXF1088
☆	4	POWER SUPPLY SERVICE Assy	AWV1615
	5	Rear Panel	ANC2296
⚠	6	AC Power Cord	BDG1019
	7	Strain Relief	AEP-113
	8	Bushing	AEC1661
	9	Screw	BBZ30P140FZK
NSP	10	Chassis	AMA1011
	11	Binder	AEP-215
⚠	12	Fuse (FU102, 0.5A/125V)	AEK1010
	13	Nut	ABN-087
	14	Screw	ABZ30P120FZK
	15	Screw	VBZ30P200FMC
	16	Shield Case	ANK1510
	17	Binder	AEC-826
	18	Wire Harness (J8009)	ADX2288
	19	Coaxial Cable	ADE1165

3. SCHEMATIC DIAGRAM

3.1 OVERALL WIRING DIAGRAM

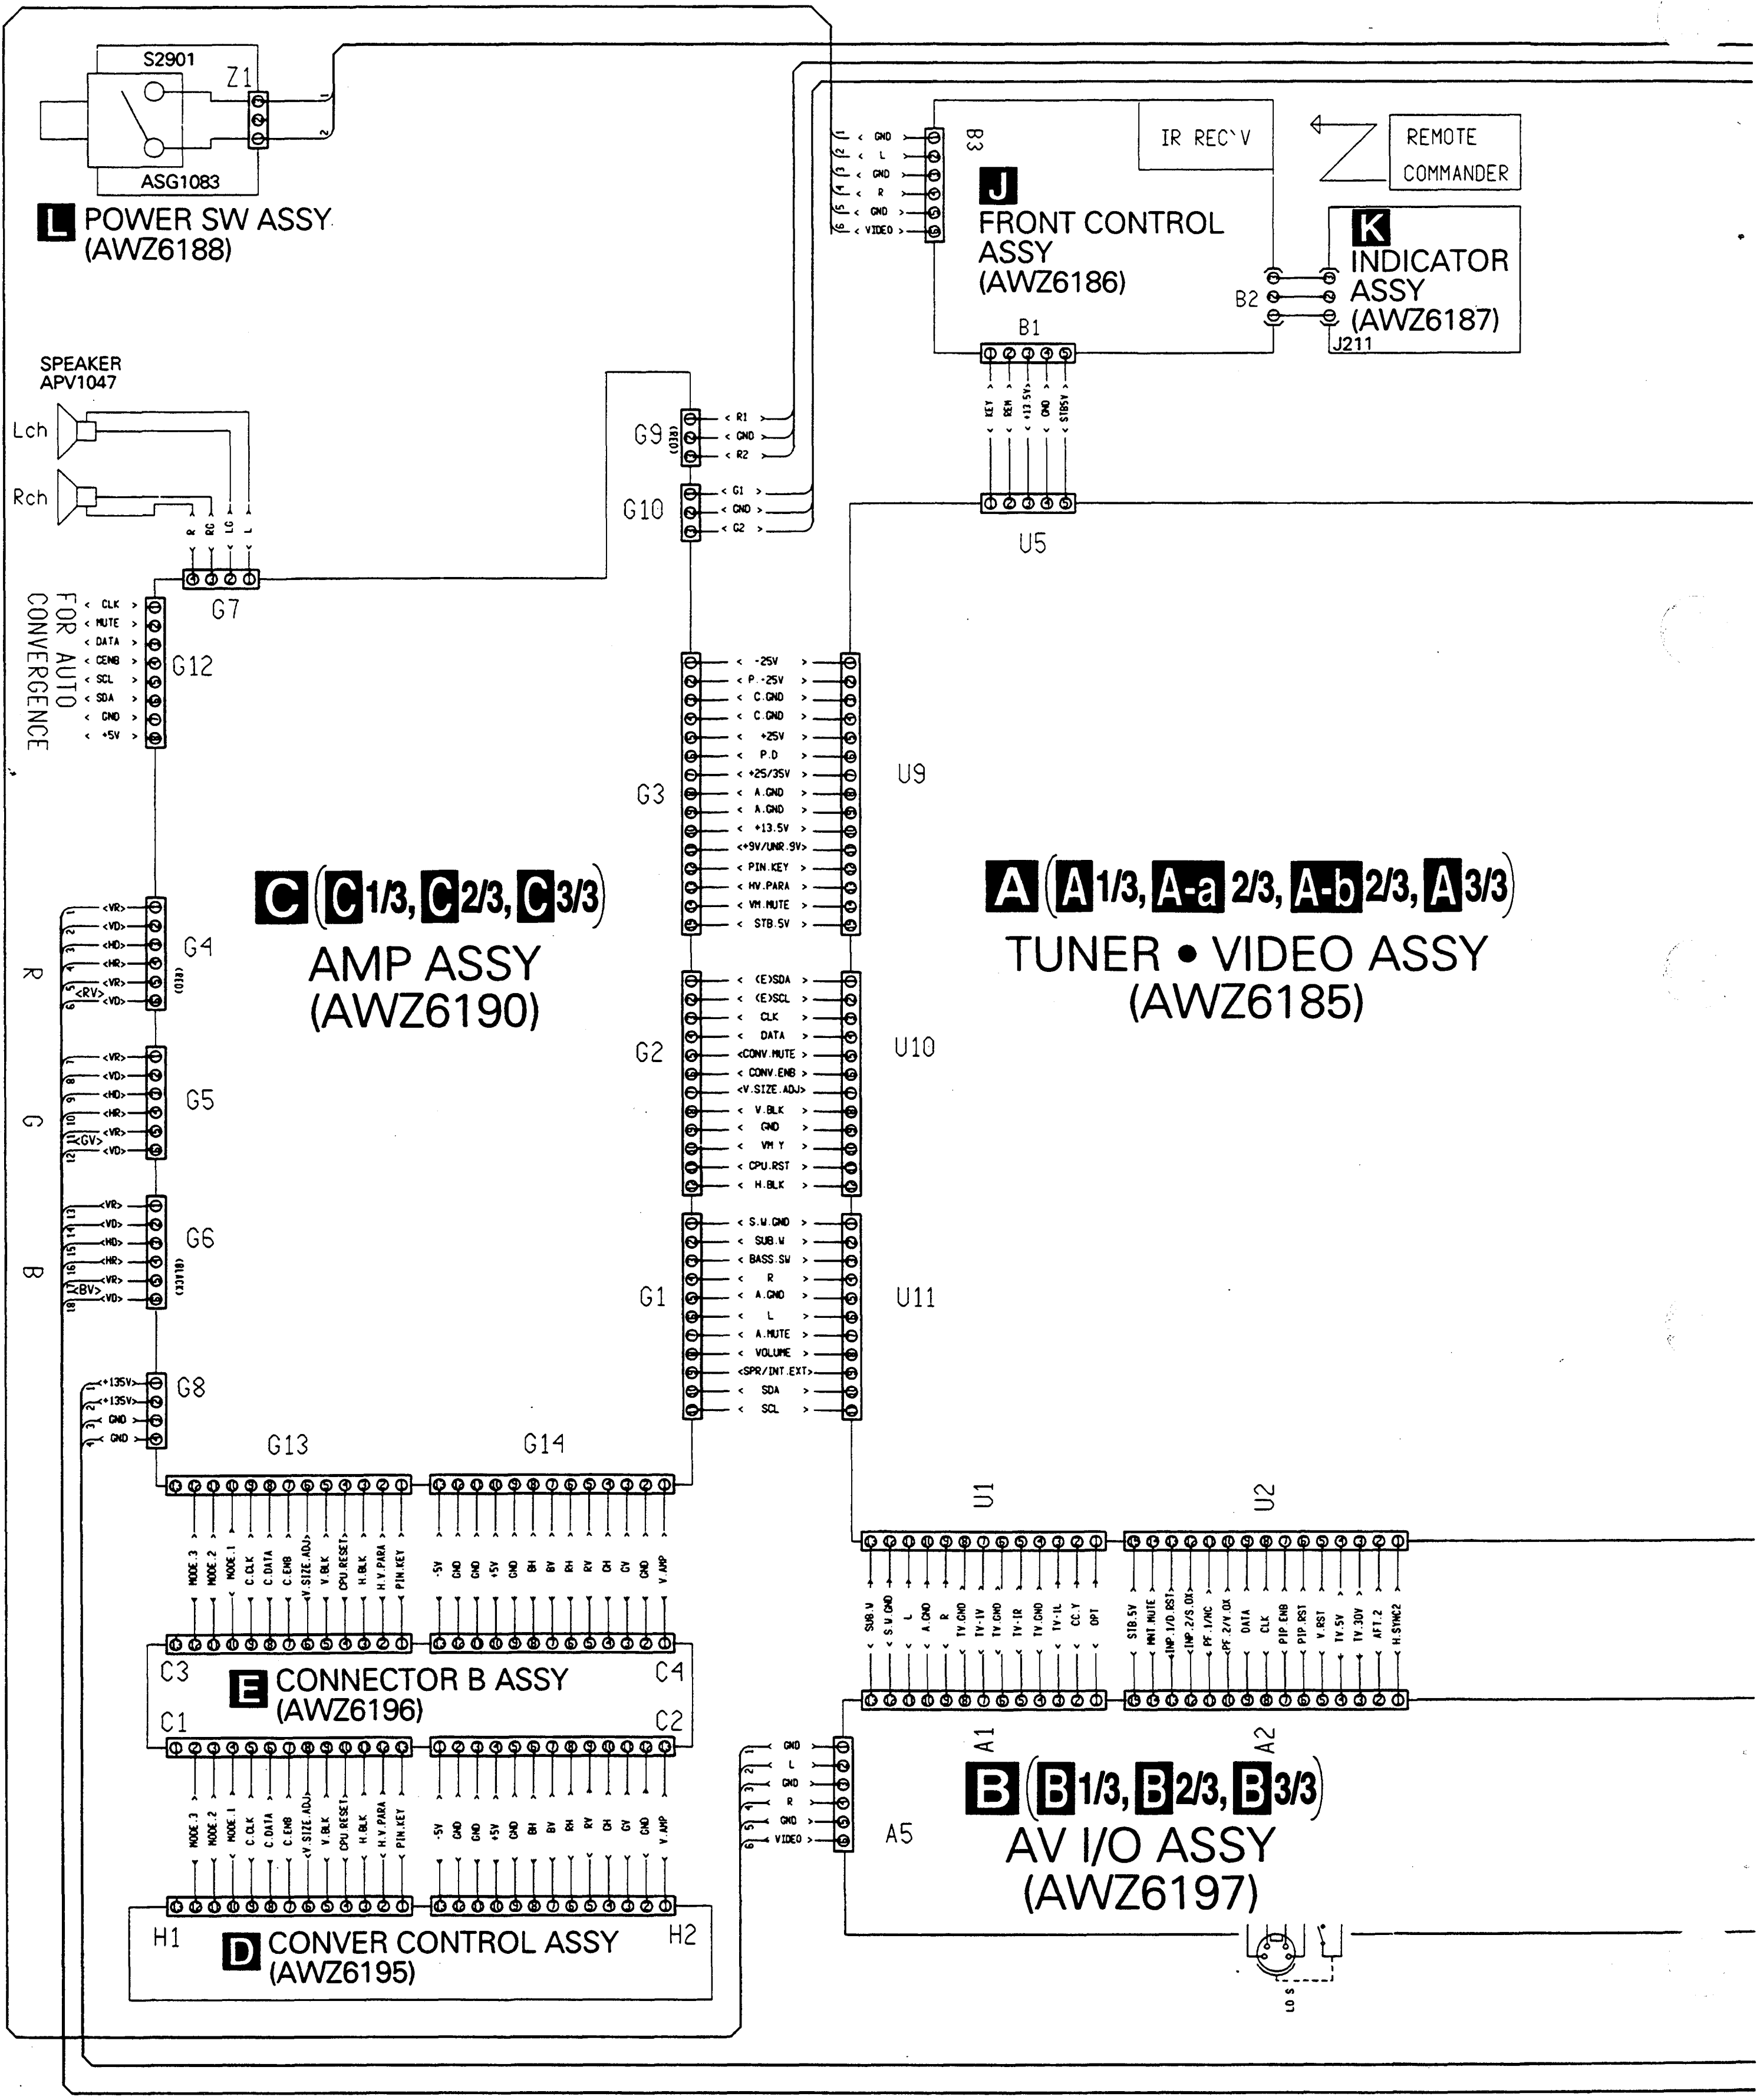
S2901
Z1
ASG1083
L POWER SW ASSY (AWZ6188)
SPEAKER APV1047
Lch
Rch
R
RG
LG
L
G7
FOR AUTO CONVERGENCE
CLK
MUTE
DATA
CENB
SCL
SDA
GND
+5V
G12
G9
R1
GND
R2
G10
G1
GND
G2
B3
GND
L
GND
R
GND
VIDEO
IR REC'V
REMOTE COMMANDER
J FRONT CONTROL ASSY (AWZ6186)
K INDICATOR ASSY (AWZ6187)
B2
B1
J211
KEY
REM
+13.5V
GND
STBSV
U5
G3
-25V
P.-25V
C.GND
C.GND
+25V
P.D
+25/35V
A.GND
A.GND
+13.5V
+9V/UNR.9V
PIN.KEY
HV.PARA
VM.MUTE
STB.5V
U9
C (C1/3, C2/3, C3/3)
AMP ASSY (AWZ6190)
A (A1/3, A-a 2/3, A-b 2/3, A3/3)
TUNER • VIDEO ASSY (AWZ6185)
G4
VR
VD
HD
HR
VR
VD
RV
R
G5
GV
G
G6
BV
B
G2
(E)SDA
(E)SCL
CLK
DATA
CONV.MUTE
CONV.ENB
V.SIZE.ADJ
V.BLK
GND
VM Y
CPU.RST
H.BLK
U10
G1
S.W.GND
SUB.W
BASS.SW
R
A.GND
L
A.MUTE
VOLUME
SPR/INT.EXT
SDA
SCL
U11
G8
+135V
+135V
GND
GND
G13
G14
MODE.3
MODE.2
MODE.1
C.CLK
C.DATA
C.ENB
V.SIZE.ADJ
V.BLK
CPU.RESET
H.BLK
H.V.PARA
PIN.KEY
-5V
GND
GND
+5V
GND
BH
BV
RH
RV
GH
GV
GND
V.AMP
C3
C4
E CONNECTOR B ASSY (AWZ6196)
C1
C2
H1
H2
D CONVER CONTROL ASSY (AWZ6195)
U1
U2
SUB.W
S.W.GND
L
A.GND
R
TV.GND
TV-1V
TV.GND
TV-1R
TV.GND
TV-1L
CC.Y
OPT
STB.5V
MNT.MUTE
INP.1/O.RST
INP.2/S.OX
PF.1/HC
PF.2/Y.OX
DATA
CLK
PIP.ENB
PIP.RST
V.RST
TV.5V
TV.30V
AFT.2
H.SYNC2
A1
A2
A5
GND
L
GND
R
GND
VIDEO
B (B1/3, B2/3, B3/3)
AV I/O ASSY (AWZ6197)

Note : When ordering service parts, be sure to refer to
"EXPLODED VIEWS AND PARTS LIST" or "PCB PARTS LIST"

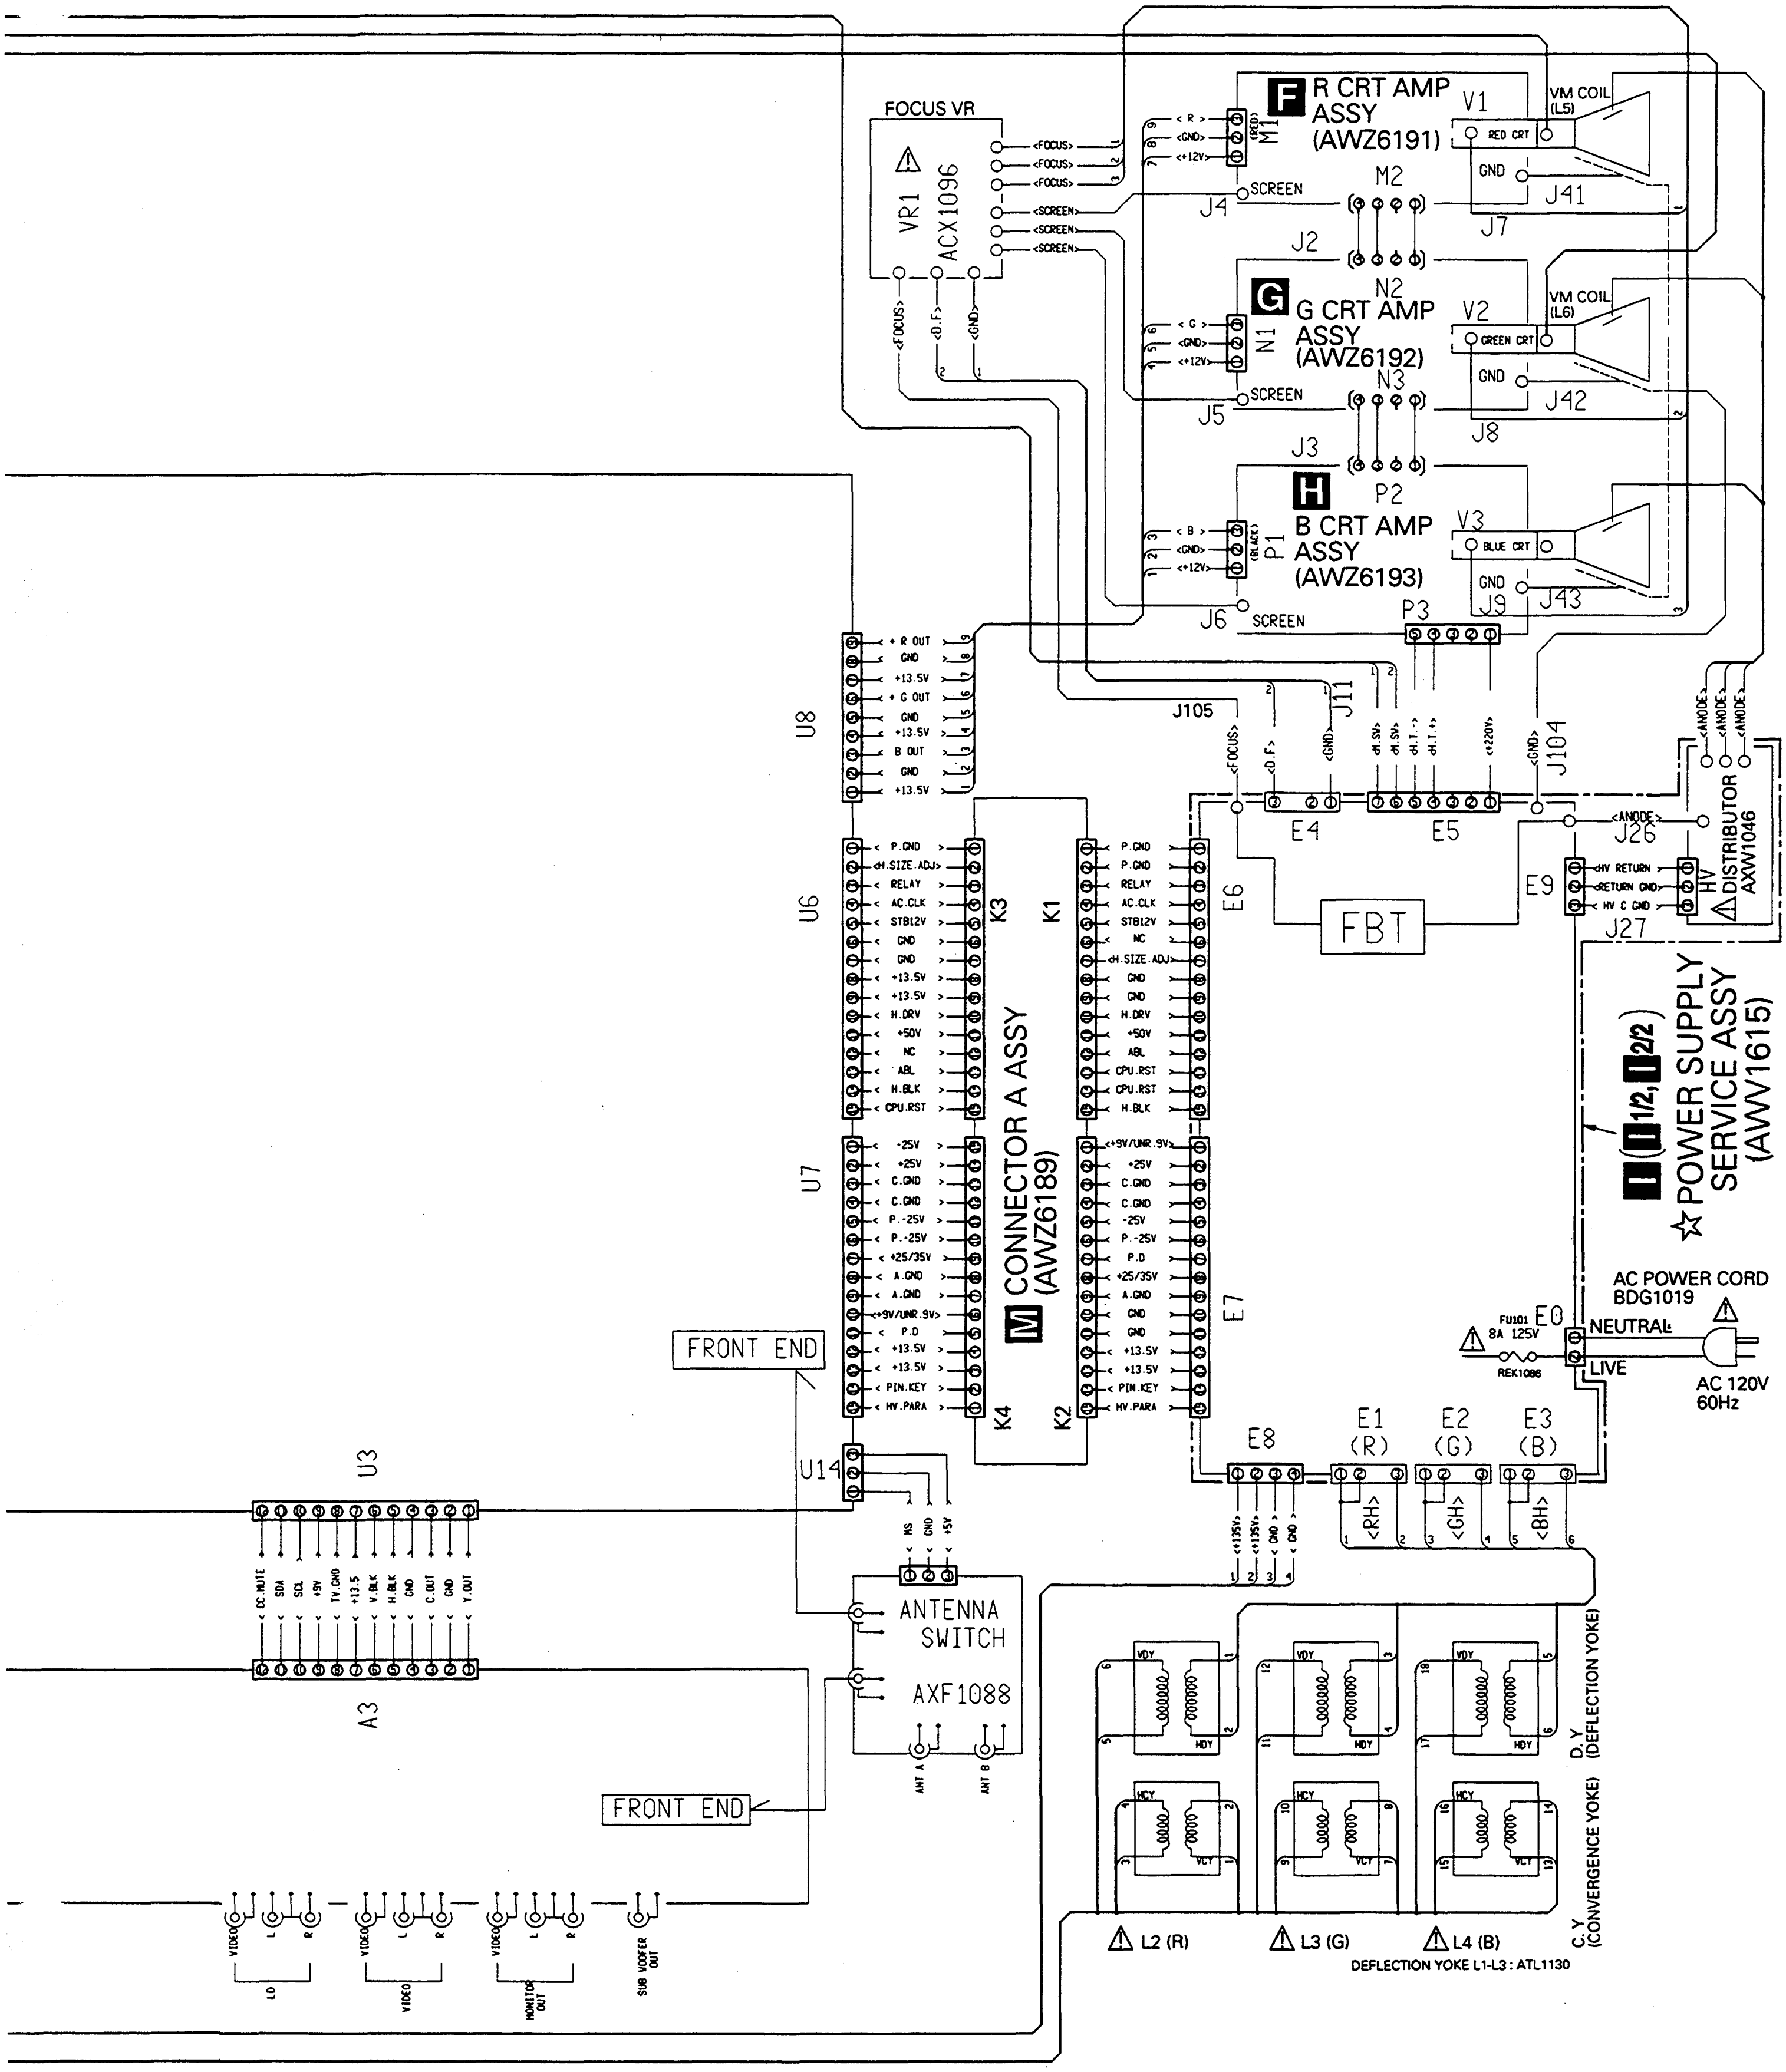
FOCUS VR
VR1
ACX1096
<FOCUS>
<SCREEN>
<D.F>
<GND>
F R CRT AMP ASSY (AWZ6191)
M1
M2
V1
RED CRT
VM COIL (L5)
GND
J41
J7
J4
SCREEN
J2
G G CRT AMP ASSY (AWZ6192)
N1
N2
N3
V2
GREEN CRT
VM COIL (L6)
J42
J8
J5
J3
H B CRT AMP ASSY (AWZ6193)
P1
P2
P3
V3
BLUE CRT
J43
J9
J6
U8
+ R OUT
GND
+13.5V
+ G OUT
B OUT
J105
J11
J104
<ANODE>
E4
E5
J26
HV DISTRIBUTOR AXW1046
U6
K3
K1
E6
FBT
E9
HV RETURN
RETURN GND
HV C GND
J27
P.GND
H.SIZE.ADJ
RELAY
AC.CLK
STB12V
NC
+50V
ABL
H.BLK
CPU.RST
H.DRV
M CONNECTOR A ASSY (AWZ6189)
U7
K4
K2
E7
-25V
+25V
C.GND
P.-25V
+25/35V
A.GND
+9V/UNR.9V
P.D
PIN.KEY
HV.PARA
I (I 1/2, I 2/2) ☆ POWER SUPPLY SERVICE ASSY (AWW1615)
AC POWER CORD BDG1019
FU101 8A 125V
REK1086
E0
NEUTRAL
LIVE
AC 120V 60Hz
FRONT END
U14
E8
E1 (R)
E2 (G)
E3 (B)
<RH>
<GH>
<BH>
U3
A3
CC.MUTE
SDA
SCL
+5V
TV.GND
+13.5
V.BLK
H.BLK
GND
C.OUT
Y.OUT
ANTENNA SWITCH
AXF1088
ANT A
ANT B
MS
VDY
HDY
HCY
VCY
D.Y (DEFLECTION YOKE)
C.Y (CONVERGENCE YOKE)
L2 (R)
L3 (G)
L4 (B)
DEFLECTION YOKE L1-L3 : ATL1130
VIDEO
L
R
LD
MONITOR OUT
SUB WOOFER OUT

3.2 TUNER•VIDEO ASSY (1/3)

A TUNER • VIDEO ASSY (1/3) (AWZ6185)

• TUNER BLOCK

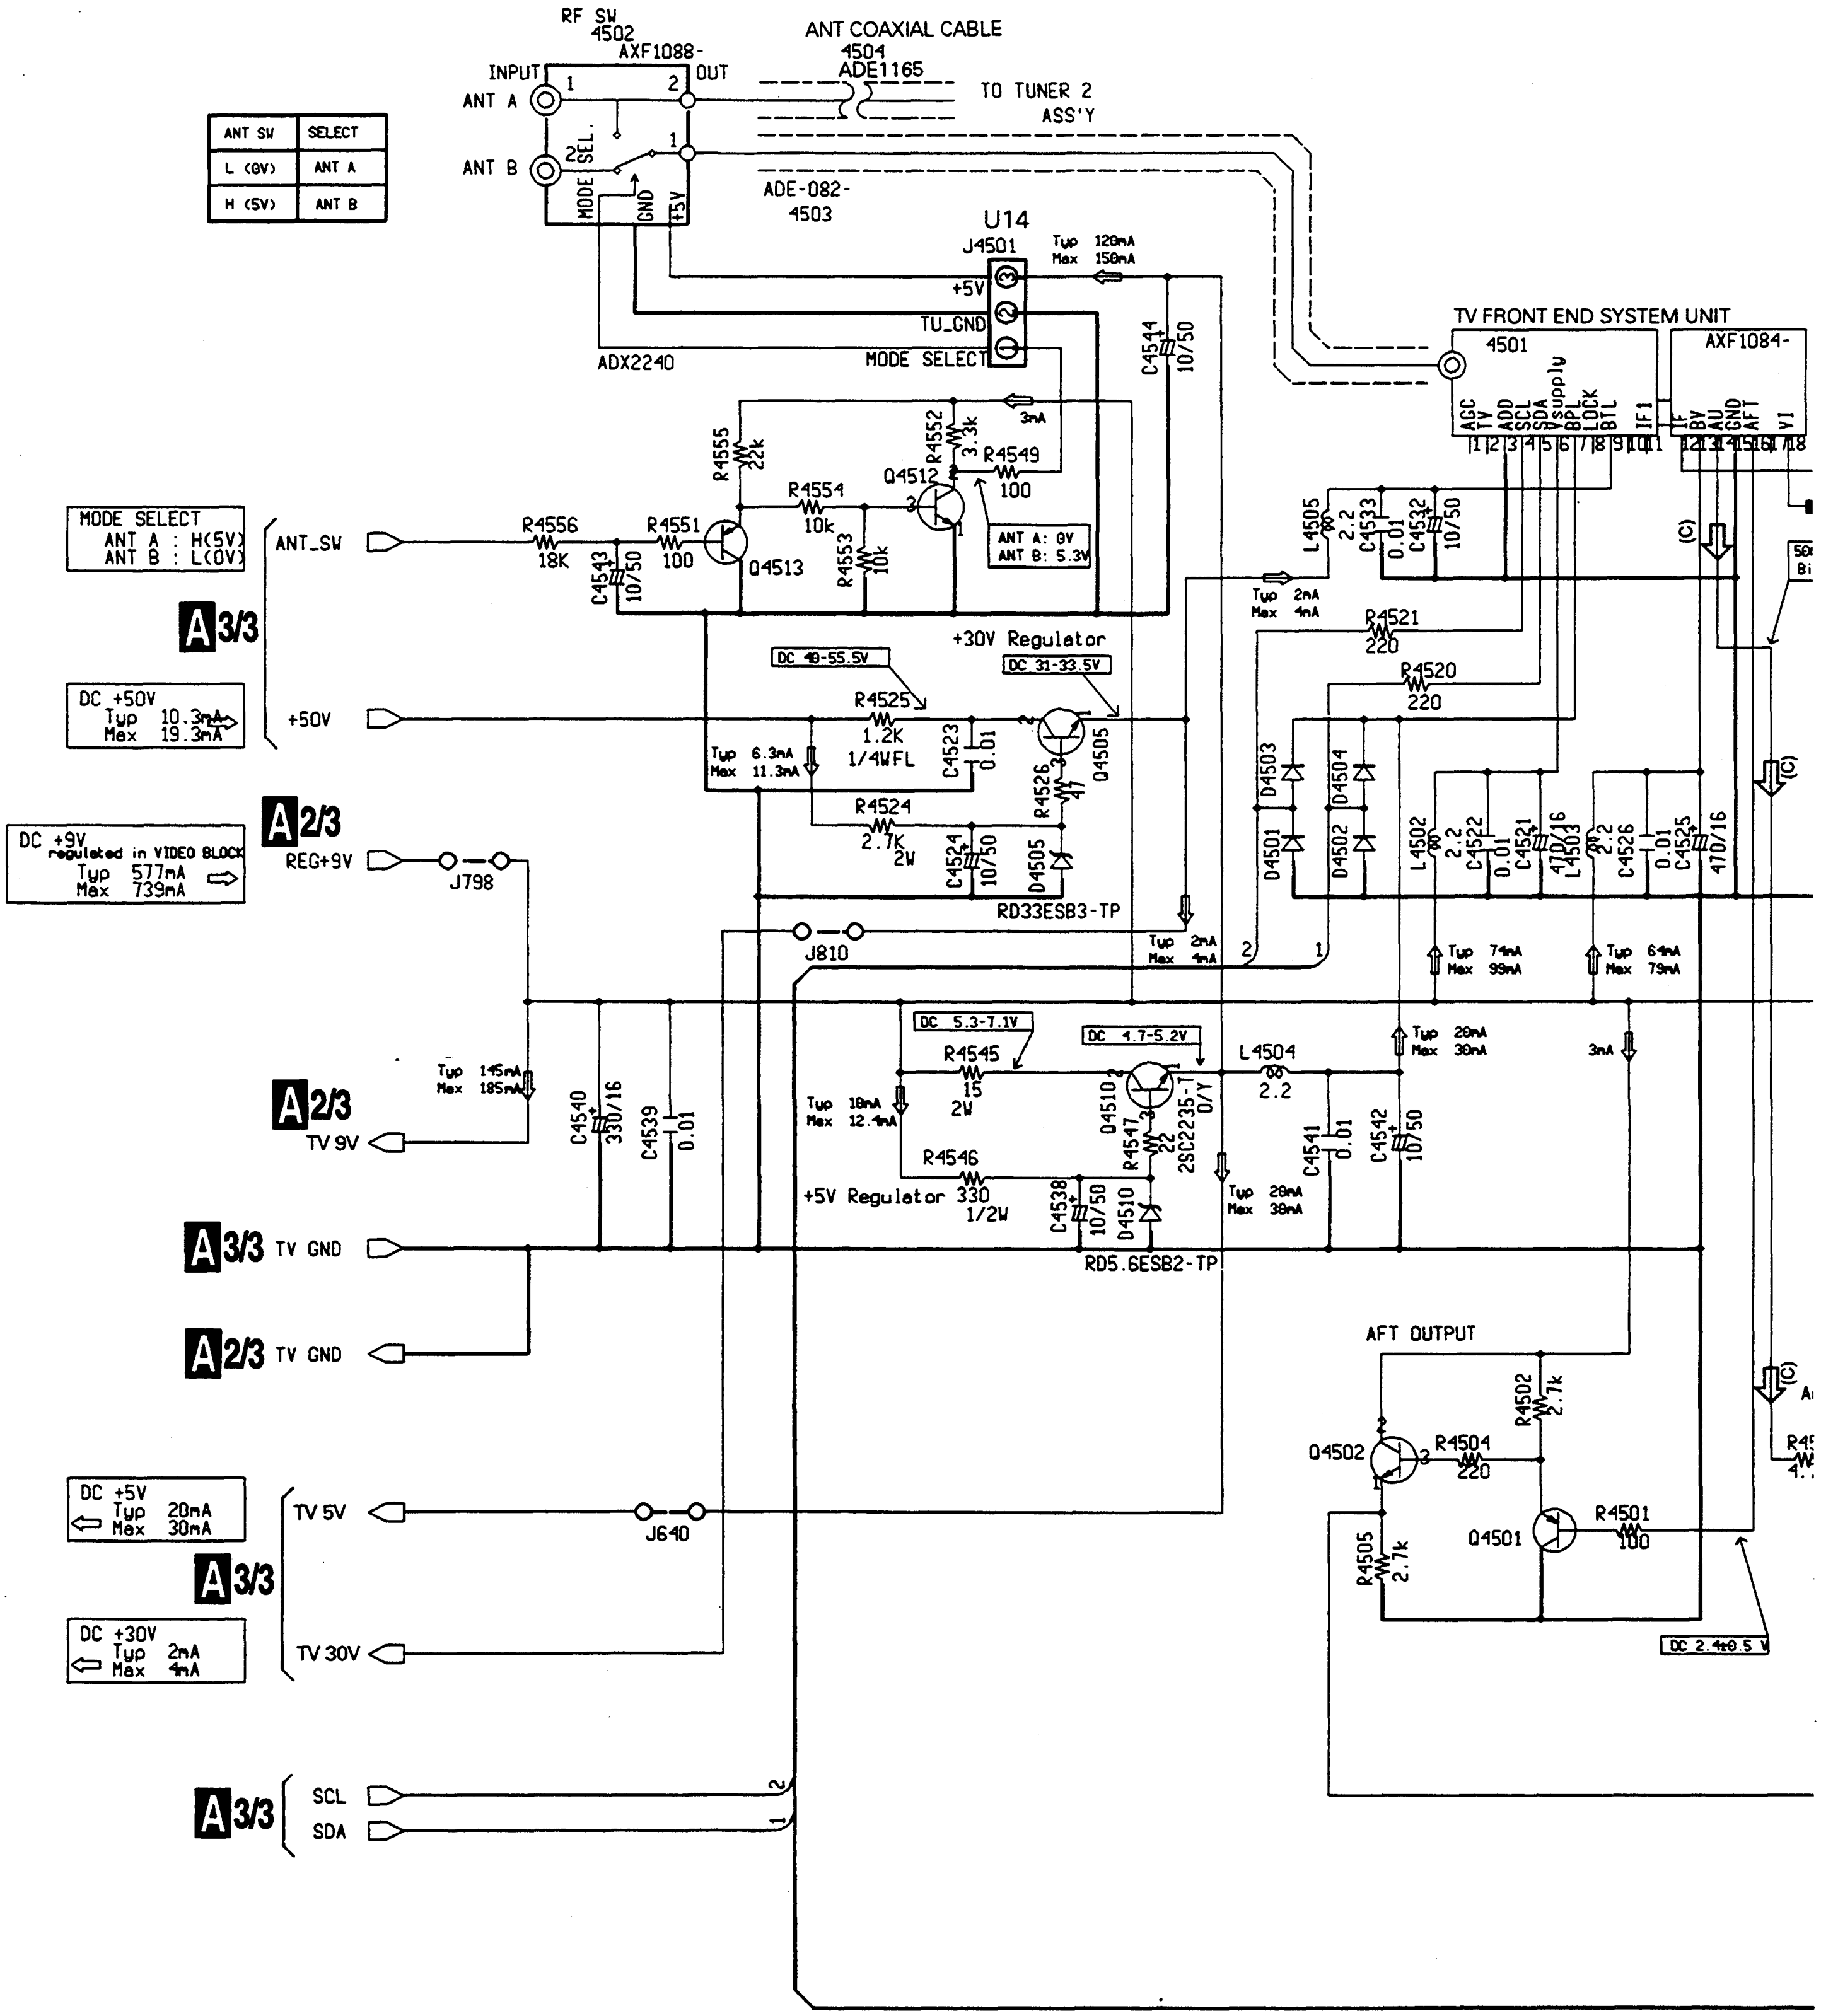
RF SW
4502
AXF1088-
INPUT
OUT
ANT A
ANT B
SEL.
MODE
GND
+5V
ANT COAXIAL CABLE
4504
ADE1165
TO TUNER 2
ASS'Y
ADE-082-
4503
ANT SW
SELECT
L (0V)
ANT A
H (5V)
ANT B
U14
J4501
Typ 120mA
Max 150mA
+5V
TU_GND
MODE SELECT
ADX2240
C4544
10/50
TV FRONT END SYSTEM UNIT
4501
AXF1084-
AGC
TV
ADD
SCL
SDA
Vsupply
BPL
LOCK
BTL
IF1
IF
BV
AU
GND
AFT
VI
R4555
22k
R4552
3.3k
3mA
R4549
100
R4554
10k
Q4512
ANT A: 0V
ANT B: 5.3V
MODE SELECT
ANT A : H(5V)
ANT B : L(0V)
ANT_SW
R4556
18K
R4551
100
Q4513
C4543
10/50
R4553
10k
L4505
2.2
C4533
0.01
C4532
10/50
Typ 2mA
Max 4mA
R4521
220
R4520
220
A3/3
+30V Regulator
DC 48-55.5V
DC 31-33.5V
DC +50V
Typ 10.3mA
Max 19.3mA
+50V
R4525
1.2K
1/4WFL
C4523
0.01
Q4505
Typ 6.3mA
Max 11.3mA
R4526
47
R4524
2.7K
2W
C4524
10/50
D4505
RD33ESB3-TP
D4503
D4504
D4501
D4502
L4502
2.2
C4522
0.01
C4521
470/16
L4503
2.2
C4526
0.01
C4525
470/16
A2/3
DC +9V
regulated in VIDEO BLOCK
Typ 577mA
Max 739mA
REG+9V
J798
J810
Typ 2mA
Max 4mA
Typ 74mA
Max 99mA
Typ 64mA
Max 79mA
DC 5.3-7.1V
DC 4.7-5.2V
R4545
15
2W
L4504
2.2
Typ 20mA
Max 30mA
3mA
Typ 145mA
Max 185mA
A2/3
TV 9V
C4540
330/16
C4539
0.01
Typ 10mA
Max 12.4mA
Q4510
R4547
22
2SC2235-T
O/Y
C4541
0.01
C4542
10/50
R4546
+5V Regulator 330
1/2W
C4538
10/50
D4510
RD5.6ESB2-TP
Typ 20mA
Max 30mA
A3/3 TV GND
A2/3 TV GND
AFT OUTPUT
R4502
2.7k
Q4502
R4504
220
Q4501
R4501
100
R4505
2.7k
DC 2.4±0.5 V
DC +5V
Typ 20mA
Max 30mA
TV 5V
J640
A3/3
DC +30V
Typ 2mA
Max 4mA
TV 30V
A3/3
SCL
SDA
(C)

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k Ω
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V except electrolytic capacitor.

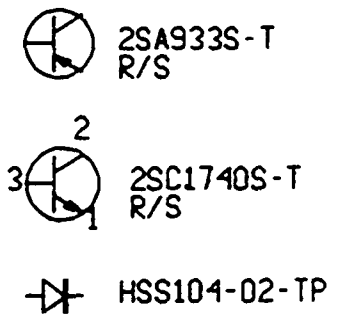
2SA933S-T
R/S
2SC1740S-T
R/S
HSS104-02-TP

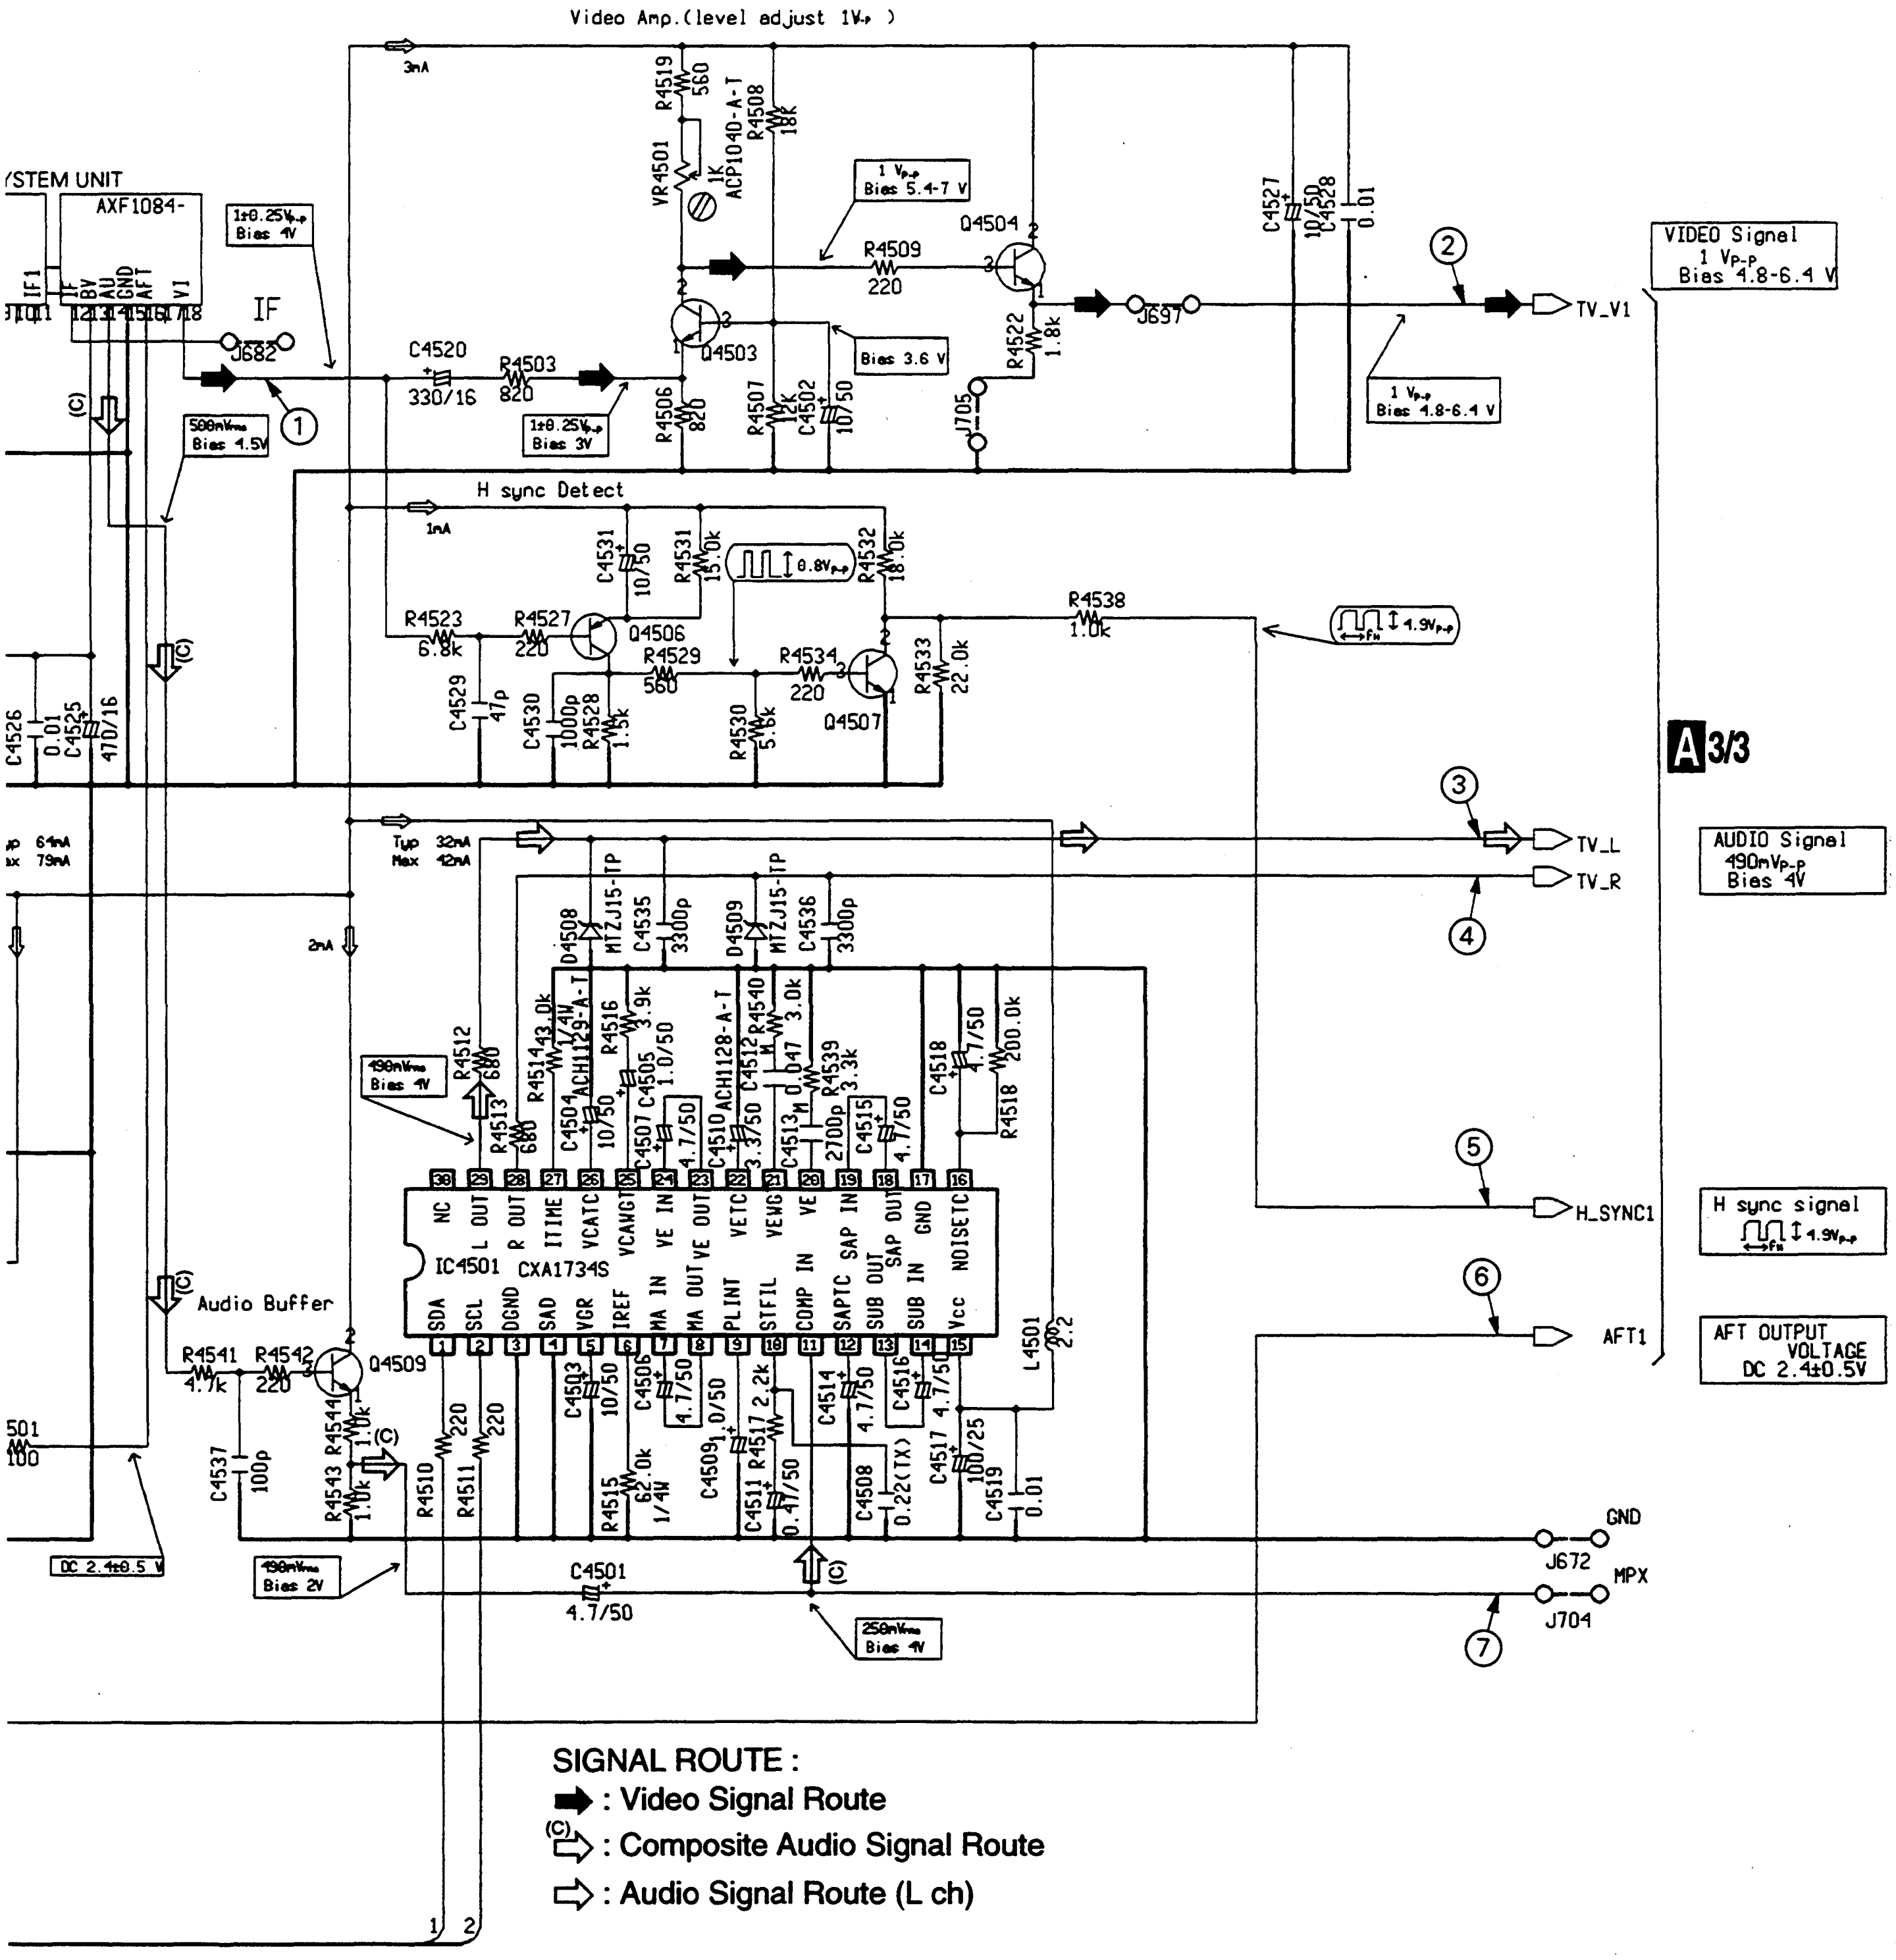
Video Amp.(level adjust 1Vp-p)
SYSTEM UNIT
AXF1084-
IF
J682
①
C4520
330/16
R4503
820
1±0.25Vp-p Bias 3V
R4519 560
VR4501 1K
ACP1040-A-T
R4508 18K
R4506 820
Q4503
Bias 3.6 V
R4507 12k
C4502 10/50
R4509 220
1 Vp-p Bias 5.4-7 V
Q4504
R4522 1.8k
J697
J705
C4527 10/50
C4528 0.01
②
1 Vp-p Bias 4.8-6.4 V
TV_V1
VIDEO Signal 1 Vp-p Bias 4.8-6.4 V
1±0.25Vp-p Bias 4V
500mVrms Bias 4.5V
H sync Detect
1mA
3mA
C4531 10/50
R4531 15.0k
0.8Vp-p
R4532 18.0k
R4523 6.8k
R4527 220
Q4506
R4529 560
R4534 220
Q4507
R4533 22.0k
R4538 1.0k
4.9Vp-p
C4529 47p
C4530 1000p
R4528 1.5k
R4530 5.6k
C4526 0.01
C4525 470/16
Typ 64mA Max 79mA
Typ 32mA Max 42mA
2mA
③
TV_L
TV_R
④
AUDIO Signal 490mVp-p Bias 4V
A3/3
D4508 MTZJ15-TP
C4535 3300p
D4509 MTZJ15-TP
C4536 3300p
490mVrms Bias 4V
R4512 680
R4513 680
R4514 43.0k 1/4W
ACH1129-A-T
C4504 10/50
R4516 3.9k
C4505 1.0/50
C4507 4.7/50
C4510 3.3/50
ACH1128-A-T
R4540 3.0k
C4512 0.047
C4513 2700p
R4539 3.3k
C4515 4.7/50
C4518 4.7/50
R4518 200.0k
IC4501 CXA1734S
NC L OUT R OUT ITIME VCATC VCAWGT VE IN VE OUT VETC VEWG VE SAP IN SAP OUT GND NOISETC
SDA SCL DGND SAD VGR IREF MA IN MA OUT PLINT STFIL COMP IN SAPTC SUB OUT SUB IN Vcc
⑤
H_SYNC1
H sync signal 4.9Vp-p
⑥
AFT1
AFT OUTPUT VOLTAGE DC 2.4±0.5V
Audio Buffer
R4541 4.7k
R4542 220
Q4509
R4544 1.0k
R4543 1.0k
C4537 100p
R4501 100
R4510 220
R4511 220
C4503 10/50
R4515 62.0k 1/4W
C4506 4.7/50
C4509 1.0/50
R4517 2.2k
C4511 0.47/50
C4514 4.7/50
C4508 0.22(TX)
C4516 4.7/50
C4517 100/25
C4519 0.01
L4501 22
DC 2.4±0.5 V
490mVrms Bias 2V
C4501 4.7/50
250mVrms Bias 4V
GND
J672
MPX
J704
⑦
1 2

SIGNAL ROUTE :

➡ : Video Signal Route

(C)⇨ : Composite Audio Signal Route

⇨ : Audio Signal Route (L ch)

3.3 TUNER•VIDEO ASSY (2/3)

A-a

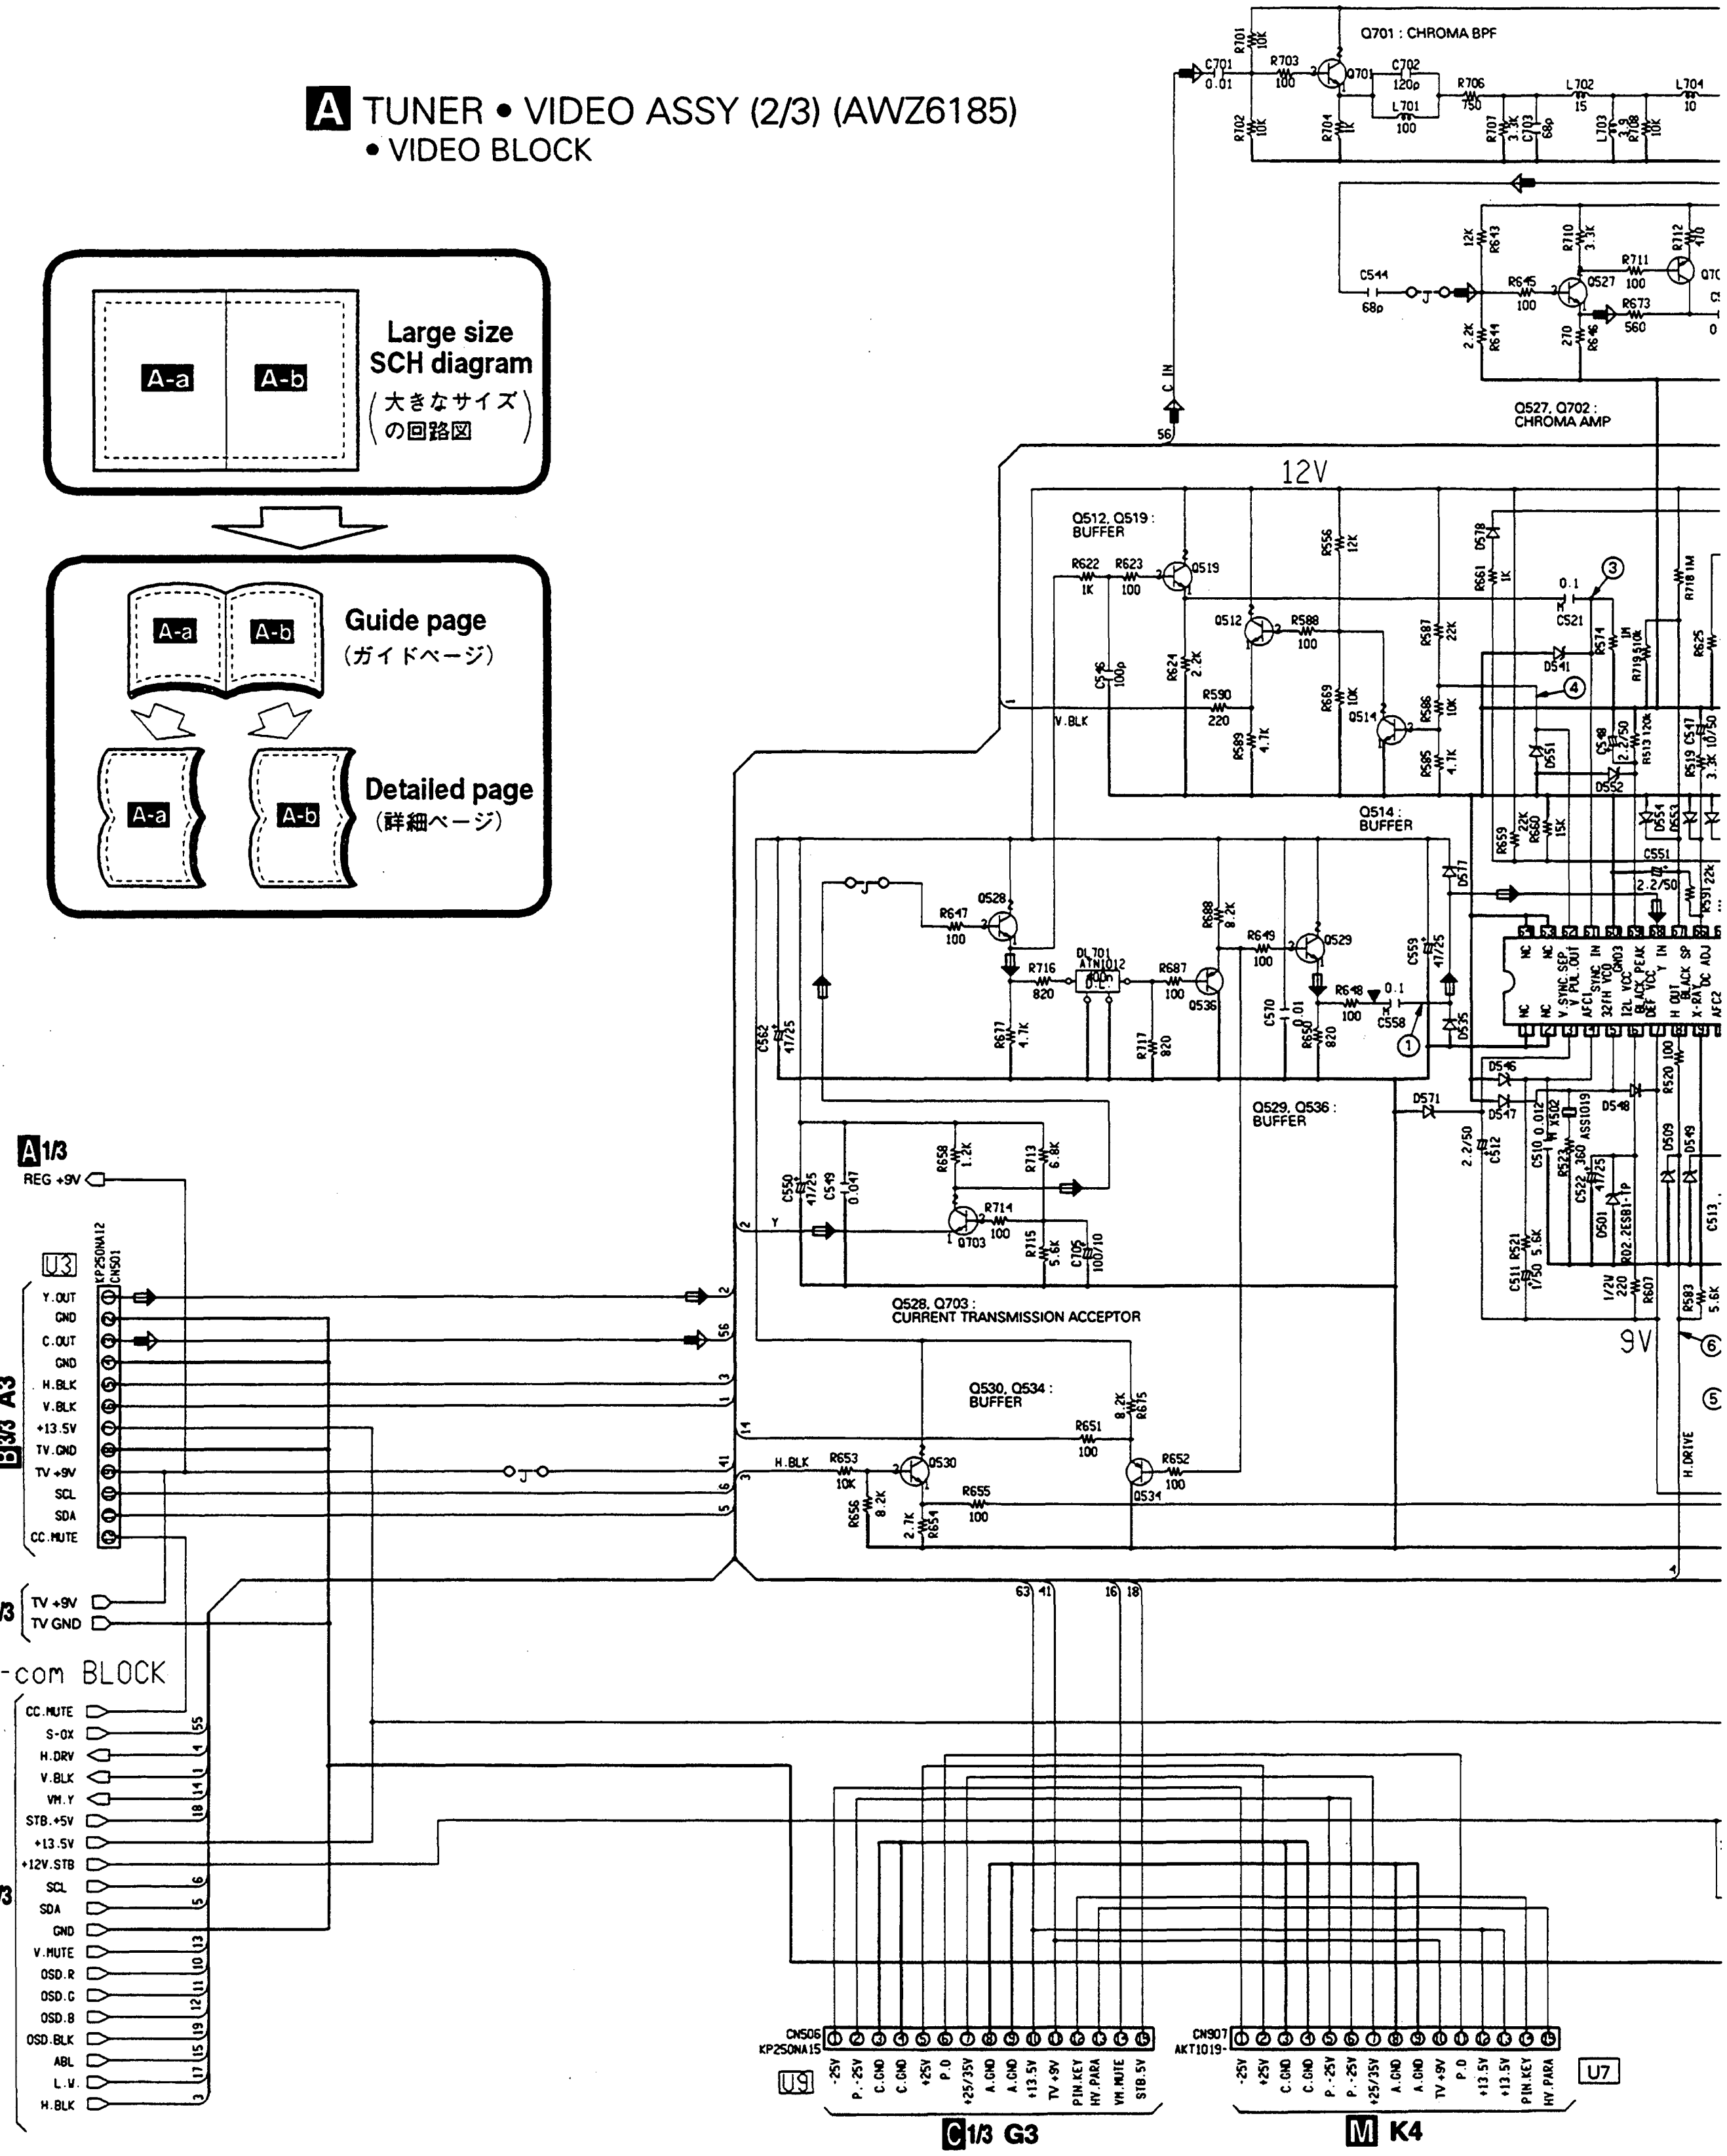
A TUNER • VIDEO ASSY (2/3) (AWZ6185)
• VIDEO BLOCK
Large size SCH diagram
（大きなサイズの回路図）
A-a
A-b
Guide page
（ガイドページ）
Detailed page
（詳細ページ）
Q701 : CHROMA BPF
C701 0.01
R703 100
C702 120p
L701 100
R706 750
L702 15
L704 10
R701 10K
R702 10K
R704 1K
R707
C703 68p
L703
R708 10K
C IN
56
C544 68p
R613 12K
R644 2.2K
R645 100
R710 3.3K
Q527
R711 100
R712 470
R673 560
R646 270
Q527, Q702 : CHROMA AMP
12V
Q512, Q519 : BUFFER
R622 1K
R623 100
Q519
Q512
R588 100
R556 12K
R624 2.2K
C546 100p
R590 220
R589 4.7K
V.BLK
R669 10K
Q514
R586 10K
R585 4.7K
R587 22K
D578
R661 1K
C521 0.1
D541
Q514 : BUFFER
R659 22K
R660 15K
C551 2.2/50
Q528
R647 100
R716 820
DL701 ATN1012
R688 8.2K
R649 100
Q529
R687 100
Q536
C559 47/25
C558 0.1
R648 100
C570 0.01
R650 820
R717 820
R617 4.7K
C562 47/25
D577
D575
D546
D547
D571
C512 2.2/50
C510 0.012
X502
D548
C522
D501
D509
D549
C513
R520
R521 5.6K
C511 1/50
R603
R583 5.6K
9V
Q529, Q536 : BUFFER
R658 1.2K
R713 6.8K
R714 100
Q703
C550 47/25
C549 0.047
R715 5.6K
C705 100/10
Y
Q528, Q703 : CURRENT TRANSMISSION ACCEPTOR
Q530, Q534 : BUFFER
R615 8.2K
R651 100
R652 100
Q534
H.BLK
R653 10K
Q530
R655 100
R656 8.2K
R654 2.7K
H.DRIVE
NC
V SYNC SEP
V PUL OUT
AFC
SYNC IN
32fH VCO
12L VCC
BLACK PEAK
DEF VCC
Y IN
H OUT
BLACK SP
X-RAY
DC ADJ
AFC2
A1/3
REG +9V
U3
KP250NA12
CN501
Y.OUT
GND
C.OUT
GND
H.BLK
V.BLK
+13.5V
TV.GND
TV +9V
SCL
SDA
CC.MUTE
B3/3 A3
A1/3
TV +9V
TV GND
u-com BLOCK
CC.MUTE
S-OX
H.DRV
V.BLK
VM.Y
STB.+5V
+13.5V
+12V.STB
SCL
SDA
GND
V.MUTE
OSD.R
OSD.G
OSD.B
OSD.BLK
ABL
L.V.
H.BLK
A3/3
63
41
16
18
CN506
KP250NA15
U9
-25V
P.-25V
C.GND
C.GND
+25V
P.D
+25/35V
A.GND
A.GND
TV +9V
PIN.KEY
HV.PARA
VM.MUTE
STB.5V
C1/3 G3
CN907
AKT1019
-25V
+25V
C.GND
P.-25V
P.-25V
+25/35V
A.GND
TV +9V
P.D
+13.5V
+13.5V
PIN.KEY
HV.PARA
U7
M K4

A-b

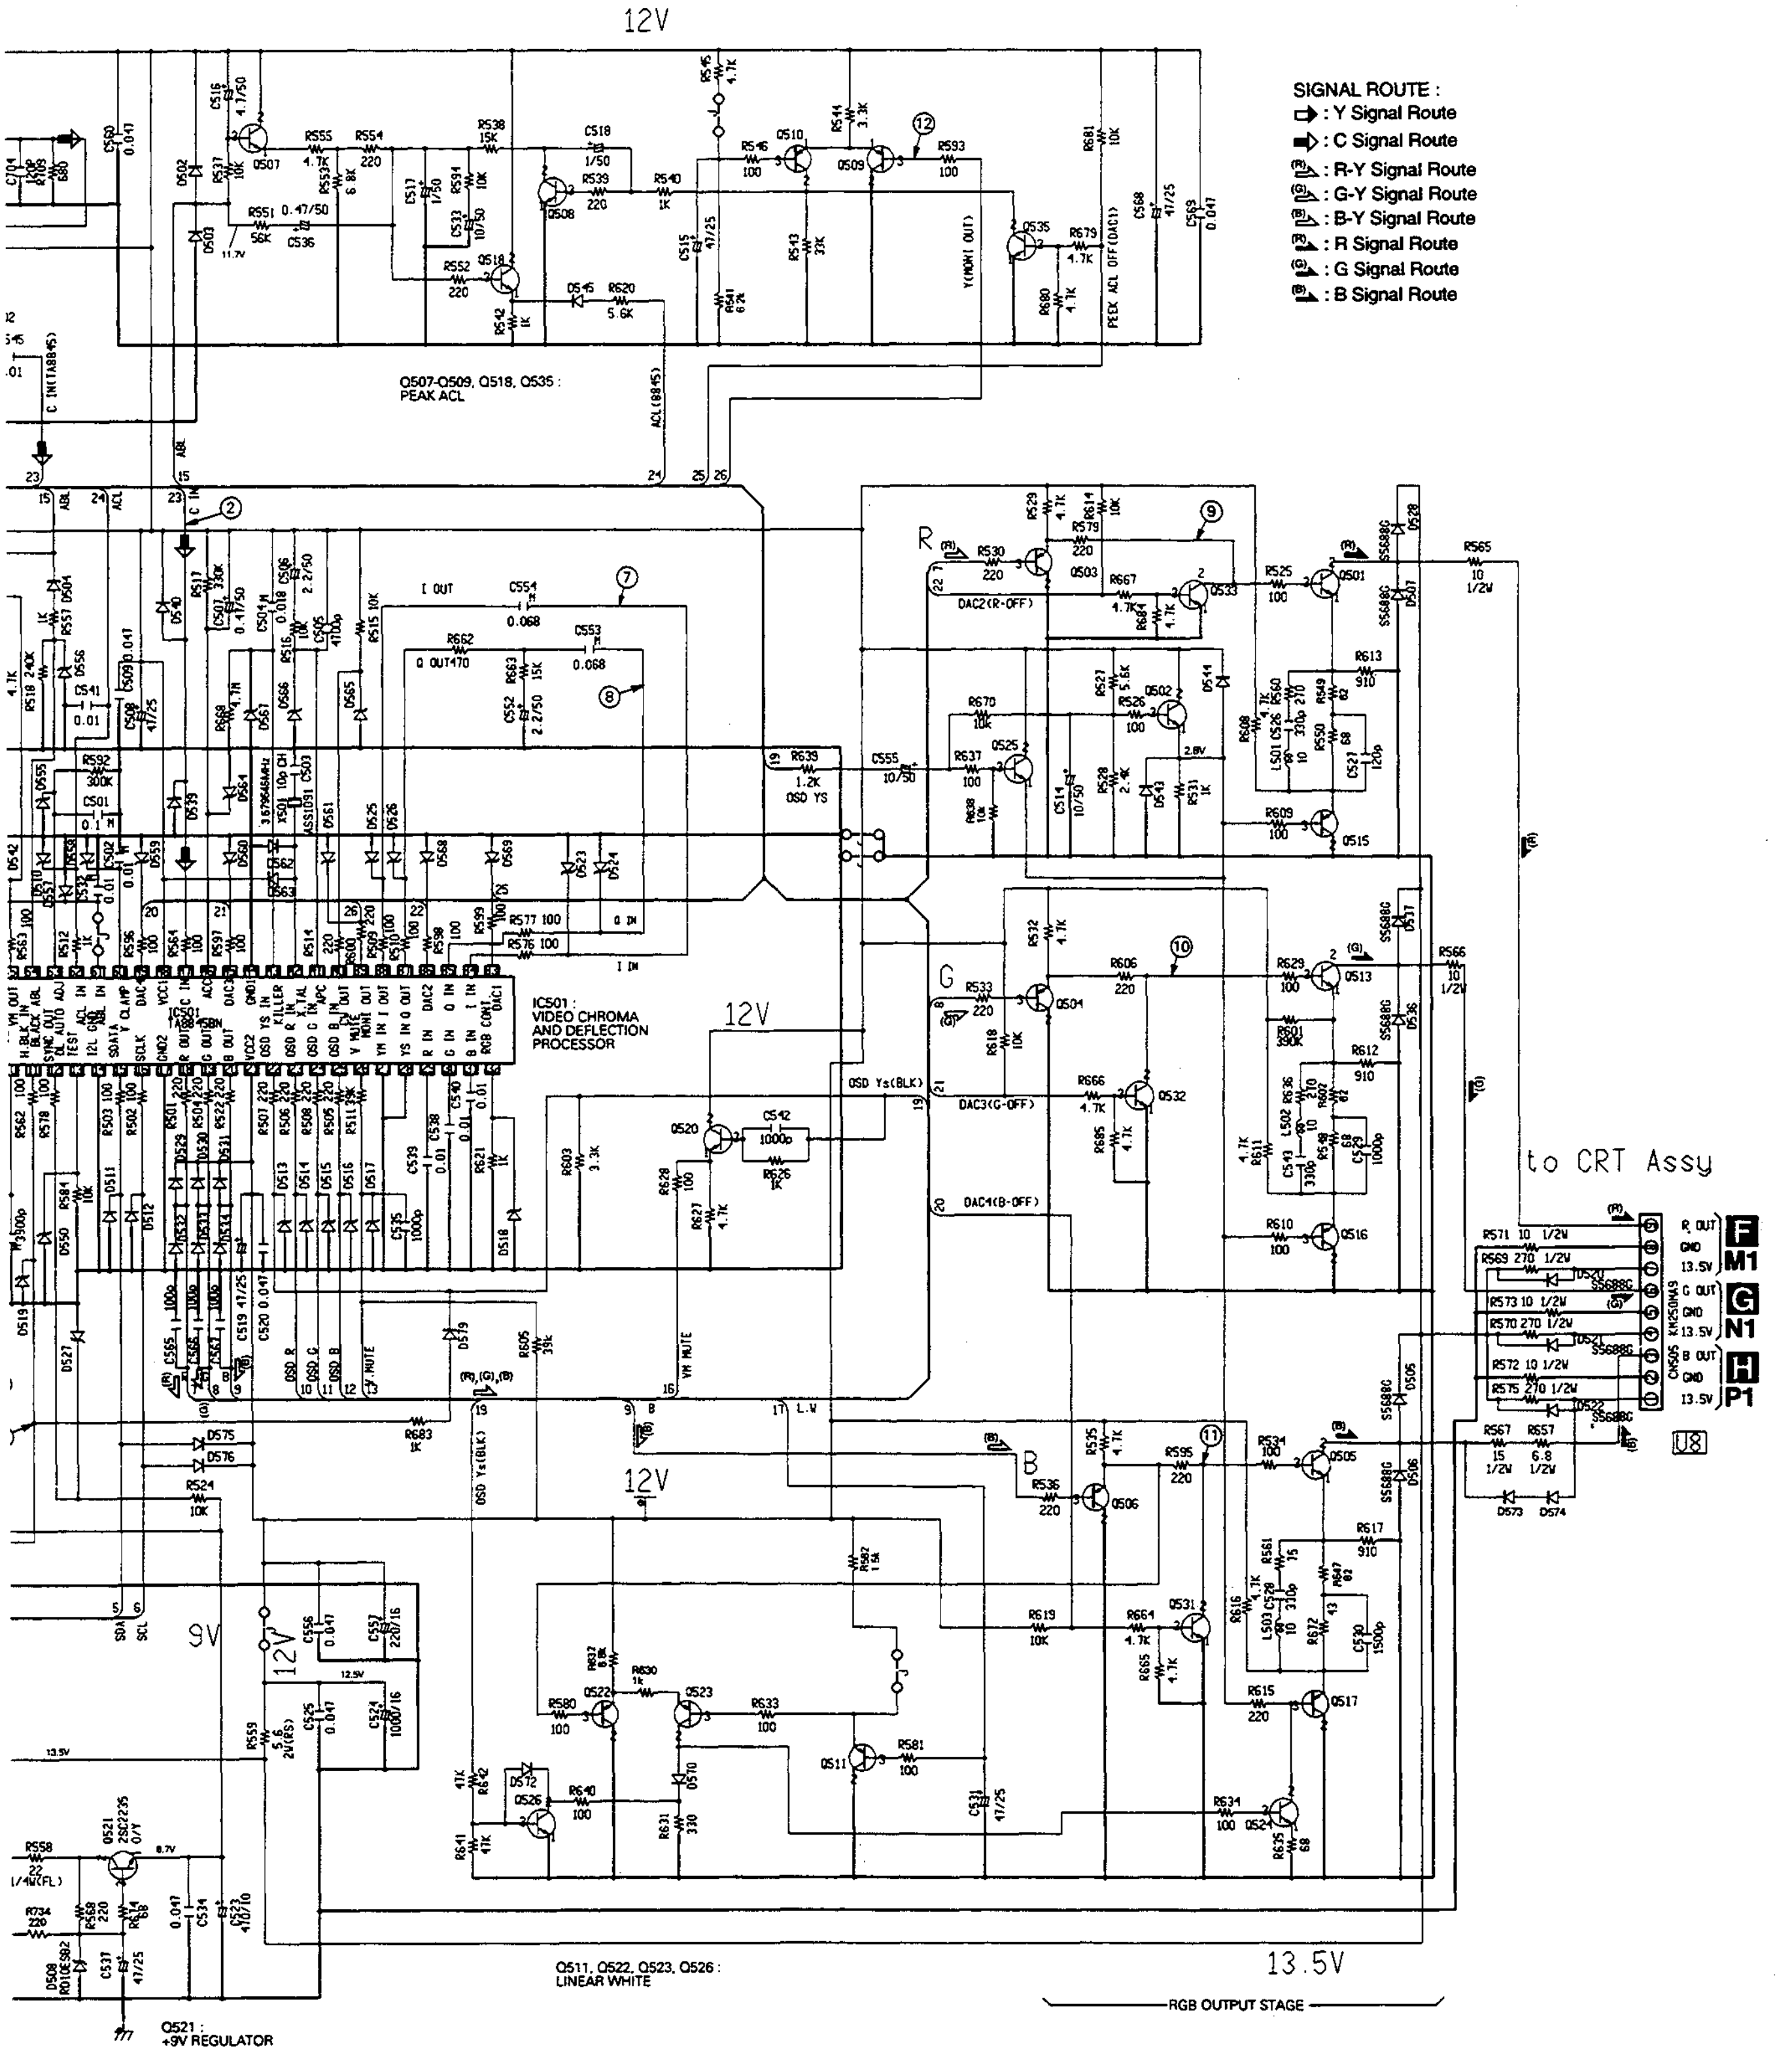
12V
SIGNAL ROUTE :
: Y Signal Route
: C Signal Route
: R-Y Signal Route
: G-Y Signal Route
: B-Y Signal Route
: R Signal Route
: G Signal Route
: B Signal Route
Q507-Q509, Q518, Q535 :
PEAK ACL
IC501 :
VIDEO CHROMA
AND DEFLECTION
PROCESSOR
12V
R
G
B
to CRT Assy
F
M1
G
N1
H
P1
U8
12V
9V
12V
Q521 :
+9V REGULATOR
Q511, Q522, Q523, Q526 :
LINEAR WHITE
13.5V
RGB OUTPUT STAGE

1.RESISTERS indicated in 1/2W.1/4W.1WFL.2WFL 5% tolerence unless otherwise noted K;KΩ, M;MΩ (F)+1% , (G)+2% , (K)+10% , (M)+20% tolerence

2.CAPACITORS indicated in capasity (F)/(V) unless otherwise noted pF indicated without voltage is 50V except electrolytic capacitor

NOTE :

HSS104-02

MTZJ15

2SA933S

2SC1740S

A TUNER • VIDEO ASSY (2/3) (AWZ6185)

• VIDEO BLOCK

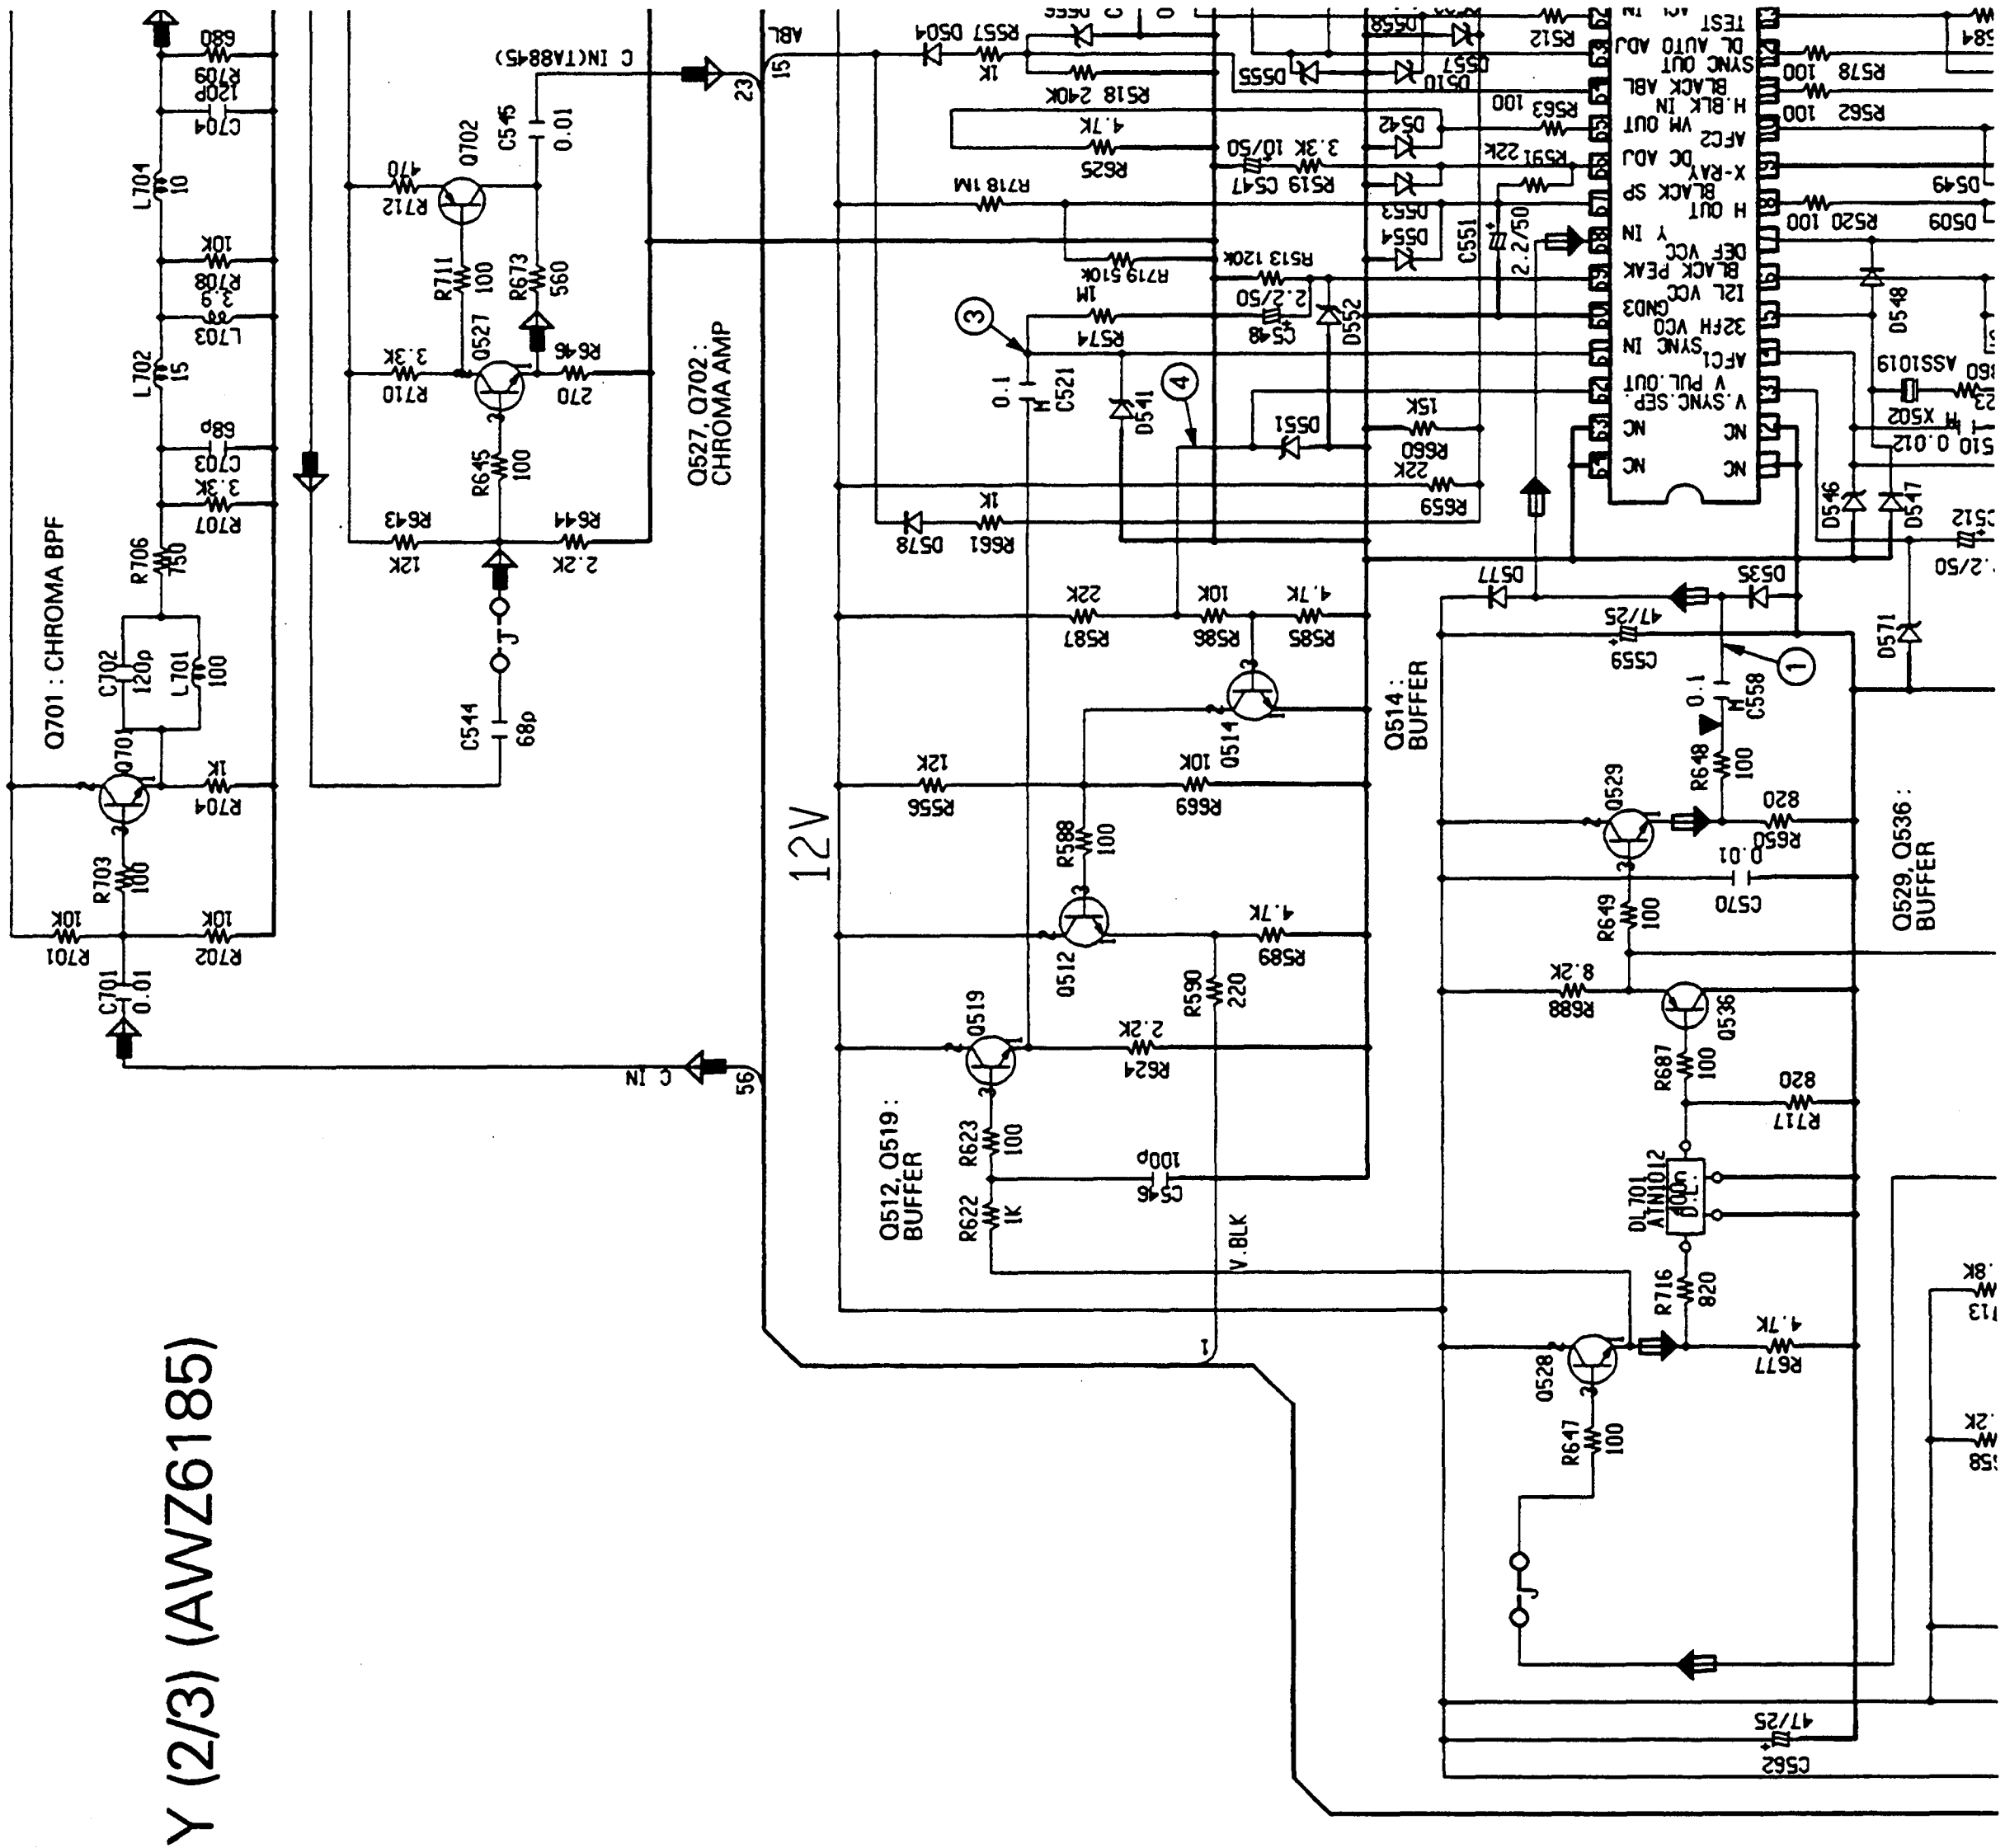
Q701 : CHROMA BPF
Q527, Q702 : CHROMA AMP
Q512, Q519 : BUFFER
Q514 : BUFFER
Q529, Q536 : BUFFER
12V
C IN
C IN(TA8845)
ABL
V.BLK
DL701 ATN1012
TEST
DL AUTO ADJ
SYNC OUT
BLACK ABL
H.BLK IN
VM OUT
AFC2
DC ADJ
X-RAY
BLACK SP
H OUT
Y IN
DEF VCC
BLACK PEAK
I2L VCC
GND3
32FH VCO
SYNC IN
AFC1
V PUL.OUT
V.SYNC.SEP
NC
①
③
④
A 1/3

A-a A-b

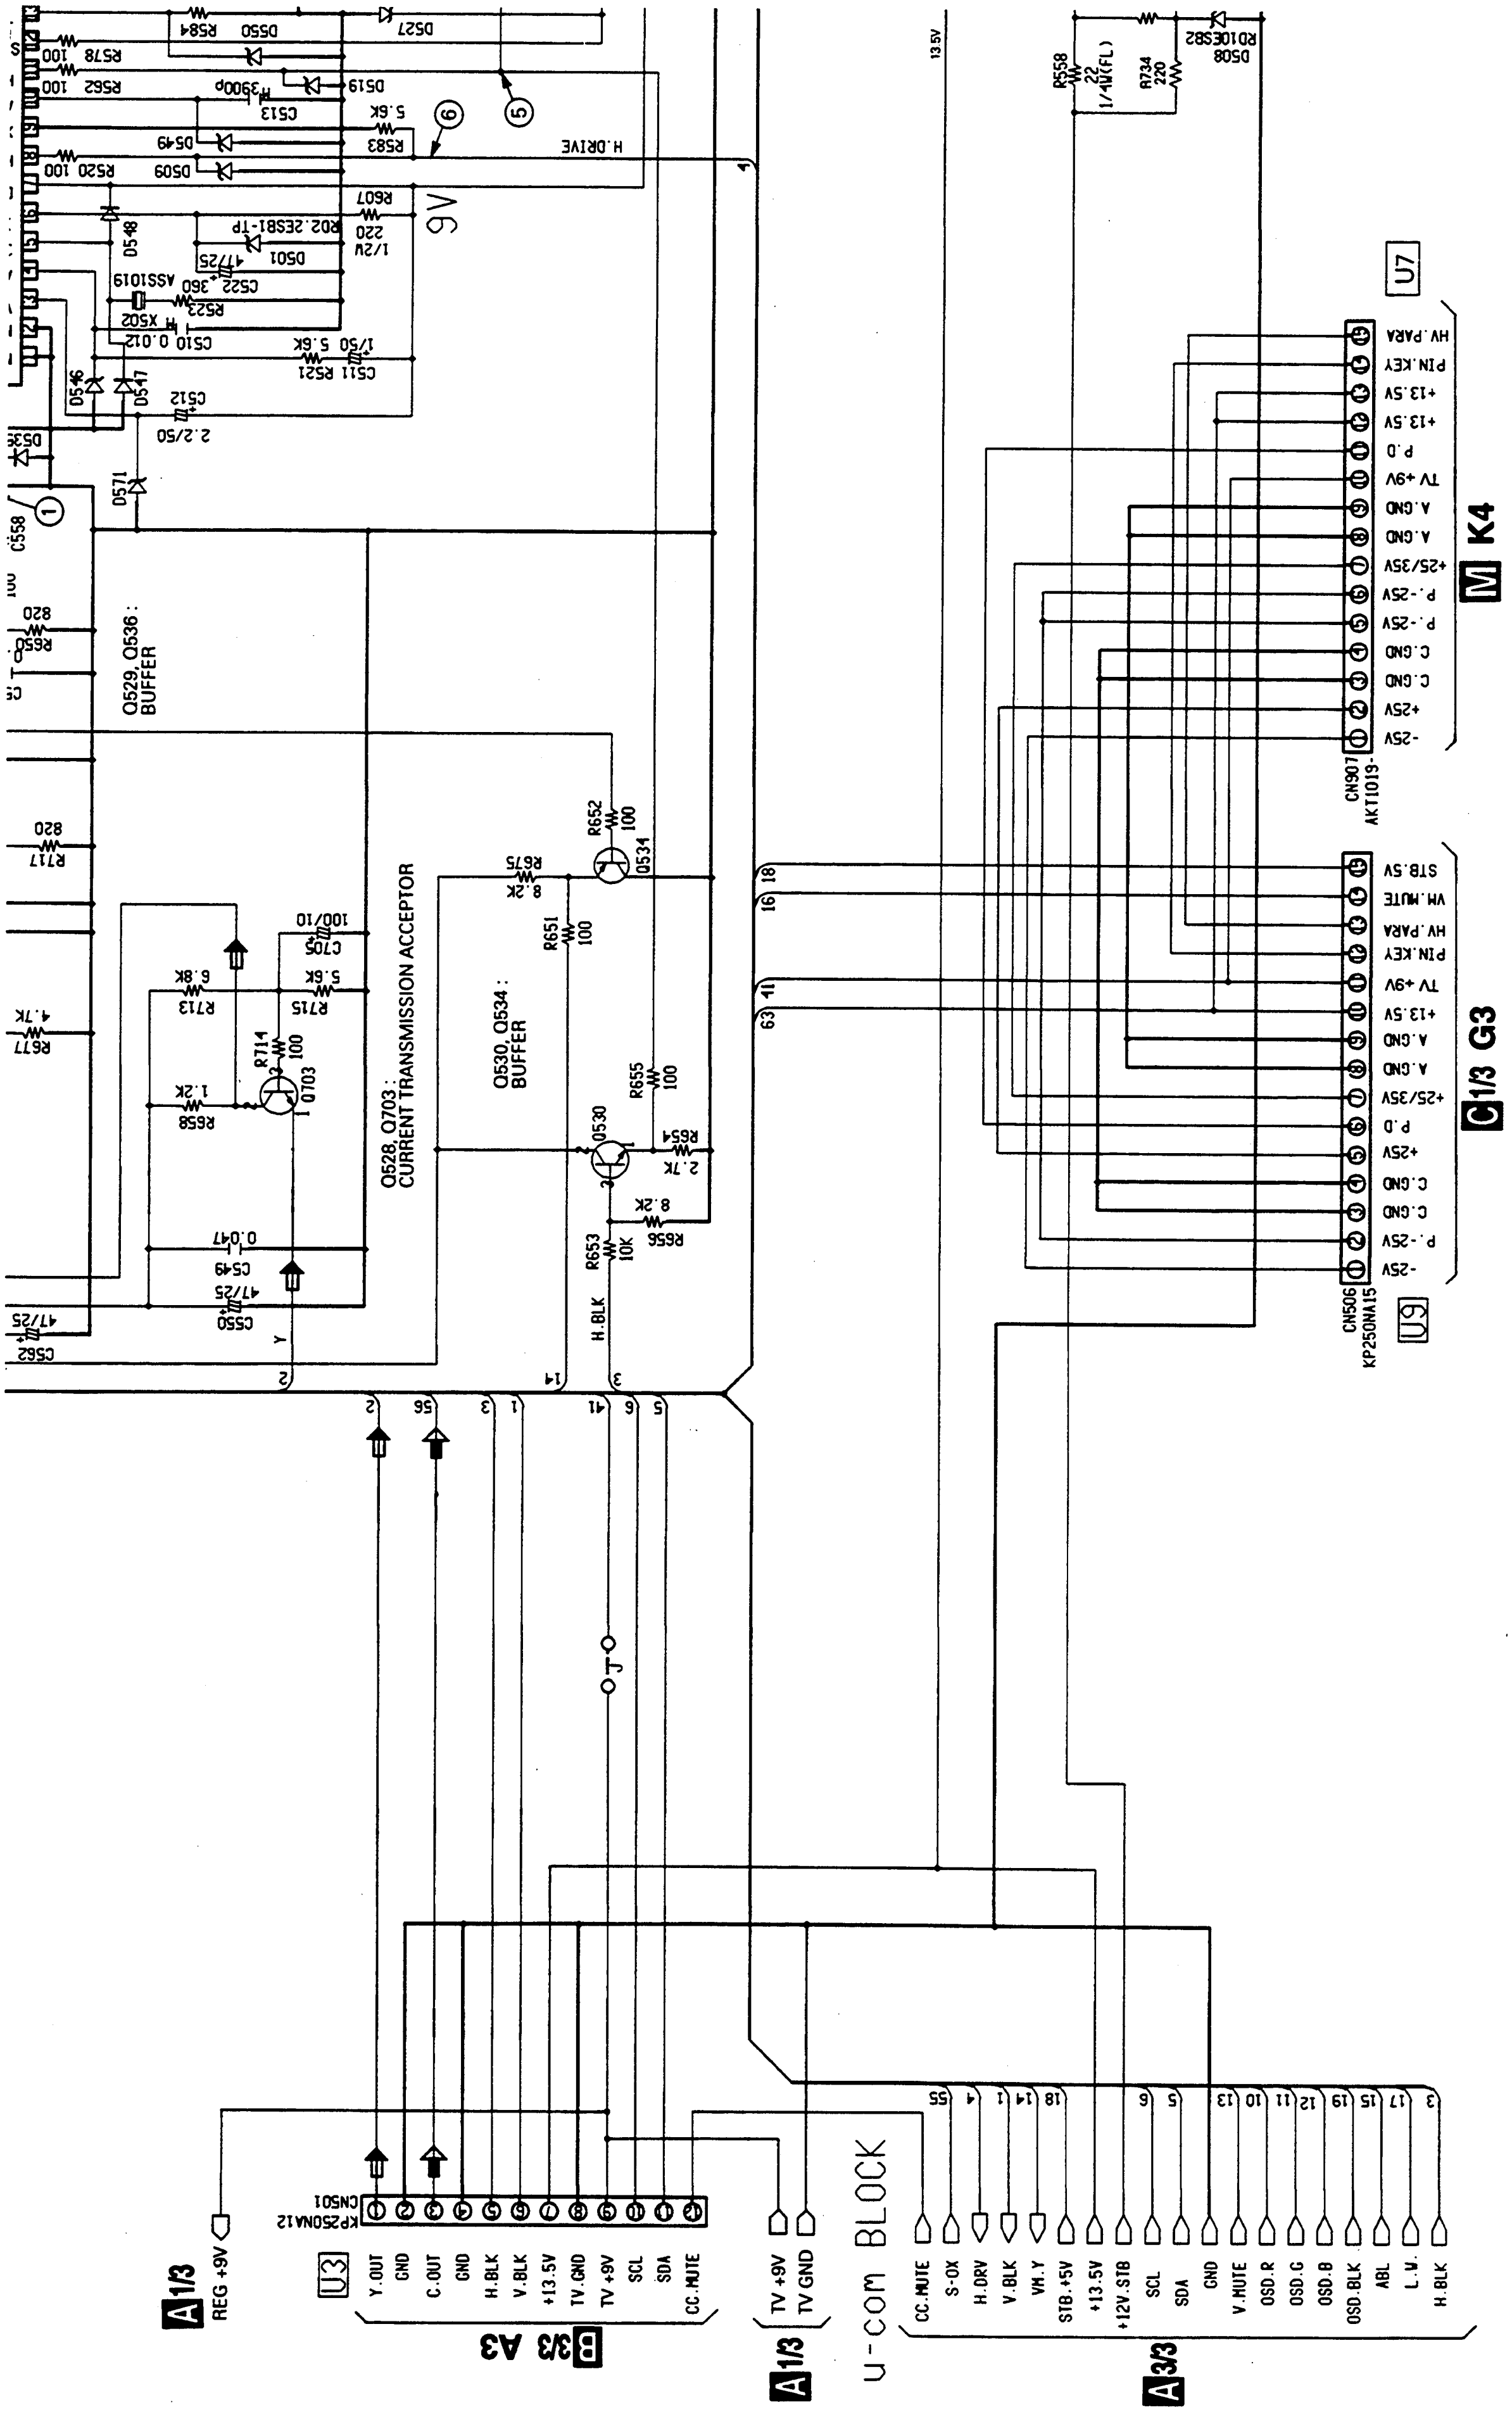
Q529, Q536 : BUFFER
Q528, Q703 : CURRENT TRANSMISSION ACCEPTOR
Q530, Q534 : BUFFER
H.DRIVE
9V
H.BLK
U7
CN907 AKT1019-
M K4
-25V
+25V
C.GND
C.GND
P.-25V
P.-25V
+25/35V
A.GND
A.GND
TV +9V
P.D
+13.5V
+13.5V
PIN.KEY
HV.PARA
U9
CN506 KP25ONA15
C1/3 G3
-25V
P.-25V
C.GND
C.GND
+25V
P.D
+25/35V
A.GND
A.GND
+13.5V
TV +9V
PIN.KEY
HV.PARA
VM.MUTE
STB.5V
A1/3
REG +9V
U3
CN501 KP25ONA12
Y.OUT
GND
C.OUT
GND
H.BLK
V.BLK
+13.5V
TV.GND
TV +9V
SCL
SDA
CC.MUTE
B3/3 A3
A1/3
TV +9V
TV GND
u-com BLOCK
CC.MUTE
S-OX
H.DRV
V.BLK
VM.Y
STB.+5V
+13.5V
+12V.STB
SCL
SDA
GND
V.MUTE
OSD.R
OSD.G
OSD.B
OSD.BLK
ABL
L.W.
H.BLK
A3/3
13.5V
R558 22 1/4W(FL)
R734 220
D508 RD10ES82
R652 100
Q534
R675 8.2K
R651 100
R655 100
Q530
R654 2.7K
R656 8.2K
R653 10K
Q703
R714 100
R713 6.8K
R715 5.6K
R658 1.2K
C705 100/10
C549 47/25
C550 47/25
0.047
C562
R677 4.7K
R717 820
R650 820
C558
D571
C512 2.2/50
D546
D547
C511 R521 1/50 5.6K
C510 0.012
X502
C522 360
ASS1019
R523
D501 47/25
R02.2ES81-TP
R607 220 1/2W
D548
D509
R520 100
D549
R583 5.6K
C513 3900p
D519
R562 100
R578 100
D550 R584
D527
J

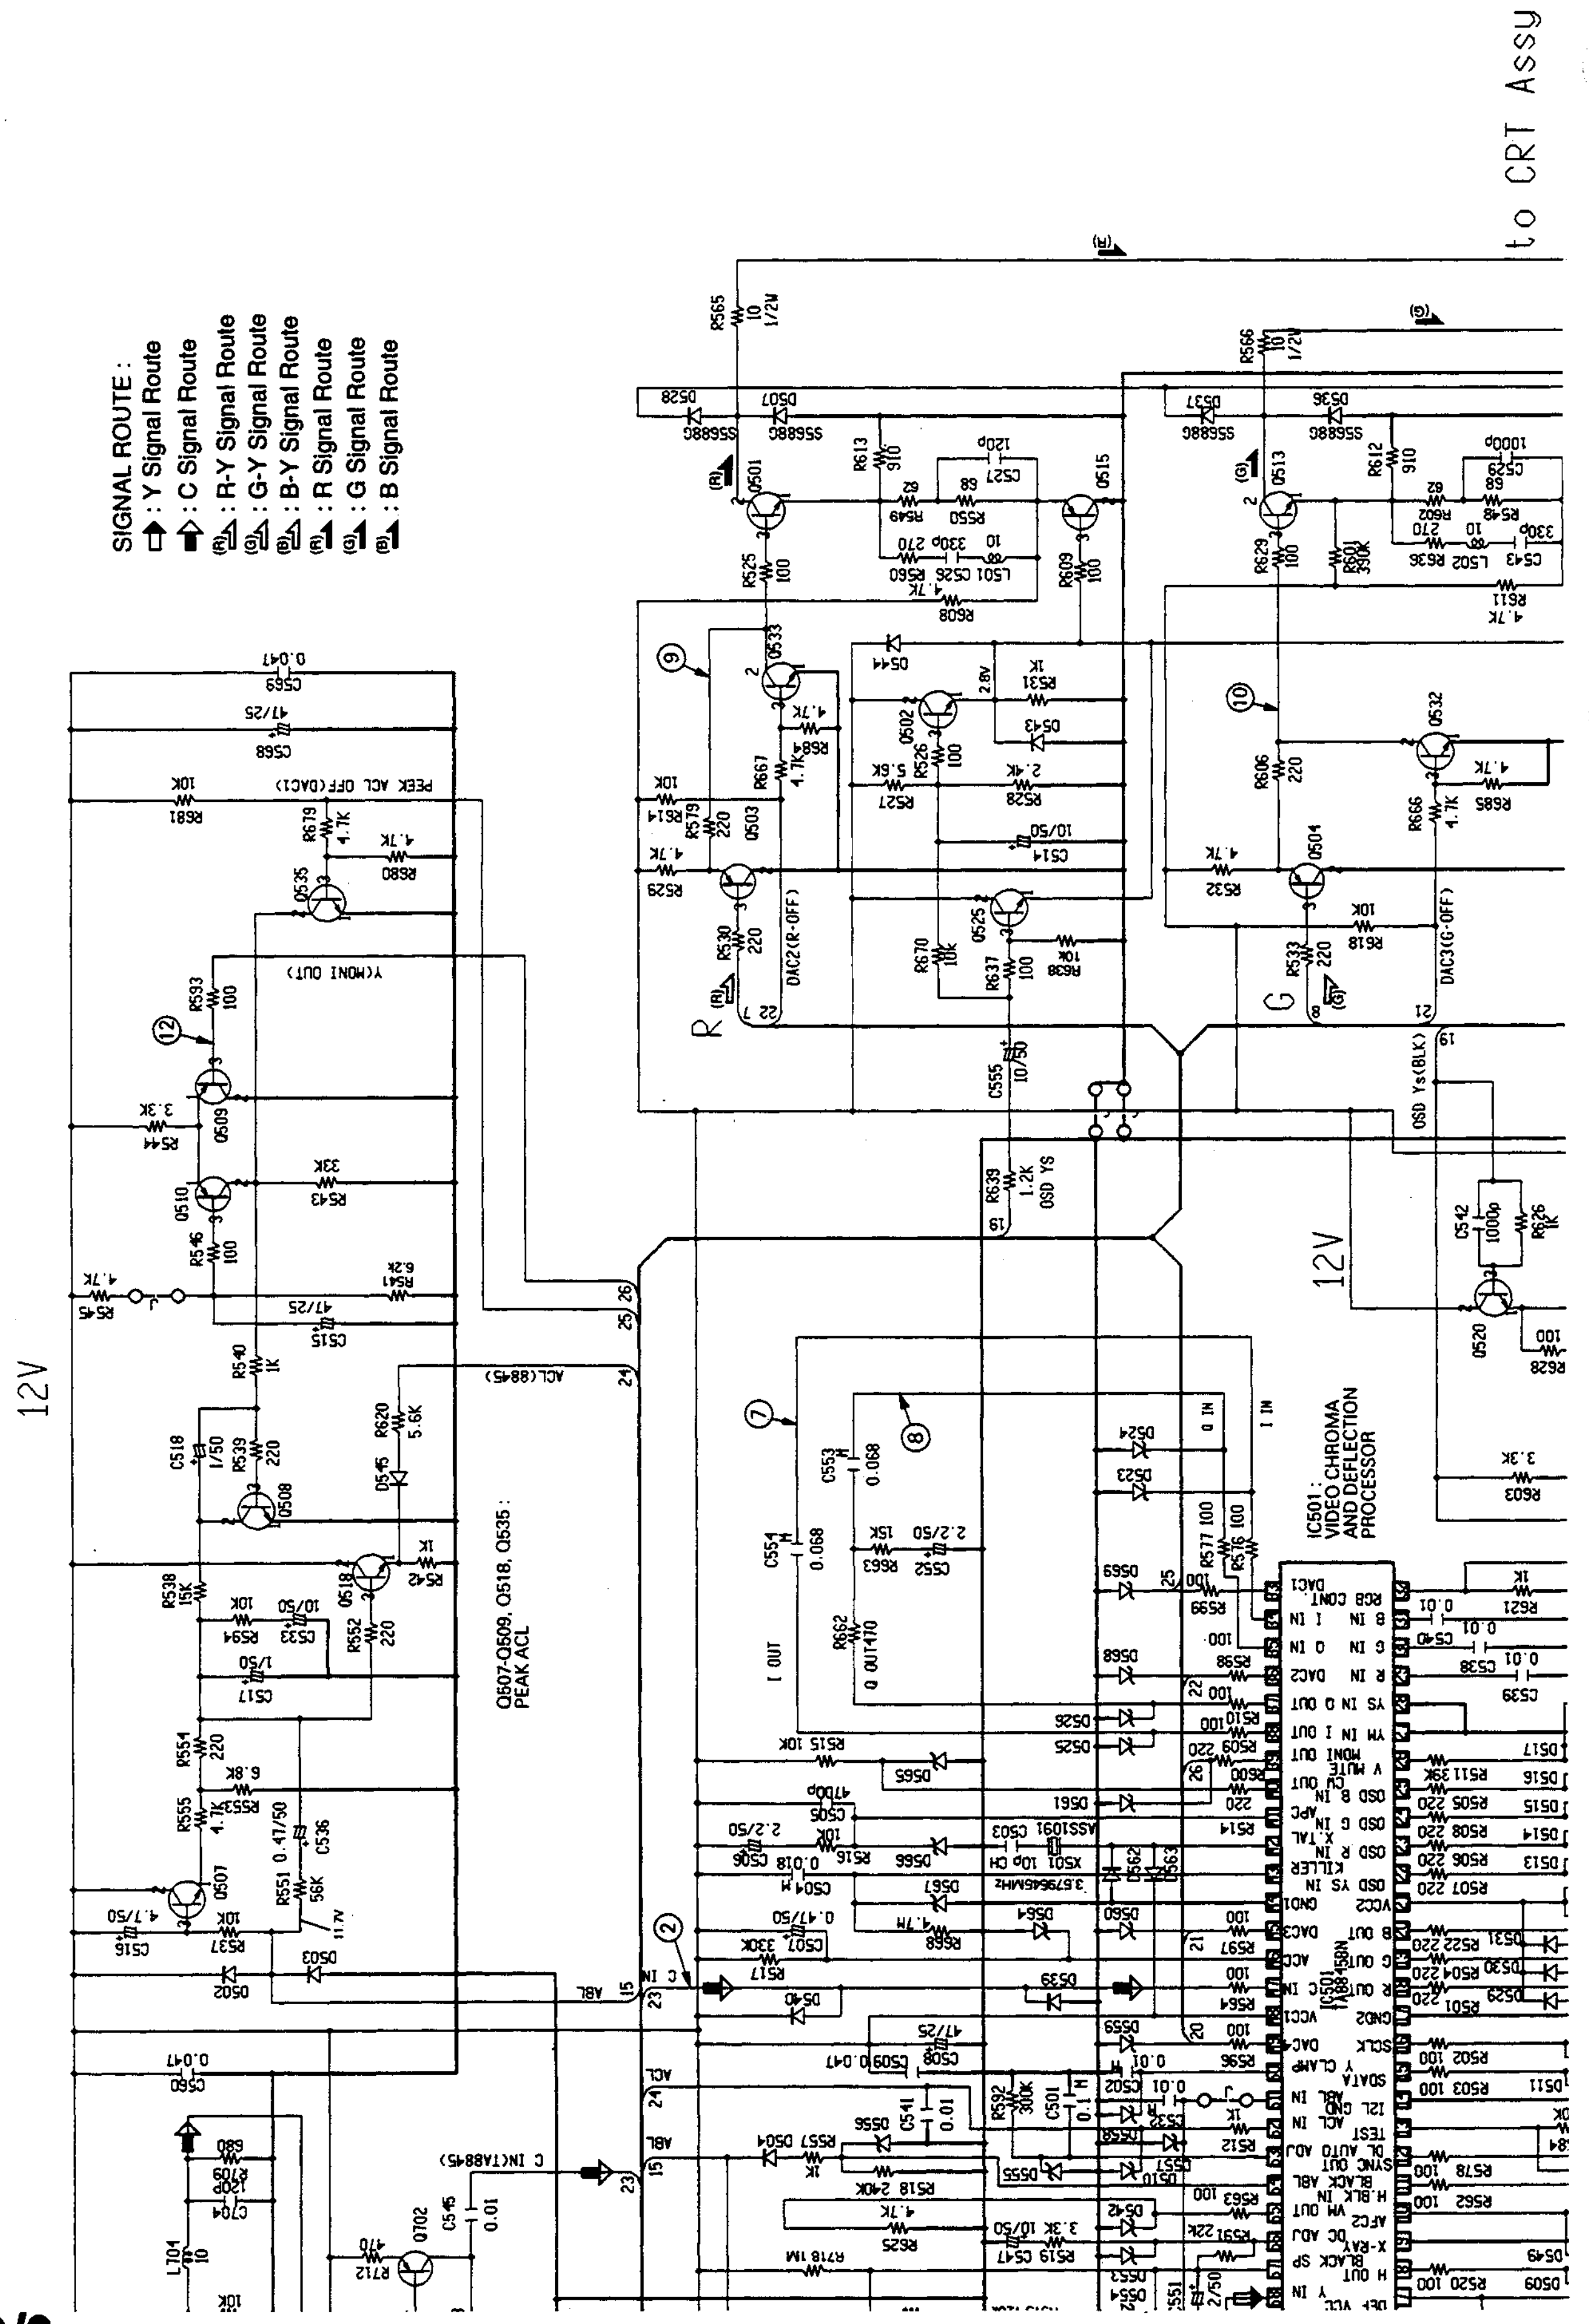
SIGNAL ROUTE :
⇧ : Y Signal Route
⬆ : C Signal Route
(R) : R-Y Signal Route
(G) : G-Y Signal Route
(B) : B-Y Signal Route
(R) : R Signal Route
(G) : G Signal Route
(B) : B Signal Route
to CRT Assy
IC501 : VIDEO CHROMA AND DEFLECTION PROCESSOR
IC501 TA8845N
Q507-Q509, Q518, Q535 : PEAK ACL
12V
PEEK ACL OFF(DAC1)
Y(MONI OUT)
ACL(8845)
C IN(TA8845)
DAC2(R-OFF)
DAC3(G-OFF)
OSD Ys(BLK)
OSD YS
I OUT
Q OUT
Q IN
I IN
XS01 3.579545MHz
R
G

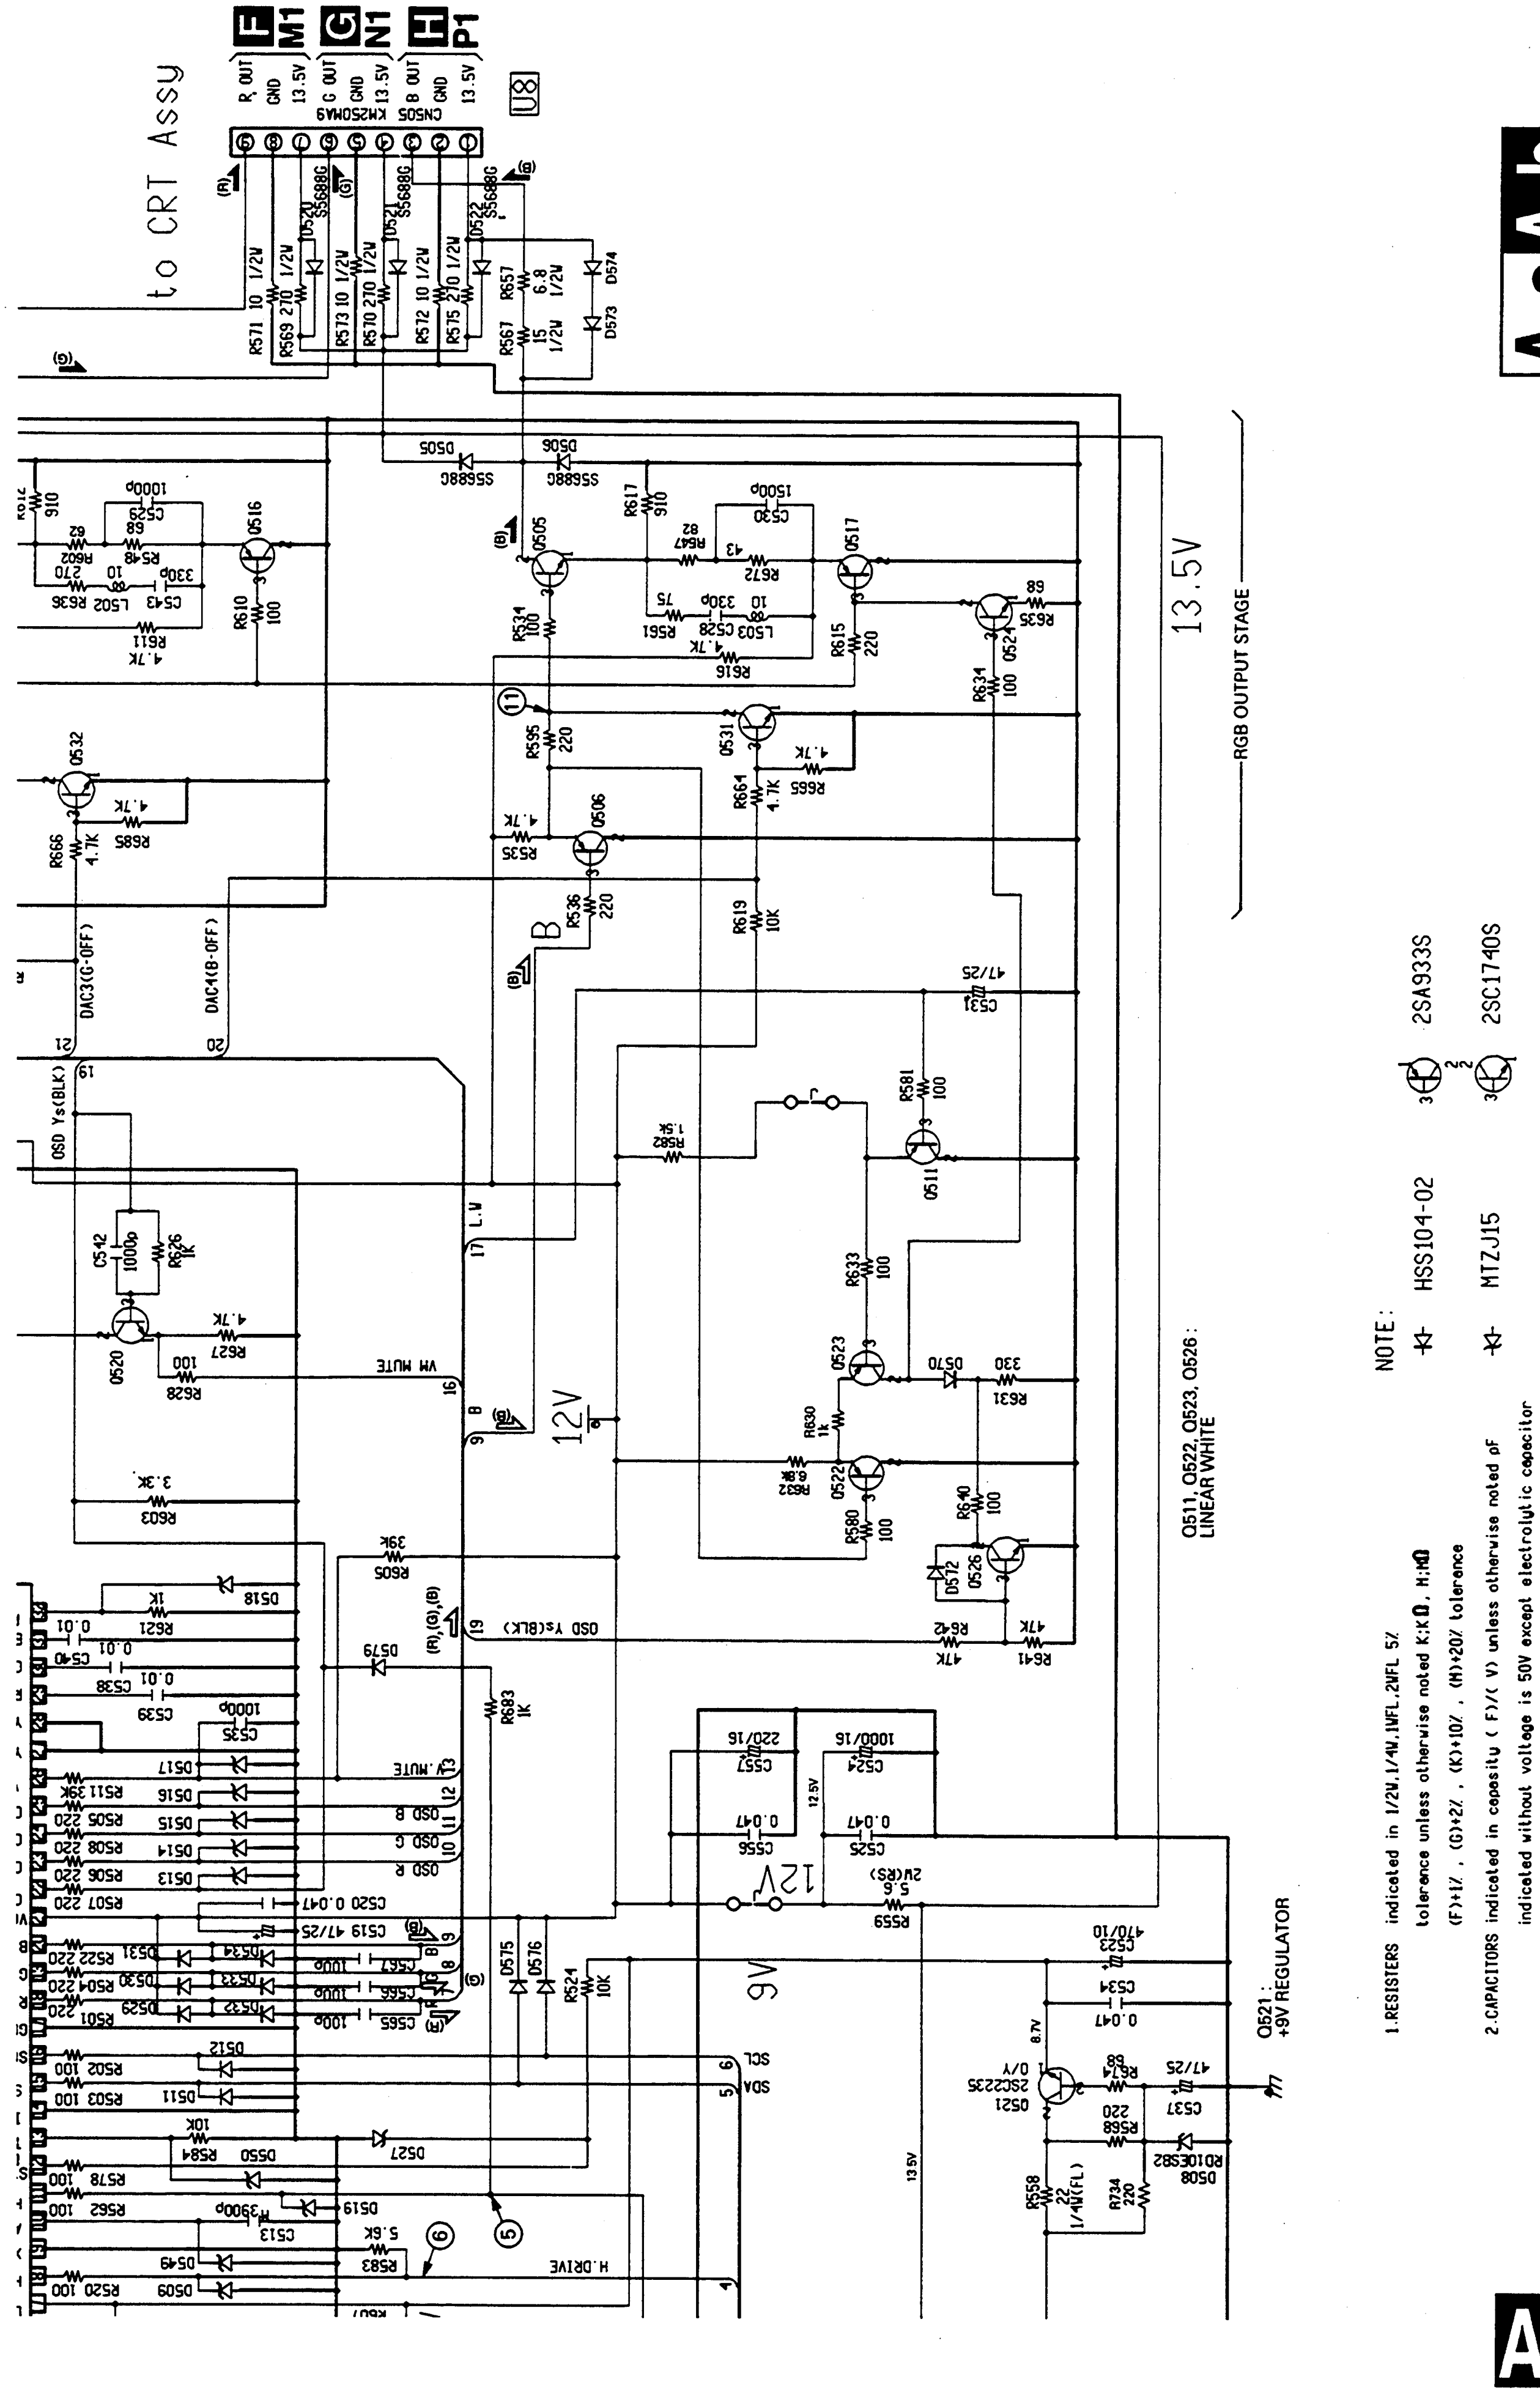
to CRT Assy
F M1
G N1
H P1
R OUT
GND
13.5V
G OUT
GND
13.5V
B OUT
GND
13.5V
CN505 KM250MA9
U8
RGB OUTPUT STAGE
13.5V
12V
9V
DAC3(G-OFF)
DAC4(B-OFF)
OSD Ys(BLK)
VM MUTE
V.MUTE
OSD B
OSD G
OSD R
L.V
SCL
SDA
H.DRIVE
Q511, Q522, Q523, Q526 : LINEAR WHITE
Q521 : +9V REGULATOR
Q505
Q506
Q516
Q517
Q520
Q522
Q523
Q524
Q526
Q531
Q532
Q511
Q521 2SC2235 O/Y
NOTE :
HSS104-02
MTZJ15
2SA933S
2SC1740S
1.RESISTERS indicated in 1/2W,1/4W,1WFL,2WFL 5% tolerance unless otherwise noted K:kΩ, M:MΩ
(F)±1% , (G)±2% , (K)±10% , (M)±20% tolerance
2.CAPACITORS indicated in capacity (F)/(V) unless otherwise noted pF indicated without voltage is 50V except electrolytic capacitor

3.4 TUNER•VIDEO ASSY (3/3)

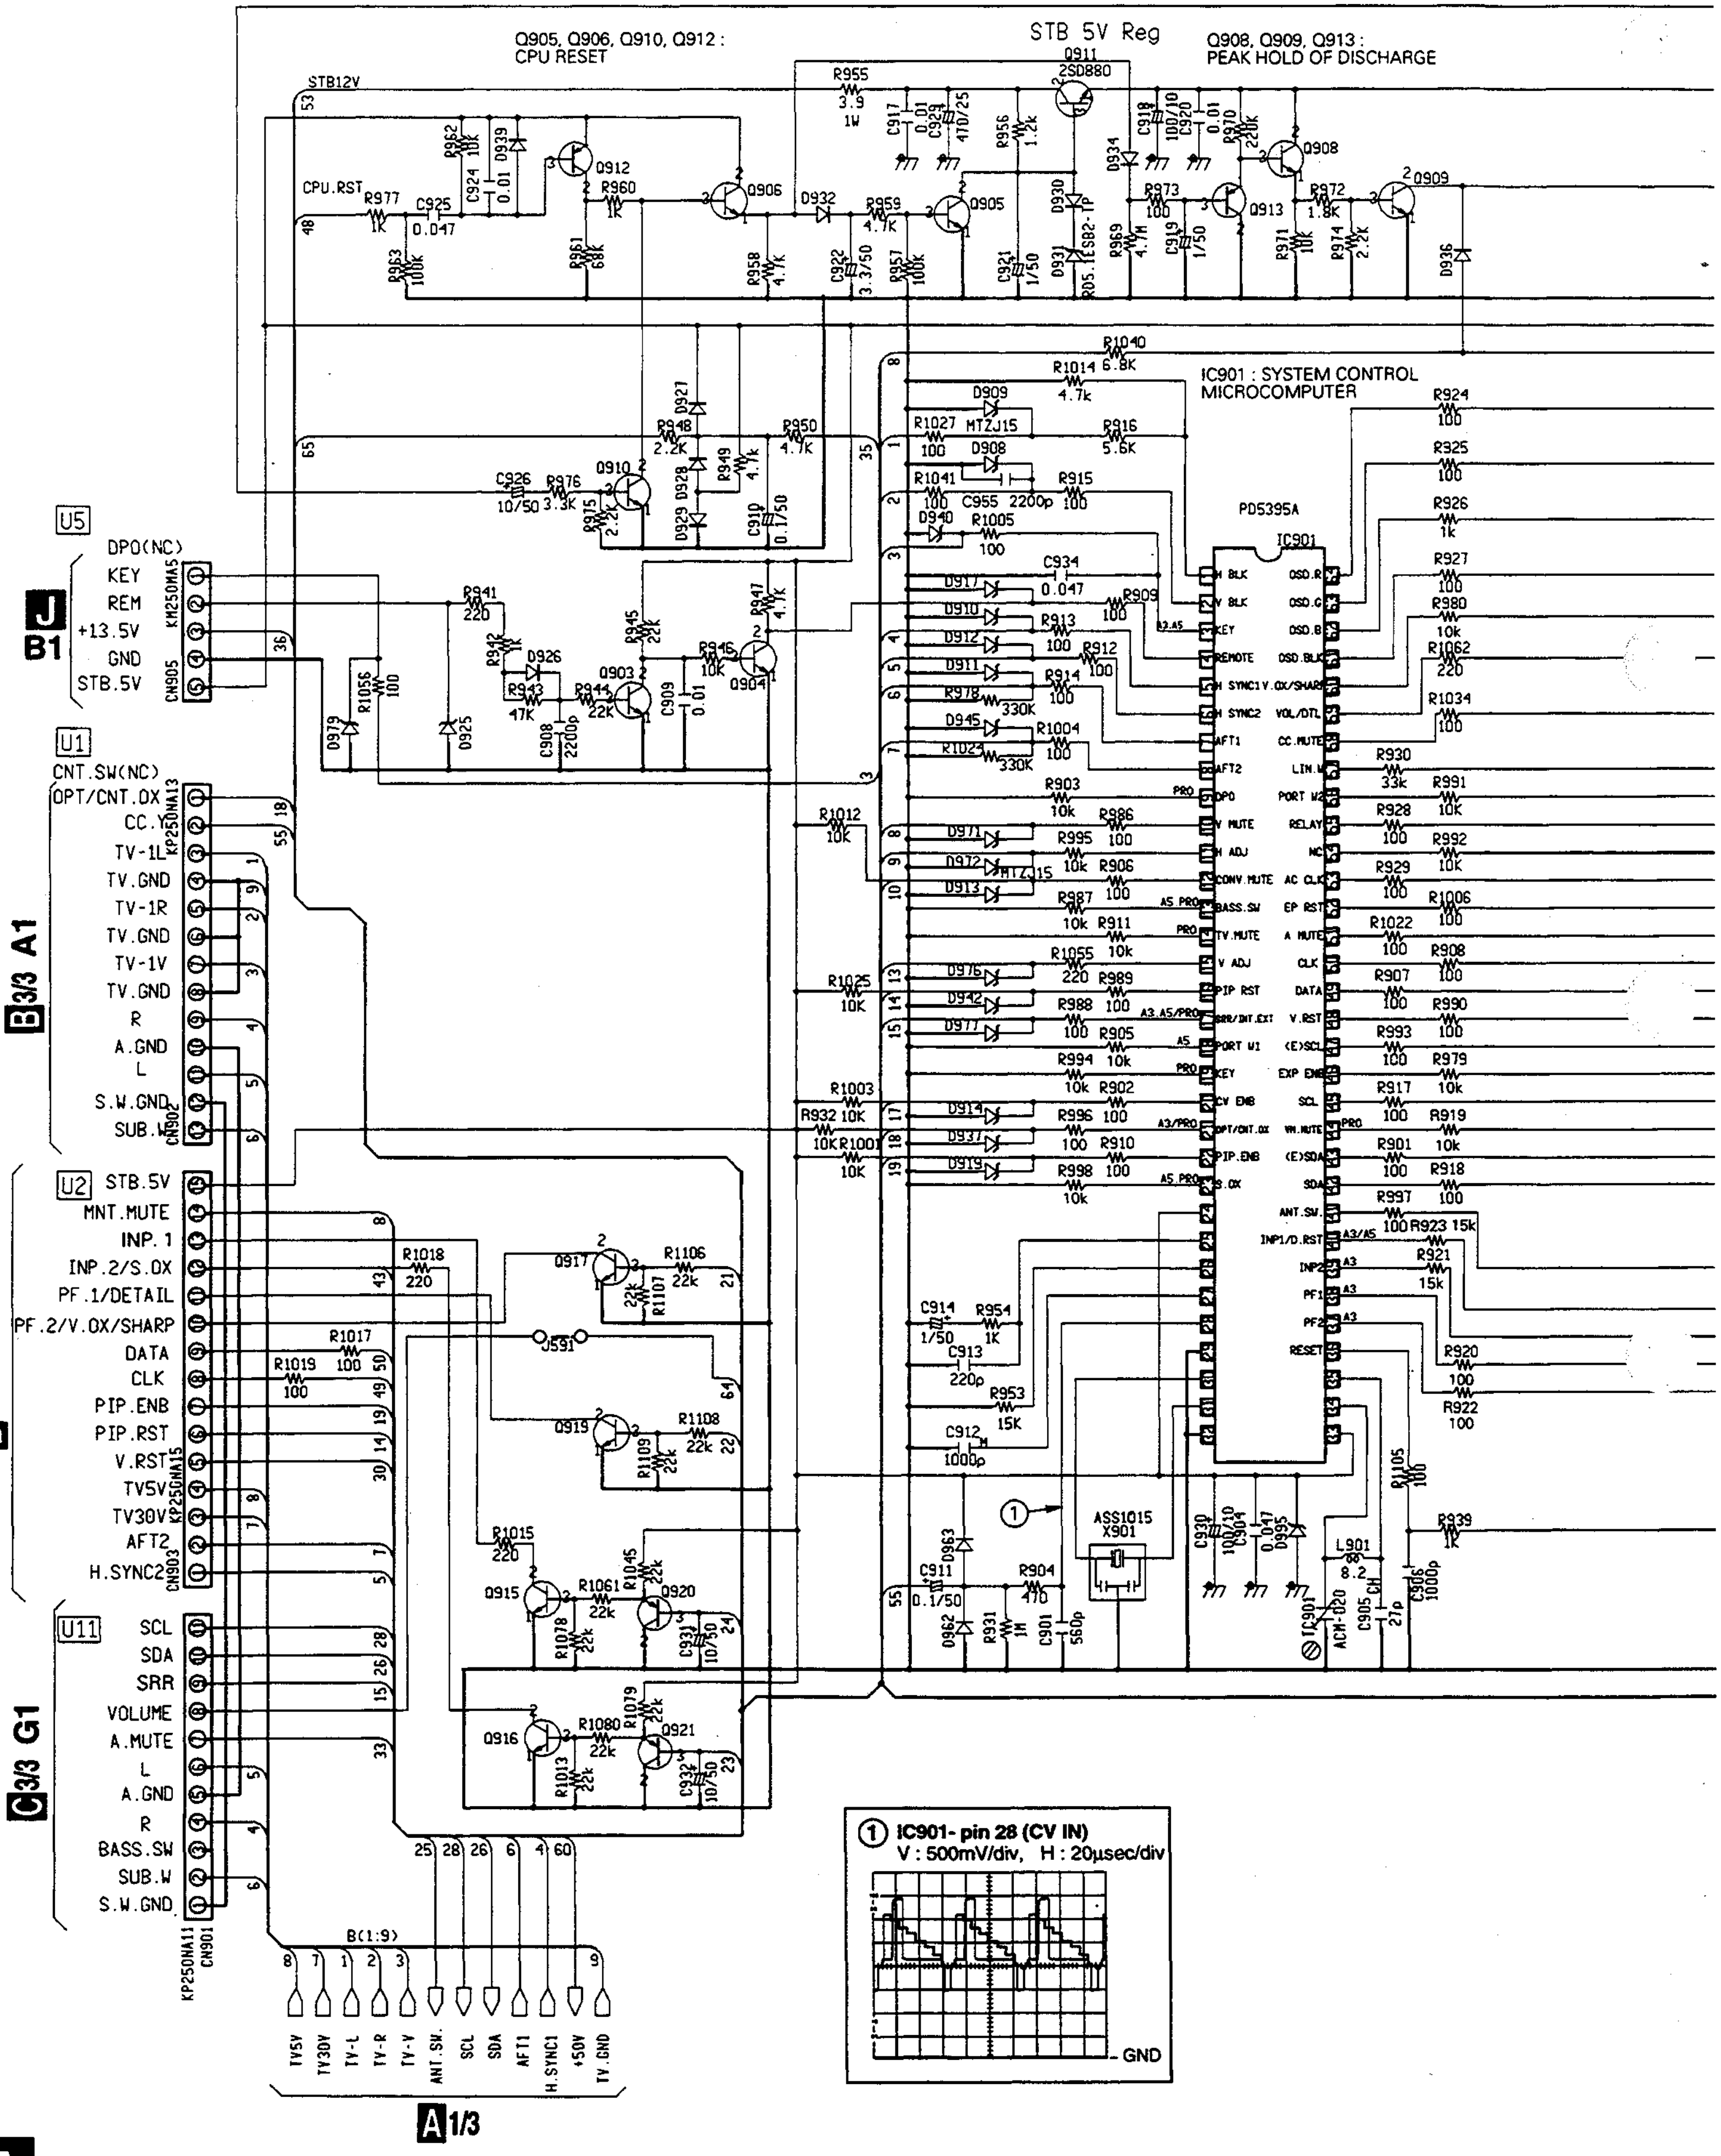
Q905, Q906, Q910, Q912 : CPU RESET
STB 5V Reg
Q911 2SD880
Q908, Q909, Q913 : PEAK HOLD OF DISCHARGE
STB12V
CPU.RST
IC901 : SYSTEM CONTROL MICROCOMPUTER
PD5395A
IC901
U5
DPO(NC)
KEY
REM
+13.5V
GND
STB.5V
CN905 KM250NA5
J B1
U1
CNT.SW(NC)
OPT/CNT.OX
CC.Y
TV-1L
TV.GND
TV-1R
TV.GND
TV-1V
TV.GND
R
A.GND
L
S.W.GND
SUB.W
CN902 KP250NA13
B3/3 A1
U2
STB.5V
MNT.MUTE
INP.1
INP.2/S.OX
PF.1/DETAIL
PF.2/V.OX/SHARP
DATA
CLK
PIP.ENB
PIP.RST
V.RST
TV5V
TV30V
AFT2
H.SYNC2
CN903 KP250NA15
B3/3 A2
U11
SCL
SDA
SRR
VOLUME
A.MUTE
L
A.GND
R
BASS.SW
SUB.W
S.W.GND.
CN901 KP250NA11
C3/3 G1
B(1:9)
TV5V
TY30V
TV-L
TV-R
TV-V
ANT.SW.
SCL
SDA
AFT1
H.SYNC1
+50V
TV.GND
A1/3
ASS1015 X901
L901
① IC901- pin 28 (CV IN)
V : 500mV/div, H : 20μsec/div
GND

A TUNER • VIDEO ASSY (3/3) (AWZ6185)
• UCOM BLOCK

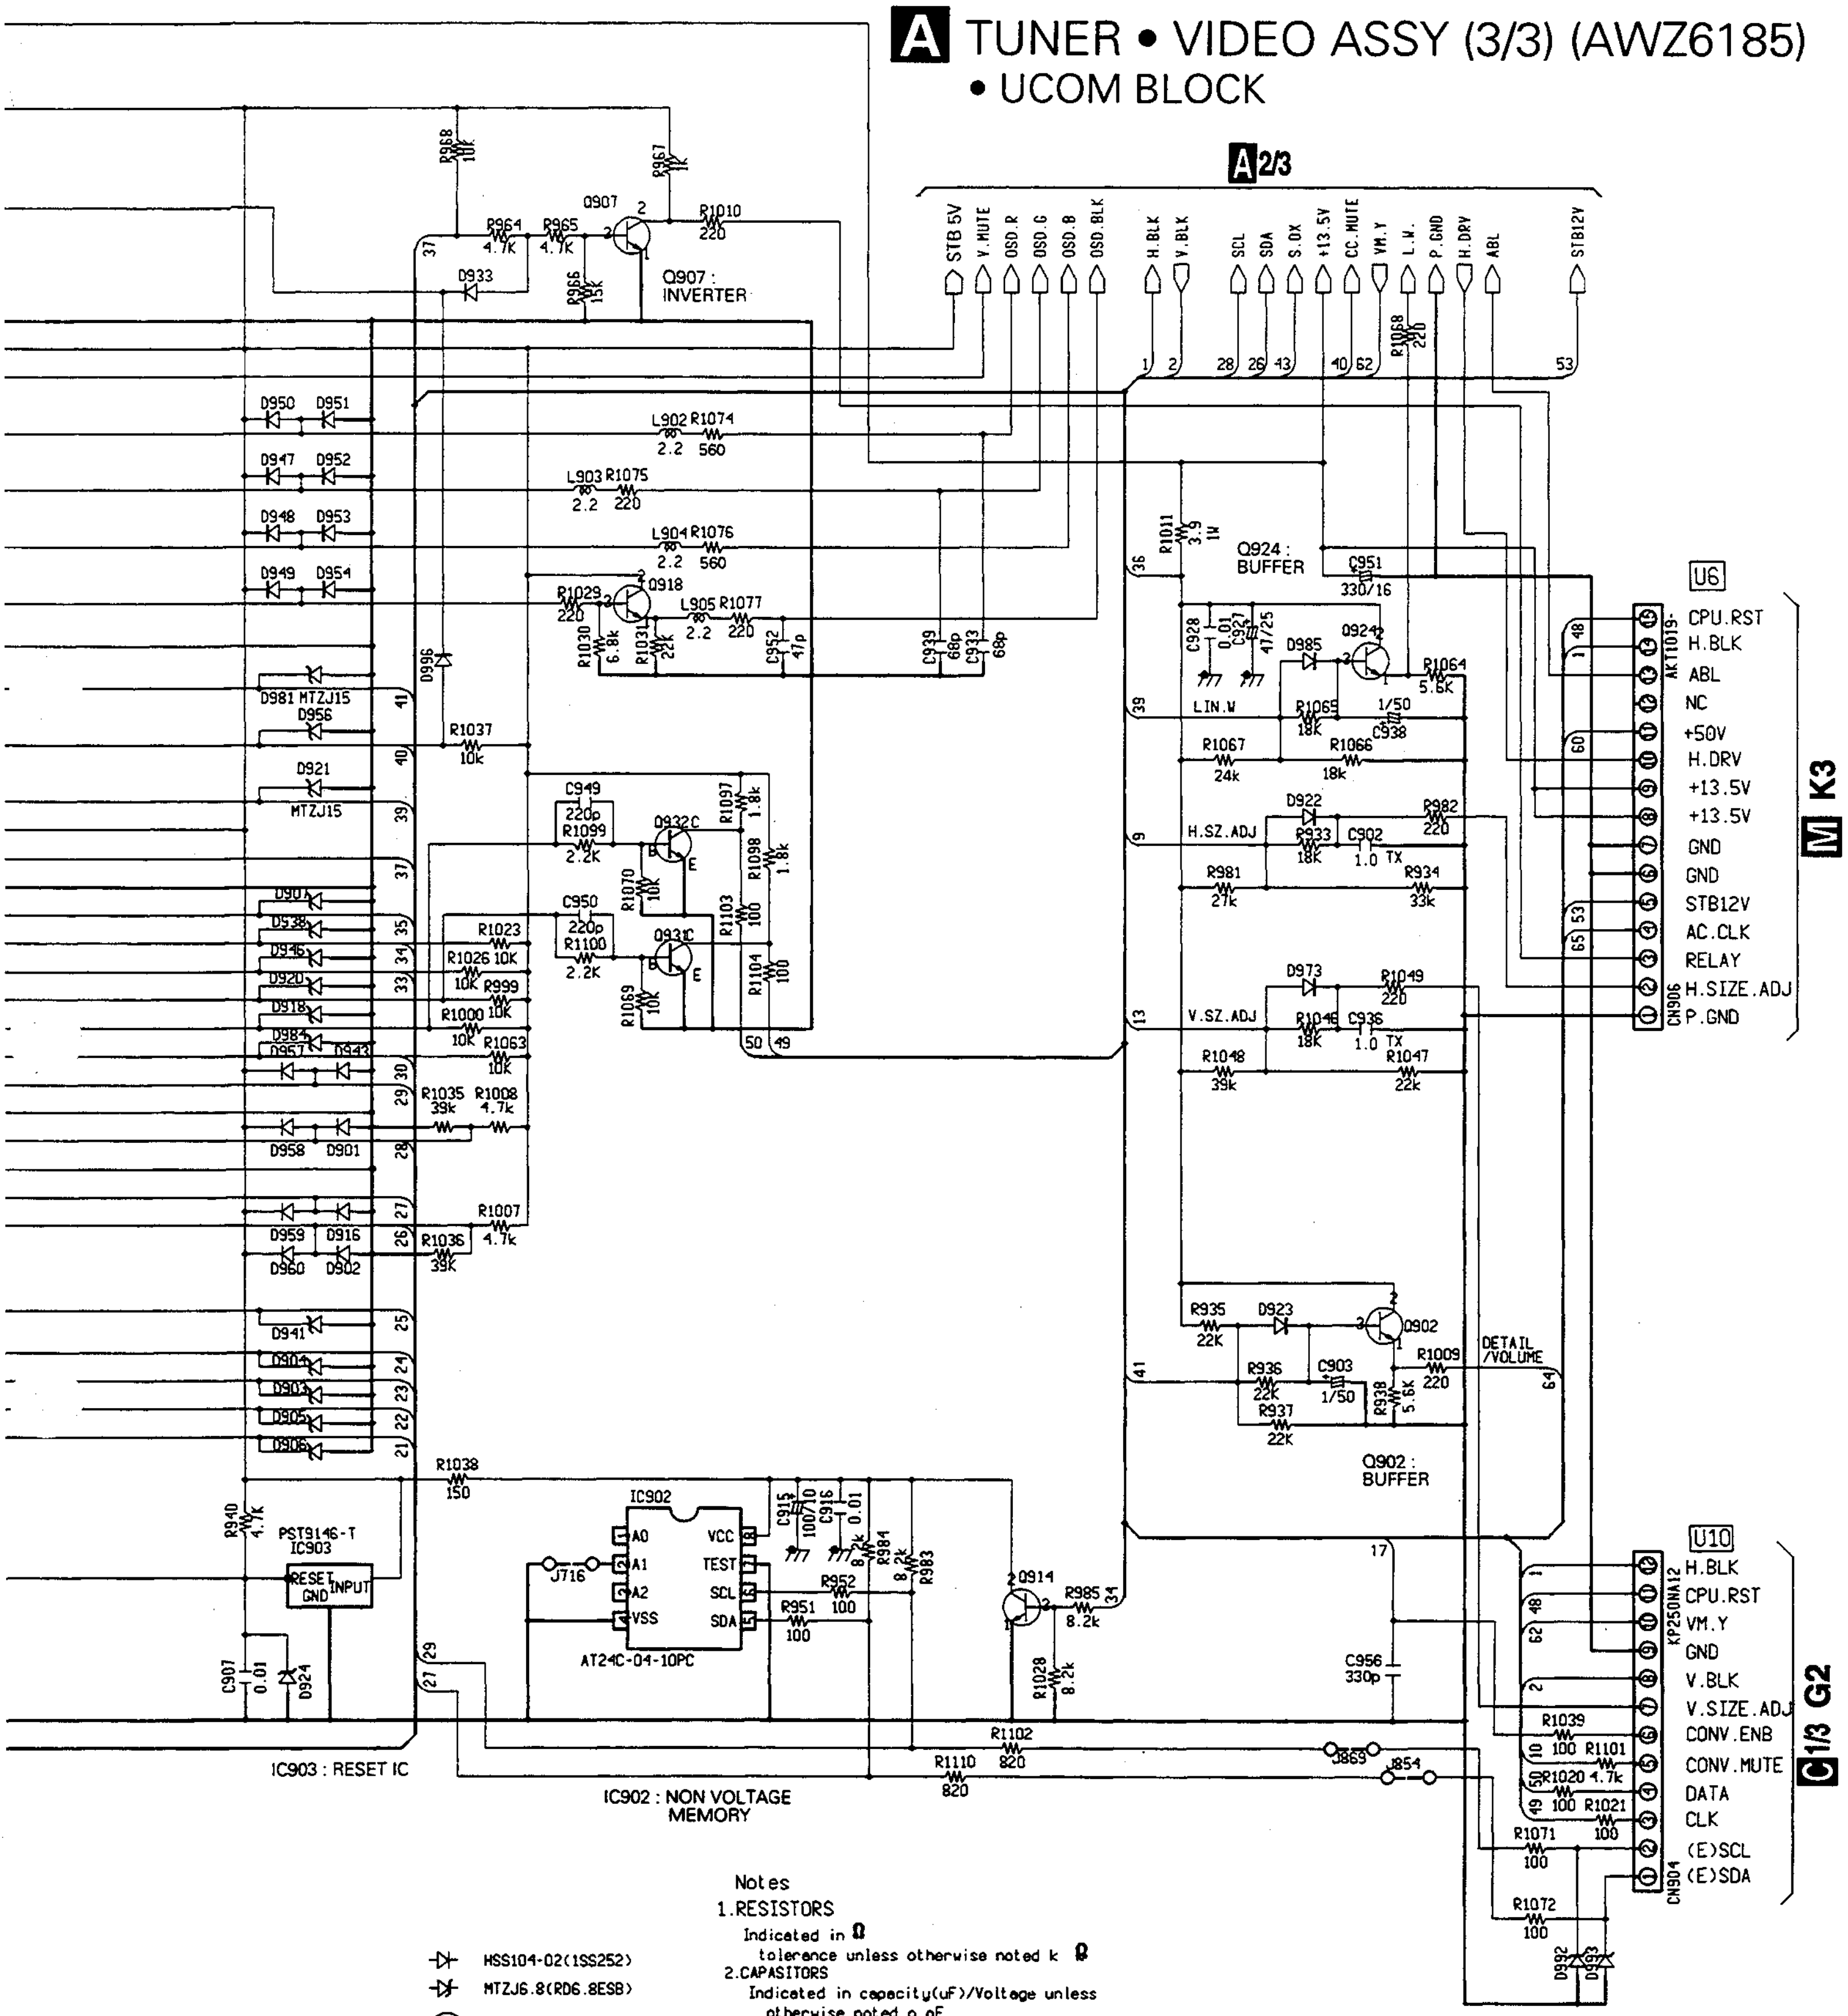
A2/3
STB 5V
V.MUTE
OSD.R
OSD.G
OSD.B
OSD.BLK
H.BLK
V.BLK
SCL
SDA
S.DX
+13.5V
CC.MUTE
VM.Y
L.W.
P.GND
H.DRV
ABL
STB12V
R968 10k
R967 1k
Q907
R964 4.7k
R965 4.7k
R1010 220
D933
R966 15k
Q907 : INVERTER
L902 R1074 2.2 560
L903 R1075 2.2 220
L904 R1076 2.2 560
Q918
R1029 220
L905 R1077 2.2 220
R1030 6.8k
R1031 22k
C952 47p
C939 68p
C933 68p
R1011 3.9 1W
Q924 : BUFFER
C951 330/16
C928 0.01
C927 47/25
D985
Q924
R1064 5.6k
LIN.W
R1065 18k
1/50 C938
R1067 24k
R1066 18k
D950 D951
D947 D952
D948 D953
D949 D954
D981 MTZJ15
D956
D921
MTZJ15
D996
R1037 10k
C949 220p
R1099 2.2k
Q932
R1097 1.8k
R1098 1.8k
R1070 10k
R1103 100
C950 220p
R1100 2.2k
Q931
R1104 100
R1069 10k
R1023
R1026 10k
10k R999
R1000 10k
10k R1063 10k
D901
D938
D946
D920
D918
D984
D957 D943
R1035 39k
R1008 4.7k
D958 D901
R1007 4.7k
D959 D916
D960 D902
R1036 39k
D941
D904
D903
D905
D906
D922
R982 220
H.SZ.ADJ
R933 18k
C902 1.0 TX
R981 27k
R934 33k
D973
R1049 220
V.SZ.ADJ
R1046 18k
C936 1.0 TX
R1048 39k
R1047 22k
R935 22k
D923
Q902
R1009 220
DETAIL /VOLUME
R936 22k
C903 1/50
R938 5.6k
R937 22k
Q902 : BUFFER
R1068 220
U6
CPU.RST
H.BLK
ABL
NC
+50V
H.DRV
+13.5V
+13.5V
GND
GND
STB12V
AC.CLK
RELAY
H.SIZE.ADJ
P.GND
AKT1019-
CN906
M K3
R1038 150
R940 4.7k
PST9146-T IC903
RESET INPUT GND
C907 0.01
D924
IC902
A0 A1 A2 VSS
VCC TEST SCL SDA
J716
AT24C-04-10PC
C915 100/10
C916 0.01
R984 8.2k
R983 8.2k
R952 100
R951 100
Q914
R985 8.2k
R1028 8.2k
C956 330p
R1102 820
R1110 820
J869
J854
IC903 : RESET IC
IC902 : NON VOLTAGE MEMORY
U10
H.BLK
CPU.RST
VM.Y
GND
V.BLK
V.SIZE.ADJ
CONV.ENB
CONV.MUTE
DATA
CLK
(E)SCL
(E)SDA
KP250NA12
CN904
R1039 100
R1101 100
R1020 4.7k
R1021 100
R1071 100
R1072 100
D992
D993
C1/3 G2
1 2 28 26 43 40 62 53 36 39 9 13 41 64 17 34 50 49 37 41 40 39 37 35 34 33 30 29 28 27 26 25 24 23 22 21 29 27 48 1 60 65 53 1 48 62 2 10 50 49

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k Ω
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V except electrolytic capacitor.

HSS104-02(1SS252)
MTZJ6.8(RD6.8ESB)
2SC1740S
2SA933S

3.5 AV I/O ASSY (1/3)

B AV I/O ASSY (1/3) (AWZ6197)

• TUNER 2 BLOCK

1.RESISTERS indicated in 1/2W,1/4W,1/10W,1WFL,2WFL 5% tolerance unless otherwise noted K;kΩ , M;MΩ (F)+1% , (G)+2% , (K)+10% , (M)+20% tolerance

2.CAPACITORS indicated in capacity (uF)/(V) unless otherwise noted pF indicated without voltage is 50V except electrolytic capacitor

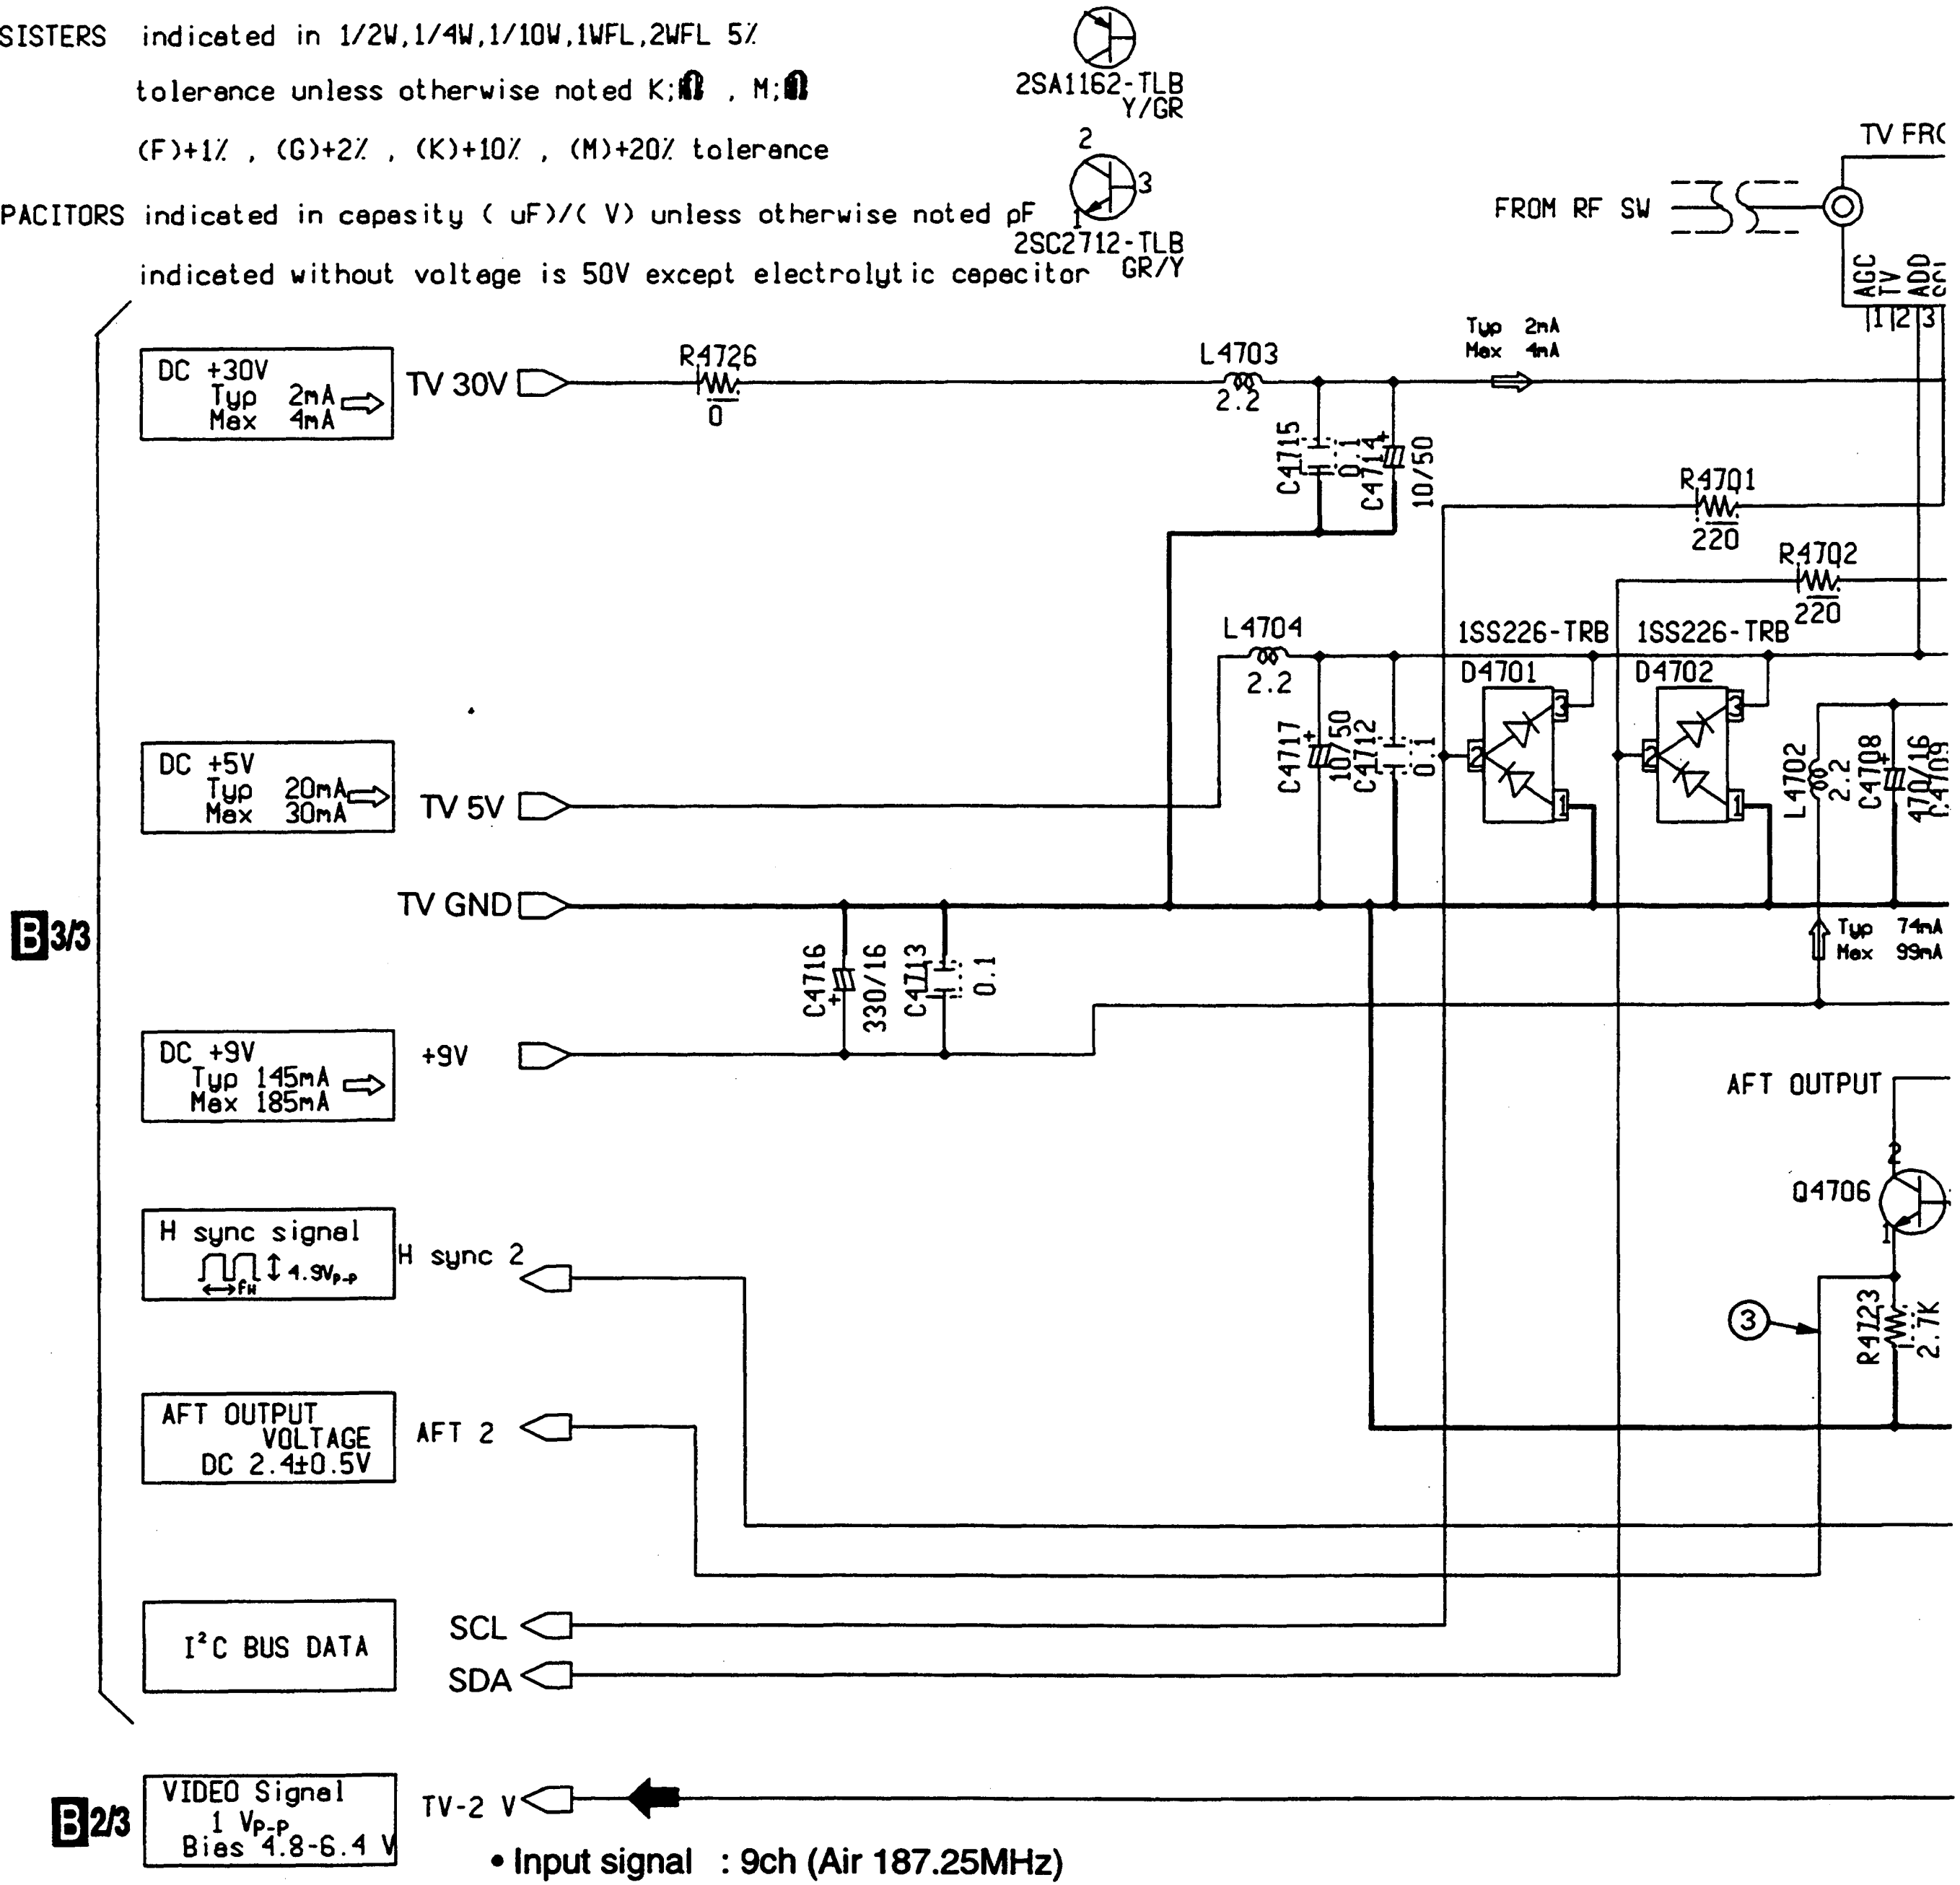
2SA1162-TLB
Y/GR
2SC2712-TLB
GR/Y
2
3
1
TV FR
FROM RF SW
AGC
TV
ADD
1
2
3
DC +30V
Typ 2mA
Max 4mA
TV 30V
R4726
0
L4703
2.2
Typ 2mA
Max 4mA
C4715
0.1
C4714
10/50
R4701
220
R4702
220
L4704
2.2
1SS226-TRB
D4701
1SS226-TRB
D4702
C4717
10/50
C4712
0.1
L4702
2.2
C4708
470/16
C4709
DC +5V
Typ 20mA
Max 30mA
TV 5V
TV GND
B3/3
Typ 74mA
Max 99mA
C4716
330/16
C4713
0.1
DC +9V
Typ 145mA
Max 185mA
+9V
AFT OUTPUT
Q4706
H sync signal
4.9Vp-p
fH
H sync 2
③
R4723
2.7K
AFT OUTPUT
VOLTAGE
DC 2.4±0.5V
AFT 2
I²C BUS DATA
SCL
SDA
B2/3
VIDEO Signal
1 Vp-p
Bias 4.8-6.4 V
TV-2 V

- Input signal : 9ch (Air 187.25MHz)
- Video signal : Color bar (87.5% Mod., 1kHZ ± 25kHz dev.), 60dBμ input
- Range : DC range (Unless otherwise noted)

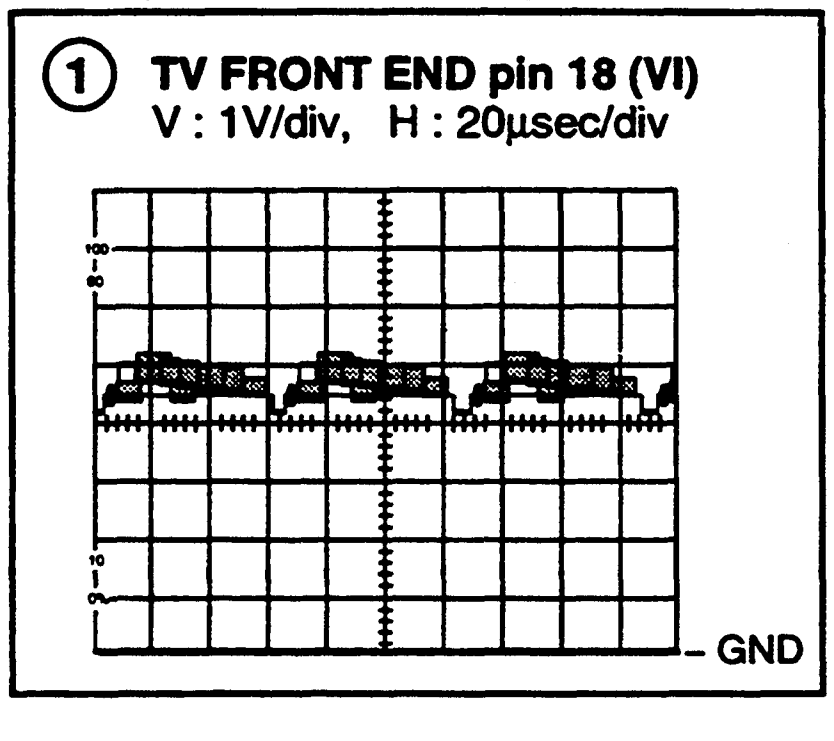
① **TV FRONT END pin 18 (VI)**
V : 1V/div, H : 20μsec/div

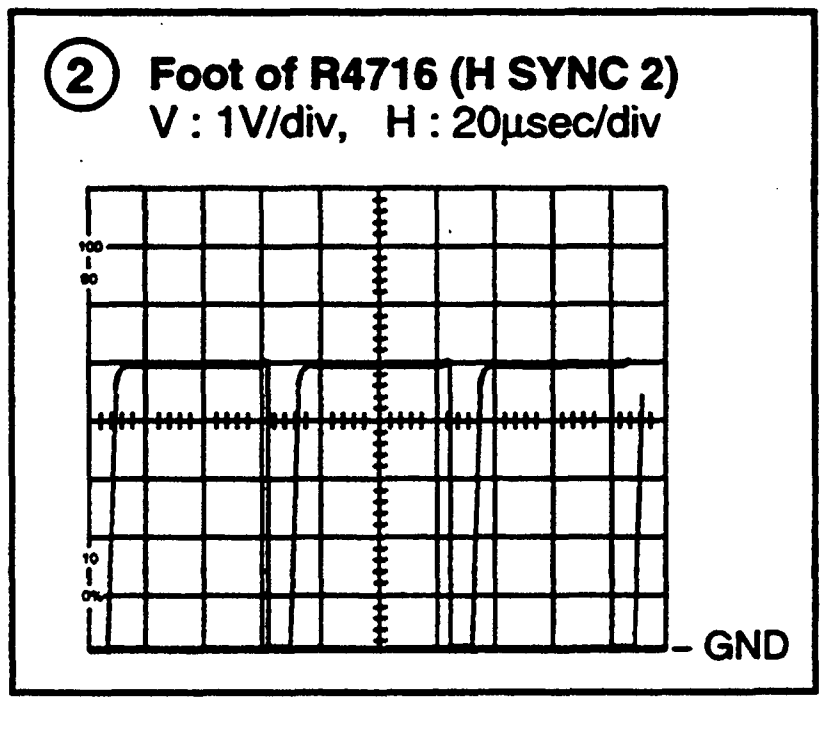
② **Foot of R4716 (H SYNC 2)**
V : 1V/div, H : 20μsec/div

SIGNAL ROUTE :

➡ : Video Signal Route

Voltage of TV FRONT END (AXF1084)

Pin	1	2	3	4	5	6	7	8	9
Voltage (V)	5.6	5.5	5.0	–	–	9.0	5.0	NC	33.0
Pin	10	11	12	13	14	15	16	17	18
Voltage (V)	NC	0	0	9.0	4.4	GND	2.3	NC	4.7

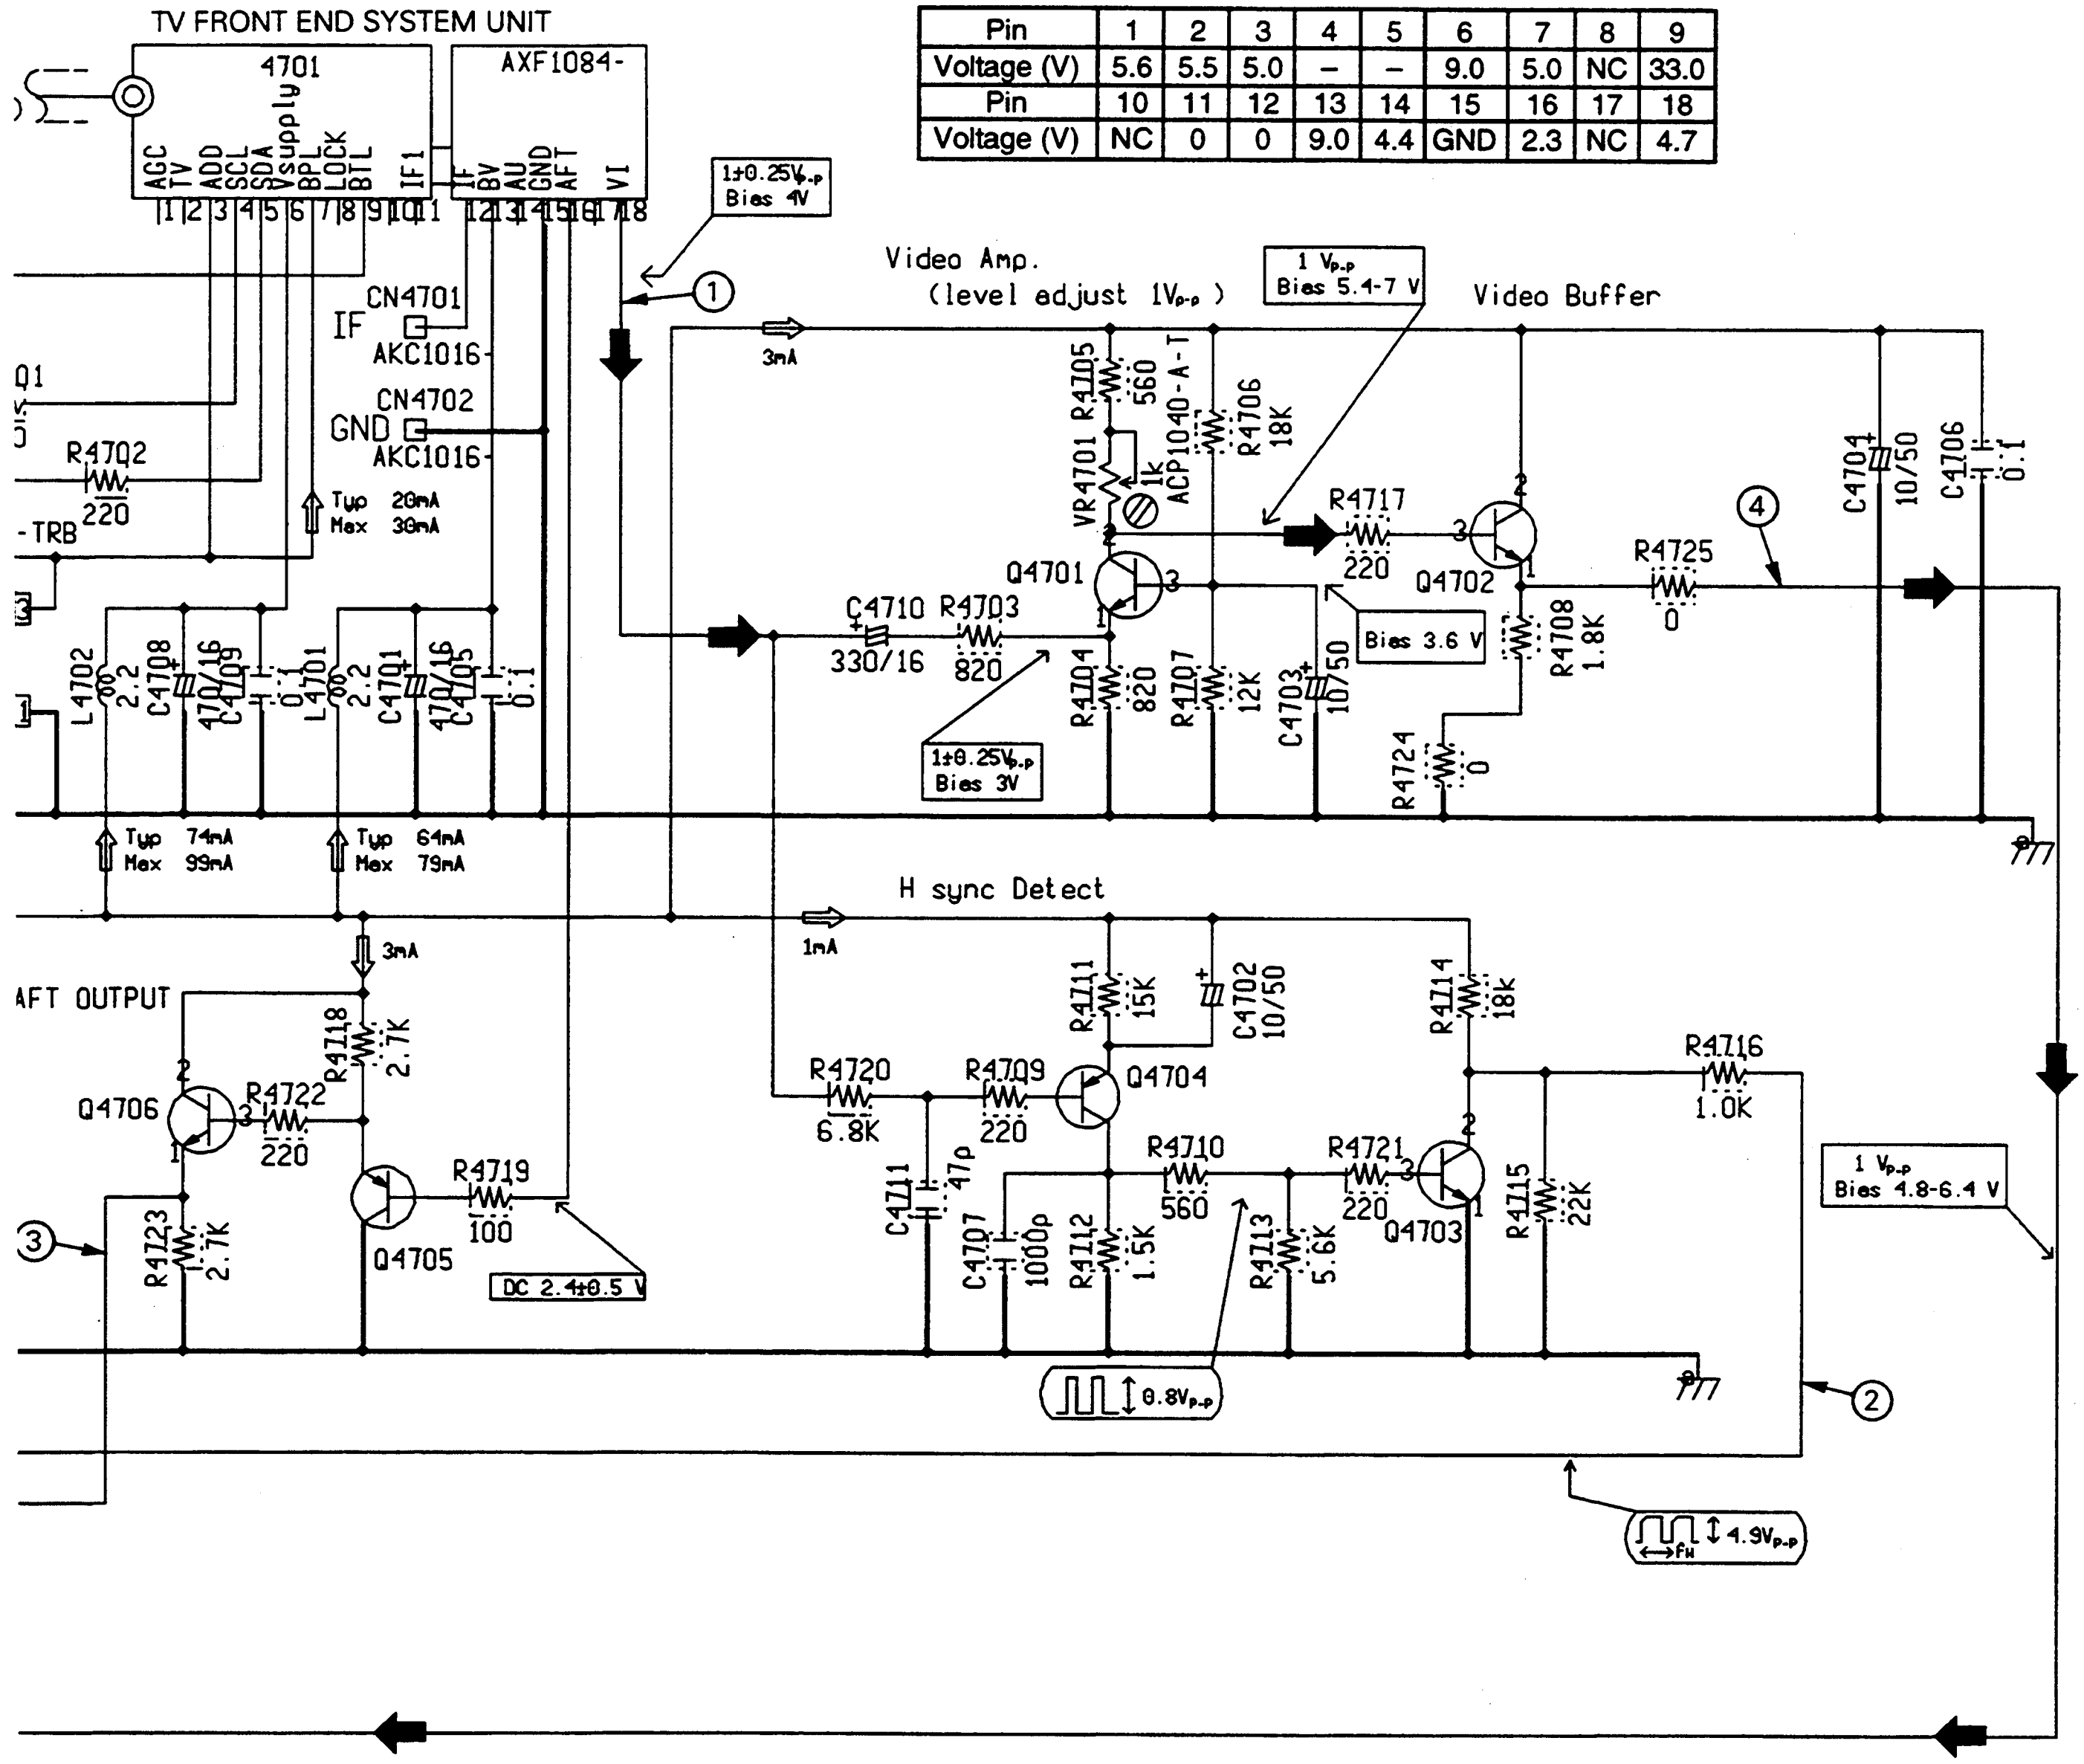
TV FRONT END SYSTEM UNIT
4701
AXF1084-
AGC
TV
ADD
SCL
SDA
Vsupply
BPL
LOCK
BTL
IF1
IF
BV
AU
GND
AFT
VI
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
1±0.25Vp-p Bias 4V
①
CN4701
IF
AKC1016
CN4702
GND
AKC1016
Q1
R4702
220
-TRB
Typ 20mA Max 30mA
L4702
2.2
C4708
470/16
C4709
0.1
L4701
2.2
C4701
470/16
C4705
0.1
Typ 74mA Max 99mA
Typ 64mA Max 79mA
Video Amp.
(level adjust 1Vp-p)
3mA
1 Vp-p Bias 5.4-7 V
Video Buffer
R4705
560
VR4701
1k
ACP1040-A-T
R4706
18K
R4717
220
Q4702
Q4701
C4710
330/16
R4703
820
1±0.25Vp-p Bias 3V
R4704
820
R4707
12K
C4703
10/50
Bias 3.6 V
R4708
1.8K
R4724
0
R4725
0
④
C4704
10/50
C4706
0.1
H sync Detect
1mA
3mA
AFT OUTPUT
R4718
2.7K
Q4706
R4722
220
R4723
2.7K
③
Q4705
R4719
100
DC 2.4±0.5 V
R4720
6.8K
R4709
220
Q4704
C4711
47p
C4707
1000p
R4711
15K
C4702
10/50
R4712
1.5K
R4710
560
R4713
5.6K
R4721
220
Q4703
R4714
18K
R4715
22K
R4716
1.0K
0.8Vp-p
1 Vp-p Bias 4.8-6.4 V
②
4.9Vp-p
fH

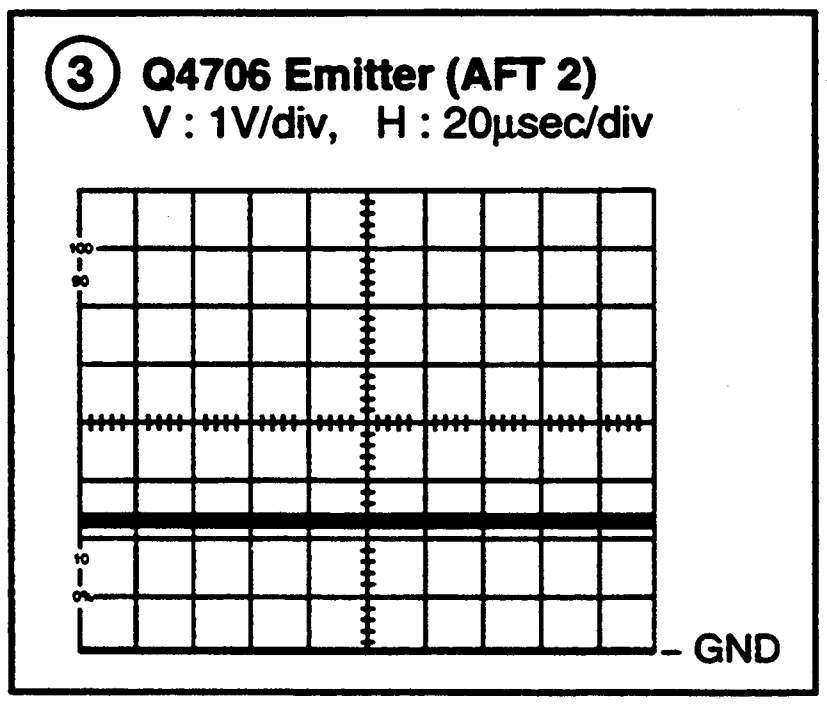

③ **Q4706 Emitter (AFT 2)**
V : 1V/div, H : 20µsec/div

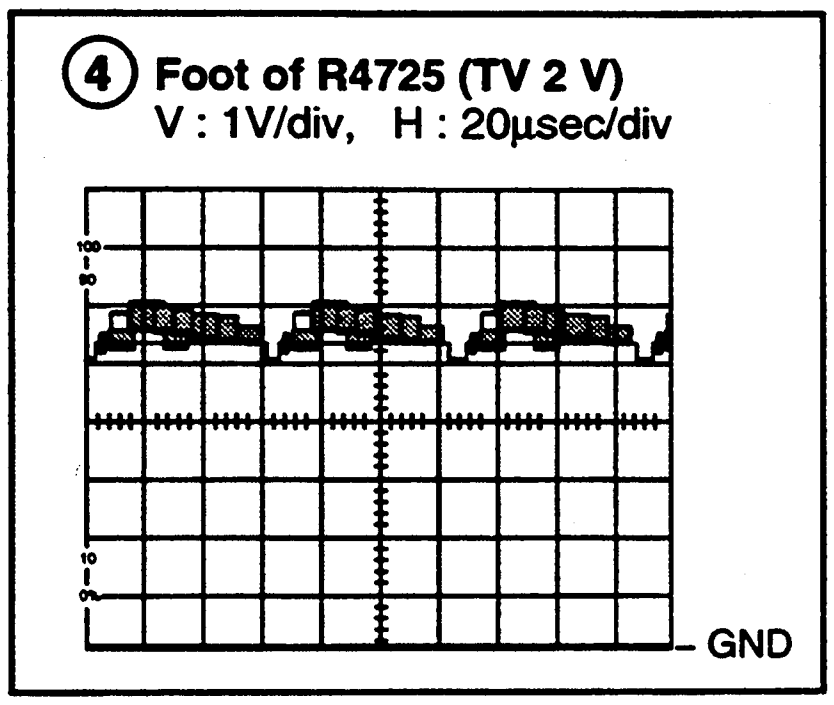

④ **Foot of R4725 (TV 2 V)**
V : 1V/div, H : 20µsec/div

3.6 AV I/O ASSY (2/3)

B AV I/O ASSY (2/3) (AWZ6197)

- AV I/O, Y/C SEP, S INPUT AND SUB WOOFER BLOCKS

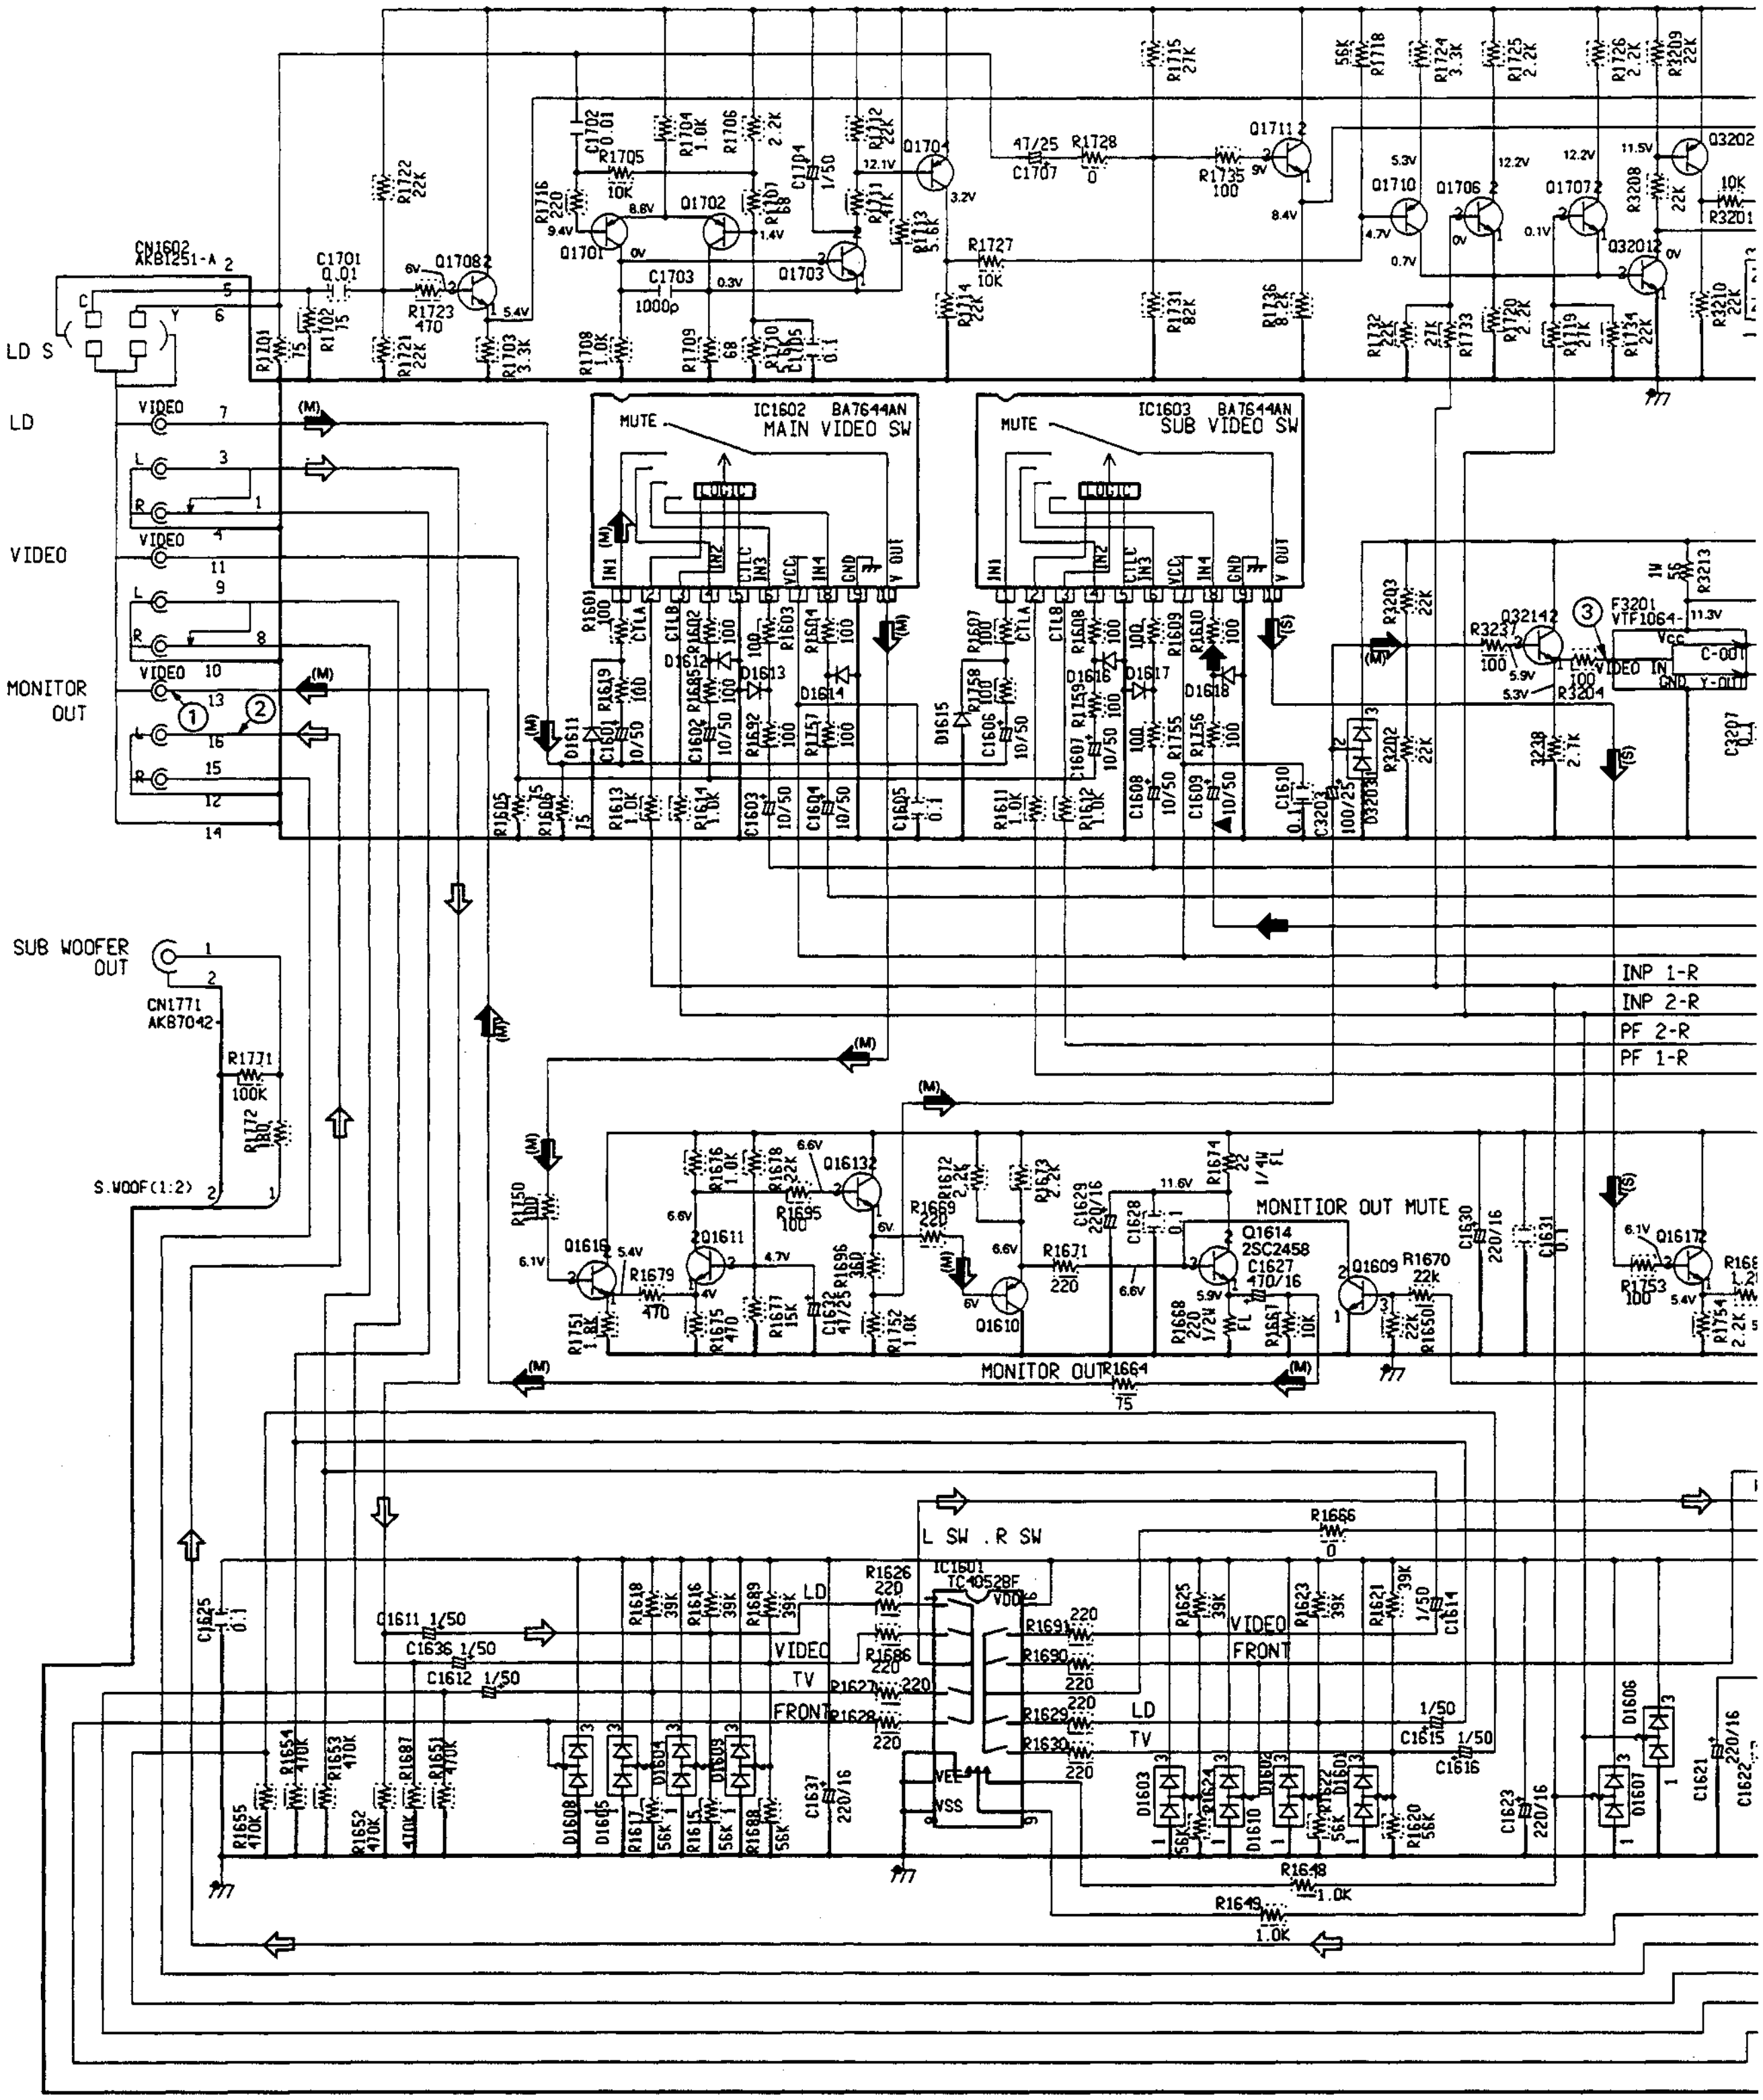
CN1602
AKB1251-A
LD S
LD
VIDEO
MONITOR OUT
SUB WOOFER OUT
CN1771
AKB7042
S.WOOF(1:2)
IC1602 BA7644AN MAIN VIDEO SW
IC1603 BA7644AN SUB VIDEO SW
MUTE
LOGIC
IN1
CYLA
IN2
CTLC
IN3
VCC
IN4
GND
Y OUT
F3201
VTF1064-
VIDEO IN
C-OUT
Y-OUT
INP 1-R
INP 2-R
PF 2-R
PF 1-R
MONITIOR OUT MUTE
MONITOR OUT
Q1614
2SC2458
L SW .R SW
IC1601
TC4052BF
VDD
VEE
VSS
LD
VIDEO
TV
FRONT
Q1708
Q1701
Q1702
Q1703
Q1704
Q1711
Q1710
Q1706
Q1707
Q3201
Q3202
Q3214
Q1615
Q1611
Q1613
Q1610
Q1609
Q1612

NOTE
1.RESISTORS Indicated in 1/2W,1/4W,1/10W,1WFL,2Wfl +5% tolerance unless otherwise notted k:k ,M:M
2.CAPACITORS Indicated in capacity (F)/(V) unless otherwise noted pF.
Indicated without voltage is 50V except electrolytic capacitor.

2SC2712-TLB   2SA1162-TLB   1SS226-TRB   1SS352-TRB

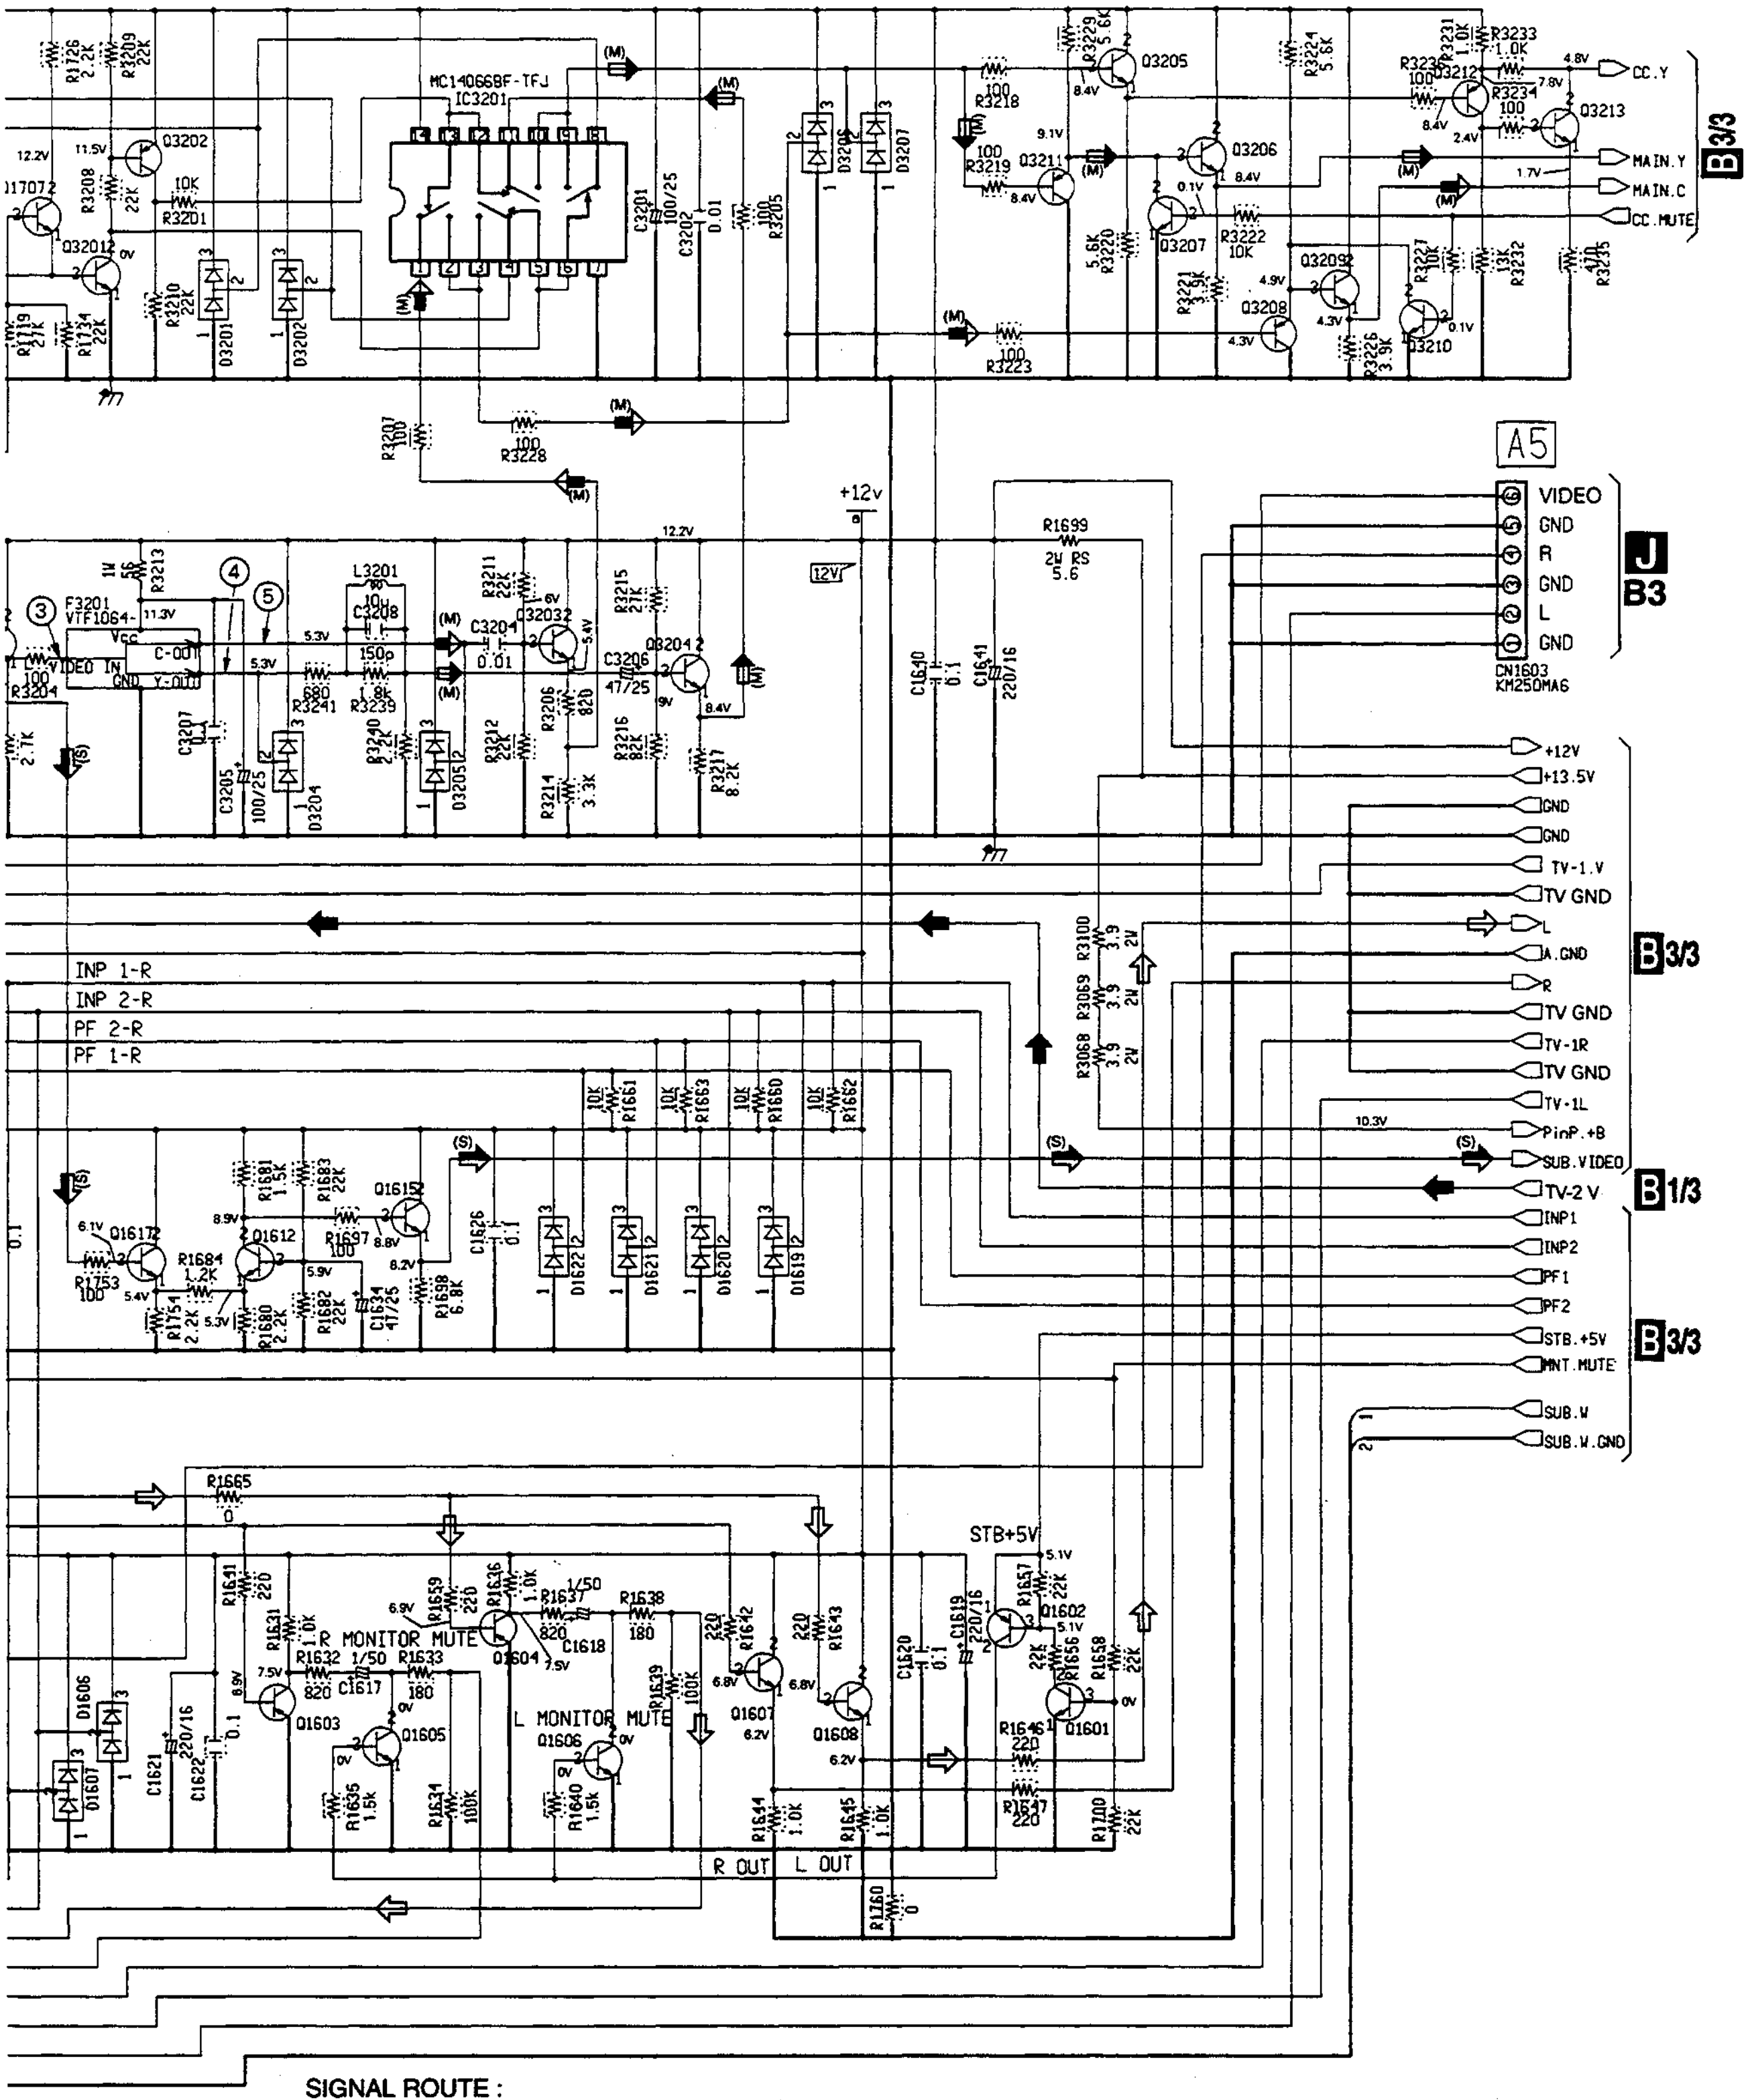
MC14066BF-TFJ
IC3201
Q3201
Q3202
Q3204
Q3205
Q3206
Q3207
Q3208
Q3209
Q3210
Q3211
Q3212
Q3213
D3201
D3202
D3204
D3205
D3206
D3207
F3201
VTF1064-
VIDEO IN
GND
Vcc
C-OUT
Y-OUT
L3201
10μ
C3208
150p
C3204
0.01
C3206
47/25
C3201
100/25
C3202
0.01
C3205
100/25
C3207
0.1
R3201
10K
R3204
100
R3205
100
R3207
100
R3208
22K
R3209
22K
R3210
22K
R3211
22K
R3212
22K
R3213
56
1W
R3214
3.3K
R3215
27K
R3216
82K
R3217
8.2K
R3218
100
R3219
100
R3220
5.6K
R3221
3.9K
R3222
10K
R3223
100
R3224
5.6K
R3226
3.9K
R3227
10K
R3228
100
R3229
5.6K
R3230
100
R3231
1.0K
R3232
13K
R3233
1.0K
R3234
100
R3235
470
R3239
1.8K
R3240
R3241
680
R1726
2.2K
R1734
22K
R1719
27K
CC.Y
MAIN.Y
MAIN.C
CC.MUTE
B3/3
A5
VIDEO
GND
R
GND
L
GND
J
B3
CN1603
KM250MA6
+12V
12V
R1699
2W RS
5.6
C1640
0.1
C1641
220/16
+12V
+13.5V
GND
GND
TV-1.V
TV GND
L
A.GND
R
TV GND
TV-1R
TV GND
TV-1L
PinP.+B
SUB.VIDEO
TV-2 V
INP1
INP2
PF1
PF2
STB.+5V
MNT.MUTE
SUB.W
SUB.W.GND
B3/3
B1/3
B3/3
R3100
3.9
2W
R3069
3.9
2W
R3068
3.9
2W
10.3V
INP 1-R
INP 2-R
PF 2-R
PF 1-R
R1661
10K
R1663
10K
R1660
10K
R1662
10K
D1619
D1620
D1621
D1622
Q1615
Q1617
Q1612
R1681
1.5K
R1683
22K
R1684
1.2K
R1697
100
R1753
100
R1751
2.2K
R1680
2.2K
R1682
22K
C1634
47/25
R1698
6.8K
C1626
0.1
R1665
0
STB+5V
R MONITOR MUTE
L MONITOR MUTE
Q1601
Q1602
Q1603
Q1604
Q1605
Q1606
Q1607
Q1608
D1606
D1607
C1617
1/50
C1618
1/50
C1619
220/16
C1620
0.1
C1621
0.1
C1622
220/16
R1631
220
R1632
820
R1633
180
R1634
100K
R1635
1.5K
R1636
1.0K
R1637
820
R1638
180
R1639
100K
R1640
1.5K
R1641
1.0K
R1642
220
R1643
220
R1644
1.0K
R1645
1.0K
R1646
220
R1647
220
R1656
22K
R1657
22K
R1658
22K
R1700
22K
R1760
0
R OUT
L OUT
(M)
(S)

SIGNAL ROUTE :

- ➡ : Video Signal Route
- (M)➡ : Video Signal Route (Main picture)
- (S)➡ : Video Signal Route (Sub picture)
- (M)⇨ : Y Signal Route (Main picture)
- (M)➡ : C Signal Route (Main picture)
- ⇨ : Audio Signal Route (L ch)

3.7 AV I/O ASSY (3/3)

B AV I/O ASSY (3/3) (AWZ6197)

• P IN P AND CNR BLOCKS

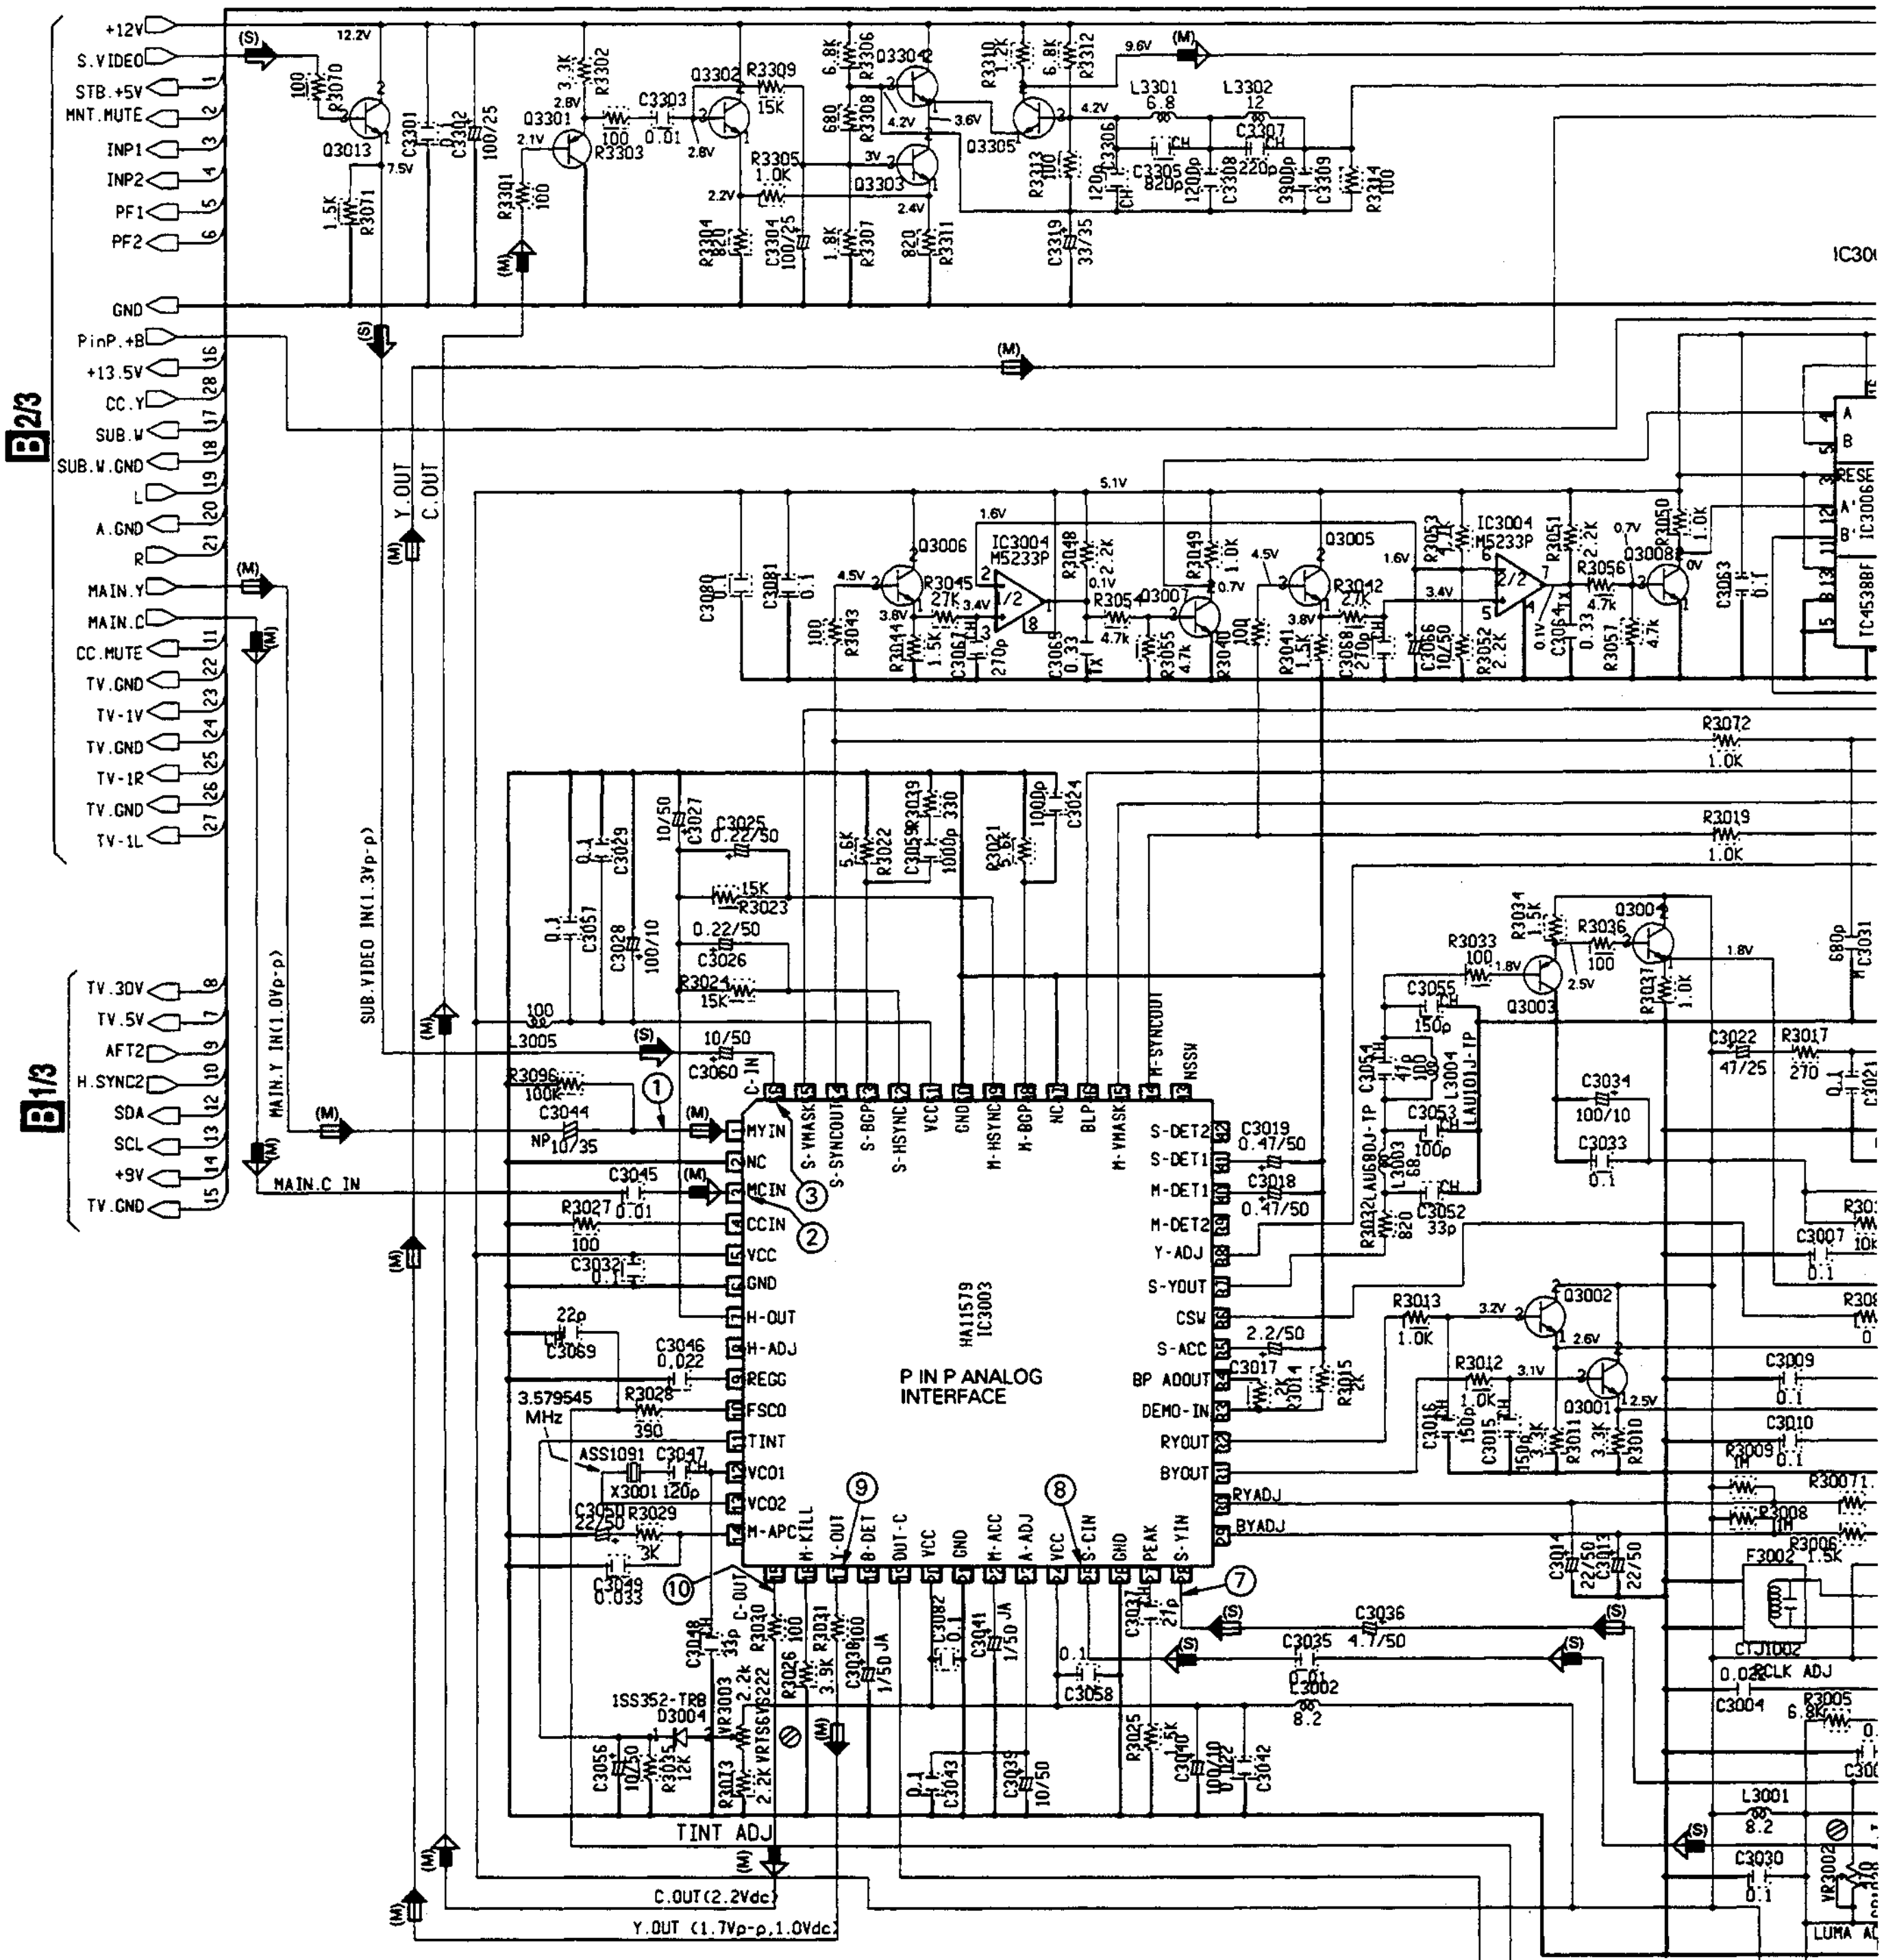
+12V
S.VIDEO
STB.+5V
MNT.MUTE
INP1
INP2
PF1
PF2
GND
PinP.+B
+13.5V
CC.Y
SUB.W
SUB.W.GND
L
A.GND
R
MAIN.Y
MAIN.C
CC.MUTE
TV.GND
TV-1V
TV.GND
TV-1R
TV.GND
TV-1L
B2/3
TV.30V
TV.5V
AFT2
H.SYNC2
SDA
SCL
+9V
TV.GND
B1/3
Q3013
Q3301
Q3302
Q3303
Q3304
Q3305
L3301
L3302
IC3004 M5233P
Q3006
Q3007
Q3005
Q3008
IC3008 TC4538BP
Y.OUT
C.OUT
SUB.VIDEO IN(1.3Vp-p)
MAIN.Y IN(1.0Vp-p)
MAIN.C IN
HA11579 IC3003
P IN P ANALOG INTERFACE
MYIN
NC
MCIN
CCIN
VCC
GND
H-OUT
H-ADJ
REGG
FSCO
TINT
VCO1
VCO2
M-APC
C-IN
S-VMASK
S-SYNCOUT
S-BGP
S-HSYNC
VCC
GND
M-HSYNC
M-BGP
NC
BLP
M-VMASK
M-SYNCOUT
NSSW
S-DET2
S-DET1
M-DET1
M-DET2
Y-ADJ
S-YOUT
CSW
S-ACC
BP ADOUT
DEMO-IN
RYOUT
BYOUT
RYADJ
BYADJ
C-OUT
M-KILL
Y-OUT
B-DET
OUT-C
VCC
GND
M-ACC
A-ADJ
VCC
S-CIN
GND
PEAK
S-YIN
3.579545 MHz
X3001
1SS352-TRB D3004
TINT ADJ
Q3004
Q3003
Q3002
Q3001
L3004 LAU101J-TP
L3003 LAU680J-TP
F3002
CTJ1002
CLK ADJ
L3001
VR3002
LUMA ADJ
C.OUT(2.2Vdc)
Y.OUT (1.7Vp-p,1.0Vdc)
IC300

NOTE..

2SC2712-TLB 2SA1162-TLB 1SS226-TRB

1.RESISTORS Indicated in 1/10W, +5% tolerance unless otherwise noted k:k , M:M

2.CAPACITORS Indicated in capacity (F)/(V) unless otherwise noted pF.
Indicated without voltage is 50V except electrolytic capacitor.

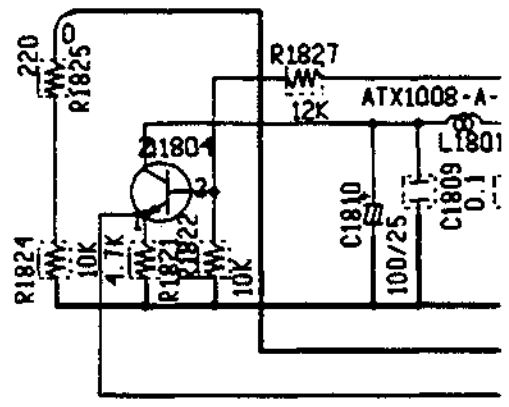
R1825
220
R1827
12K
ATX1008-A-
Q1804
L1801
C1809
0.1
C1810
100/25
R1824
10K
R1823
4.7K
R1822
10K

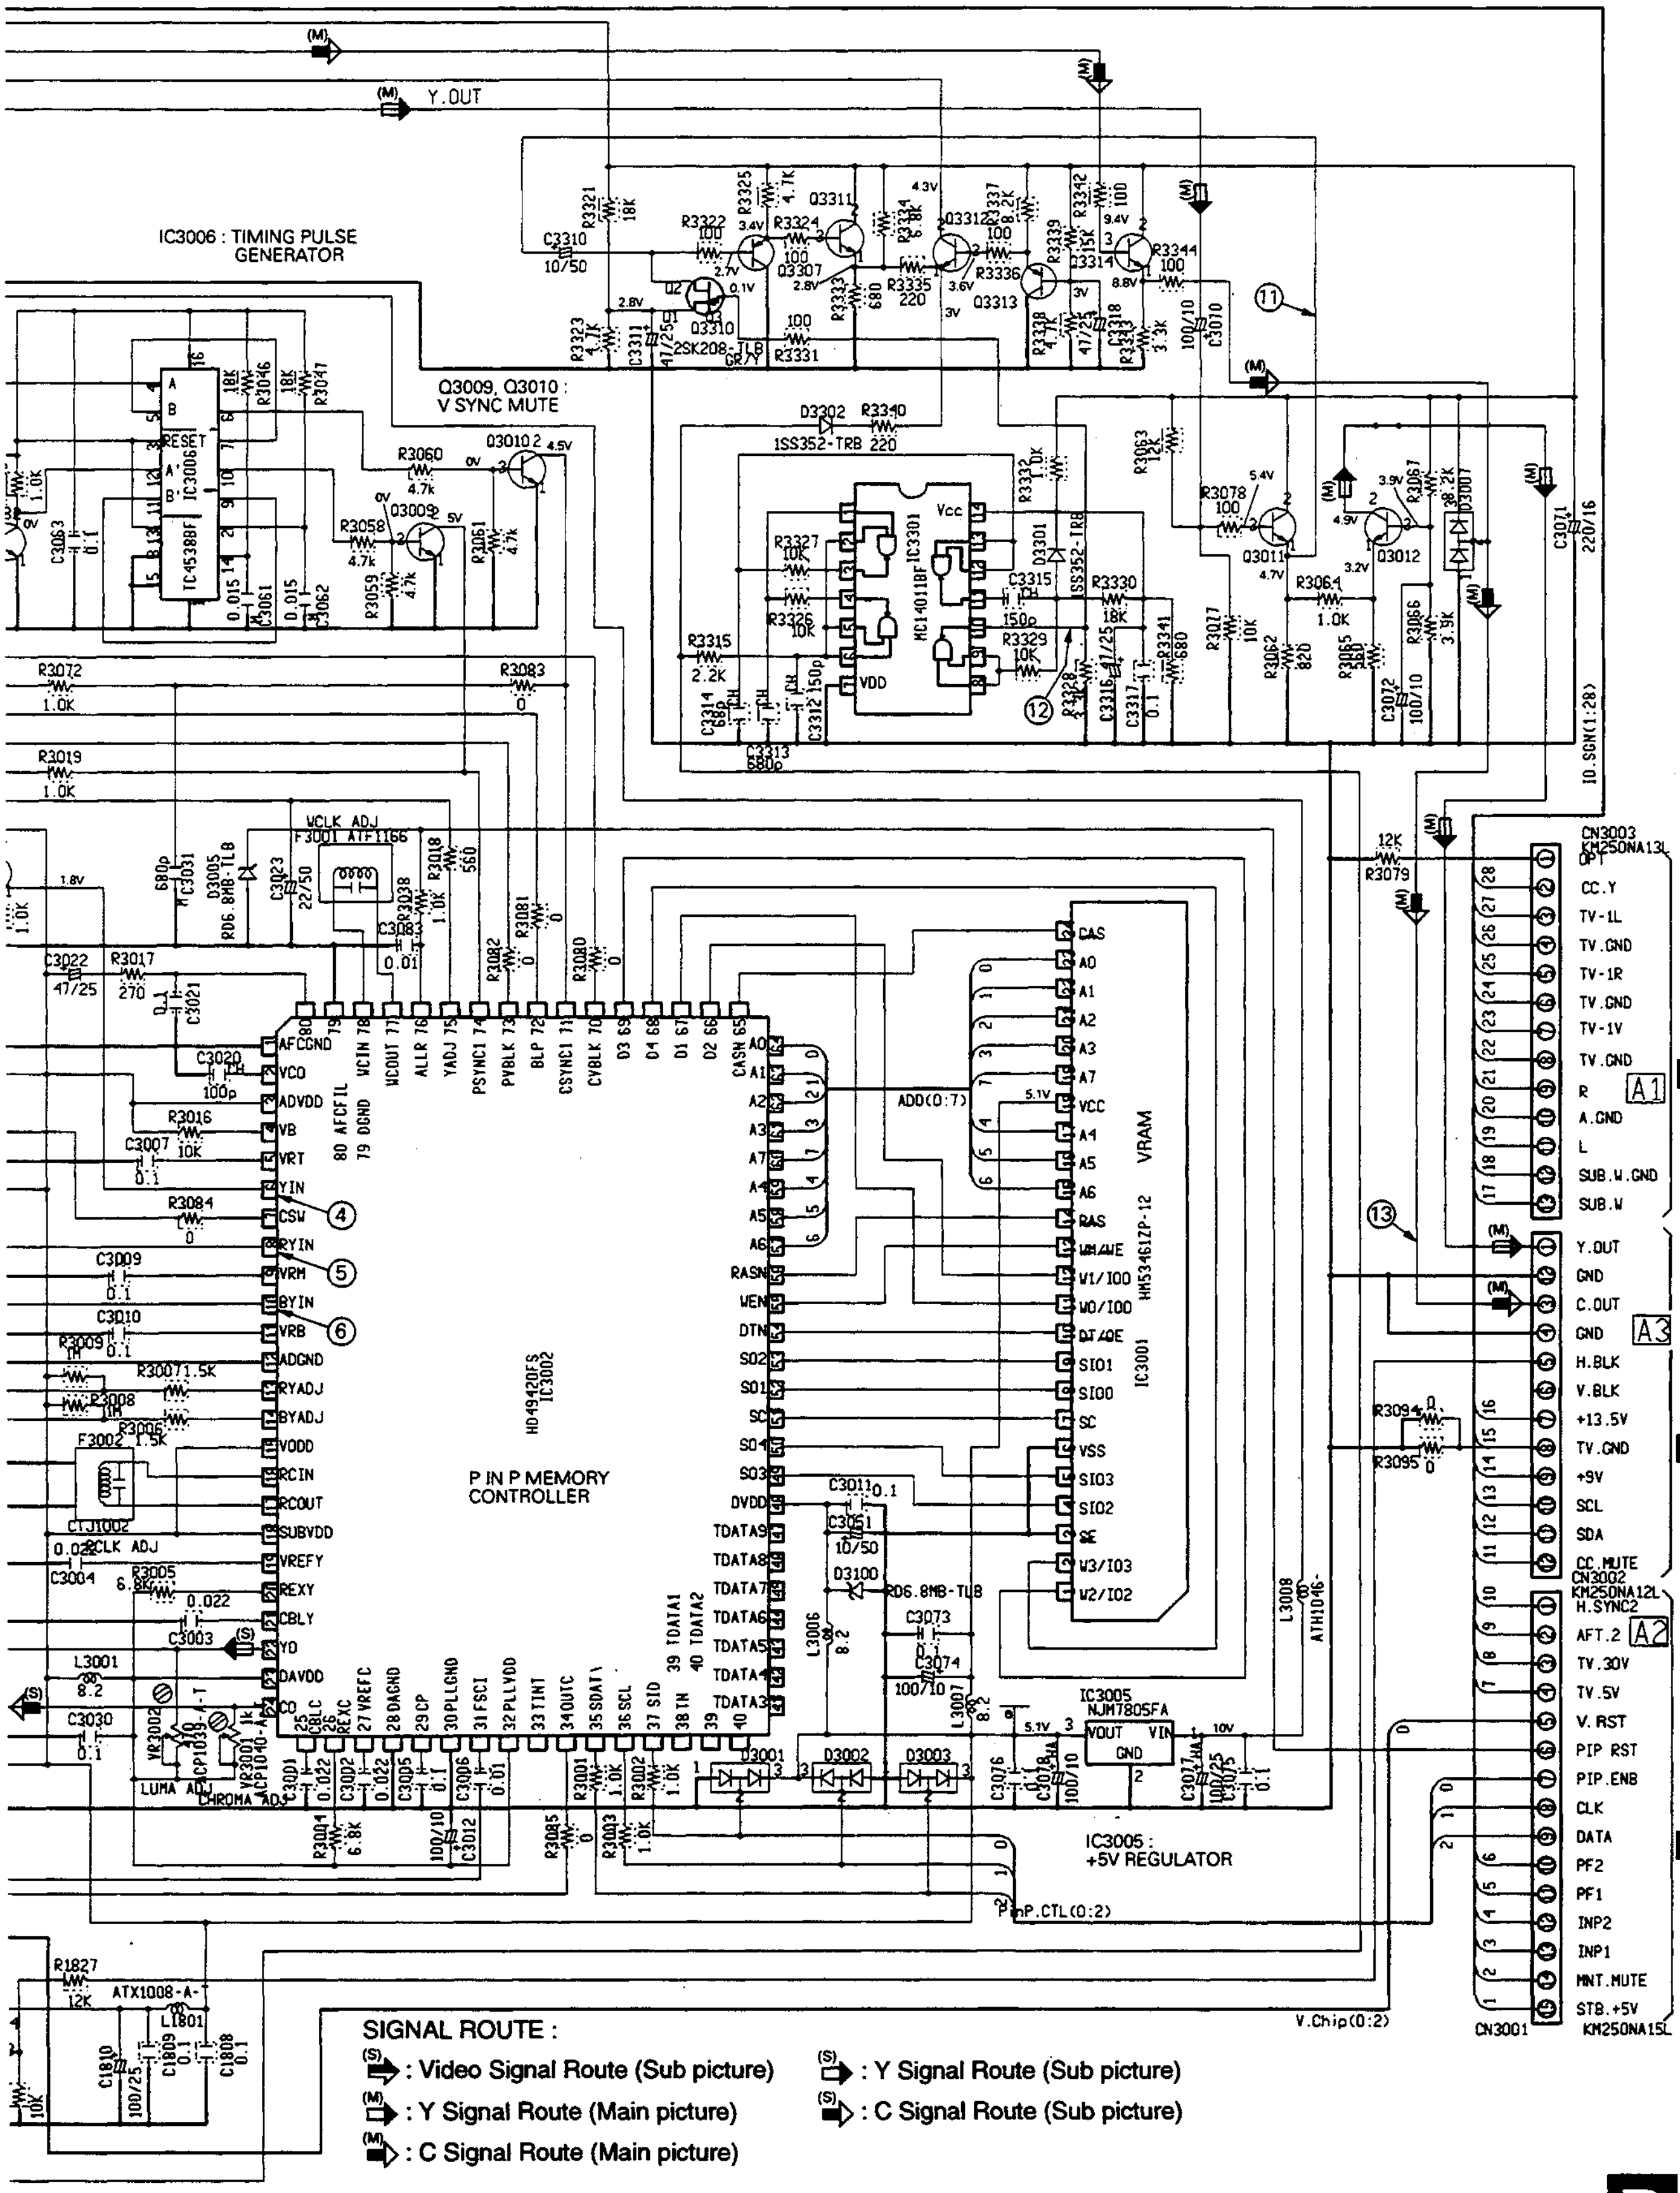
Y.OUT
IC3006 : TIMING PULSE GENERATOR
Q3009, Q3010 : V SYNC MUTE
IC3006 IC4538F
Q3009
Q3010
Q3307
Q3310 2SK208-TLB
Q3311
Q3312
Q3313
Q3314
IC3301 MC14011BF
D3302 1SS352-TRB
D3301 1SS352-TRB
Q3011
Q3012
D3007
WCLK ADJ
F3001 ATF1166
F3002
CTJ1002
RCLK ADJ
LUMA ADJ
CHROMA ADJ
VR3002
VR3001
P IN P MEMORY CONTROLLER
HD49420FS IC3002
VRAM
HM53461ZP-12
IC3001
ADD(0:7)
IC3005 NJM7805FA
IC3005 : +5V REGULATOR
P.CTL(0:2)
V.Chip(0:2)
IO.SGN(1:28)
L3008 ATH1046
L3001
L3006
L3007
D3001
D3002
D3003
D3100 RD6.8MB-TLB
D3005 RD6.8MB-TLB
R1827
L1801 ATX1008-A-
CN3003 KM250NA13L
CN3002 KM250NA12L
CN3001 KM250NA15L
CC.Y
TV-1L
TV.GND
TV-1R
TV-1V
R
A.GND
L
SUB.W.GND
SUB.W
Y.OUT
GND
C.OUT
H.BLK
V.BLK
+13.5V
+9V
SCL
SDA
CC.MUTE
H.SYNC2
AFT.2
TV.30V
TV.5V
V.RST
PIP RST
PIP.ENB
CLK
DATA
PF2
PF1
INP2
INP1
MNT.MUTE
STB.+5V
A1
A2
A3
A3/3 U1
A2/3 U3
A3/3 U2
⑪
⑫
⑬
④
⑤
⑥

SIGNAL ROUTE :

(S) : Video Signal Route (Sub picture)

(M) : Y Signal Route (Main picture)

(M) : C Signal Route (Main picture)

(S) : Y Signal Route (Sub picture)

(S) : C Signal Route (Sub picture)

3.8 AMP ASSY (1/3)

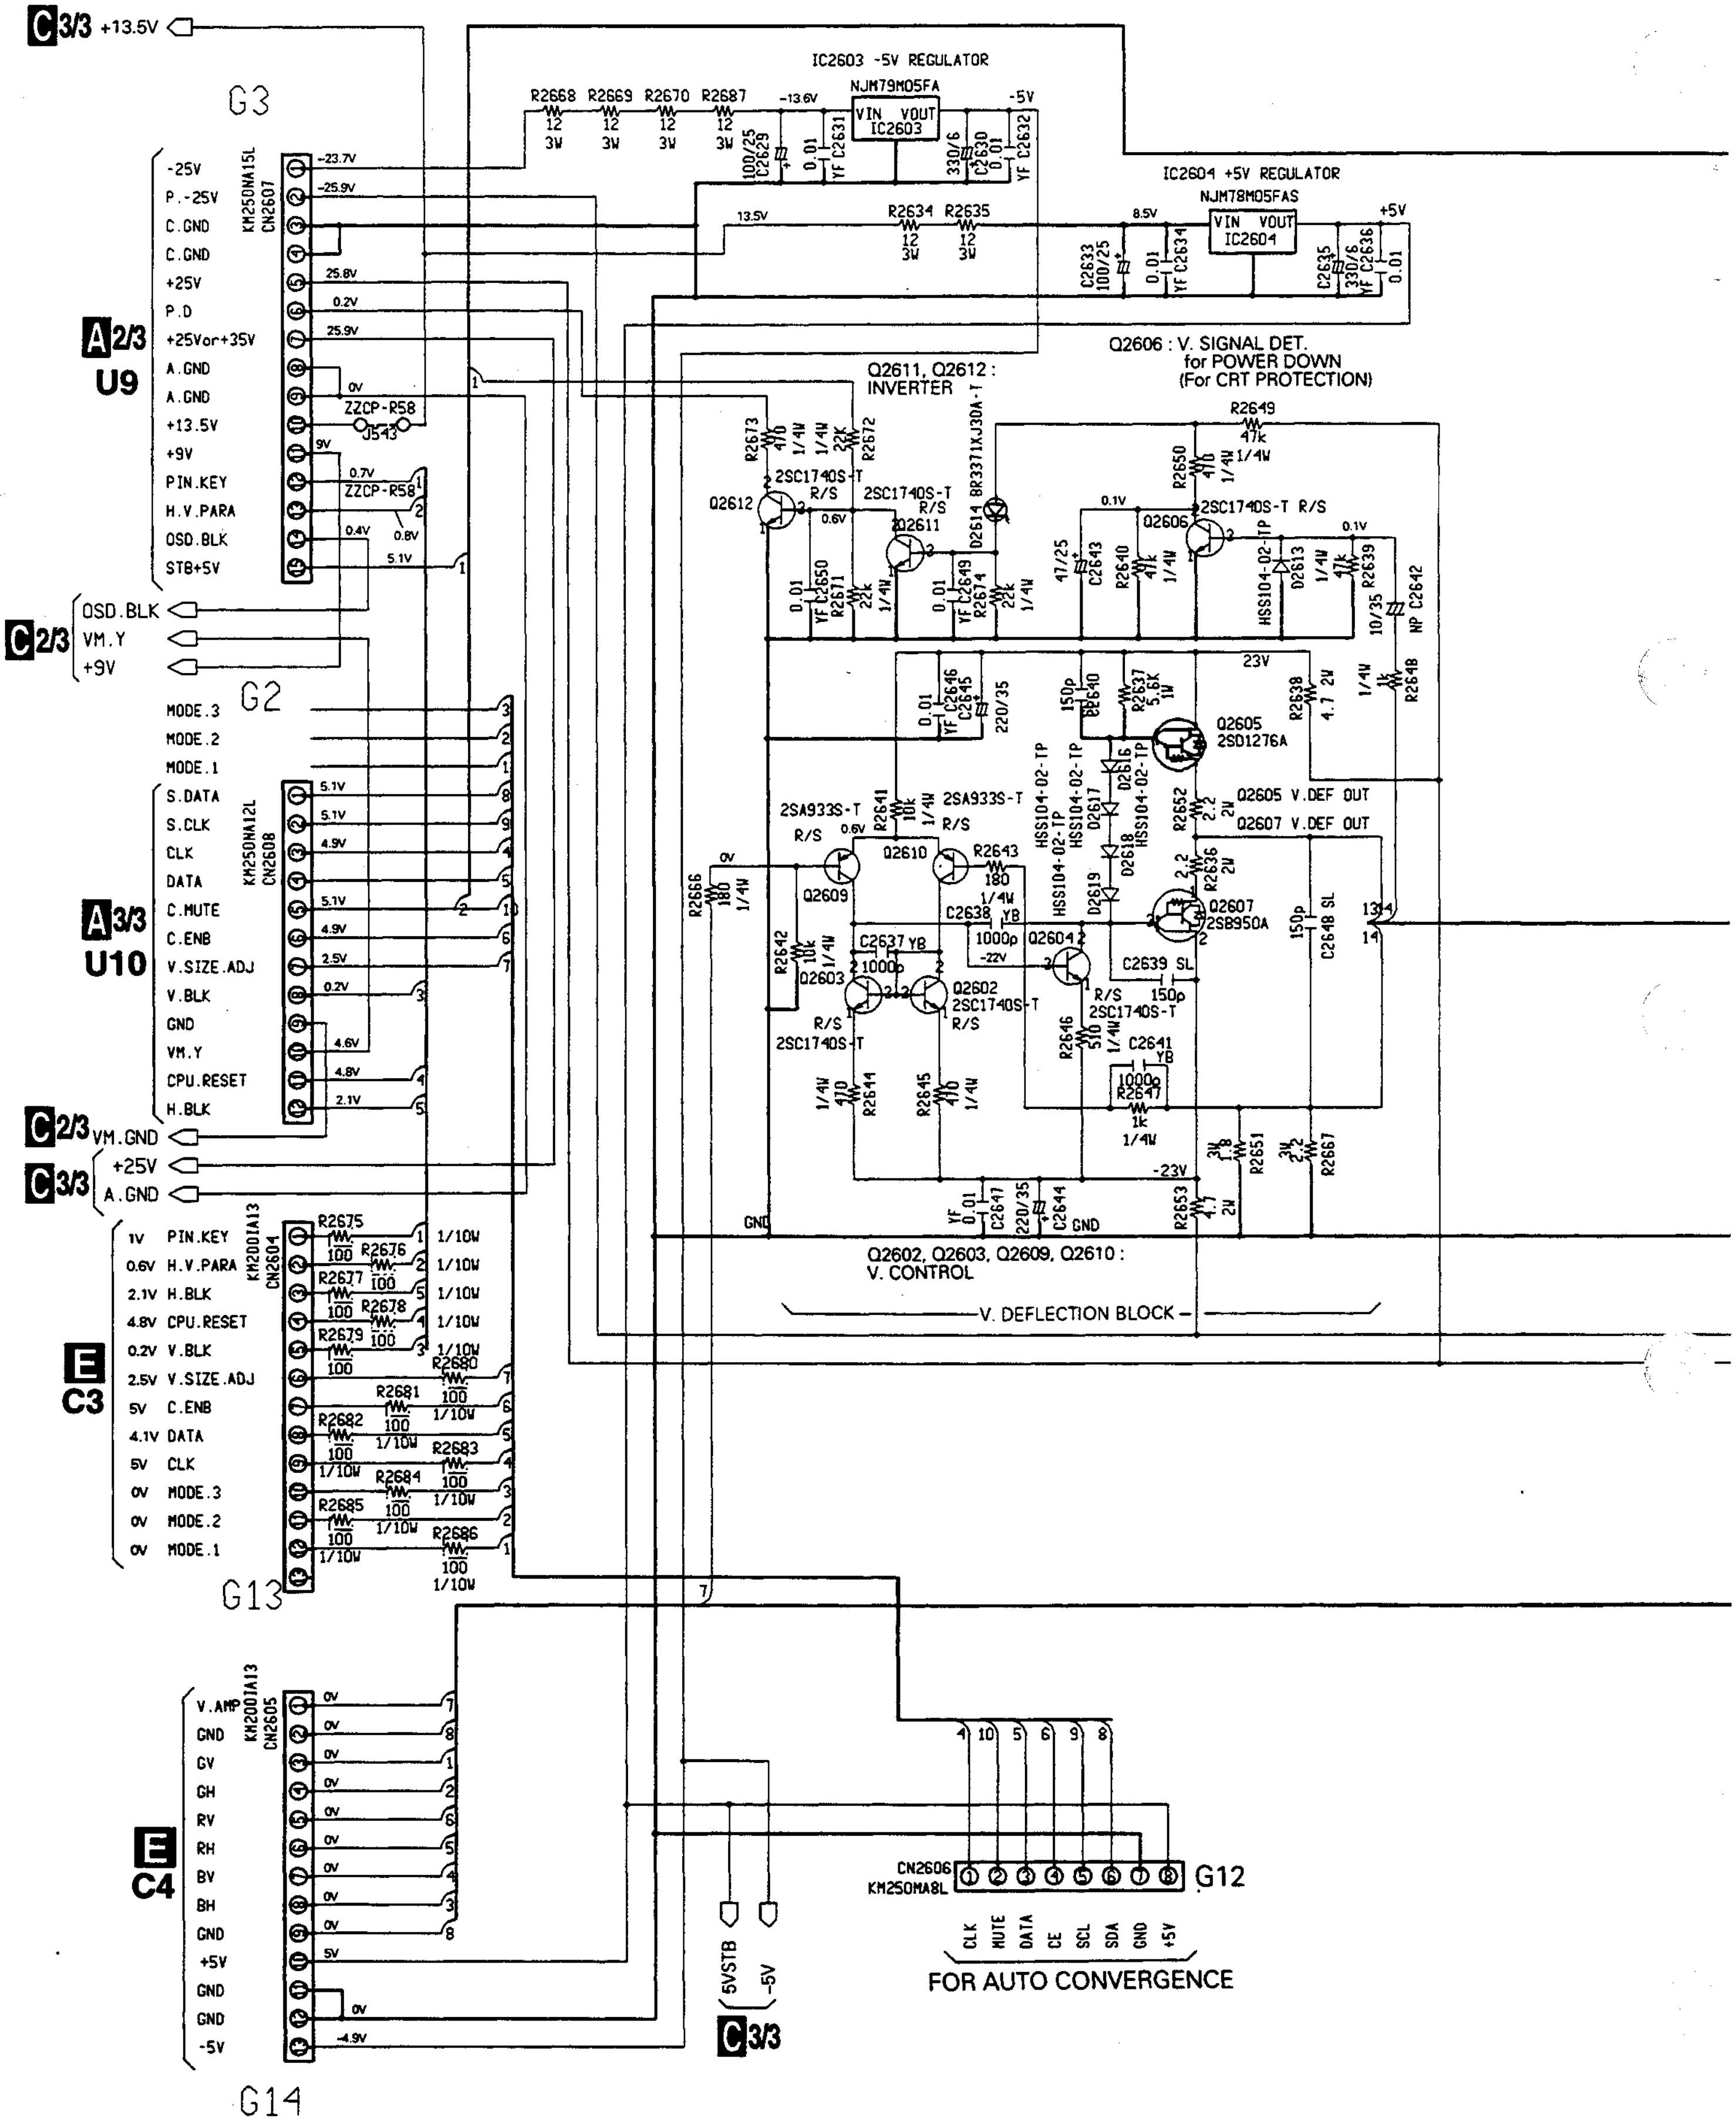
C3/3 +13.5V
IC2603 -5V REGULATOR
NJM79M05FA
VIN VOUT
IC2603
R2668 12 3W
R2669 12 3W
R2670 12 3W
R2687 12 3W
-13.6V
-5V
100/25 C2629
0.01 YF C2631
330/6 C2630
0.01 YF C2632
IC2604 +5V REGULATOR
NJM78M05FAS
IC2604
+5V
8.5V
13.5V
R2634 12 3W
R2635 12 3W
C2633 100/25
0.01 YF C2634
C2635 330/6
YF C2636 0.01
G3
KM250NA15L CN2607
-25V
P.-25V
C.GND
C.GND
+25V
P.D
+25Vor+35V
A.GND
A.GND
+13.5V
+9V
PIN.KEY
H.V.PARA
OSD.BLK
STB+5V
-23.7V
-25.9V
25.8V
0.2V
25.9V
0V
ZZCP-R58
J543
9V
0.7V
0.4V
0.8V
5.1V
A2/3
U9
C2/3
OSD.BLK
VM.Y
+9V
G2
Q2611, Q2612 : INVERTER
Q2606 : V. SIGNAL DET. for POWER DOWN (For CRT PROTECTION)
R2673 470 1/4W
R2672 22K 1/4W
2SC1740S-T R/S
Q2612
Q2611
D2614 BR3371KJ30A-T
R2649 47k 1/4W
R2650 470 1/4W
Q2606
2SC1740S-T R/S
0.1V
0.6V
0.01 YF C2650
R2671 22k 1/4W
0.01 YF C2649
R2674 22k 1/4W
47/25 C2643
R2640 47k 1/4W
HSS104-02-TP D2613
R2639 47k 1/4W
10/35 NP C2642
R2648 1k 1/4W
23V
0.01 YF C2646
C2645 220/35
150p C2640
R2637 5.6K 1W
R2638 4.7 2W
Q2605 2SD1276A
D2616
D2617
D2618
D2619
HSS104-02-TP
R2652 2.2 2W
Q2605 V.DEF OUT
Q2607 V.DEF OUT
R2636 2.2 2W
Q2607 2SB950A
150p C2648 SL
13
14
2SA933S-T R/S
Q2609
Q2610
R2641 10k 1/4W
R2643 180 1/4W
C2638 YB 1000p
-22V
Q2604
C2637 YB 1000p
R2666 180 1/4W
R2642 10k 1/4W
Q2603
Q2602
2SC1740S-T R/S
C2639 SL 150p
R2646 510 1/4W
C2641 YB 1000p
R2647 1k 1/4W
R2644 470 1/4W
R2645 470 1/4W
R2651 1.8 2W
R2667 2.2 2W
-23V
YF 0.01 C2647
220/35 C2644
GND
R2653 4.7 2W
Q2602, Q2603, Q2609, Q2610 : V. CONTROL
V. DEFLECTION BLOCK
MODE.3
MODE.2
MODE.1
KM250NA12L CN2608
S.DATA
S.CLK
CLK
DATA
C.MUTE
C.ENB
V.SIZE.ADJ
V.BLK
GND
VM.Y
CPU.RESET
H.BLK
5.1V
4.9V
2.5V
4.6V
4.8V
2.1V
A3/3
U10
C2/3 VM.GND
C3/3 +25V
A.GND
KM200IA13 CN2604
1V PIN.KEY
0.6V H.V.PARA
2.1V H.BLK
4.8V CPU.RESET
0.2V V.BLK
2.5V V.SIZE.ADJ
5V C.ENB
4.1V DATA
5V CLK
0V MODE.3
0V MODE.2
0V MODE.1
R2675 100
R2676 100
R2677 100
R2678 100
R2679 100
R2680 100
R2681 100
R2682 100
R2683 100
R2684 100
R2685 100
R2686 100
1/10W
E
C3
G13
KM200IA13 CN2605
V.AMP
GND
GV
GH
RV
RH
BV
BH
GND
+5V
GND
GND
-5V
0V
5V
-4.9V
E
C4
G14
CN2606 KM250MA8L
G12
CLK
MUTE
DATA
CE
SCL
SDA
GND
+5V
FOR AUTO CONVERGENCE
5VSTB
-5V
C3/3

C AMP ASSY (1/3) (AWZ6190)

- CONVER AMP AND V. DEFLECTION BLOCKS

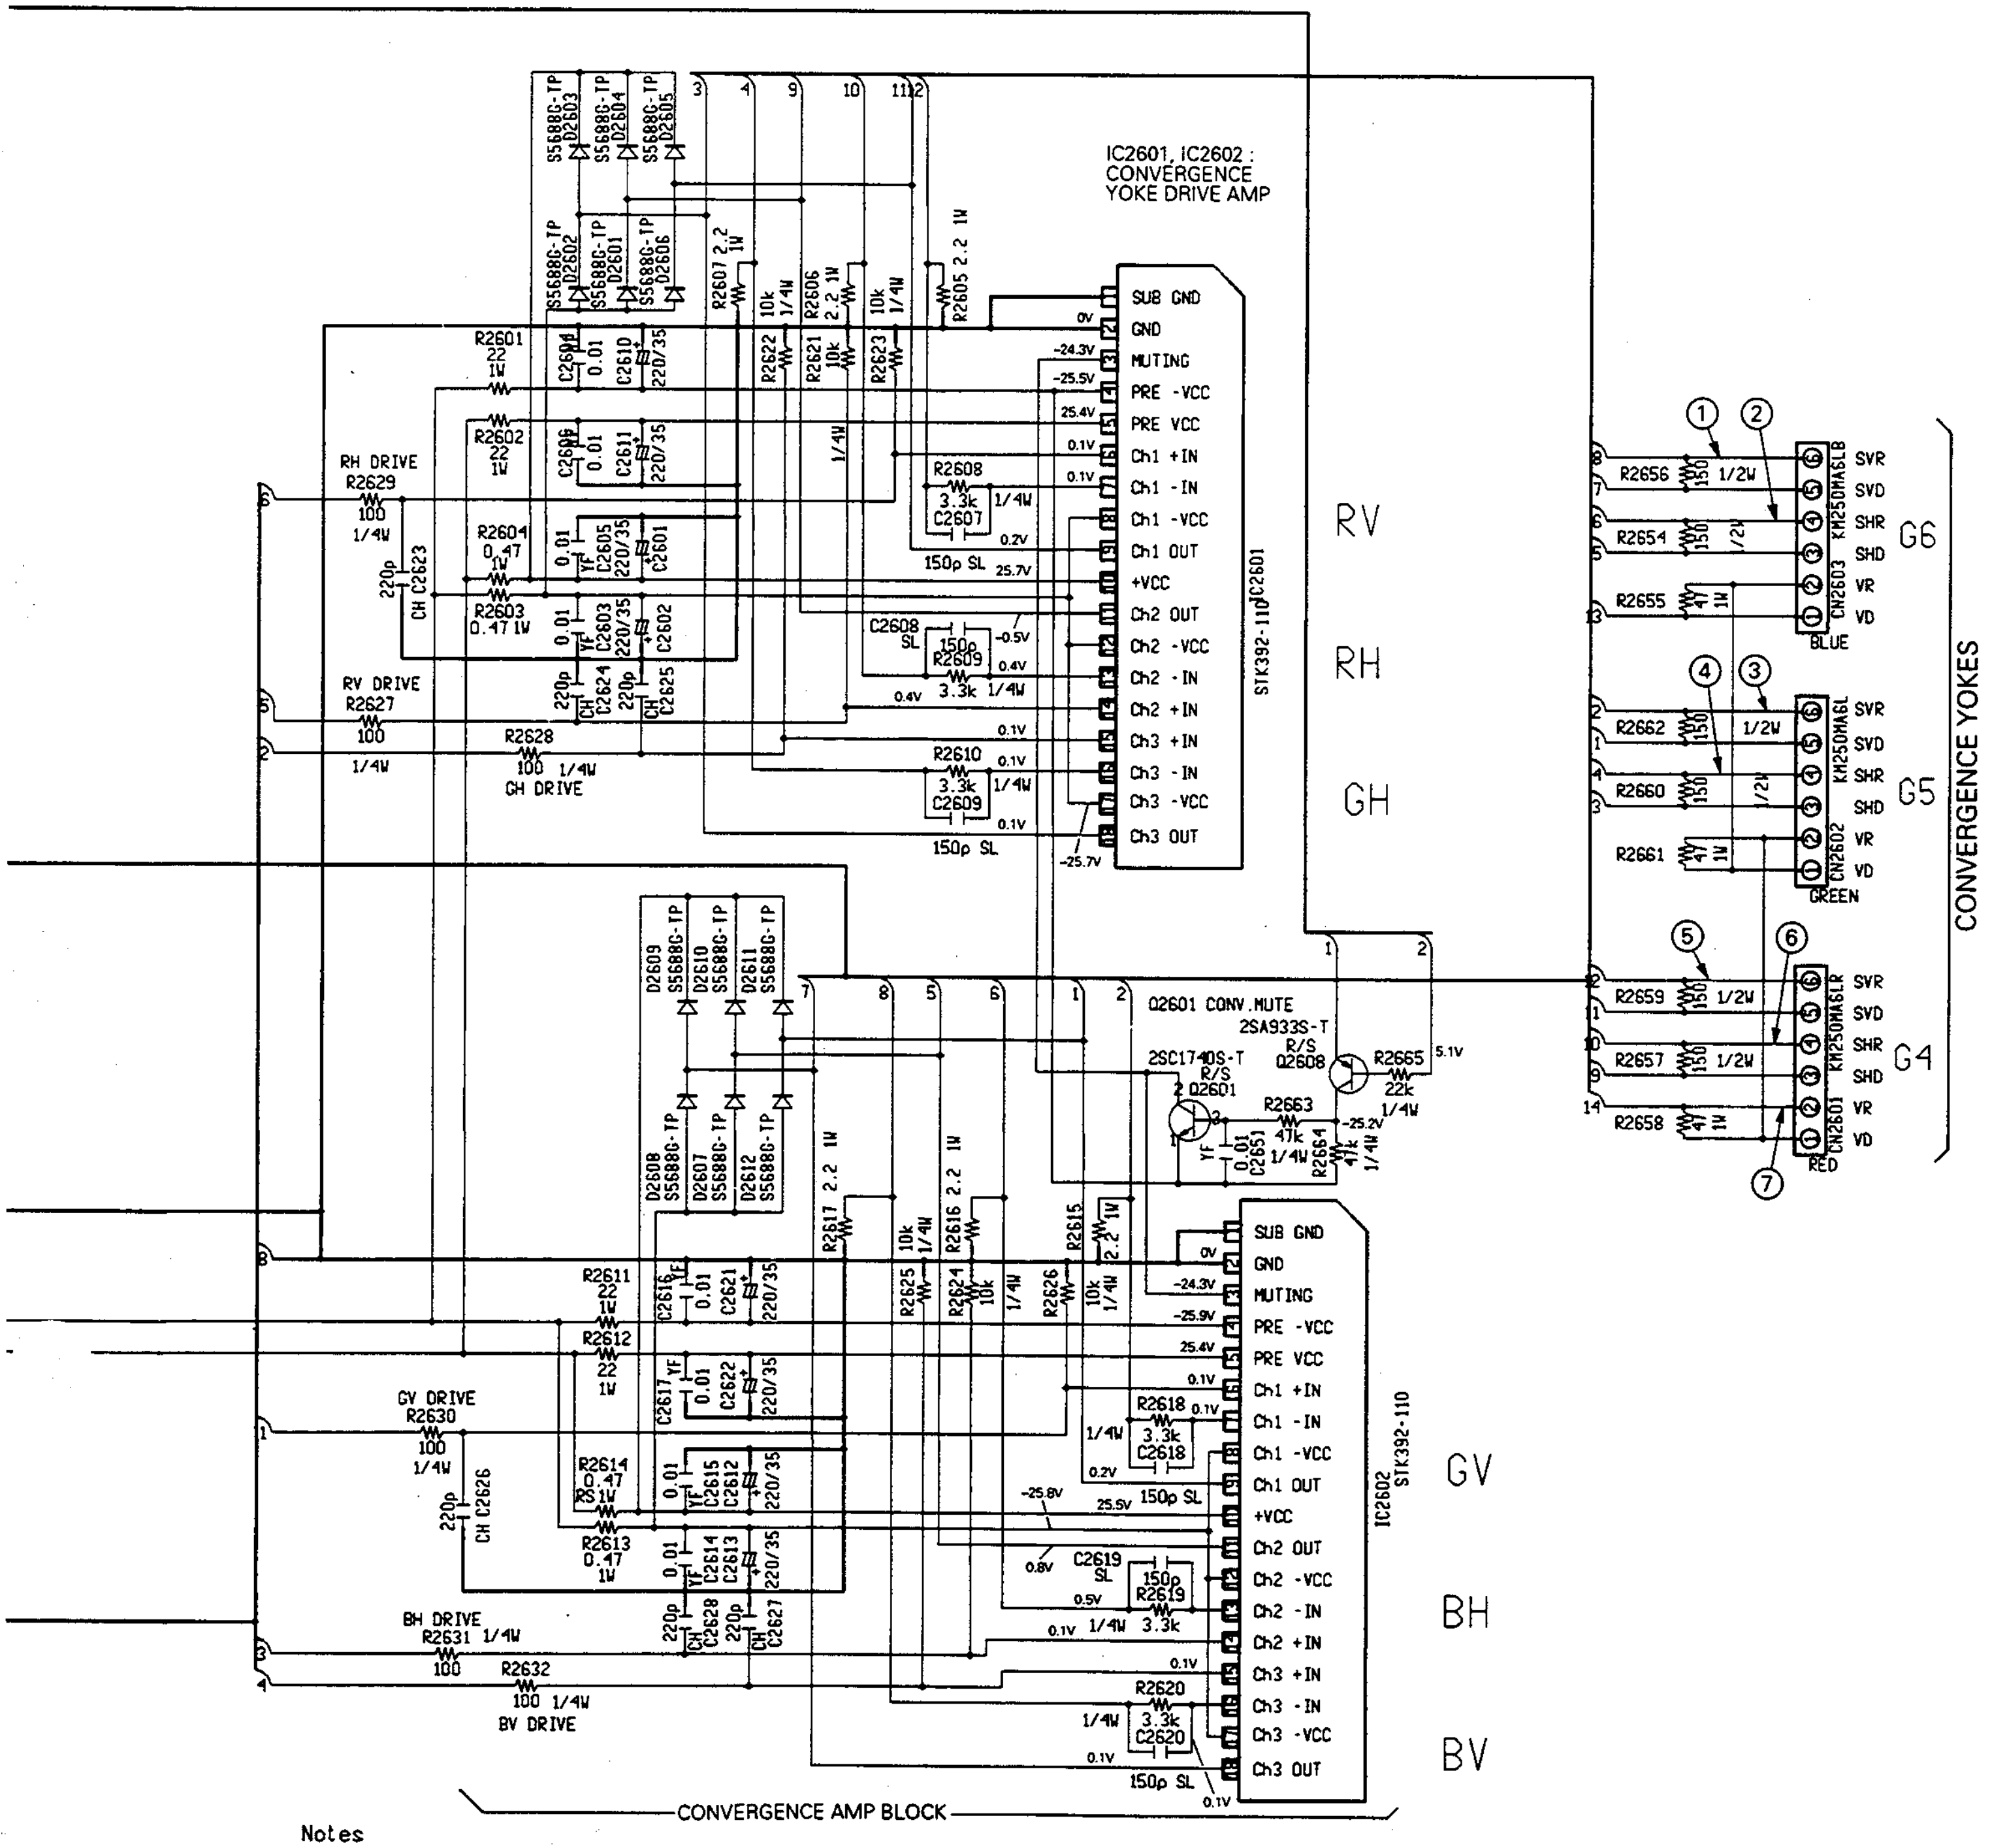
IC2601, IC2602 :
CONVERGENCE
YOKE DRIVE AMP
IC2601 STK392-110
IC2602 STK392-110
SUB GND
GND
MUTING
PRE -VCC
PRE VCC
Ch1 +IN
Ch1 -IN
Ch1 -VCC
Ch1 OUT
+VCC
Ch2 OUT
Ch2 -VCC
Ch2 -IN
Ch2 +IN
Ch3 +IN
Ch3 -IN
Ch3 -VCC
Ch3 OUT
RV
RH
GH
GV
BH
BV
RH DRIVE
RV DRIVE
CH DRIVE
GV DRIVE
BH DRIVE
BV DRIVE
Q2601 CONV.MUTE
2SA933S-T
R/S
Q2608
2SC1740S-T
R/S
Q2601
S5688G-TP
CN2603 KM250HA6LB
BLUE
G6
CN2602 KM250HA6L
GREEN
G5
CN2601 KM250HA6LR
RED
G4
SVR
SVD
SHR
SHD
VR
VD
CONVERGENCE YOKES
CONVERGENCE AMP BLOCK

Notes
1. RESISTERS
(RS):METAL OXIDE FILM RESISTER
(RT):CEMENT RESISTER
(RN):METAL FILM RESISTER
(FL):NON FLAMMABLE RESISTER
THE OTHERS:CARBONFILM RESISTER (1/4 W)
Figures in pharentheses
show the rated wattage.
Those unspecified ones are of 1/4W.
K:KΩ ,M:MΩ,Unspecified ones are of Ω

2. CAPACITORS
(HA):Aluminium electrolytic capasitors
p:pF,Unspecified ones are of uF
Capacity/Voltage
Unspecified ones are of 50V

3.9 AMP ASSY (2/3)

Notes
1.RESISTORS
Indicated in ohm,1/4W, ±5%
tolerance unless otherwise noted k;k ohm,M;M ohm
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted,p;pF.
Indication without voltage is 50V except electrolytic capacitor

C AMP ASSY (2/3) (AWZ6190)
• VELOCITY MODULATION BLOCK

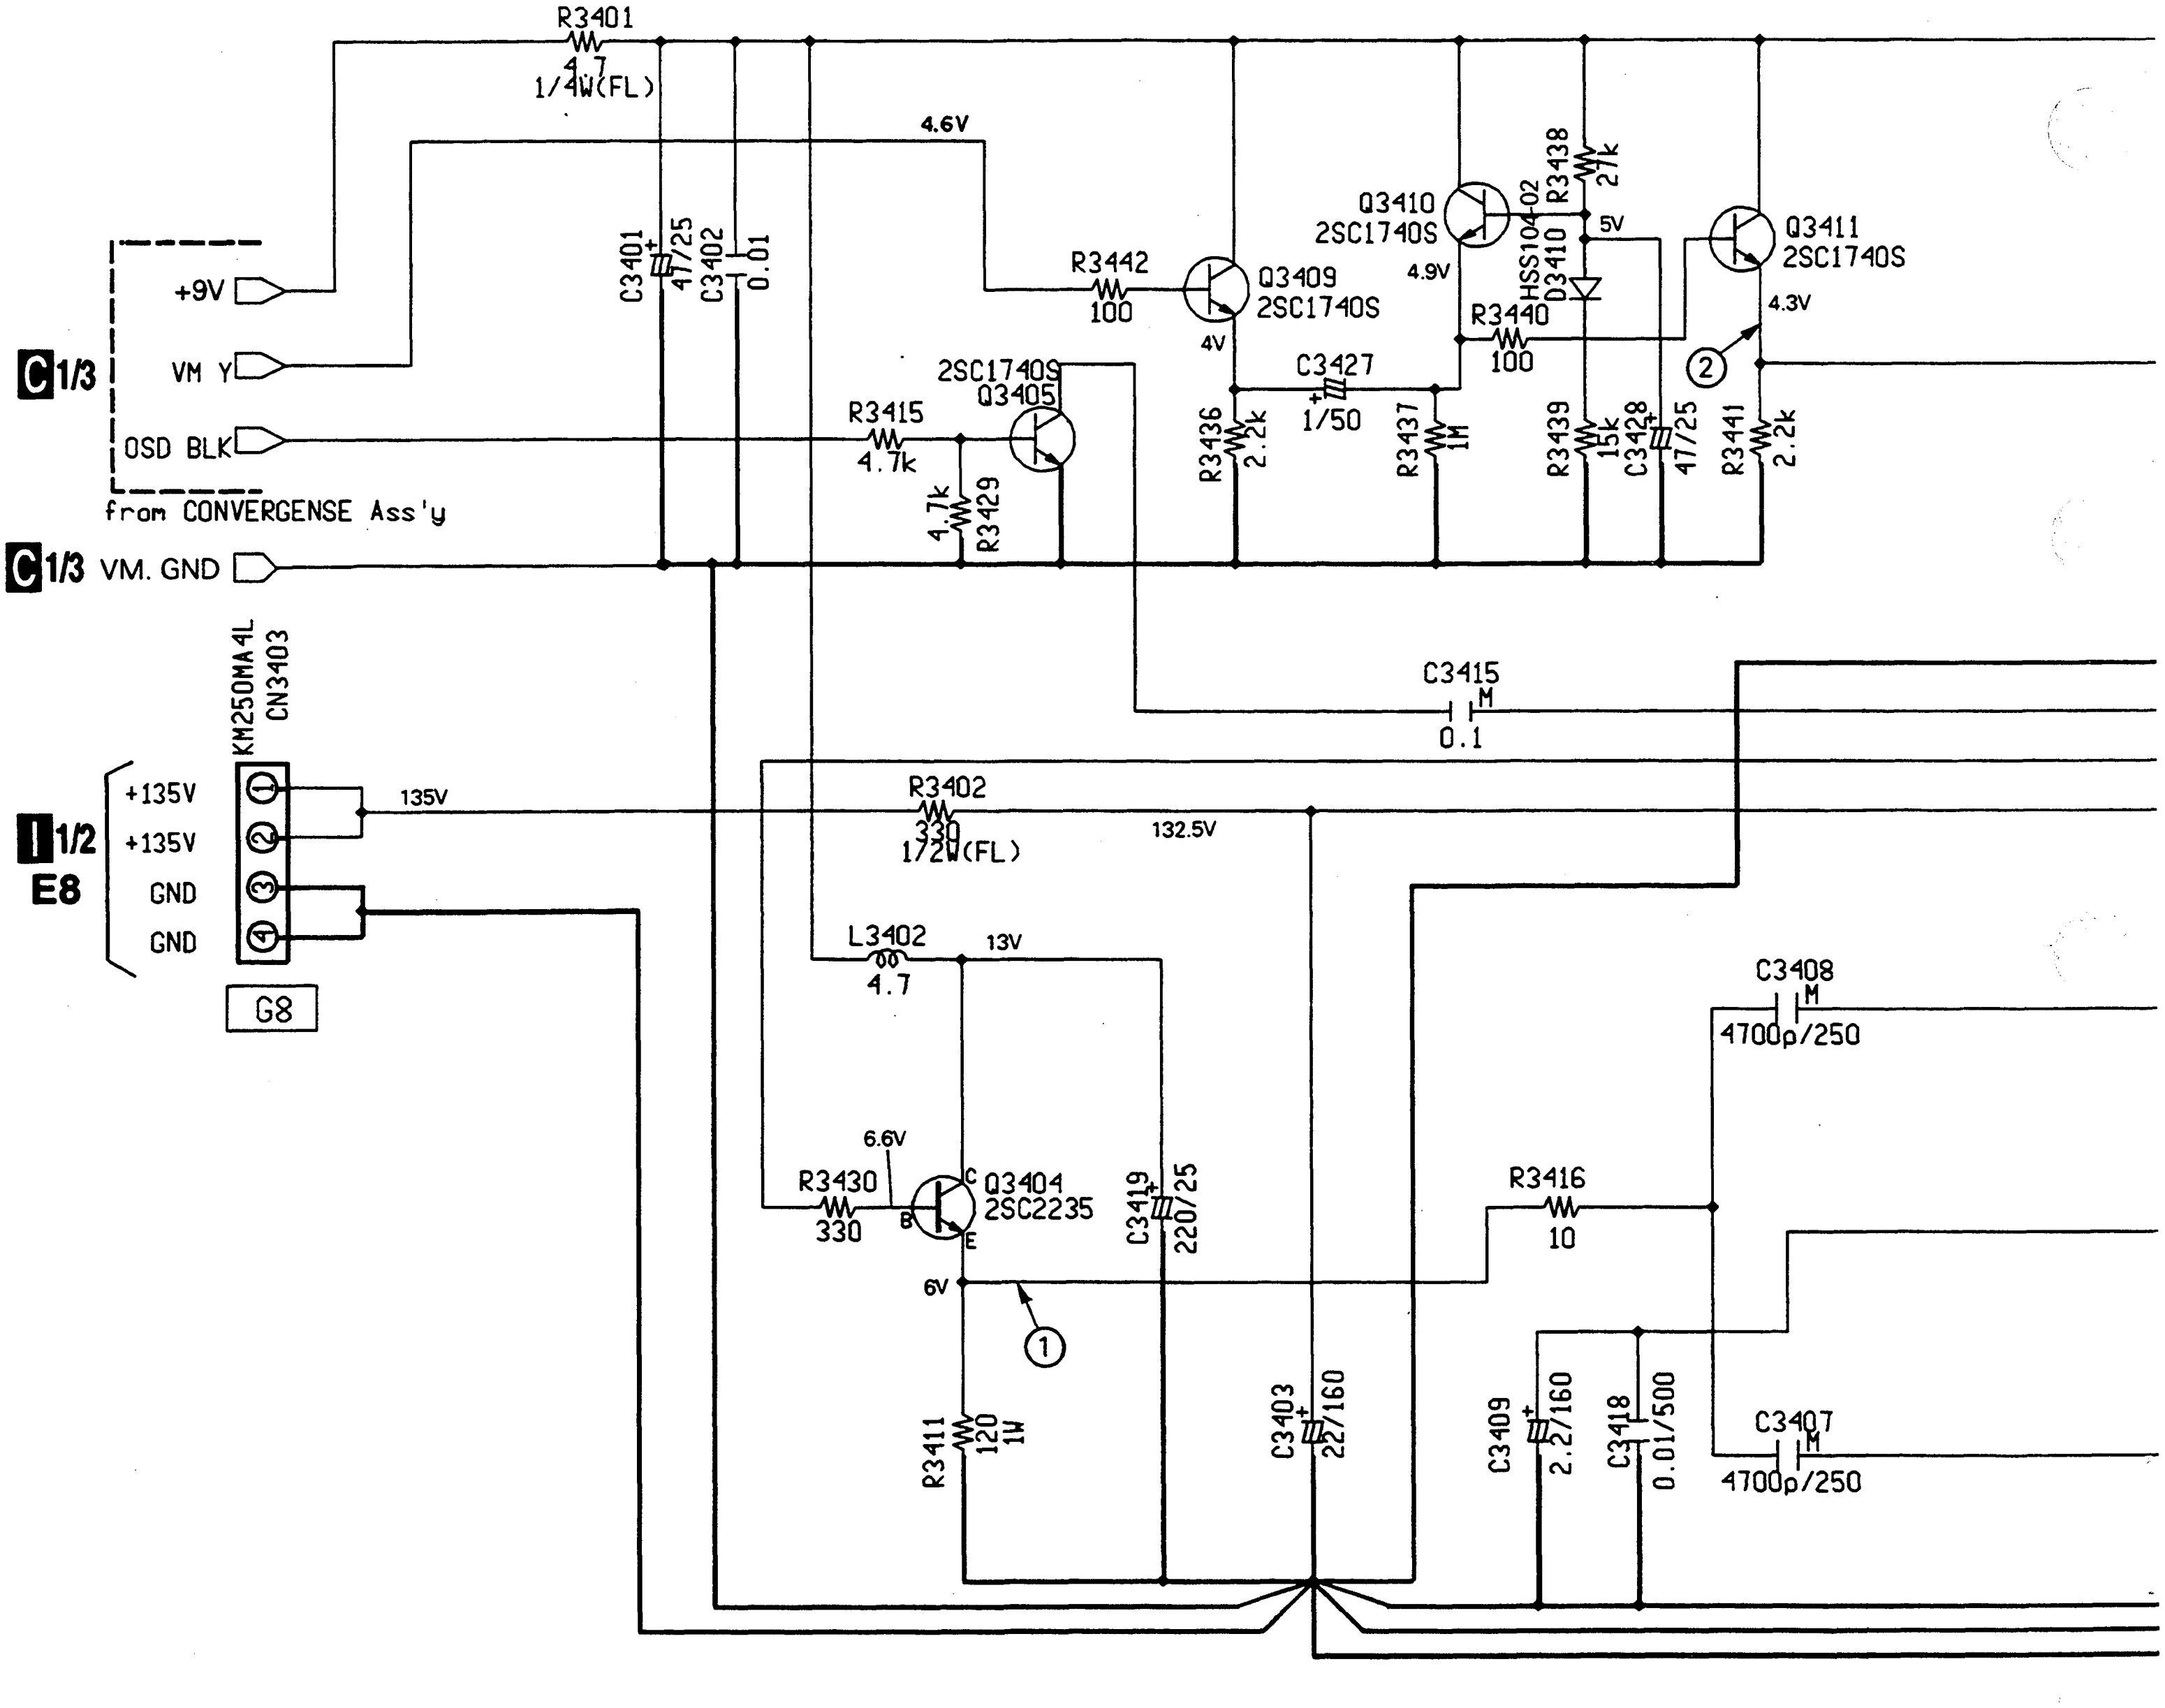
R3401
4.7
1/4W(FL)
4.6V
C3401
47/25
C3402
0.01
R3442
100
Q3409
2SC1740S
4V
Q3410
2SC1740S
4.9V
HSS104-02
D3410
R3438
27k
5V
Q3411
2SC1740S
4.3V
R3440
100
②
C3427
1/50
R3436
2.2k
R3437
1M
R3439
15k
C3428
47/25
R3441
2.2k
2SC1740S
Q3405
R3415
4.7k
R3429
4.7k
C1/3
+9V
VM Y
OSD BLK
from CONVERGENSE Ass'y
C1/3 VM. GND
KM250MA4L
CN3403
C3415
M
0.1
I1/2
E8
+135V
+135V
GND
GND
①
②
③
④
G8
135V
R3402
330
1/2W(FL)
132.5V
L3402
4.7
13V
C3408
M
4700p/250
6.6V
R3430
330
C
B
E
Q3404
2SC2235
C3419
220/25
R3416
10
6V
①
R3411
120
1W
C3403
22/160
C3409
2.2/160
C3418
0.01/500
C3407
M
4700p/250

- Signal input : Cross-hatch

① **Upper: Q3404 Emitter**
V : 1V/div, H : 10µsec/div
② **Lower: Q3411 Emitter**
V : 0.5V/div, H : 10µsec/div
•AC range

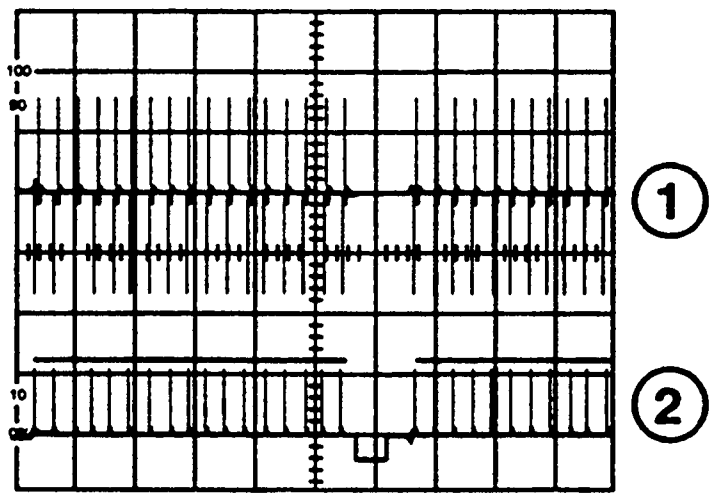

③ **G9- pin 3**
V : 20V/div, H : 2µsec/div
•AC range

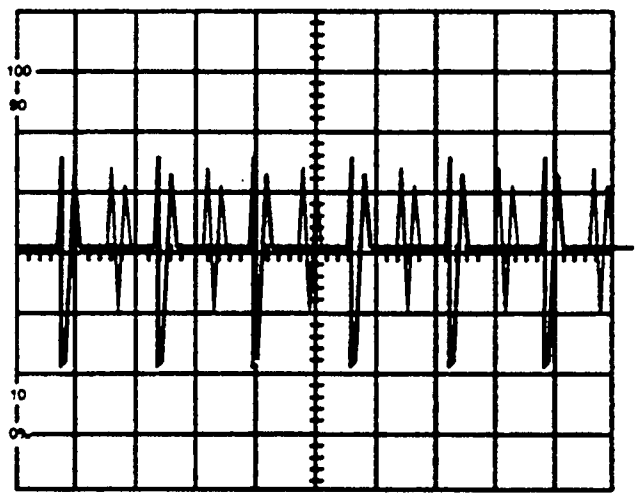

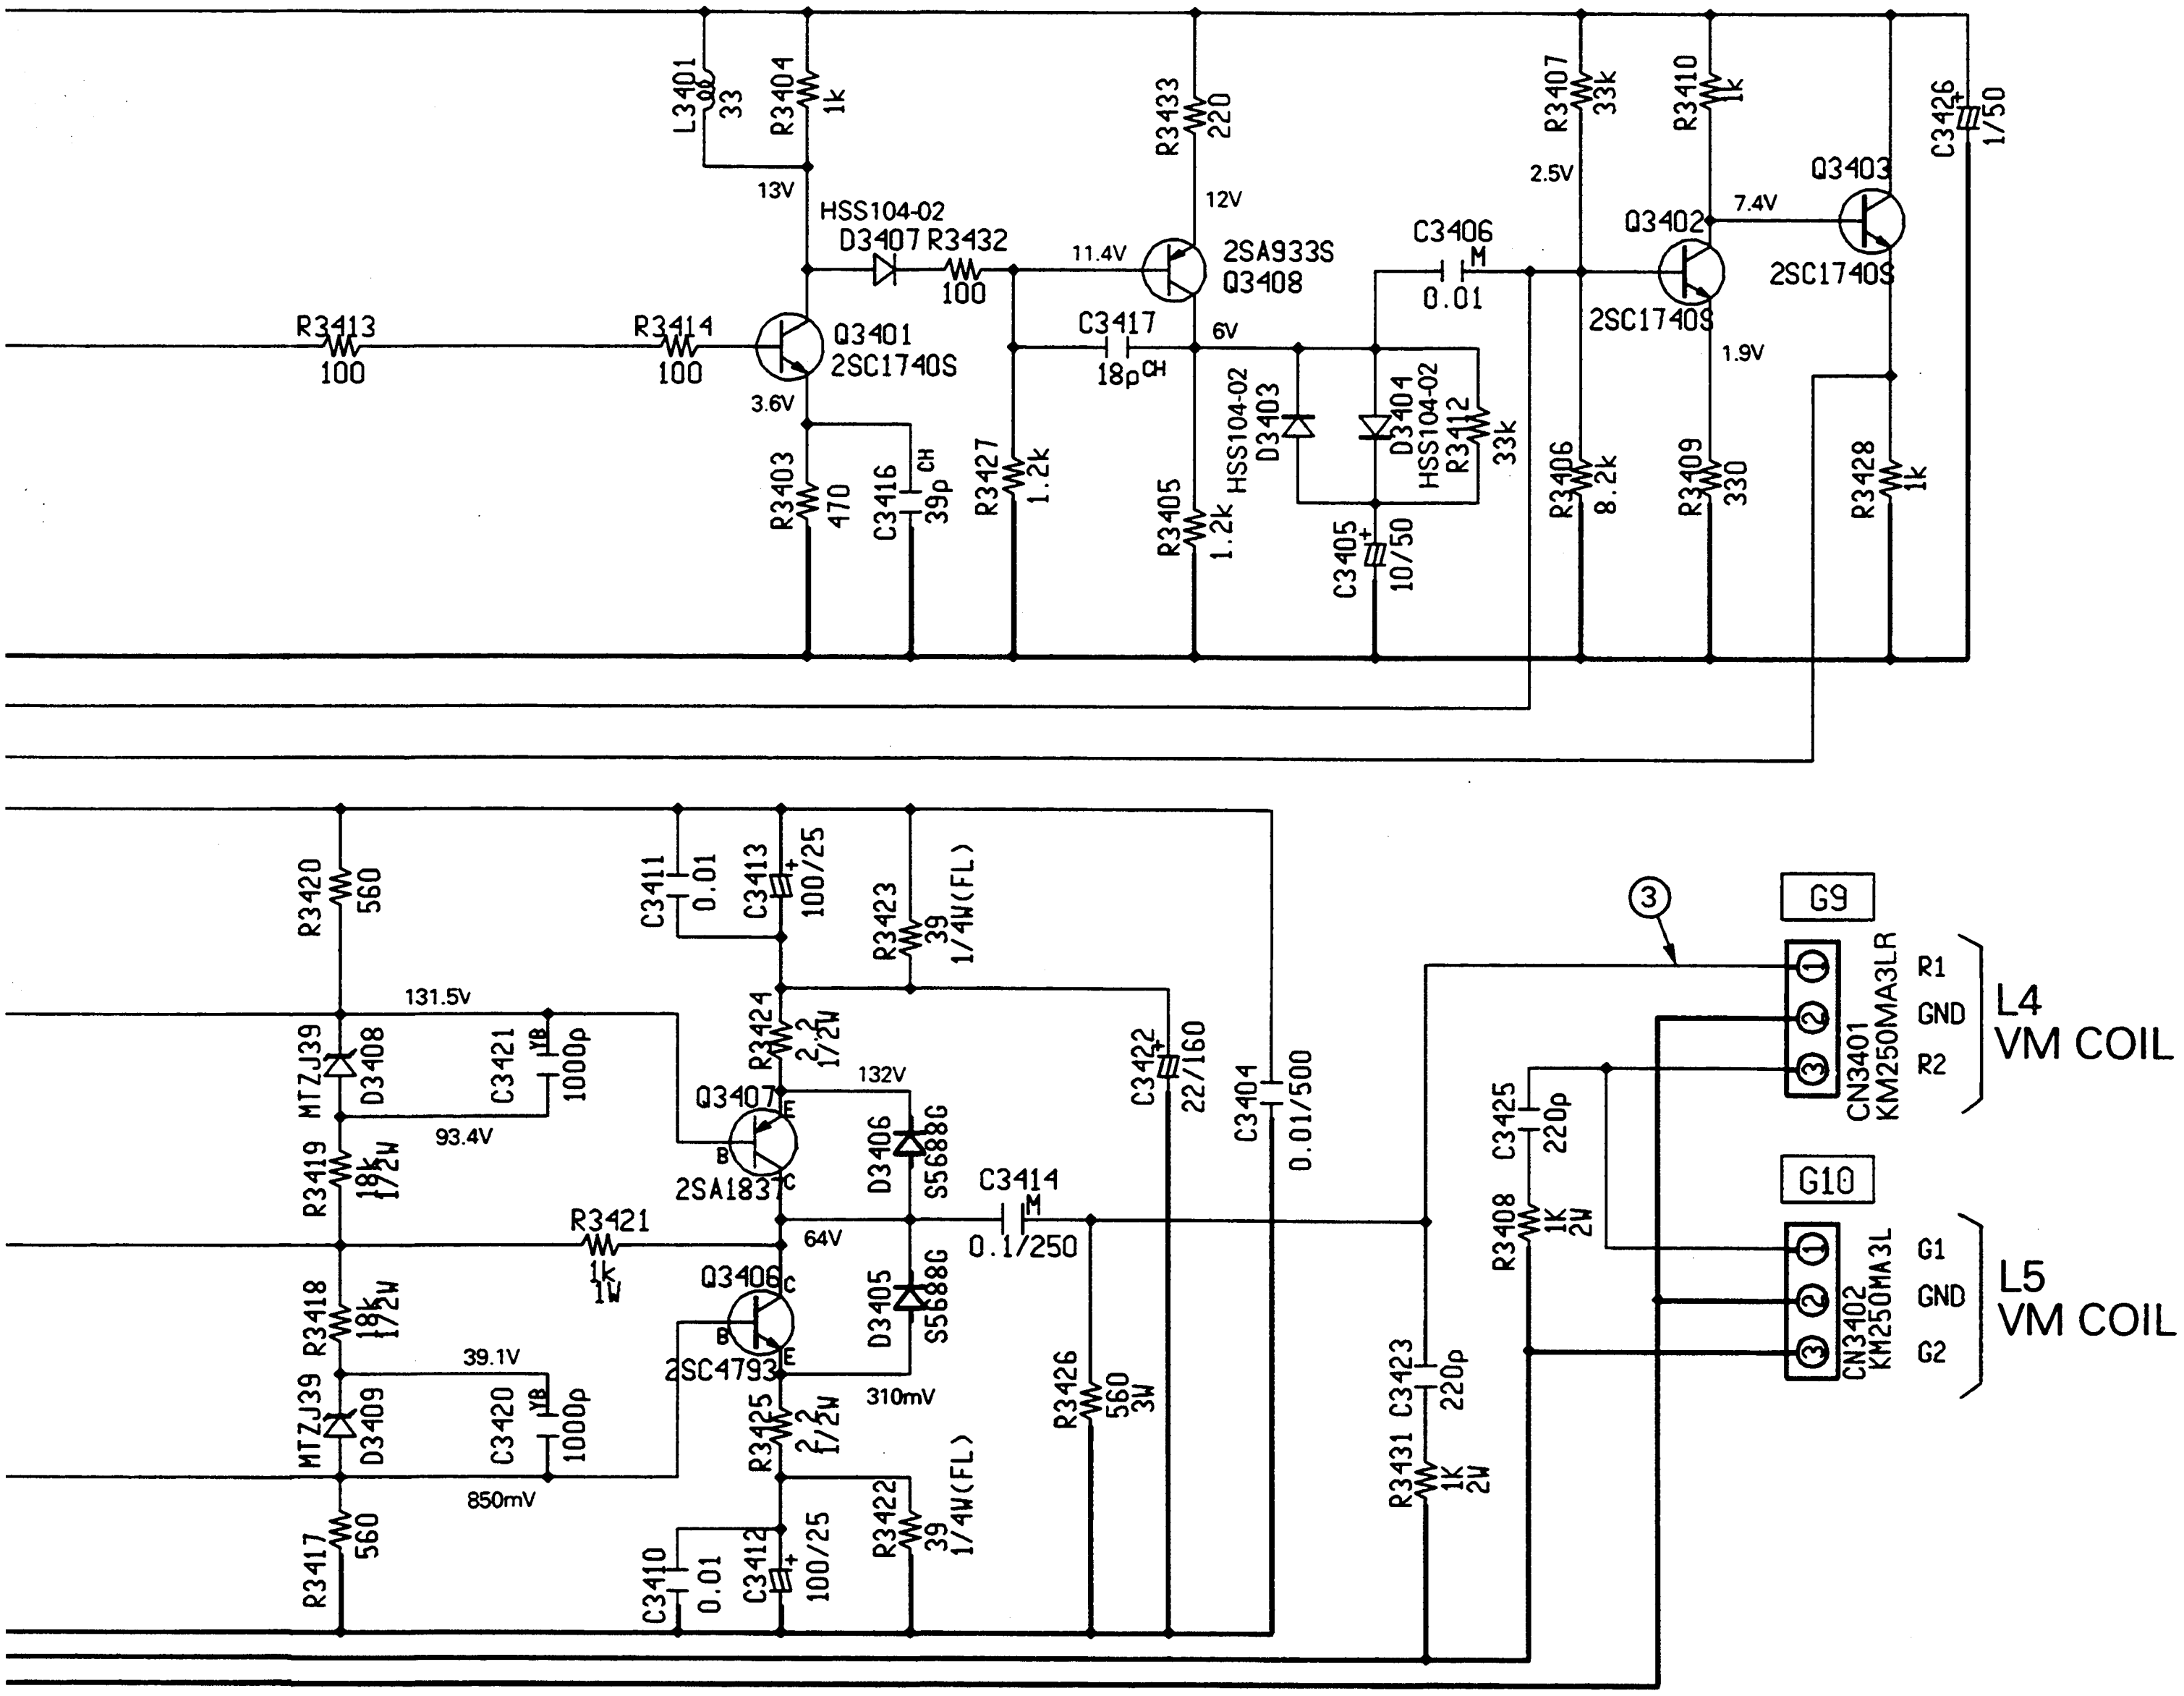

3.10 AMP ASSY (3/3)

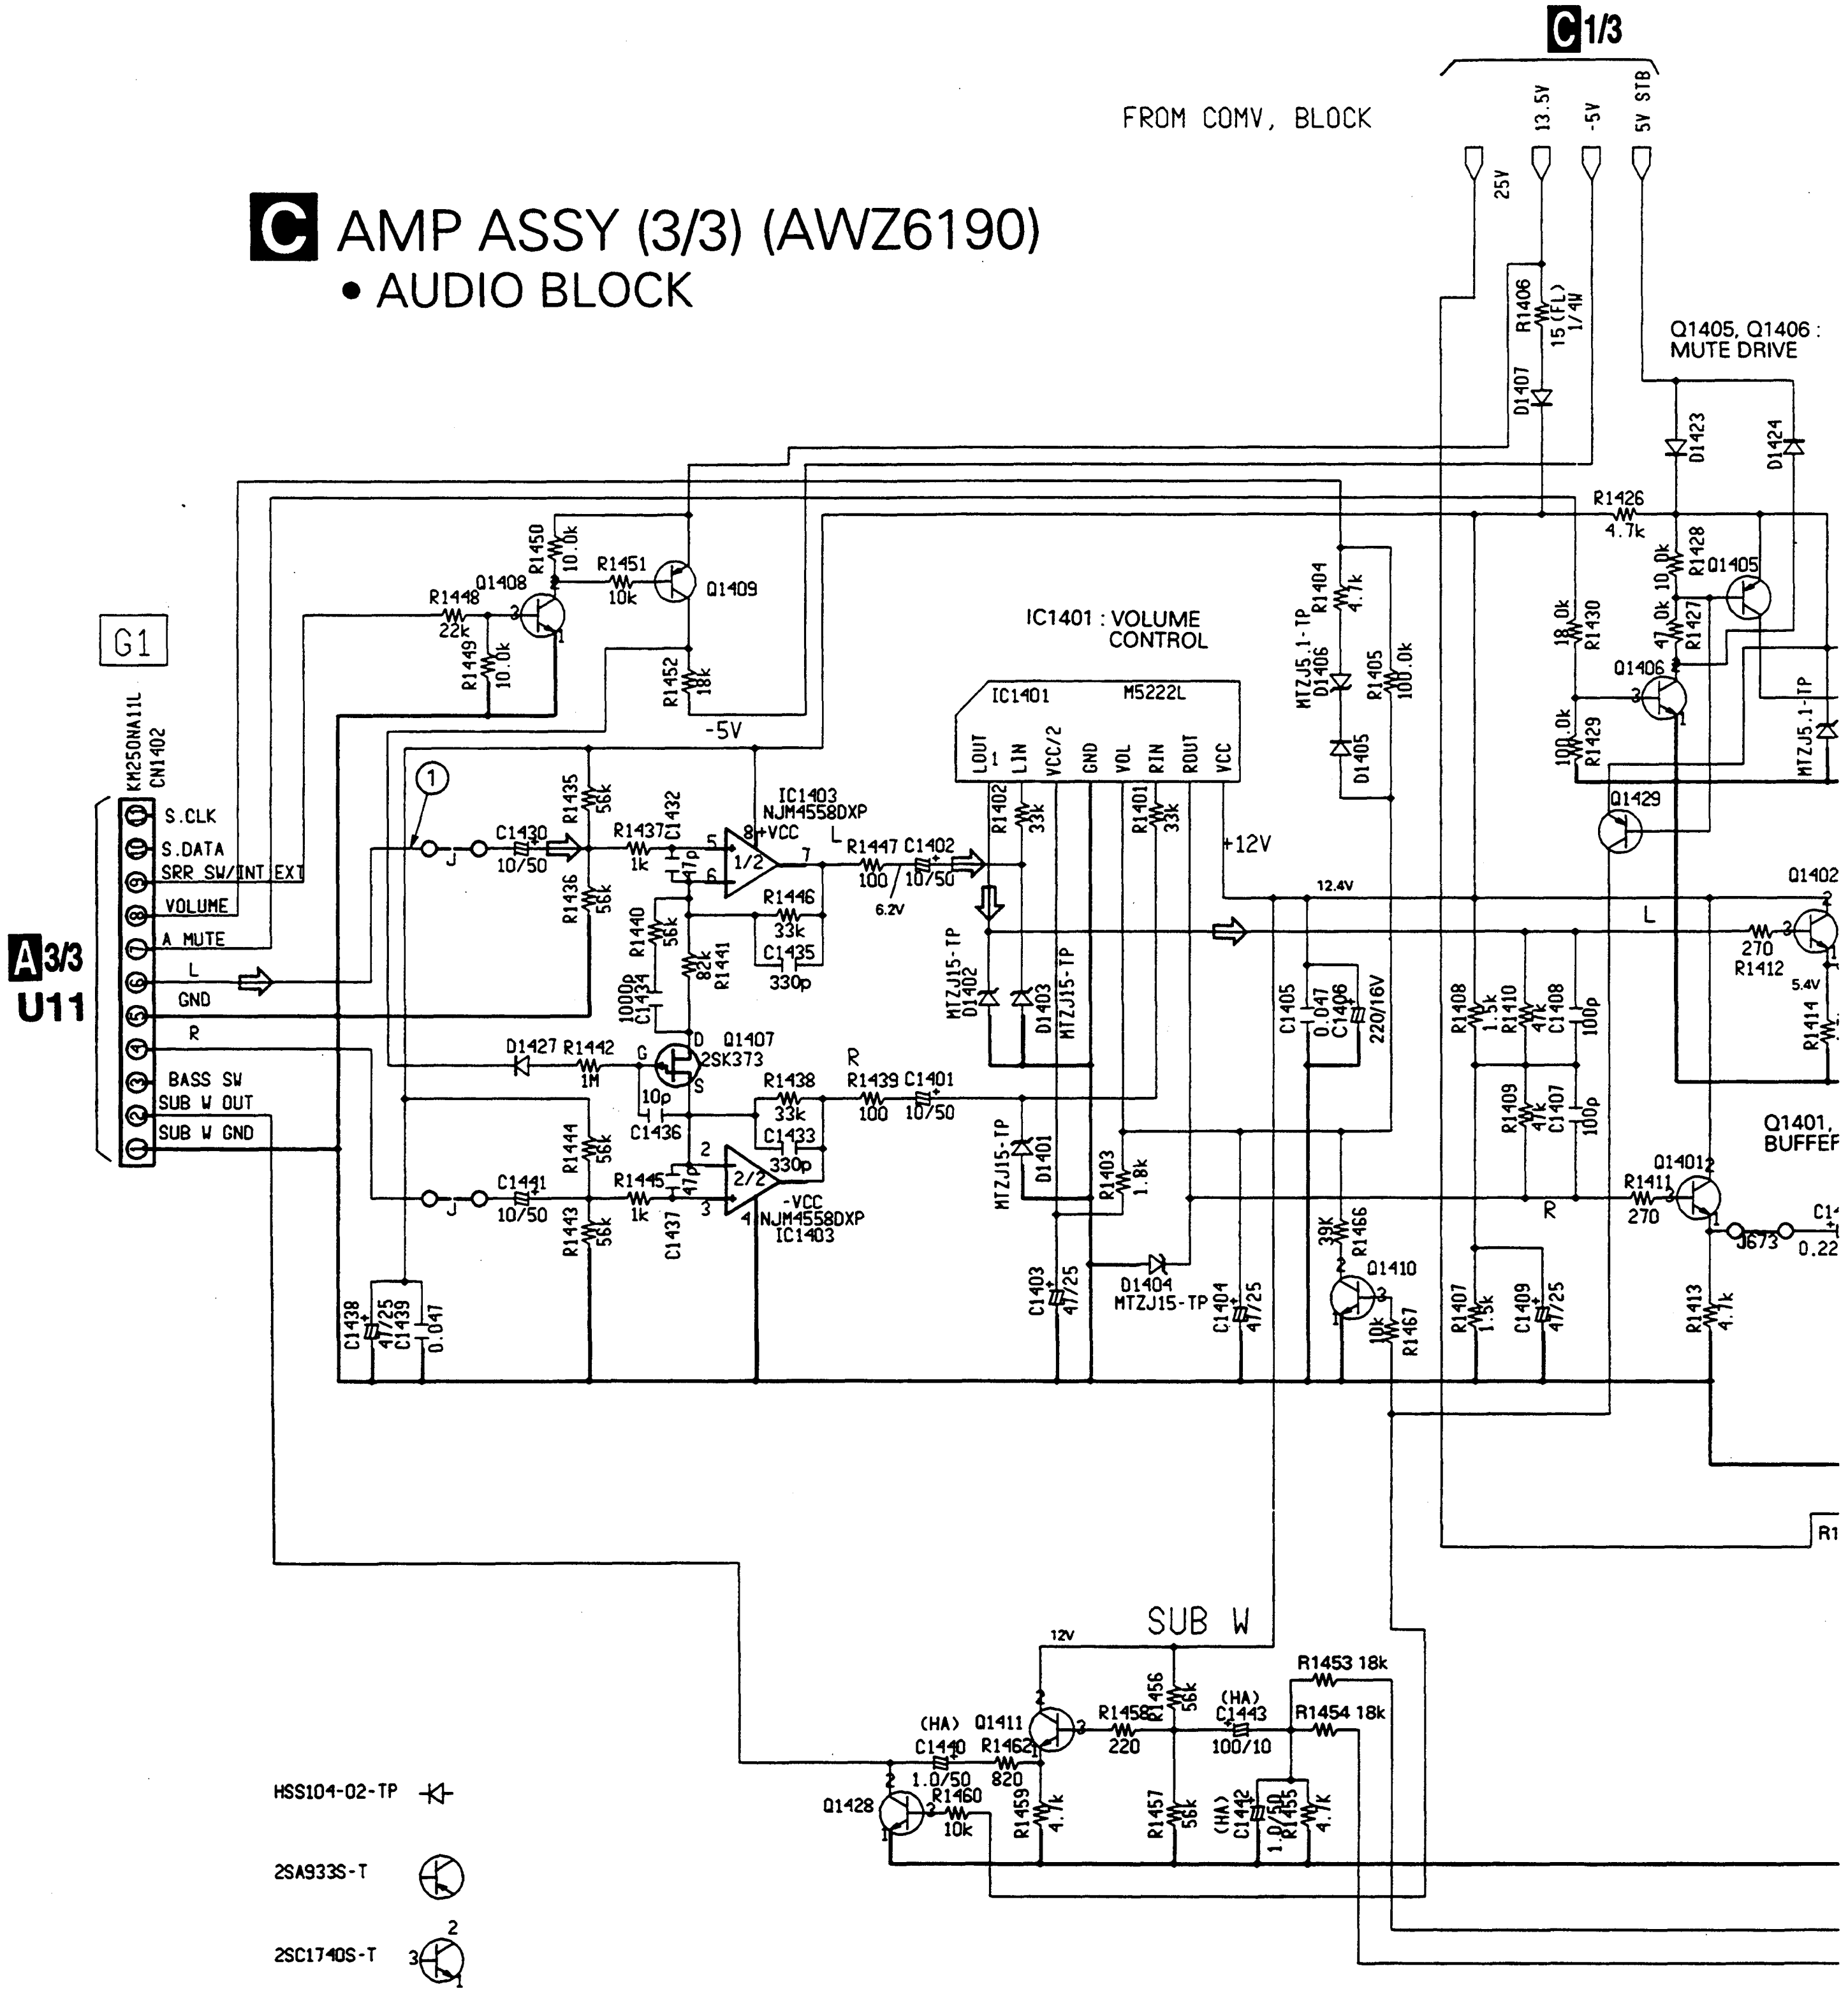
C AMP ASSY (3/3) (AWZ6190)
• AUDIO BLOCK
C 1/3
FROM COMV, BLOCK
25V
13.5V
-5V
5V STB
R1406 15(FL) 1/4W
D1407
Q1405, Q1406 : MUTE DRIVE
D1423
D1424
R1426 4.7k
R1428 10.0k
Q1405
R1427 47.0k
R1430 18.0k
Q1406
R1429 100.0k
Q1429
MTZJ5.1-TP
G1
KM250NA11L CN1402
S.CLK
S.DATA
SRR SW/INT EXT
VOLUME
A MUTE
L
GND
R
BASS SW
SUB W OUT
SUB W GND
A 3/3
U11
Q1408
R1448 22k
R1449 10.0k
R1450 10.0k
R1451 10k
Q1409
R1452 18k
-5V
①
C1430 10/50
R1435 56k
R1436 56k
R1437 1k
C1432 47p
IC1403 NJM4558DXP
8 +VCC
1/2
R1446 33k
C1435 330p
R1440 56k
R1441 82k
C1434 1000p
R1447 100
C1402 10/50
6.2V
D1427
R1442 1M
Q1407 2SK373
G D S
C1436 10p
R1438 33k
C1433 330p
R1439 100
C1401 10/50
R1444 56k
R1443 56k
C1441 10/50
R1445 1k
C1437 47p
2/2
-VCC
4 NJM4558DXP IC1403
C1438 47/25
C1439 0.047
IC1401 : VOLUME CONTROL
IC1401 M5222L
LOUT LIN VCC/2 GND VOL RIN ROUT VCC
R1402 33k
R1401 33k
+12V
MTZJ15-TP D1402
D1403 MTZJ15-TP
MTZJ15-TP D1401
R1403 1.8k
D1404 MTZJ15-TP
C1403 47/25
C1404 47/25
MTZJ5.1-TP D1406
R1404 4.7k
R1405 100.0k
D1405
12.4V
C1405 0.047
C1406 220/16V
R1466 39K
Q1410
R1467 10k
R1408 1.5k
R1410 47k
C1408 100p
R1409 47k
C1407 100p
R1407 1.5k
C1409 47/25
Q1402
R1412 270
5.4V
R1414
Q1401, BUFFER
Q1401
R1411 270
J673
0.22
R1413 4.7k
R1
SUB W
12V
(HA) Q1411
C1440 1.0/50
R1462 820
Q1428
R1460 10k
R1459 4.7k
R1458 220
R1456 56k
(HA) C1443 100/10
R1453 18k
R1454 18k
R1457 56k
(HA) C1442 1.0/50
R1455 4.7k
HSS104-02-TP
2SA933S-T
2SC1740S-T

1. RESISTERS indicated in ,1/2W,1/4W,1/8W,1WFL,2WFL 5%.
tolerance unless otherwise noted K;K Ω,M;M Ω.
(F)+1%,(G)+2%,(K)+10%,(M)+20% tolerance.

2 CAPACITORS indicated in capasity (F)/(V) unless otherwise noted pF.
indicated without voltage is 50V except electrolytic capacitor

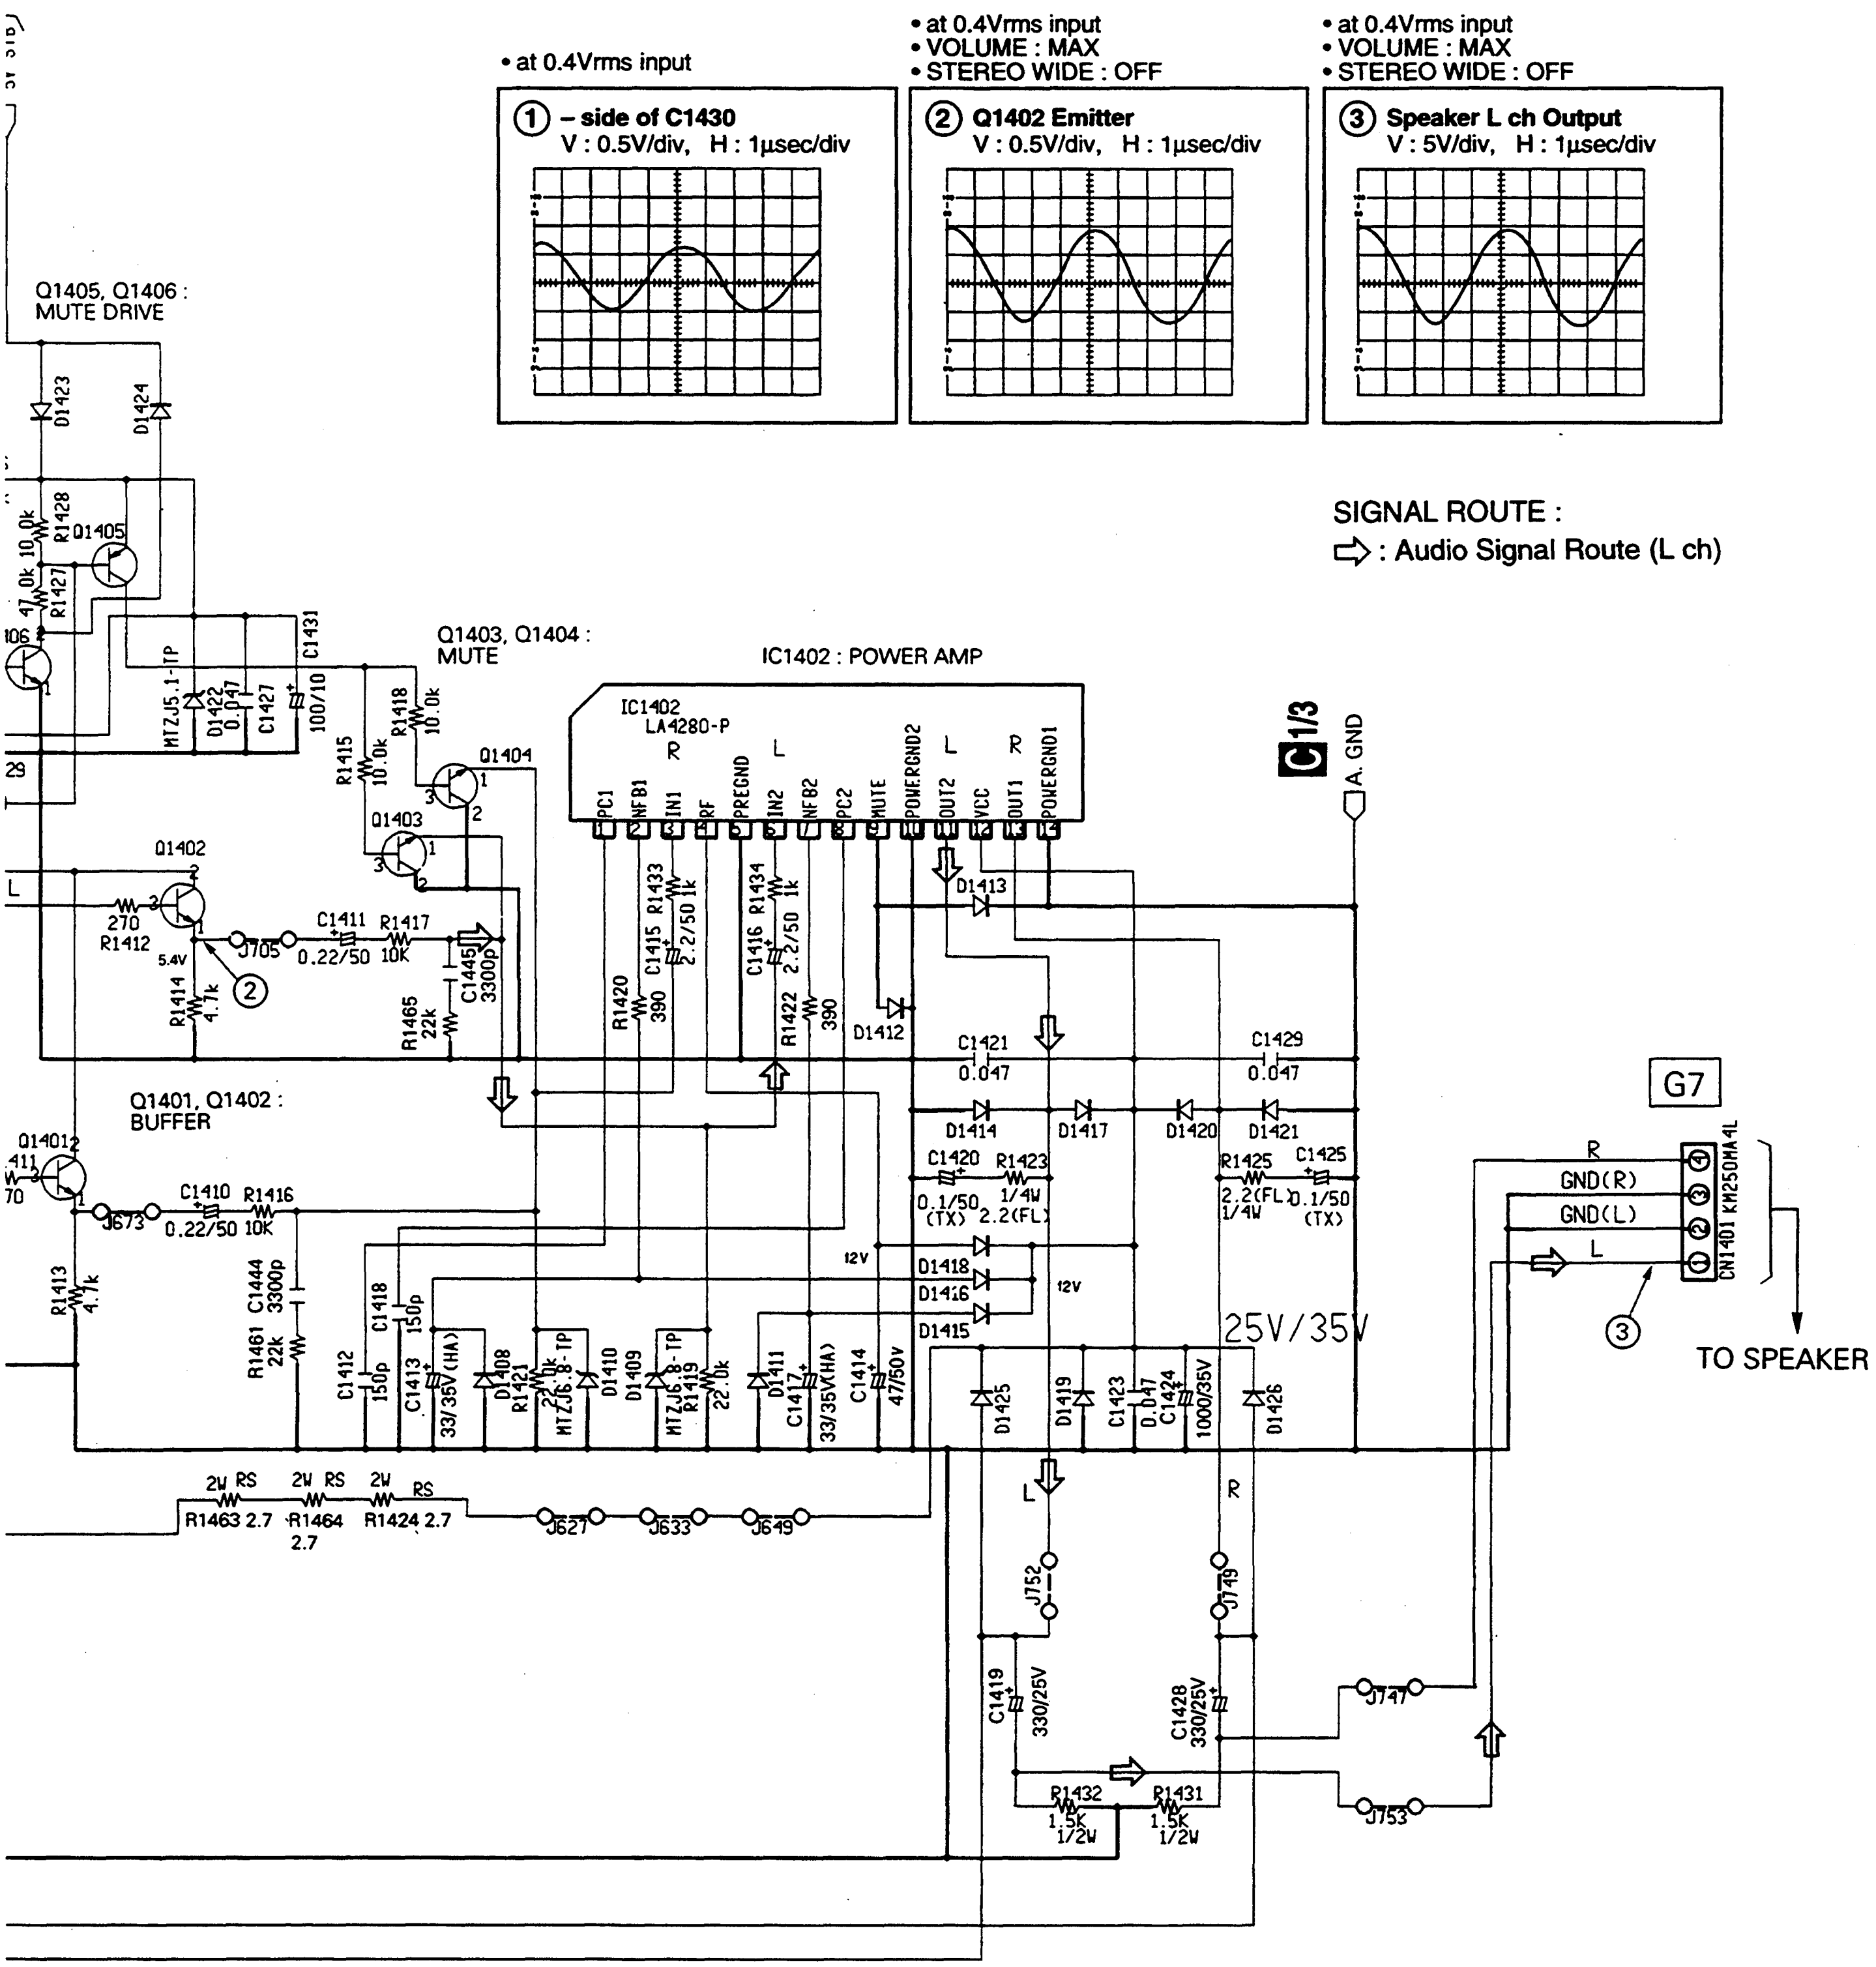

- at 0.4Vrms input

① – side of C1430
V : 0.5V/div, H : 1μsec/div

- at 0.4Vrms input
- VOLUME : MAX
- STEREO WIDE : OFF

② Q1402 Emitter
V : 0.5V/div, H : 1μsec/div

- at 0.4Vrms input
- VOLUME : MAX
- STEREO WIDE : OFF

③ Speaker L ch Output
V : 5V/div, H : 1μsec/div

SIGNAL ROUTE :
⇨ : Audio Signal Route (L ch)

Q1405, Q1406 :
MUTE DRIVE
D1423
D1424
R1428 10.0k
R1427 47.0k
Q1405
MTZJ5.1-TP
D1422
0.047
C1427
C1431 100/10
Q1403, Q1404 :
MUTE
R1418 10.0k
R1415 10.0k
Q1404
Q1403
Q1402
270
R1412
5.4V
R1414 4.7k
J705
C1411 0.22/50
R1417 10K
C1445 3300p
R1465 22k
Q1401, Q1402 :
BUFFER
Q1401
C1410 0.22/50
R1416 10K
J673
R1413 4.7k
C1444 3300p
R1461 22k
IC1402 : POWER AMP
IC1402
LA4280-P
R
L
PC1
NFB1
IN1
RF
PREGND
IN2
NFB2
PC2
MUTE
POWERGND2
OUT2
VCC
OUT1
POWERGND1
1
2
3
4
5
6
7
8
9
10
11
12
13
14
R1433 1k
C1415 2.2/50
R1434 1k
C1416 2.2/50
R1420 390
R1422 390
D1412
D1413
C1421 0.047
C1429 0.047
D1414
D1417
D1420
D1421
C1420 0.1/50 (TX)
R1423 1/4W 2.2(FL)
R1425 2.2(FL) 1/4W
C1425 0.1/50 (TX)
12V
D1418
D1416
D1415
12V
25V/35V
C1412 150p
C1418 150p
C1413 33/35V(HA)
D1408
R1421 22.0k
MTZJ6.8-TP
D1410
D1409
MTZJ6.8-TP
R1419 22.0k
D1411
C1417 33/35V(HA)
C1414 47/50V
D1425
D1419
C1423 0.047
C1424 1000/35V
D1426
C1/3
A. GND
G7
R
GND(R)
GND(L)
L
CN1401 KM250MA4L
TO SPEAKER
③
2W RS
R1463 2.7
2W RS
R1464 2.7
2W RS
R1424 2.7
J627
J633
J649
L
R
J752
J749
C1419 330/25V
C1428 330/25V
R1432 1.5K 1/2W
R1431 1.5K 1/2W
J747
J753
②
29
L
106
411
70

3.11 CONVER CONTROL AND CONNECTOR B ASSEMBLIES

D-a

D CONVER CONTROL ASSY
(AWZ6195)

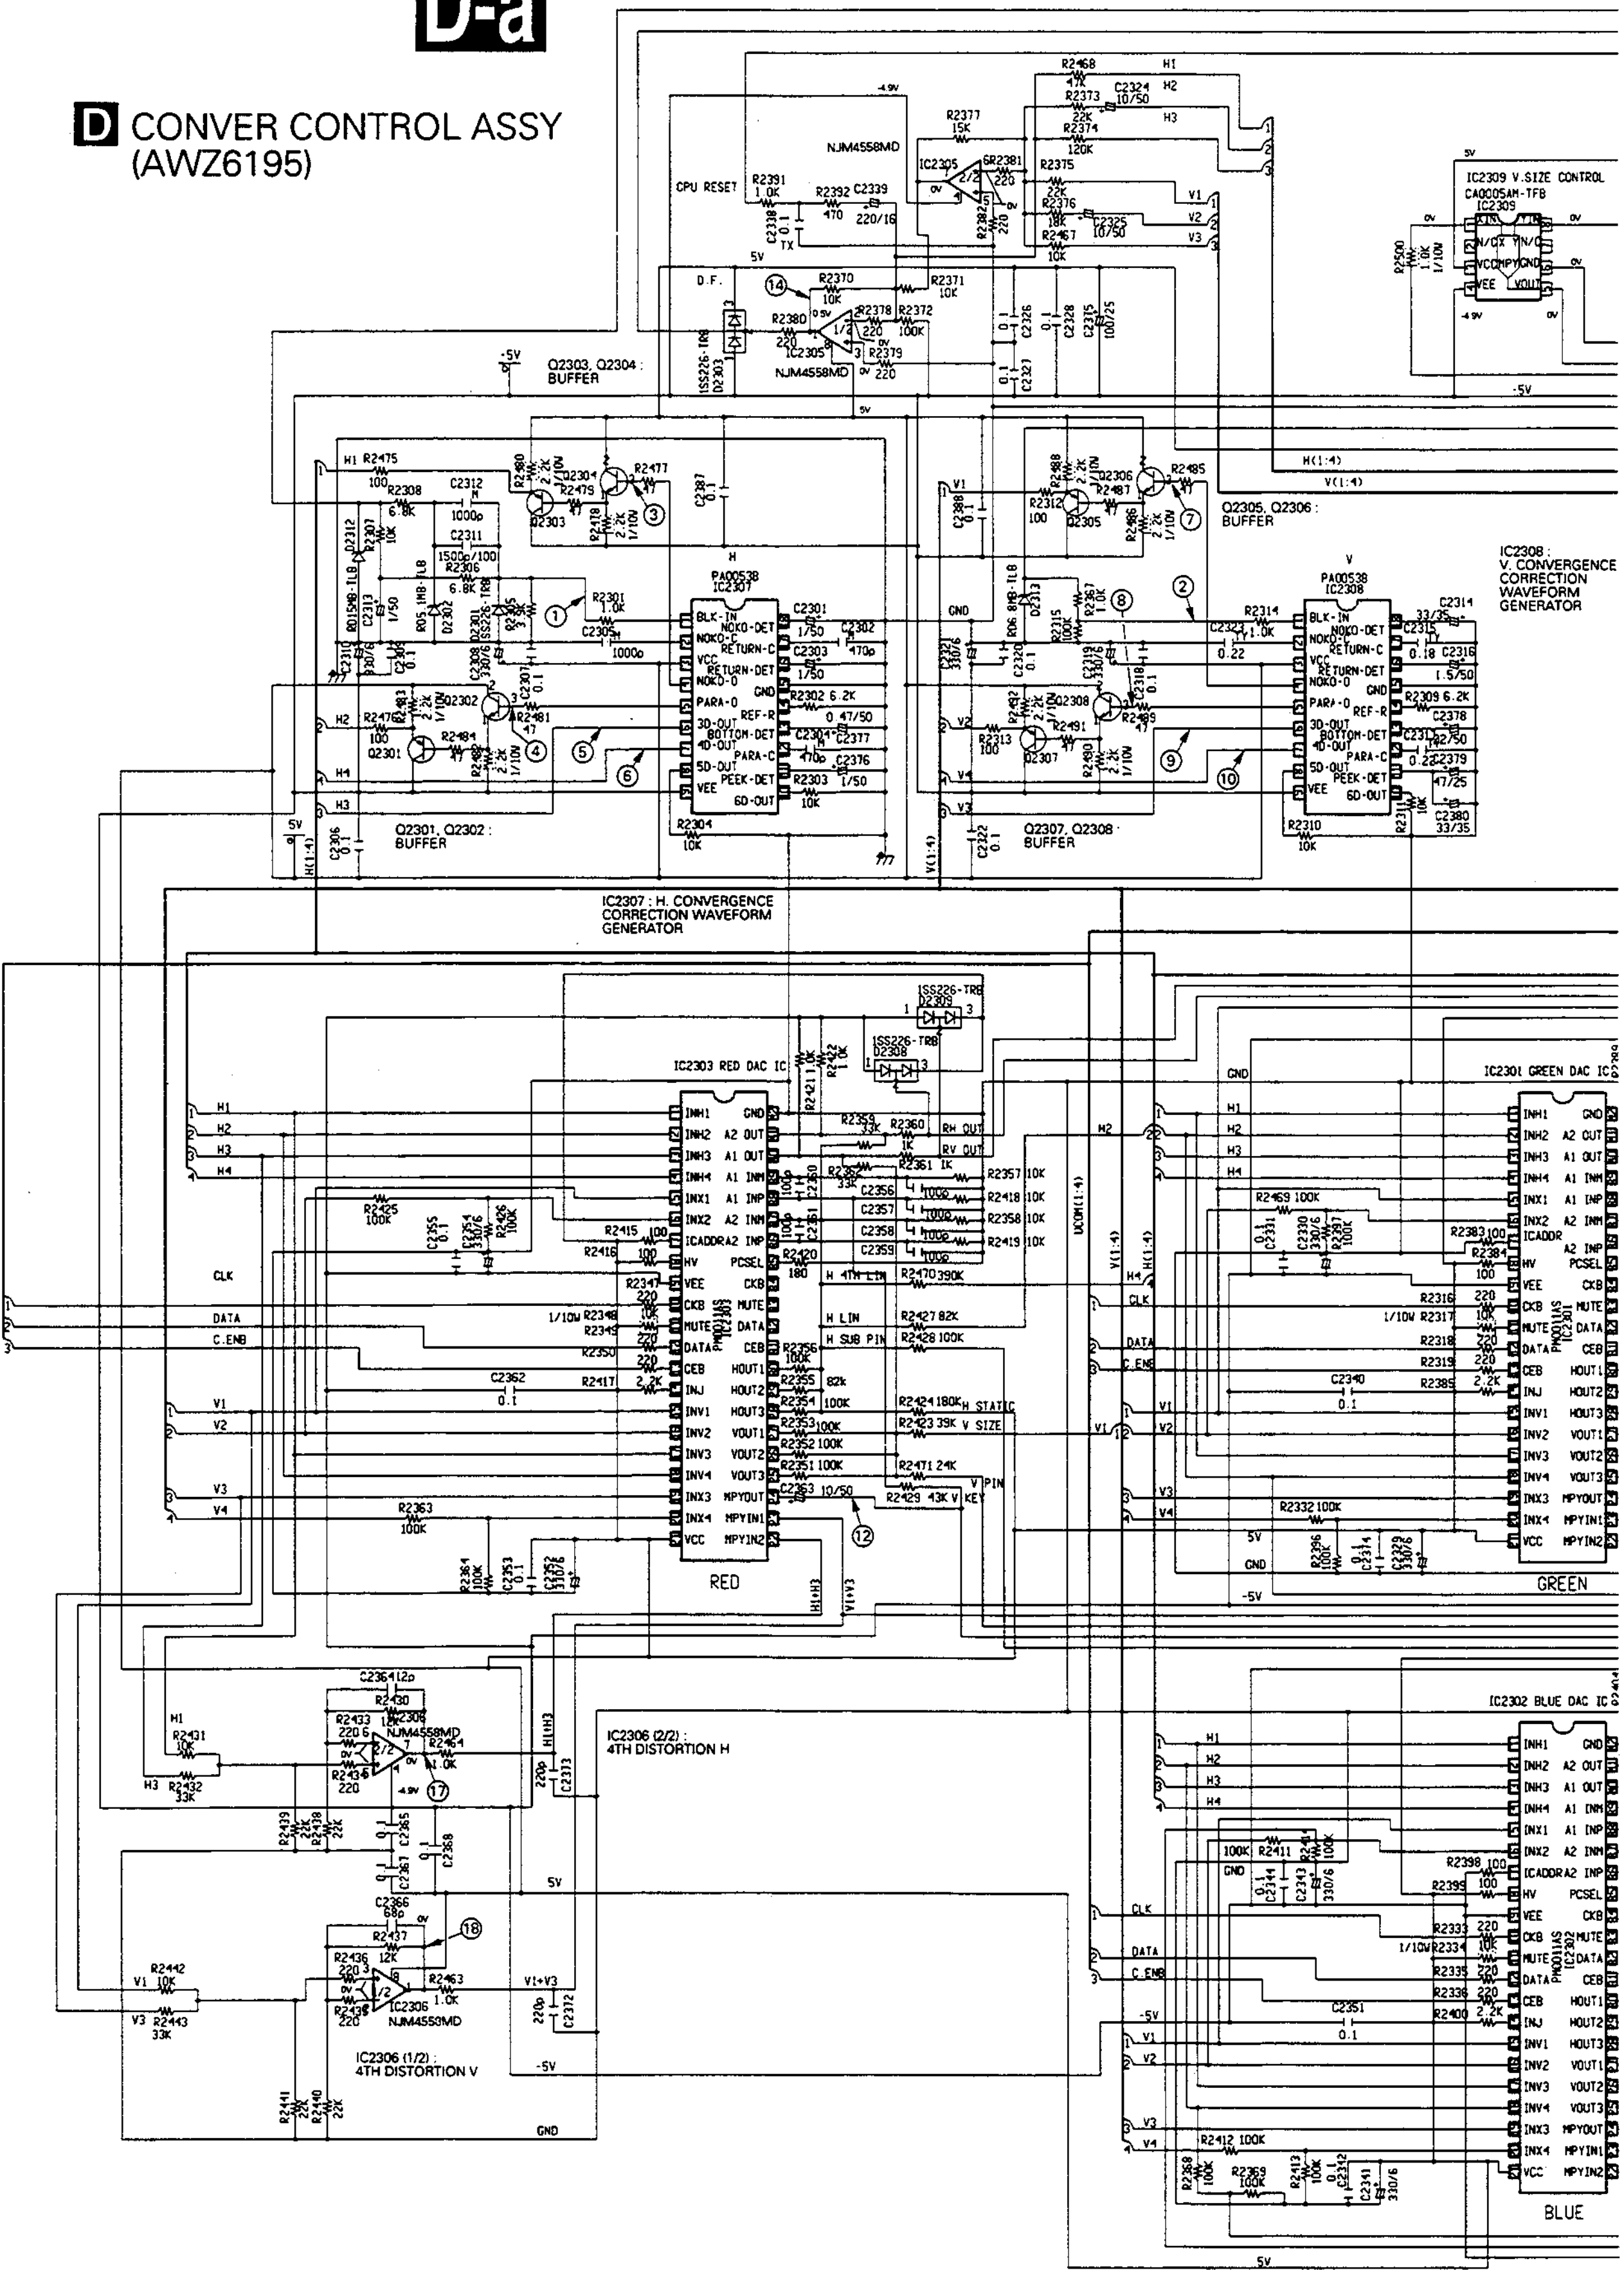
IC2309 V.SIZE CONTROL
CA0005AM-TFB
IC2305
NJM4558MD
CPU RESET
D.F.
Q2303, Q2304 : BUFFER
Q2305, Q2306 : BUFFER
Q2301, Q2302 : BUFFER
Q2307, Q2308 : BUFFER
PA0053B
IC2307
IC2308
IC2308 : V. CONVERGENCE CORRECTION WAVEFORM GENERATOR
IC2307 : H. CONVERGENCE CORRECTION WAVEFORM GENERATOR
BLK-IN
NOKO-DET
NOKO-C
RETURN-C
VCC
RETURN-DET
NOKO-O
GND
PARA-O
REF-R
3D-OUT
BOTTOM-DET
4D-OUT
PARA-C
5D-OUT
PEEK-DET
VEE
6D-OUT
IC2303 RED DAC IC
IC2301 GREEN DAC IC
IC2302 BLUE DAC IC
PM0011AS
INH1
INH2
INH3
INH4
INX1
INX2
ICADDR
HV
VEE
CKB
MUTE
DATA
CEB
INJ
INV1
INV2
INV3
INV4
INX3
INX4
VCC
GND
A2 OUT
A1 OUT
A1 INM
A1 INP
A2 INM
A2 INP
PCSEL
HOUT1
HOUT2
HOUT3
VOUT1
VOUT2
VOUT3
MPYOUT
MPYIN1
MPYIN2
RED
GREEN
BLUE
RH OUT
RV OUT
H 4TH LIN
H LIN
H SUB PIN
H STATIC
V SIZE
V PIN
V KEY
1SS226-TRB
D2309
D2308
UCOM(1:4)
H(1:4)
V(1:4)
CLK
DATA
C.ENB
H1
H2
H3
H4
V1
V2
V3
V4
IC2306 (2/2) : 4TH DISTORTION H
IC2306 (1/2) : 4TH DISTORTION V
NJM4558MD
H1+H3
V1+V3
5V
-5V
GND
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑫
⑭
⑰
⑱

D-b

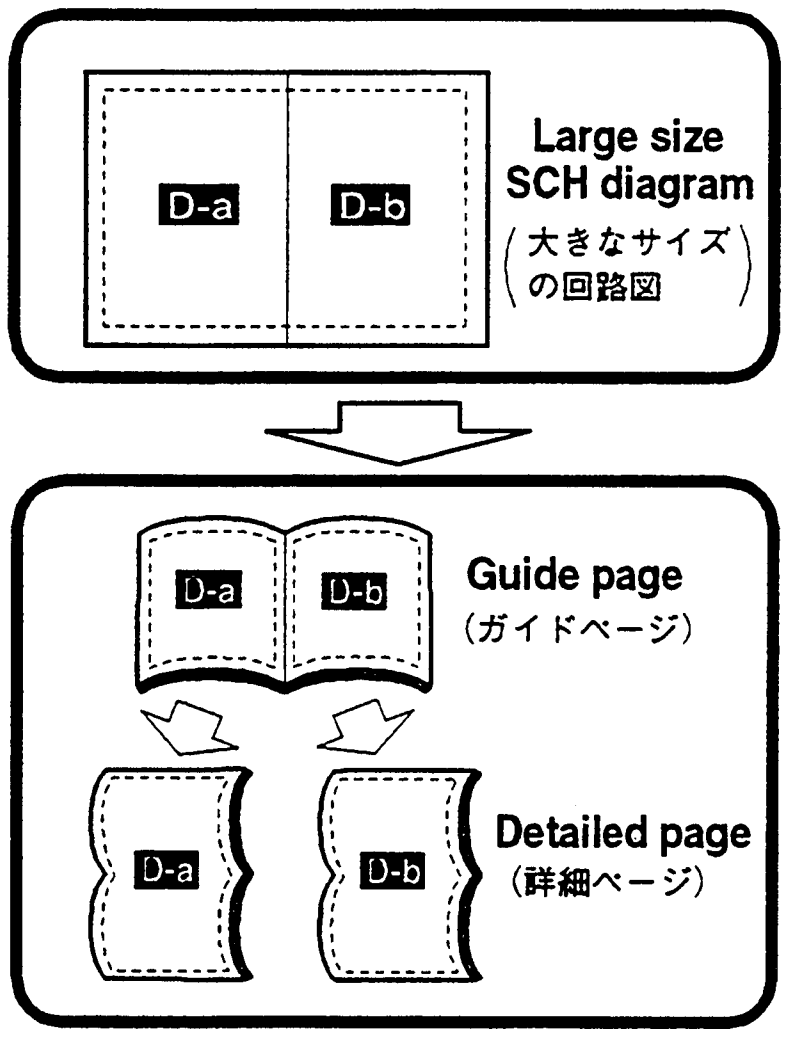
D-a
D-b
Large size SCH diagram
（大きなサイズの回路図）
Guide page
（ガイドページ）
Detailed page
（詳細ページ）

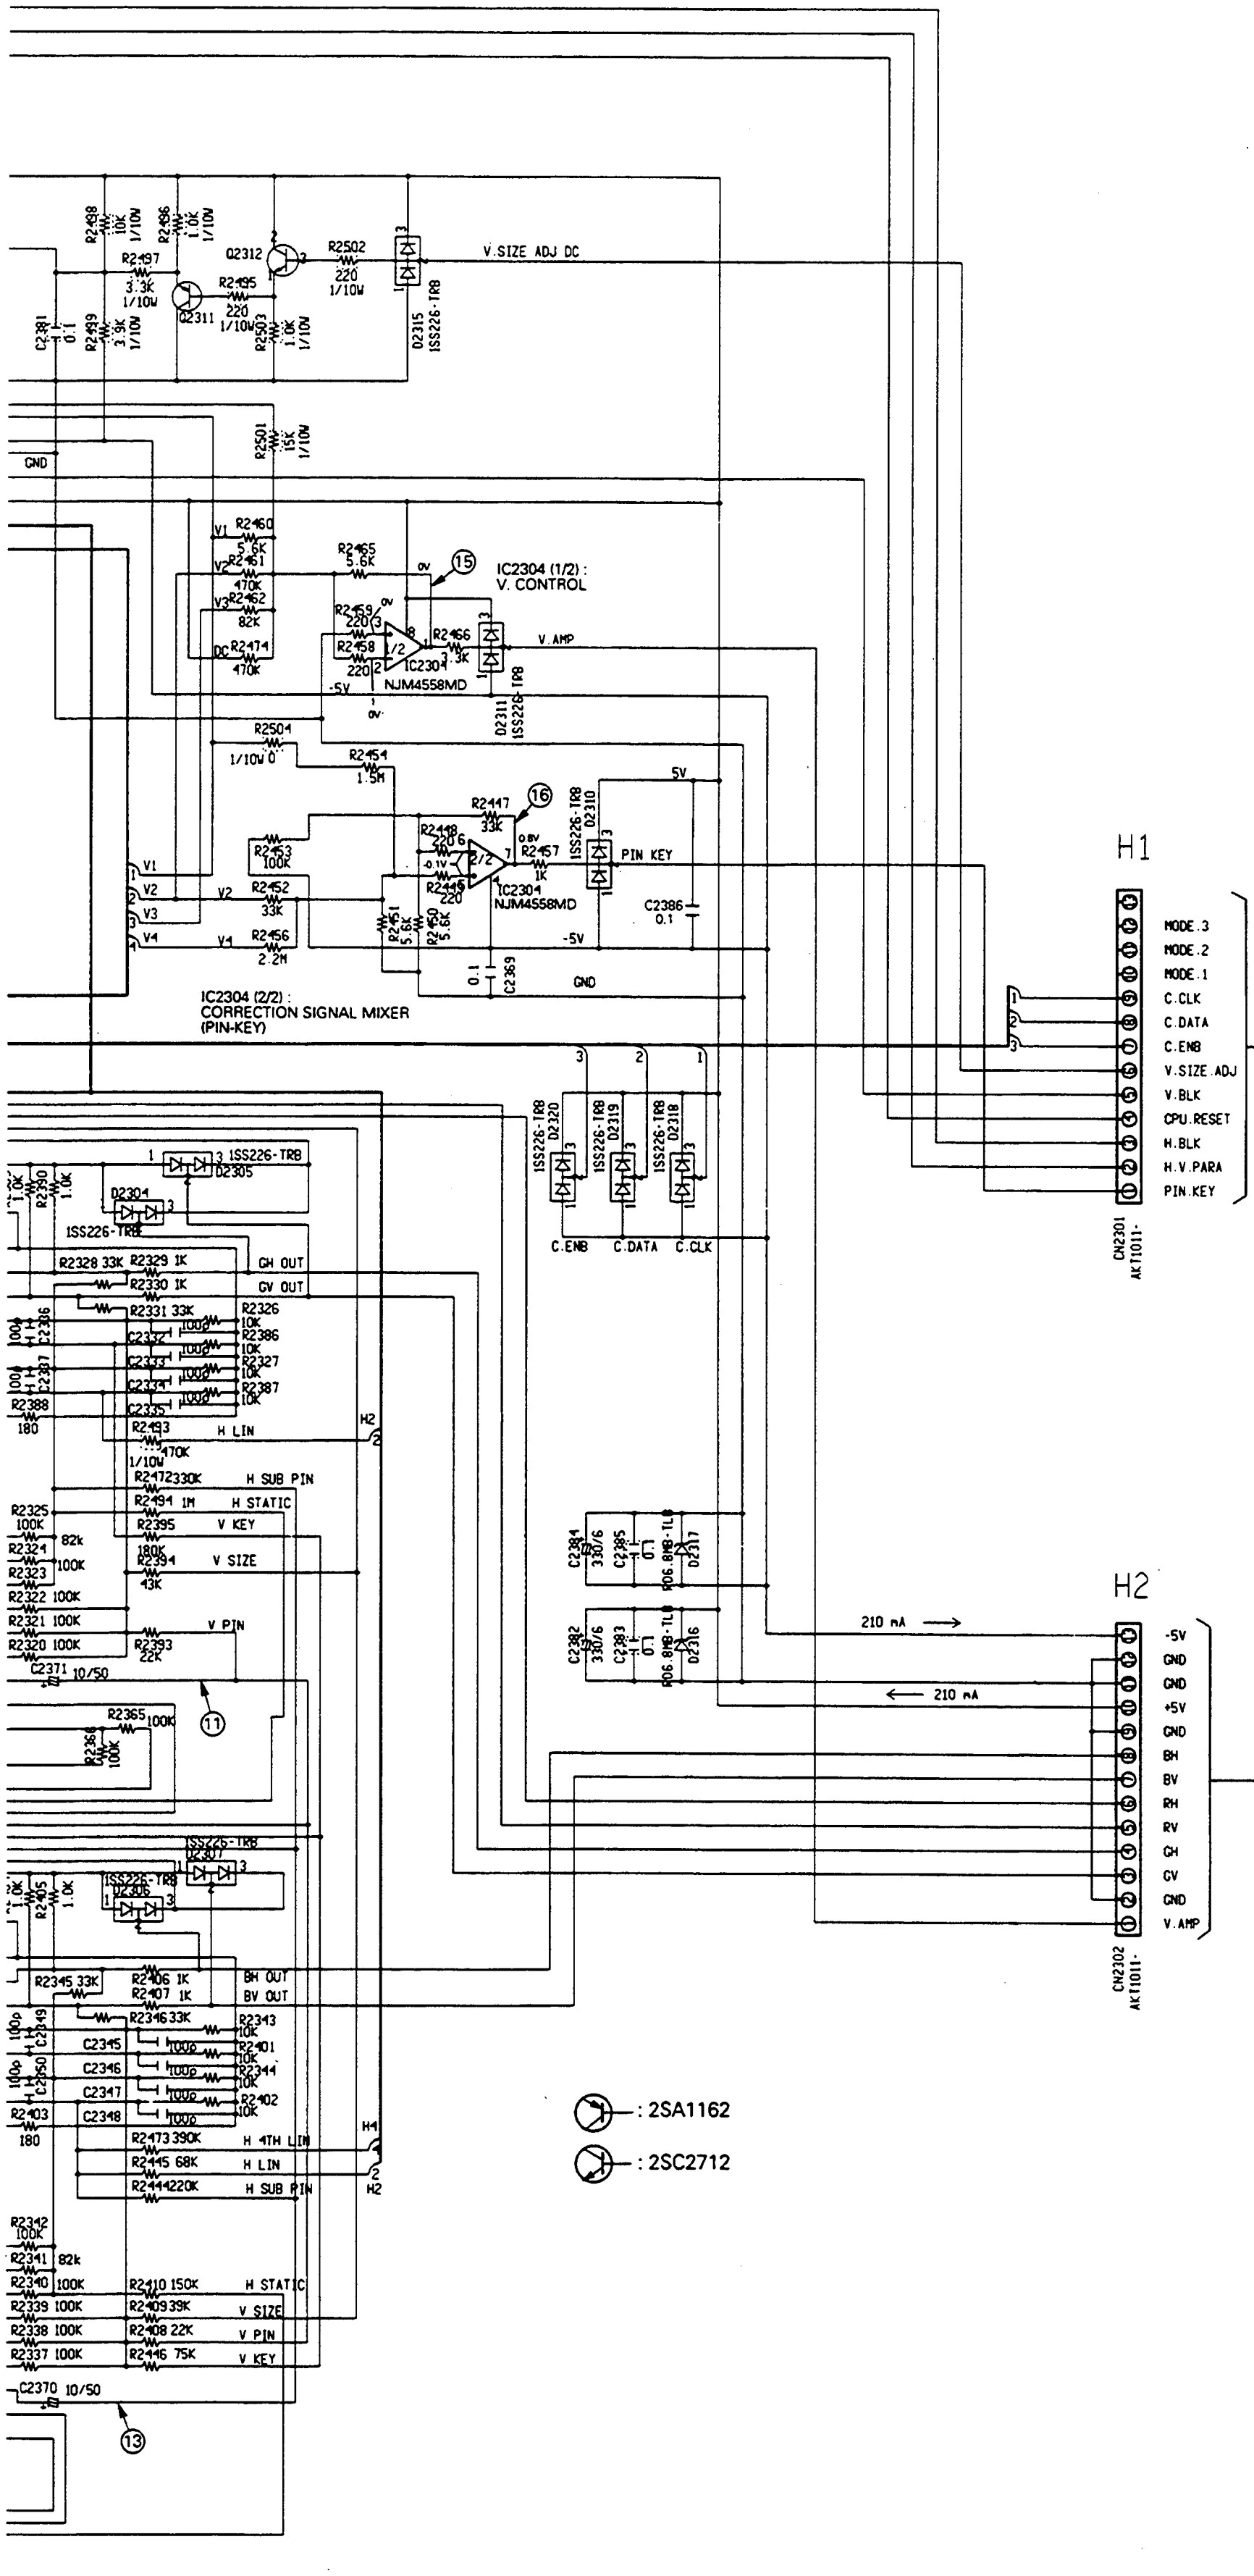
V.SIZE ADJ DC
Q2312
Q2311
R2502 220 1/10W
R2497 3.3K 1/10W
R2495 220 1/10W
D2315 1SS226-TR8
IC2304 (1/2) : V. CONTROL
NJM4558MD
V.AMP
D2311 1SS226-TR8
⑮
⑯
PIN KEY
IC2304 (2/2) : CORRECTION SIGNAL MIXER (PIN-KEY)
C2386 0.1
C2369 0.1
5V
-5V
GND
C.ENB
C.DATA
C.CLK
D2320
D2319
D2318
D2305 1SS226-TR8
D2304
GH OUT
GV OUT
H LIN
H SUB PIN
H STATIC
V KEY
V SIZE
V PIN
C2371 10/50
⑪
D2317
D2316
210 mA
BH OUT
BV OUT
H 4TH LIN
H LIN
H SUB PIN
H STATIC
V SIZE
V PIN
V KEY
C2370 10/50
⑬
H1
MODE.3
MODE.2
MODE.1
C.CLK
C.DATA
C.ENB
V.SIZE ADJ
V.BLK
CPU.RESET
H.BLK
H.V.PARA
PIN.KEY
CN2301 AKT1011-
H2
-5V
GND
GND
+5V
GND
BH
BV
RH
RV
GH
GV
GND
V.AMP
CN2302 AKT1011-
: 2SA1162
: 2SC2712

E CONNECTOR B ASSY (AWZ6196)

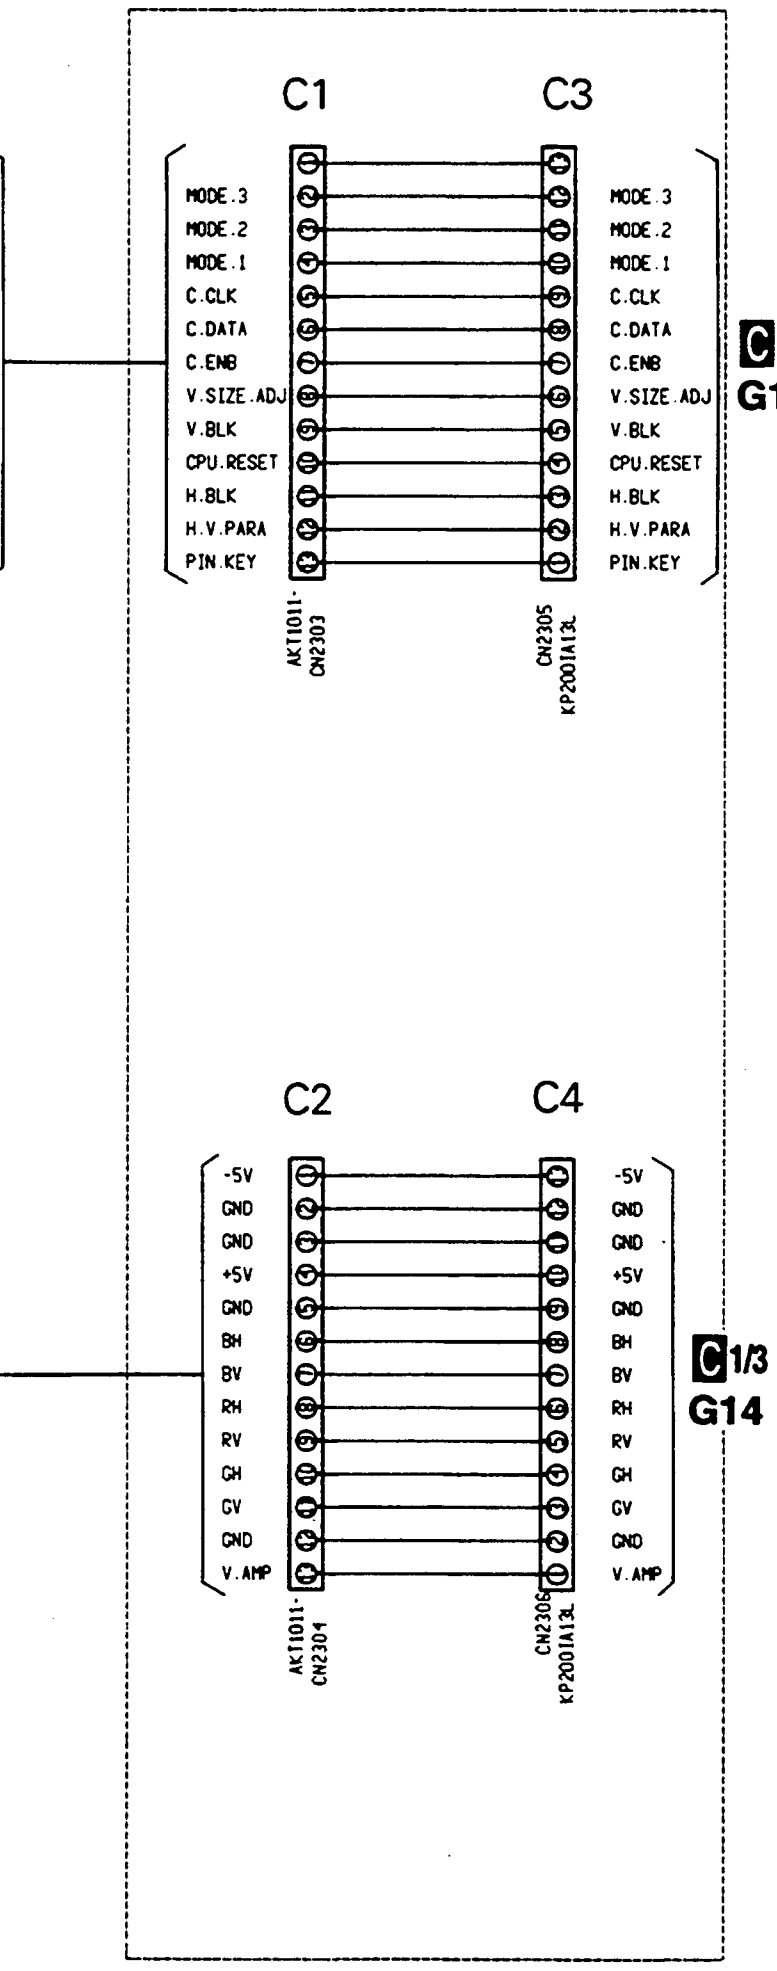
C1
C3
MODE.3
MODE.2
MODE.1
C.CLK
C.DATA
C.ENB
V.SIZE.ADJ
V.BLK
CPU.RESET
H.BLK
H.V.PARA
PIN.KEY
AKT1011-CN2303
CN2305 KP200IA12L
C 1/3 G13
C2
C4
-5V
GND
GND
+5V
GND
BH
BV
RH
RV
GH
GV
GND
V.AMP
AKT1011-CN2304
CN2306 KP200IA13L
C 1/3 G14

D CONVER CONTROL ASSY (AWZ6195)

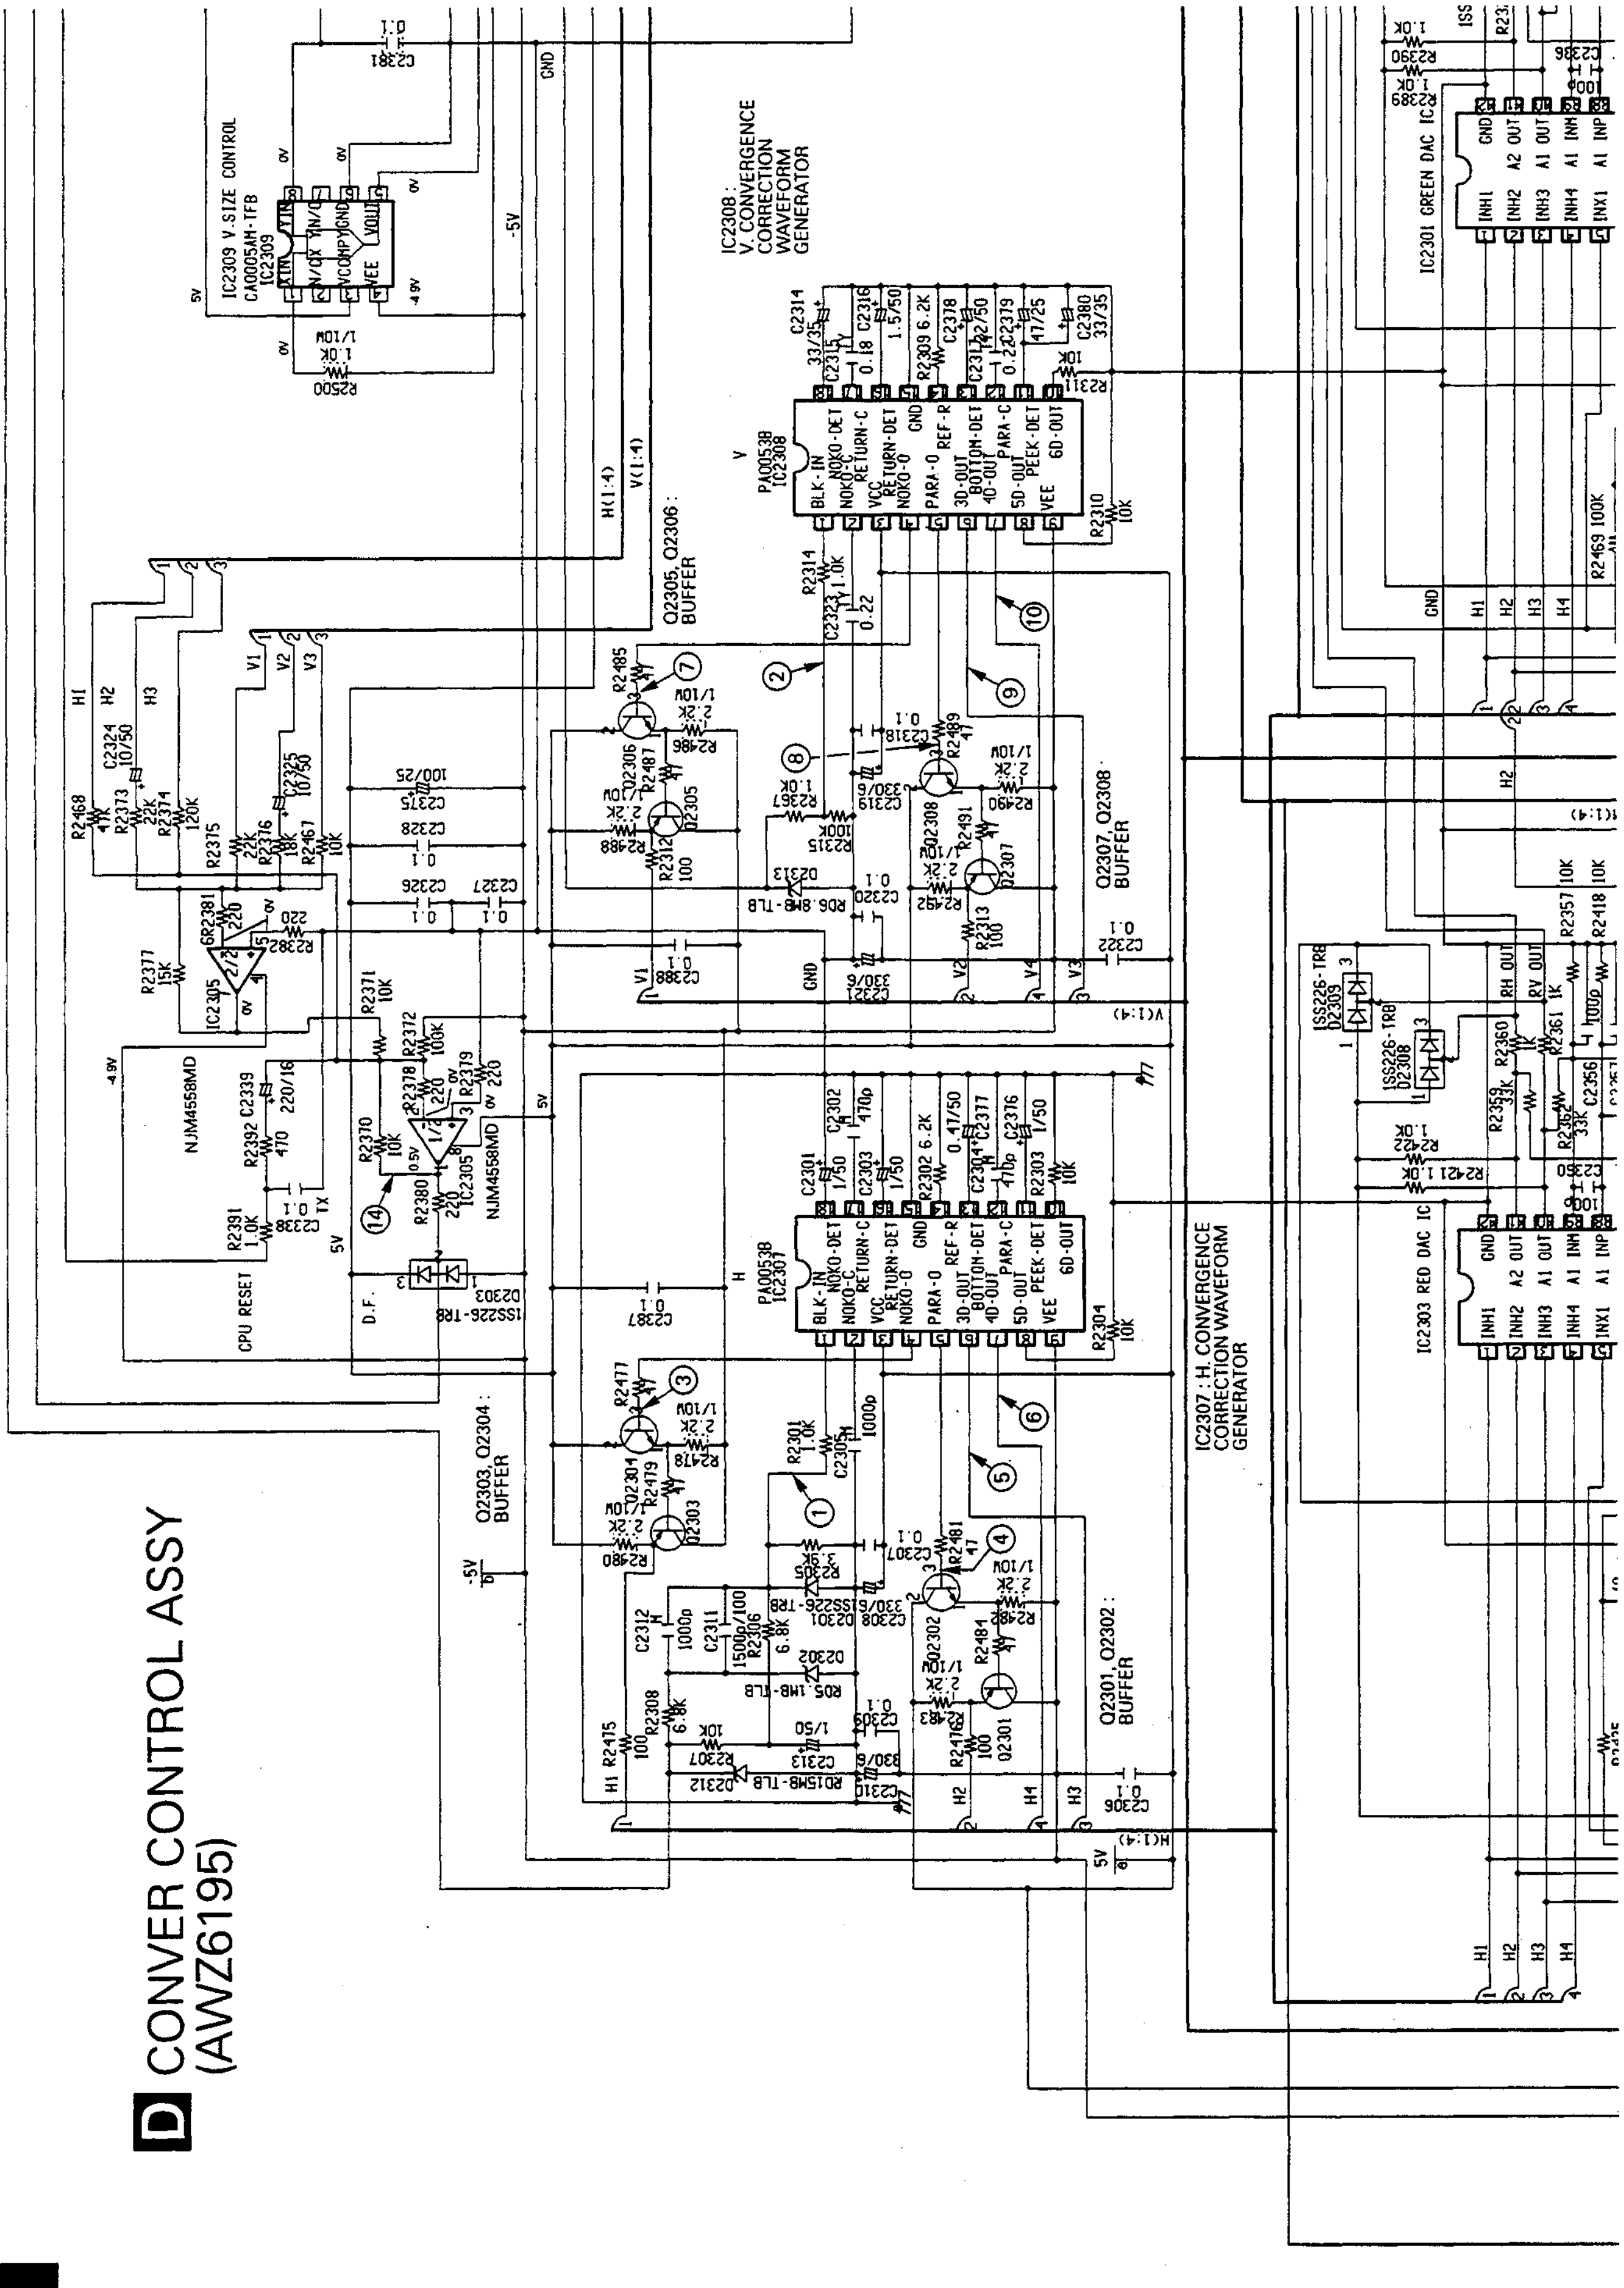
IC2309 V.SIZE CONTROL
CA0005AM-TFB
IC2309
IC2308 : V. CONVERGENCE CORRECTION WAVEFORM GENERATOR
PA0053B
IC2308
BLK-IN
NOKO-C
NOKO-DET
RETURN-C
RETURN-DET
NOKO-O
VCC
GND
REF-R
PARA-O
3D-OUT
BOTTOM-DET
4D-OUT
PARA-C
5D-OUT
PEEK-DET
6D-OUT
VEE
IC2301 GREEN DAC IC
IC2303 RED DAC IC
INH1
INH2
INH3
INH4
INX1
A2 OUT
A1 OUT
A1 INM
A1 INP
RH OUT
RV OUT
Q2305, Q2306 : BUFFER
Q2307, Q2308 : BUFFER
Q2303, Q2304 : BUFFER
Q2301, Q2302 : BUFFER
IC2307 : H. CONVERGENCE CORRECTION WAVEFORM GENERATOR
PA0053B
IC2307
IC2305
NJM4558MD
CPU RESET
D.F.
1SS226-TRB
D2303
D2309
D2308
RD5.1MB-TLB
RD6.8MB-TLB
RD15MB-TLB
H(1:4)
V(1:4)
H1
H2
H3
H4
V1
V2
V3
V4
GND
5V
-5V
-4.9V
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑭

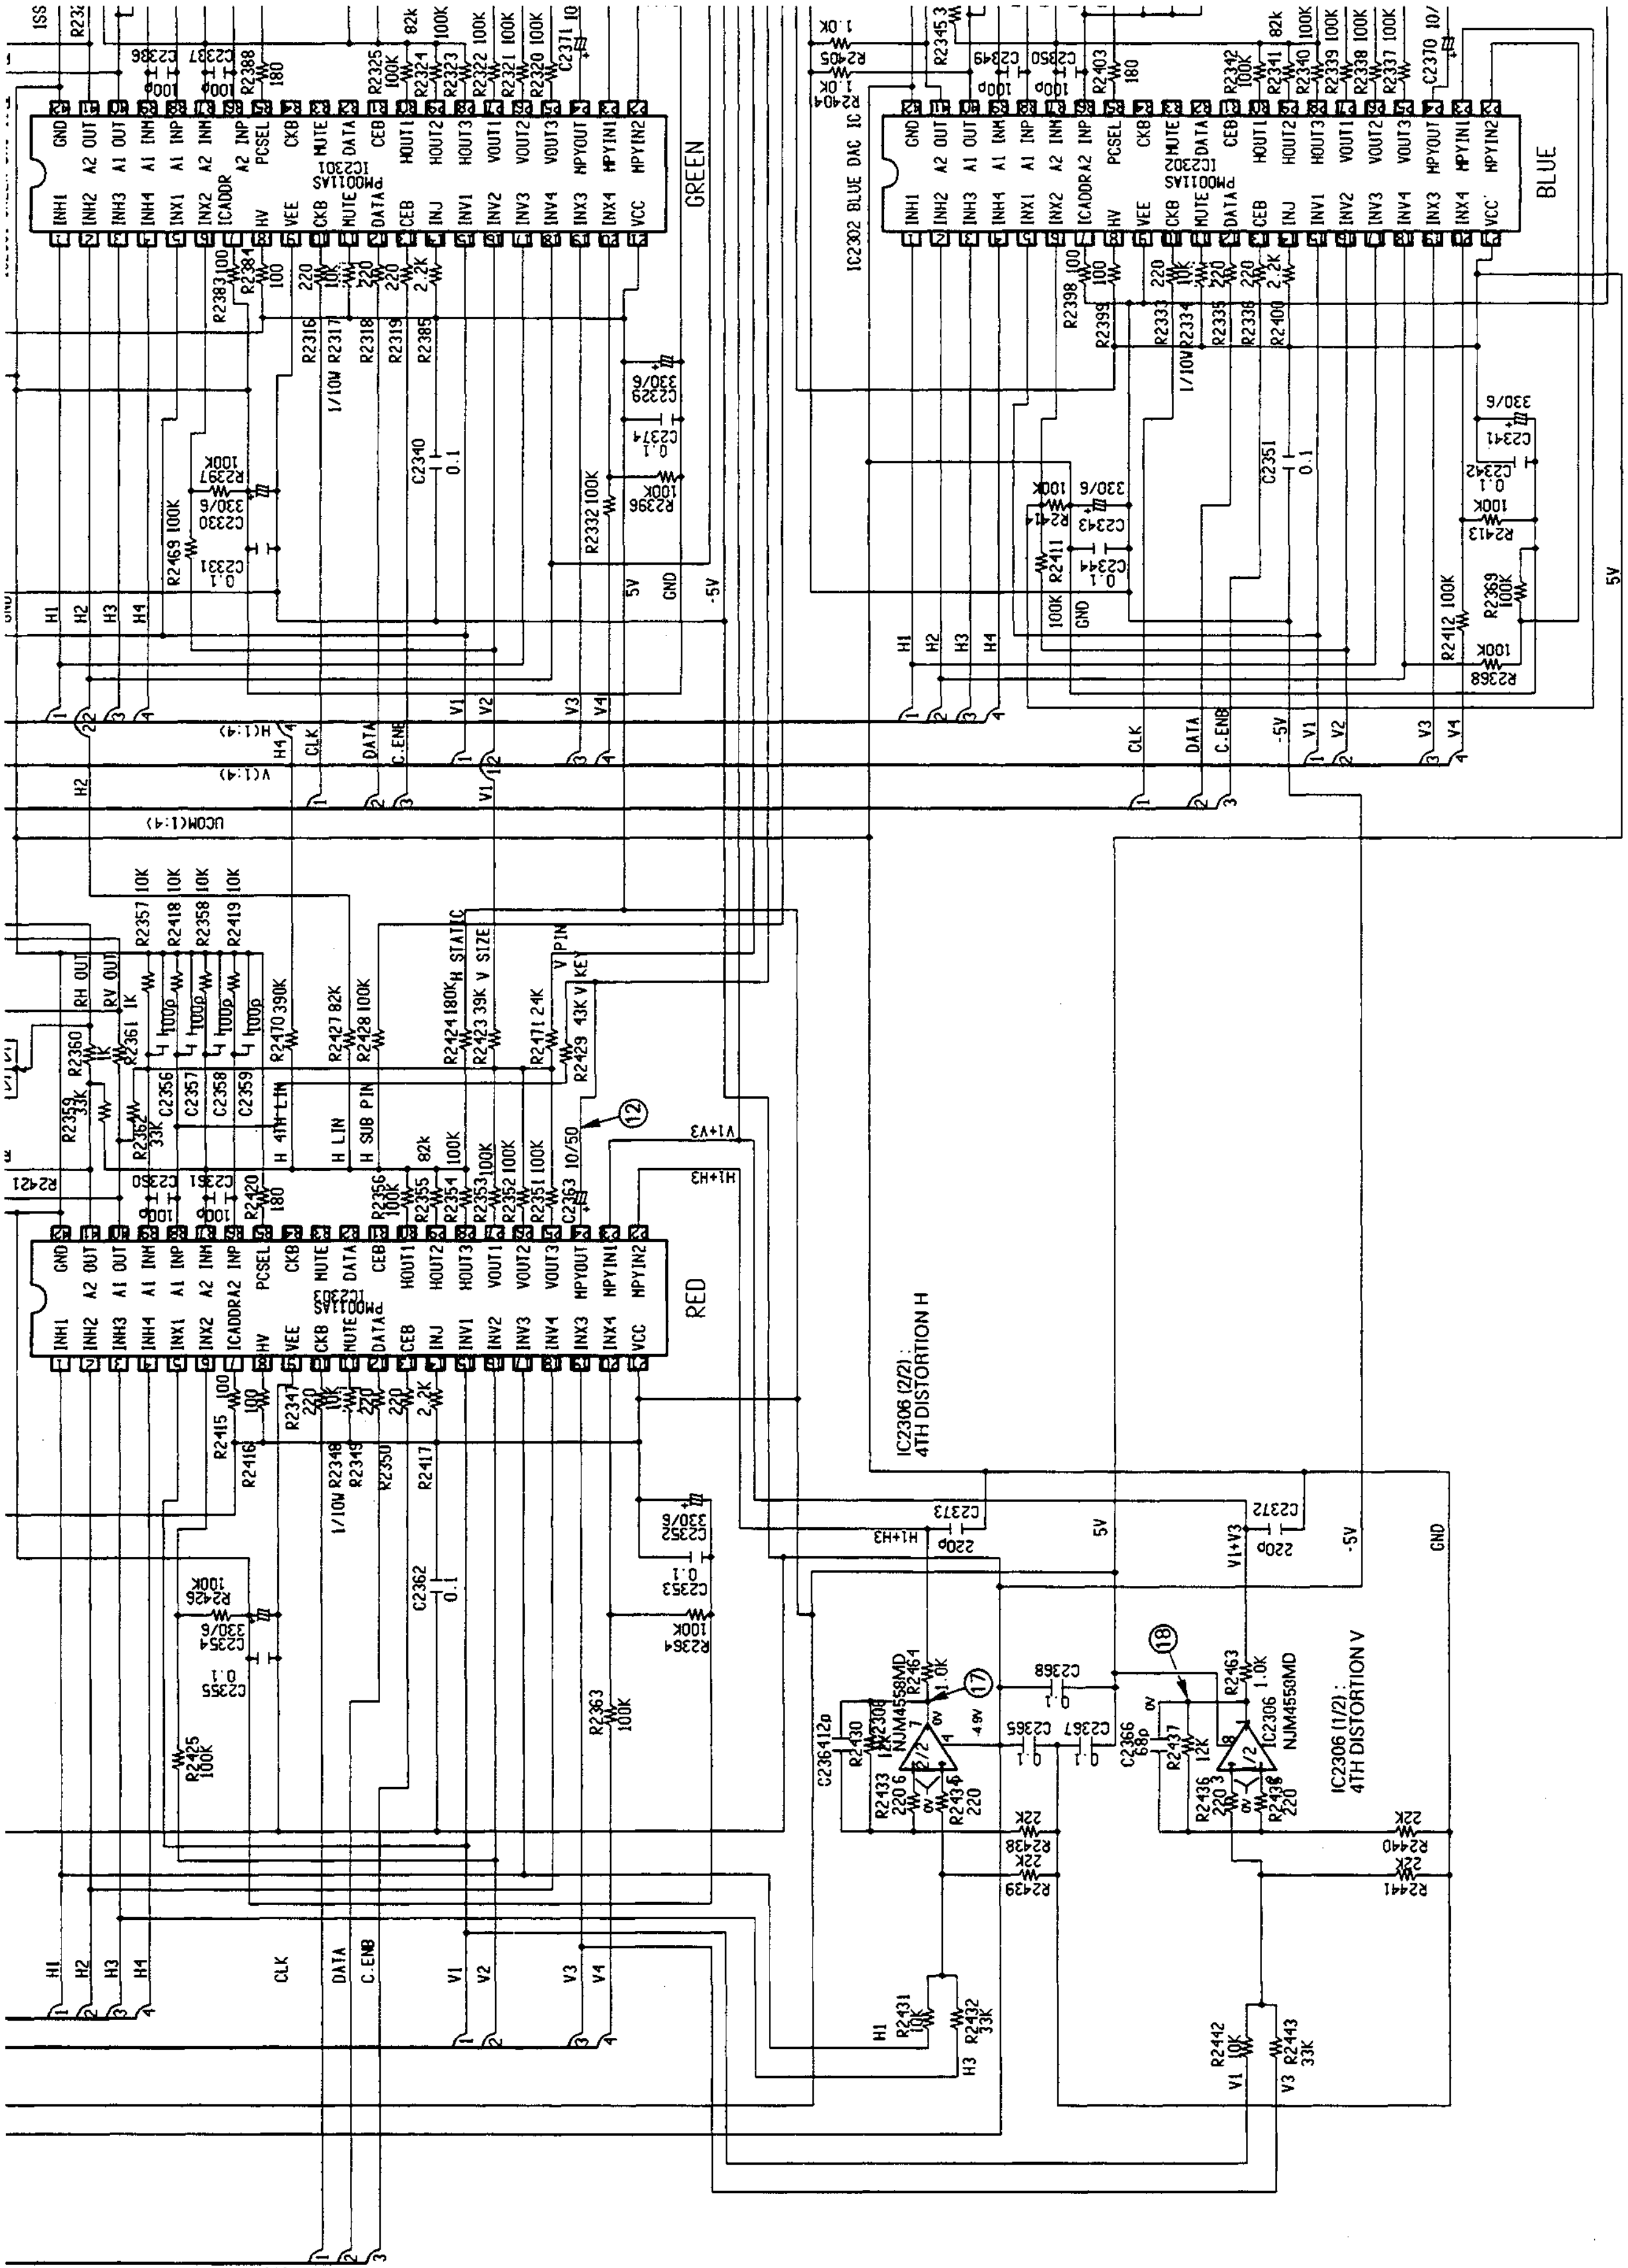
IC2301
PM0011AS
GREEN
IC2302 BLUE DAC IC
PM0011AS
BLUE
IC2303
PM0011AS
RED
IC2306 (2/2) : 4TH DISTORTION H
IC2306 (1/2) : 4TH DISTORTION V
NJM4558MD
H1
H2
H3
H4
CLK
DATA
C.ENB
V1
V2
V3
V4
5V
-5V
GND
H(1:4)
V(1:4)
UCOM(1:4)
H1+H3
V1+V3
RH OUT
RV OUT
H STATIC
V SIZE
V PIN
V KEY
H LIN
H SUB PIN
H 4TH LIN
⑫
⑰
⑱
4.9V
0V

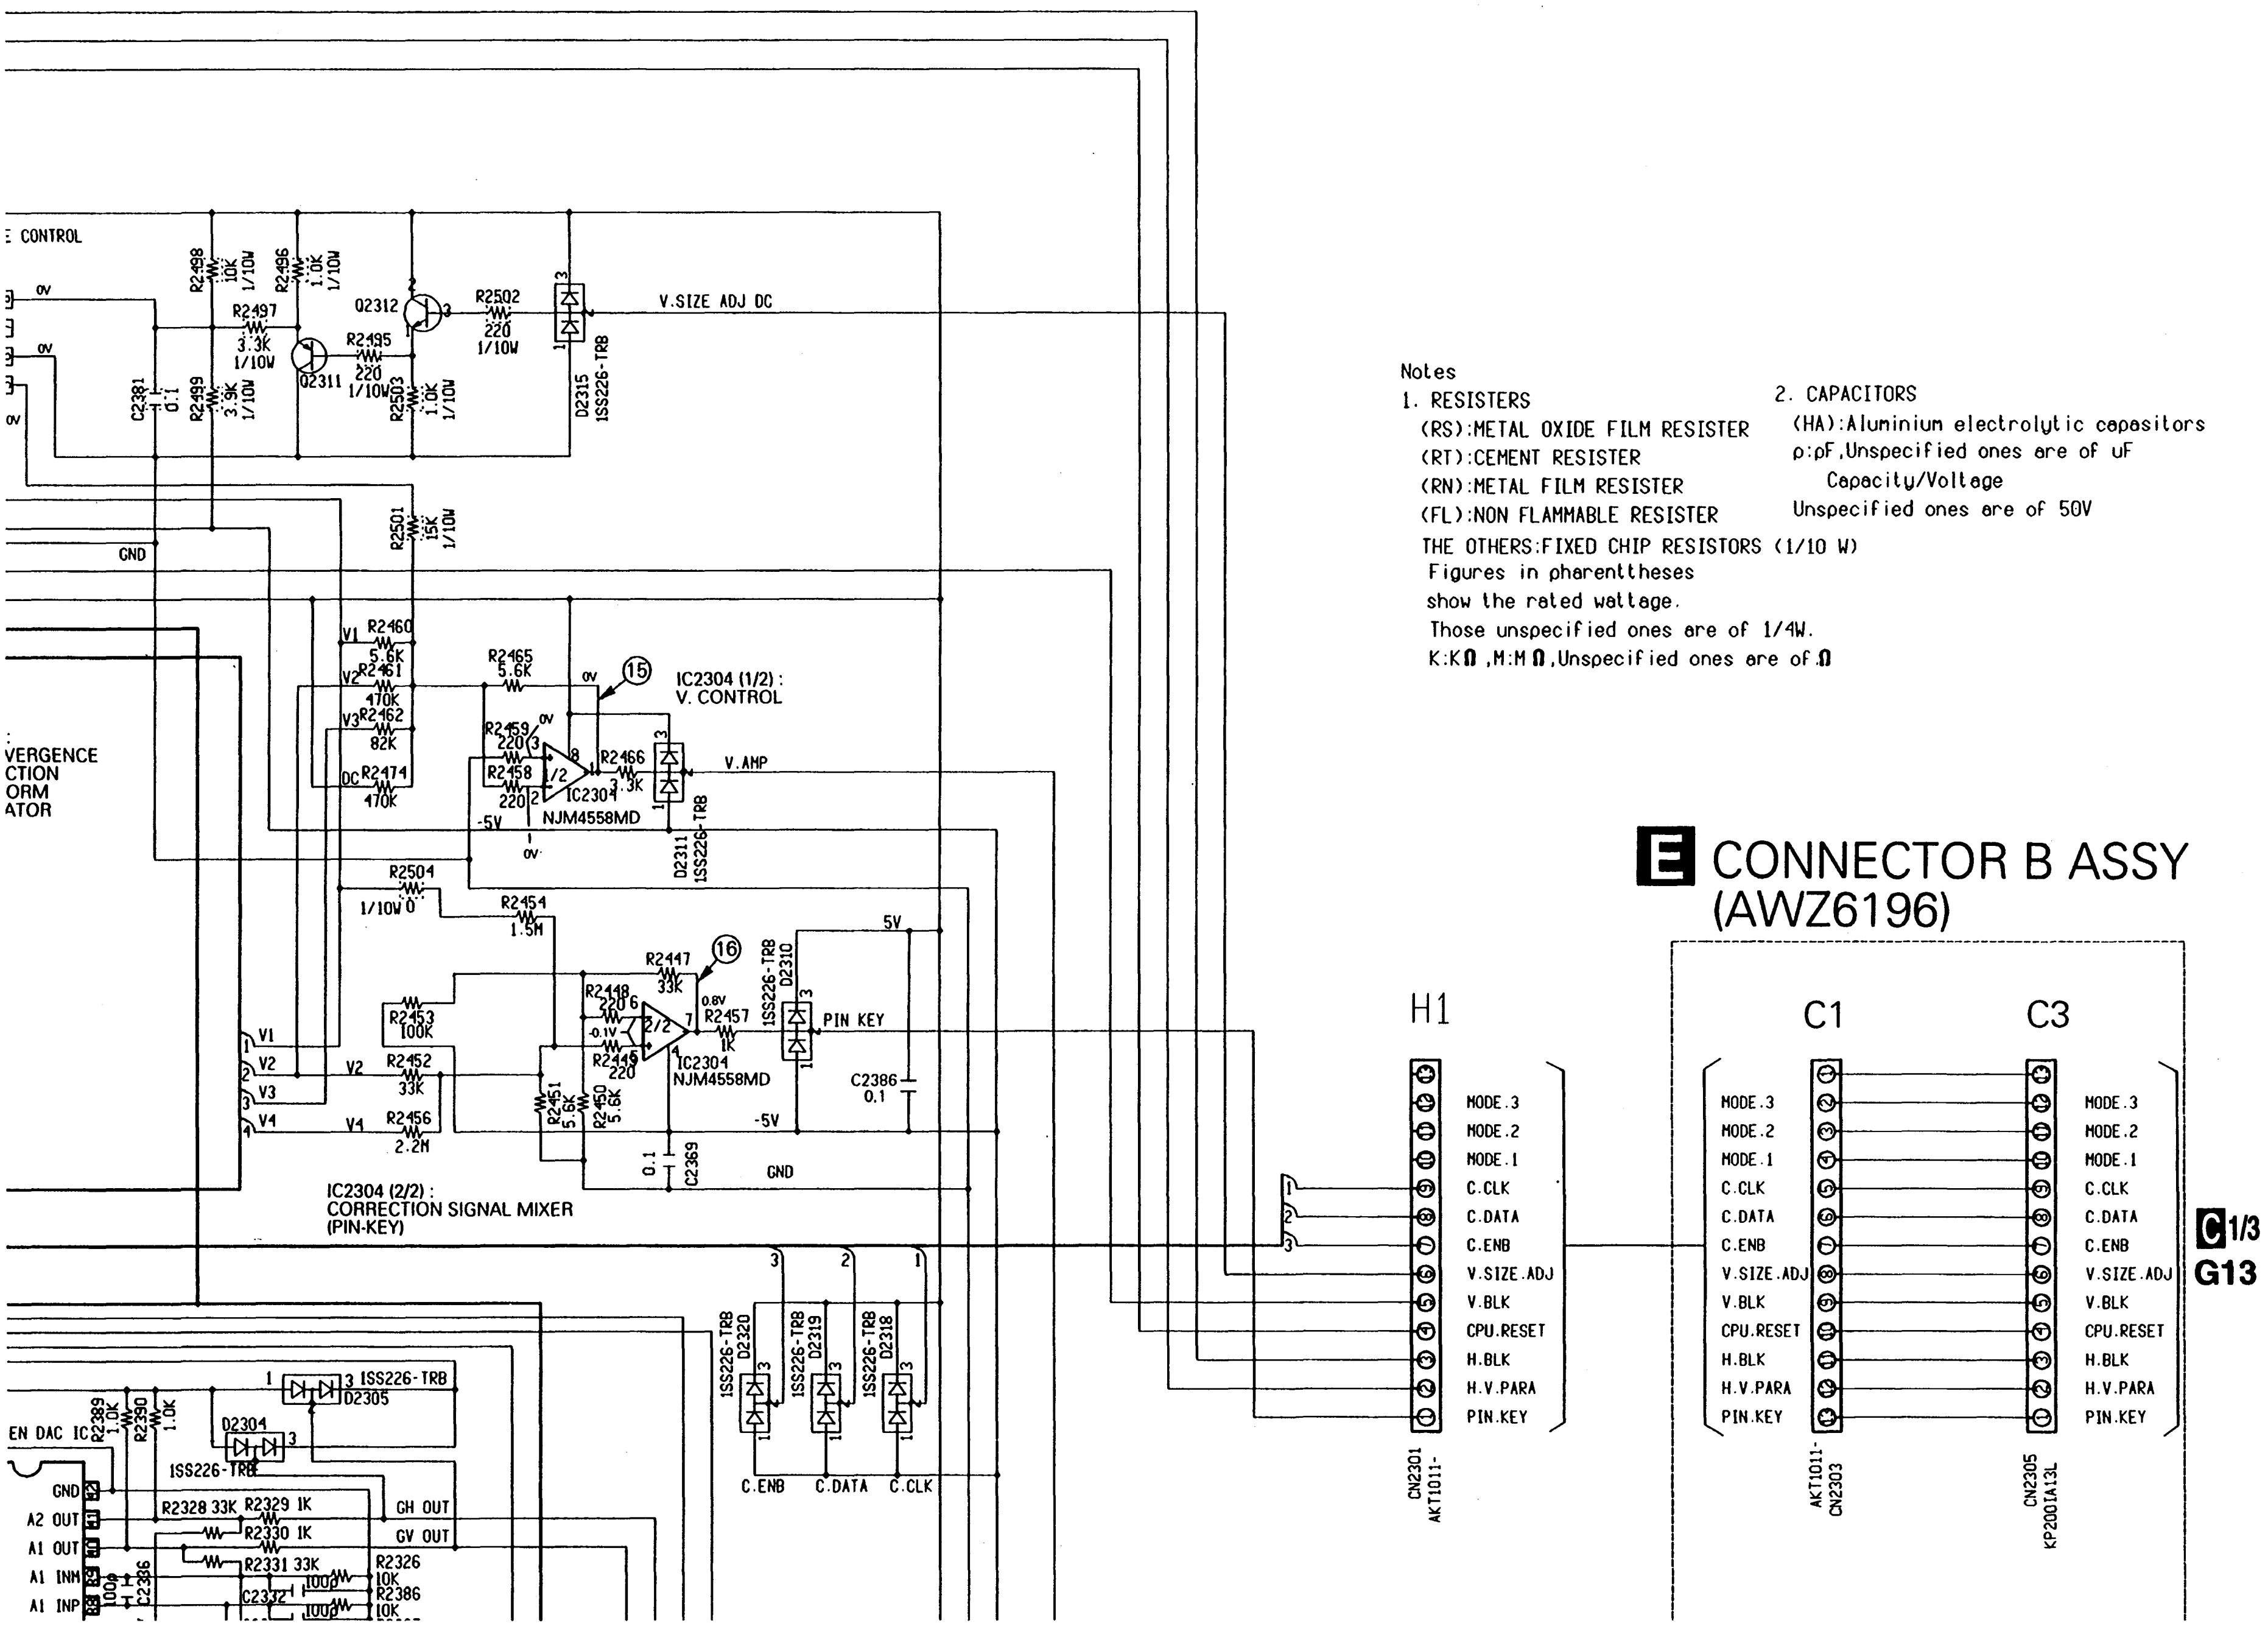
E CONNECTOR B ASSY
(AWZ6196)
H1
C1
C3
CN2301
AKT1011-
AKT1011-
CN2303
CN2305
KP200IA13L
MODE.3
MODE.2
MODE.1
C.CLK
C.DATA
C.ENB
V.SIZE.ADJ
V.BLK
CPU.RESET
H.BLK
H.V.PARA
PIN.KEY
C1/3
G13
CONTROL
VERGENCE
CTION
ORM
ATOR
V.SIZE ADJ DC
Q2312
Q2311
R2502 220 1/10W
R2498 10K 1/10W
R2496 1.0K 1/10W
R2497 3.3K 1/10W
R2495 220 1/10W
R2499 3.9K 1/10W
R2503 1.0K 1/10W
R2501 15K 1/10W
C2381 0.1
D2315 1SS226-TR8
GND
V1 R2460 5.6K
V2 R2461 470K
V3 R2462 82K
DC R2474 470K
R2465 5.6K
15
IC2304 (1/2) : V. CONTROL
R2459 220
R2458 220
R2466 3.3K
IC2304 NJM4558MD
D2311 1SS226-TR8
V.AMP
-5V
0V
R2504 1/10W 0
R2454 1.5M
16
R2447 33K
R2448 220
R2449 220
R2457 1K
0.8V
-0.1V
D2310 1SS226-TR8
PIN KEY
5V
C2386 0.1
R2453 100K
R2452 33K
R2456 2.2M
R2451 5.6K
R2450 5.6K
C2369 0.1
-5V
GND
IC2304 NJM4558MD
IC2304 (2/2) : CORRECTION SIGNAL MIXER (PIN-KEY)
V1
V2
V3
V4
D2320 1SS226-TR8
D2319 1SS226-TR8
D2318 1SS226-TR8
C.ENB
C.DATA
C.CLK
1SS226-TR8 D2305
D2304 1SS226-TR8
R2389 1.0K
R2390 1.0K
EN DAC IC
GND
A2 OUT
A1 OUT
A1 INM
A1 INP
C2386 100p
R2328 33K
R2329 1K
R2330 1K
R2331 33K
C2332
GH OUT
GV OUT
R2326 10K
R2386 10K

Notes

1. RESISTERS
   - (RS):METAL OXIDE FILM RESISTER
   - (RT):CEMENT RESISTER
   - (RN):METAL FILM RESISTER
   - (FL):NON FLAMMABLE RESISTER

   THE OTHERS:FIXED CHIP RESISTORS (1/10 W)
   Figures in pharenttheses
   show the rated wattage.
   Those unspecified ones are of 1/4W.
   K:KΩ ,M:MΩ ,Unspecified ones are of Ω

2. CAPACITORS
   (HA):Aluminium electrolytic capasitors
   p:pF,Unspecified ones are of uF
   Capacity/Voltage
   Unspecified ones are of 50V

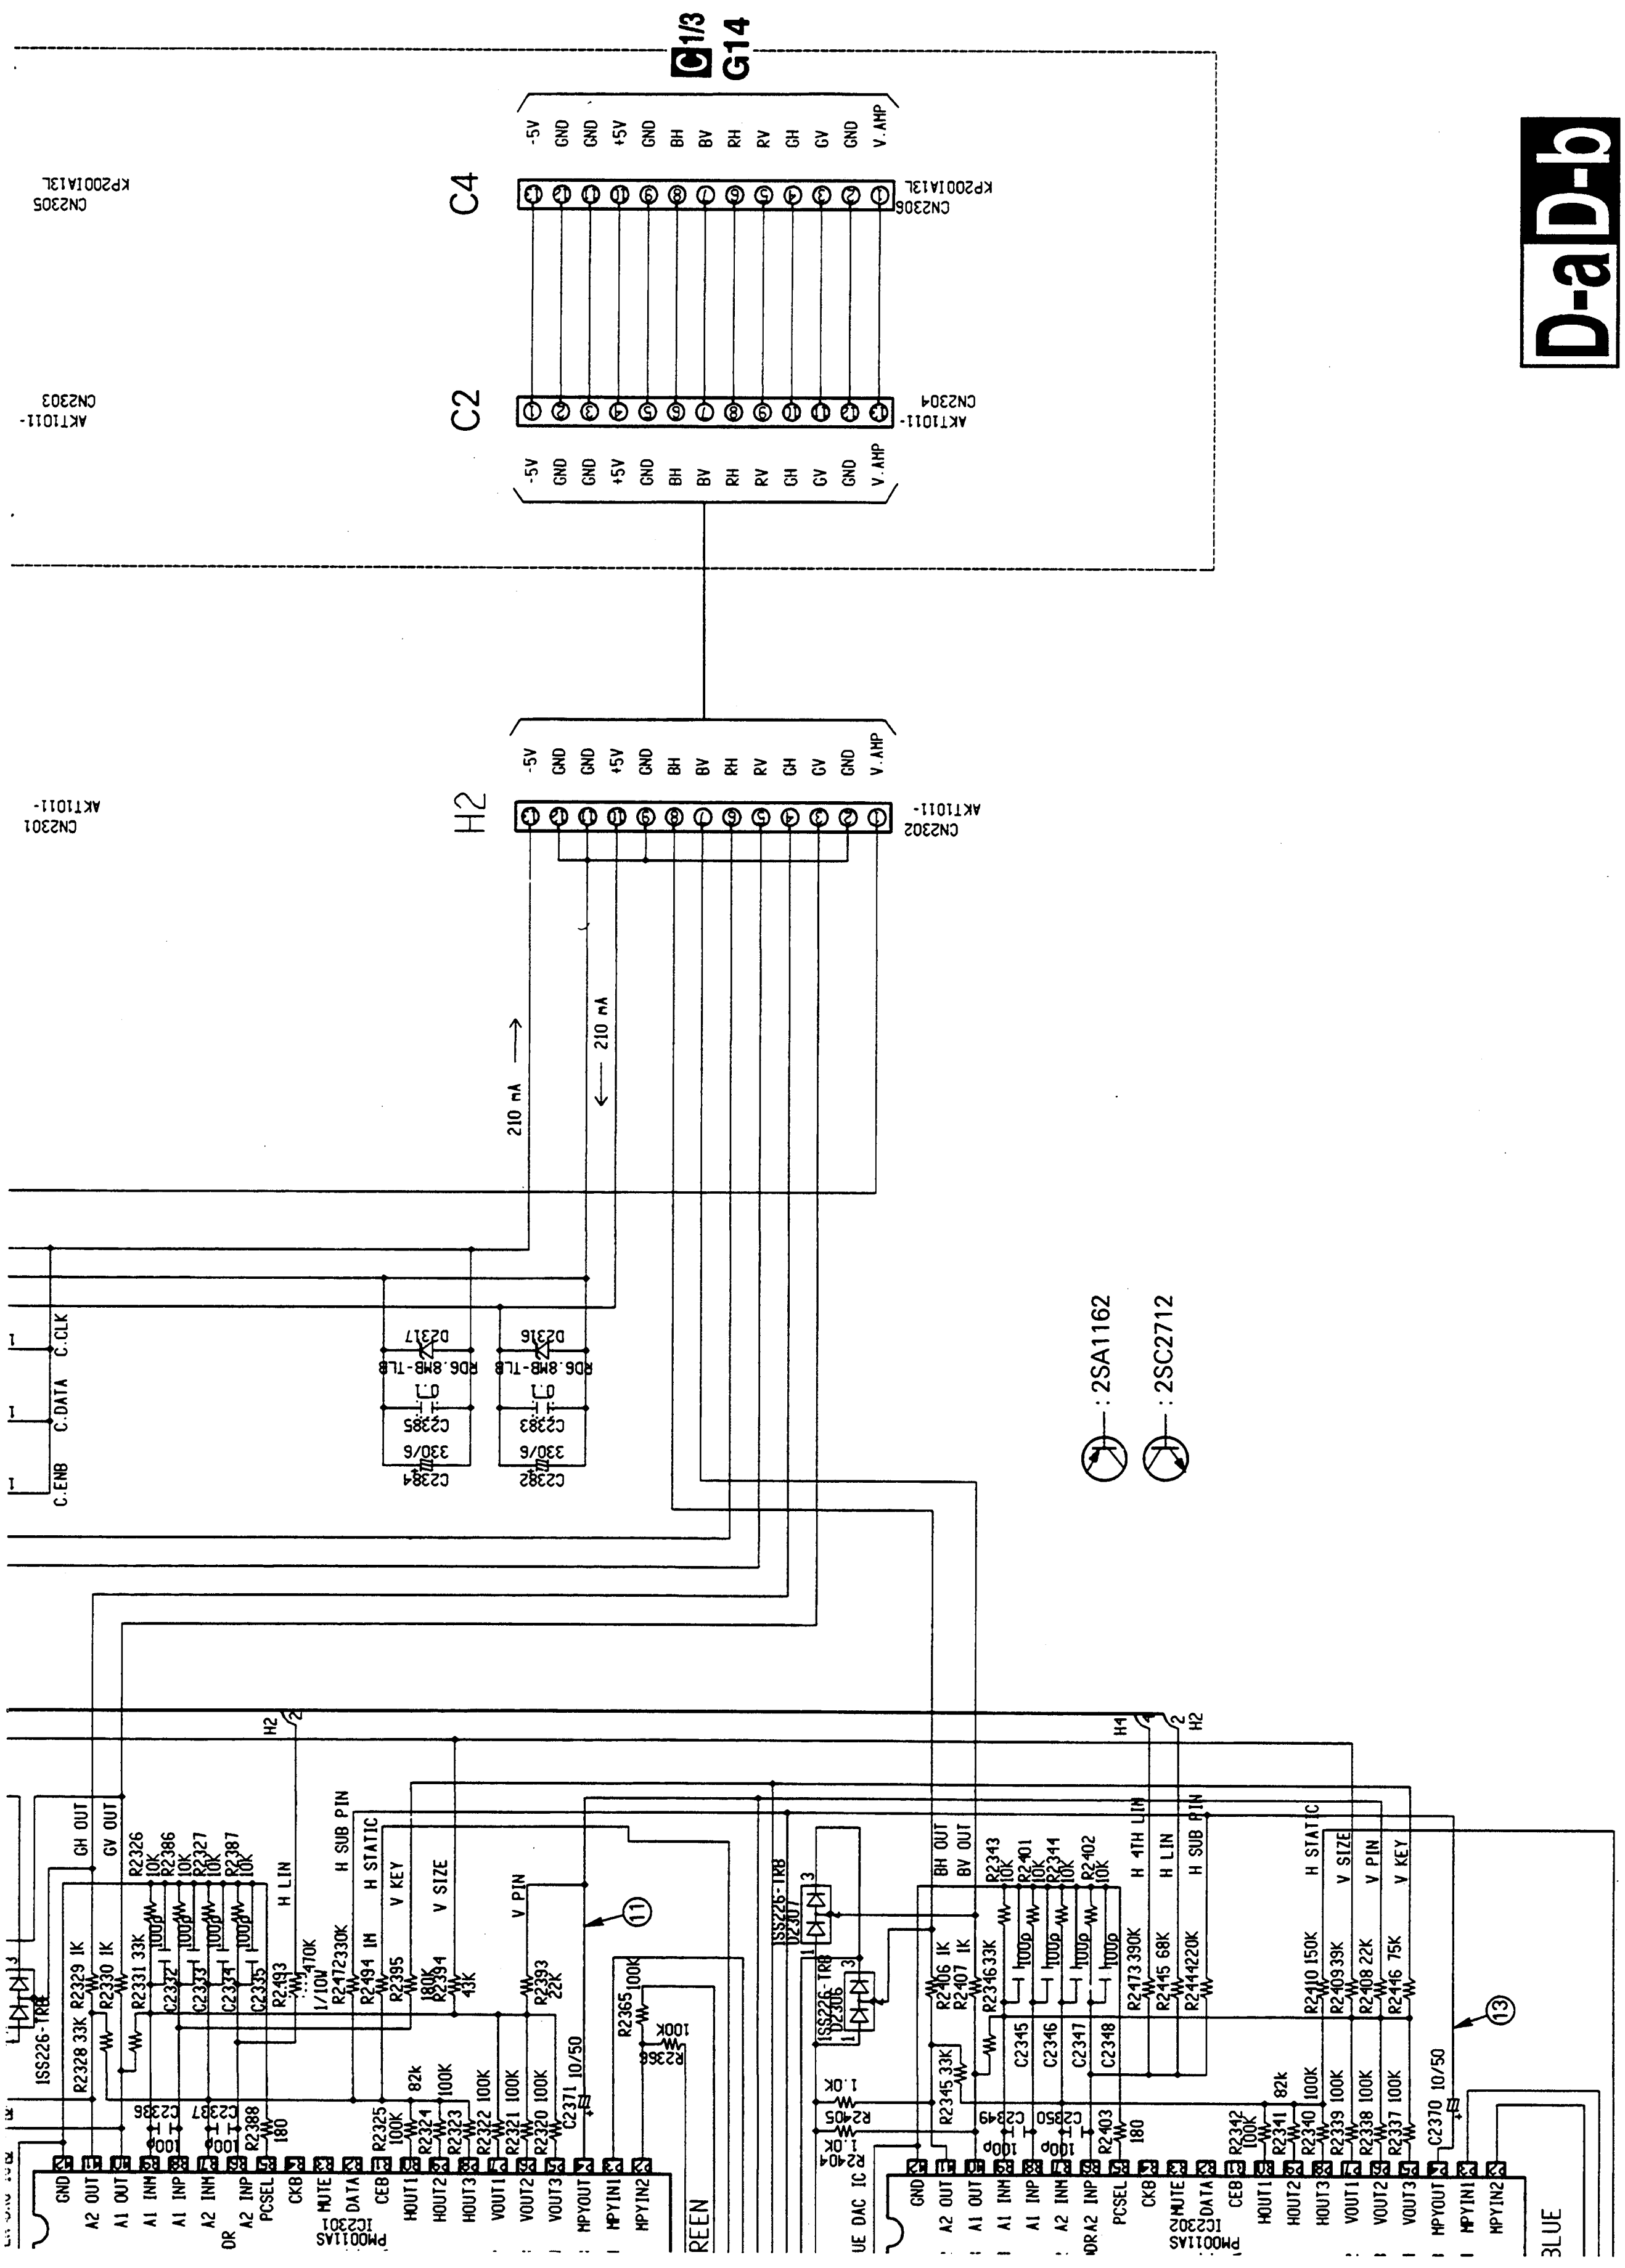
C1/3
G14
C4
C2
H2
CN2305
KP200IA13L
CN2306
KP200IA13L
CN2303
AKT1011-
CN2304
AKT1011-
CN2301
AKT1011-
CN2302
AKT1011-
-5V
GND
GND
+5V
GND
BH
BV
RH
RV
GH
GV
GND
V.AMP
210 mA
210 mA
C.CLK
C.DATA
C.ENB
D2317
RD6.8MB-TLB
D2316
RD6.8MB-TLB
C2385
C2383
C2384
330/6
C2382
330/6
: 2SA1162
: 2SC2712
H1
H2
GH OUT
GV OUT
BH OUT
BV OUT
H LIN
H SUB PIN
H STATIC
V KEY
V SIZE
V PIN
H 4TH LIN
1SS226-TRB
D2307
D2306
11
13
PM0011AS
IC2301
IC2302
GND
A2 OUT
A1 OUT
A1 INM
A1 INP
A2 INM
A2 INP
PCSEL
CKB
MUTE
DATA
CEB
HOUT1
HOUT2
HOUT3
VOUT1
VOUT2
VOUT3
HPYOUT
HPYIN1
HPYIN2
GREEN
BLUE
C2371 10/50
C2370 10/50

3.12 R, G AND B CRT AMP ASSEMBLIES

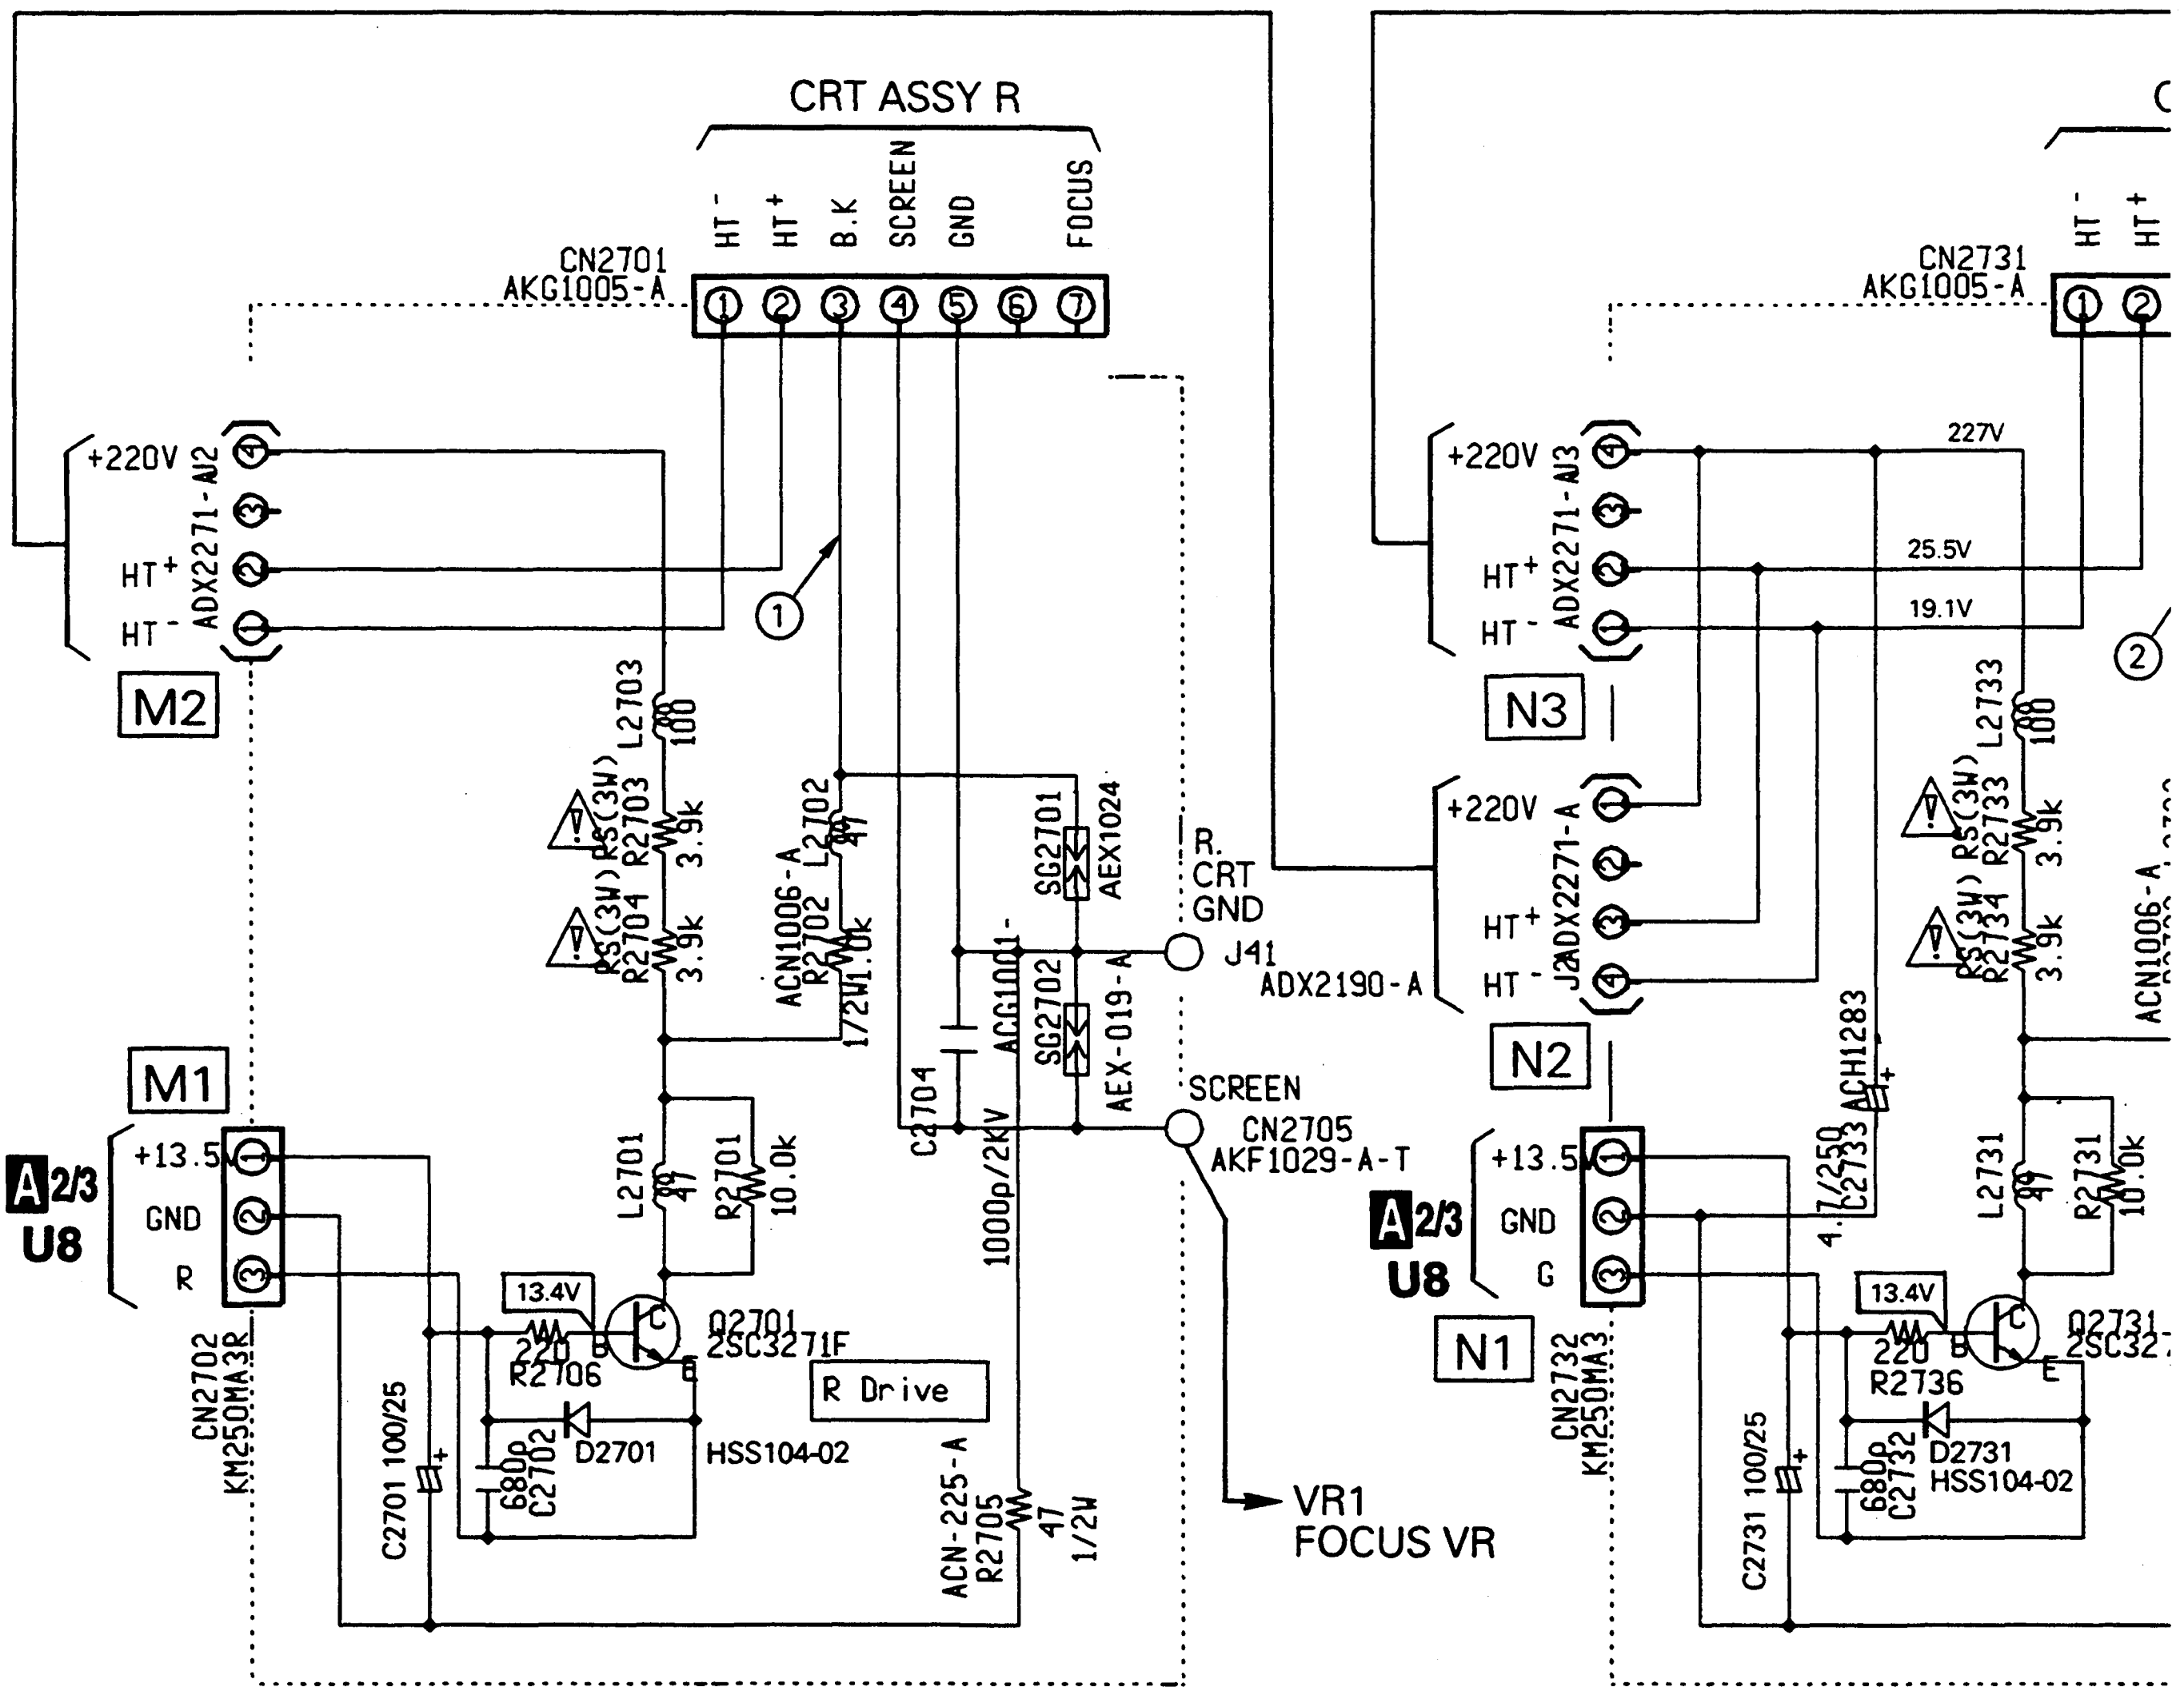
CRT ASSY R
HT⁻
HT⁺
B.K
SCREEN
GND
FOCUS
CN2701
AKG1005-A
+220V
ADX2271-AJ2
HT⁺
HT⁻
M2
①
L2703
100
R2703
RS(3W)
3.9k
R2704
RS(3W)
3.9k
L2702
47
ACN1006-A
R2702
1.0k
1/2W
SG2701
AEX1024
SG2702
AEX-019-A
ACG1001-
C2704
1000p/2kV
R.
CRT
GND
J41
ADX2190-A
SCREEN
CN2705
AKF1029-A-T
M1
A 2/3
U8
+13.5V
GND
R
CN2702
KM250MA3R
L2701
47
R2701
10.0k
13.4V
220
R2706
Q2701
2SC3271F
D2701
HSS104-02
R Drive
C2701 100/25
680p
C2702
ACN-225-A
R2705
47
1/2W
VR1
FOCUS VR
CN2731
AKG1005-A
HT⁻
HT⁺
+220V
ADX2271-AJ3
HT⁺
HT⁻
N3
227V
25.5V
19.1V
②
+220V
ADX2271-A
HT⁺
HT⁻
J
N2
L2733
100
R2733
RS(3W)
3.9k
R2734
RS(3W)
3.9k
ACN1006-A
ACH1283
4.7/250
C2733
A 2/3
U8
+13.5V
GND
G
N1
CN2732
KM250MA3
L2731
47
R2731
10.0k
13.4V
220
R2736
Q2731
2SC32
D2731
HSS104-02
C2731 100/25
680p
C2732

F R CRT AMP ASSY (AWZ6191)

G G CRT AMP ASS

1.RESISTORS

Indicated in Ω,1/4W,1/8W, 5% tolerance unless otherwise noted

K:KΩ M:MΩ

2.CAPACITORS

Indicated in capacity (μF)/voltage (V) unless otherwise noted p:pF.

Indication without voltage is 50V except electrolytic capacitor.

* C2703,2733,2763 : ACH-378-0
* C2704,C2734,C2764 : ACG1001-A-F

① CN2701- pin 3 (R B.K)
V : 50V/div, H : 20μsec/div

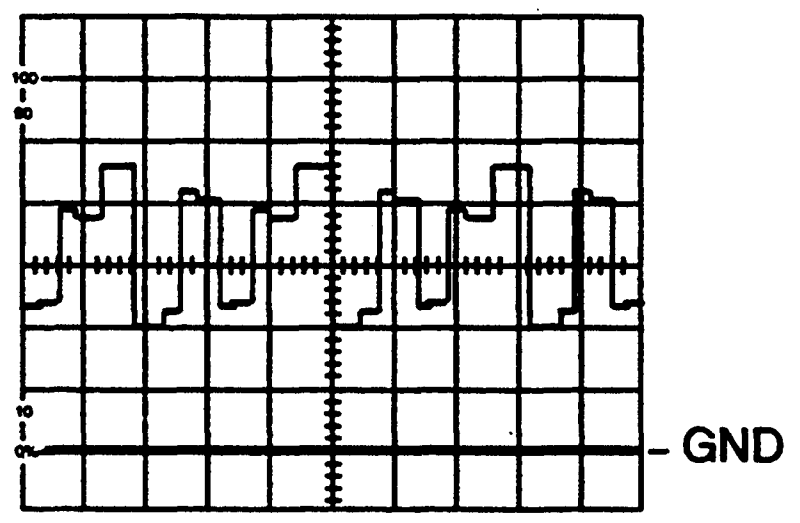

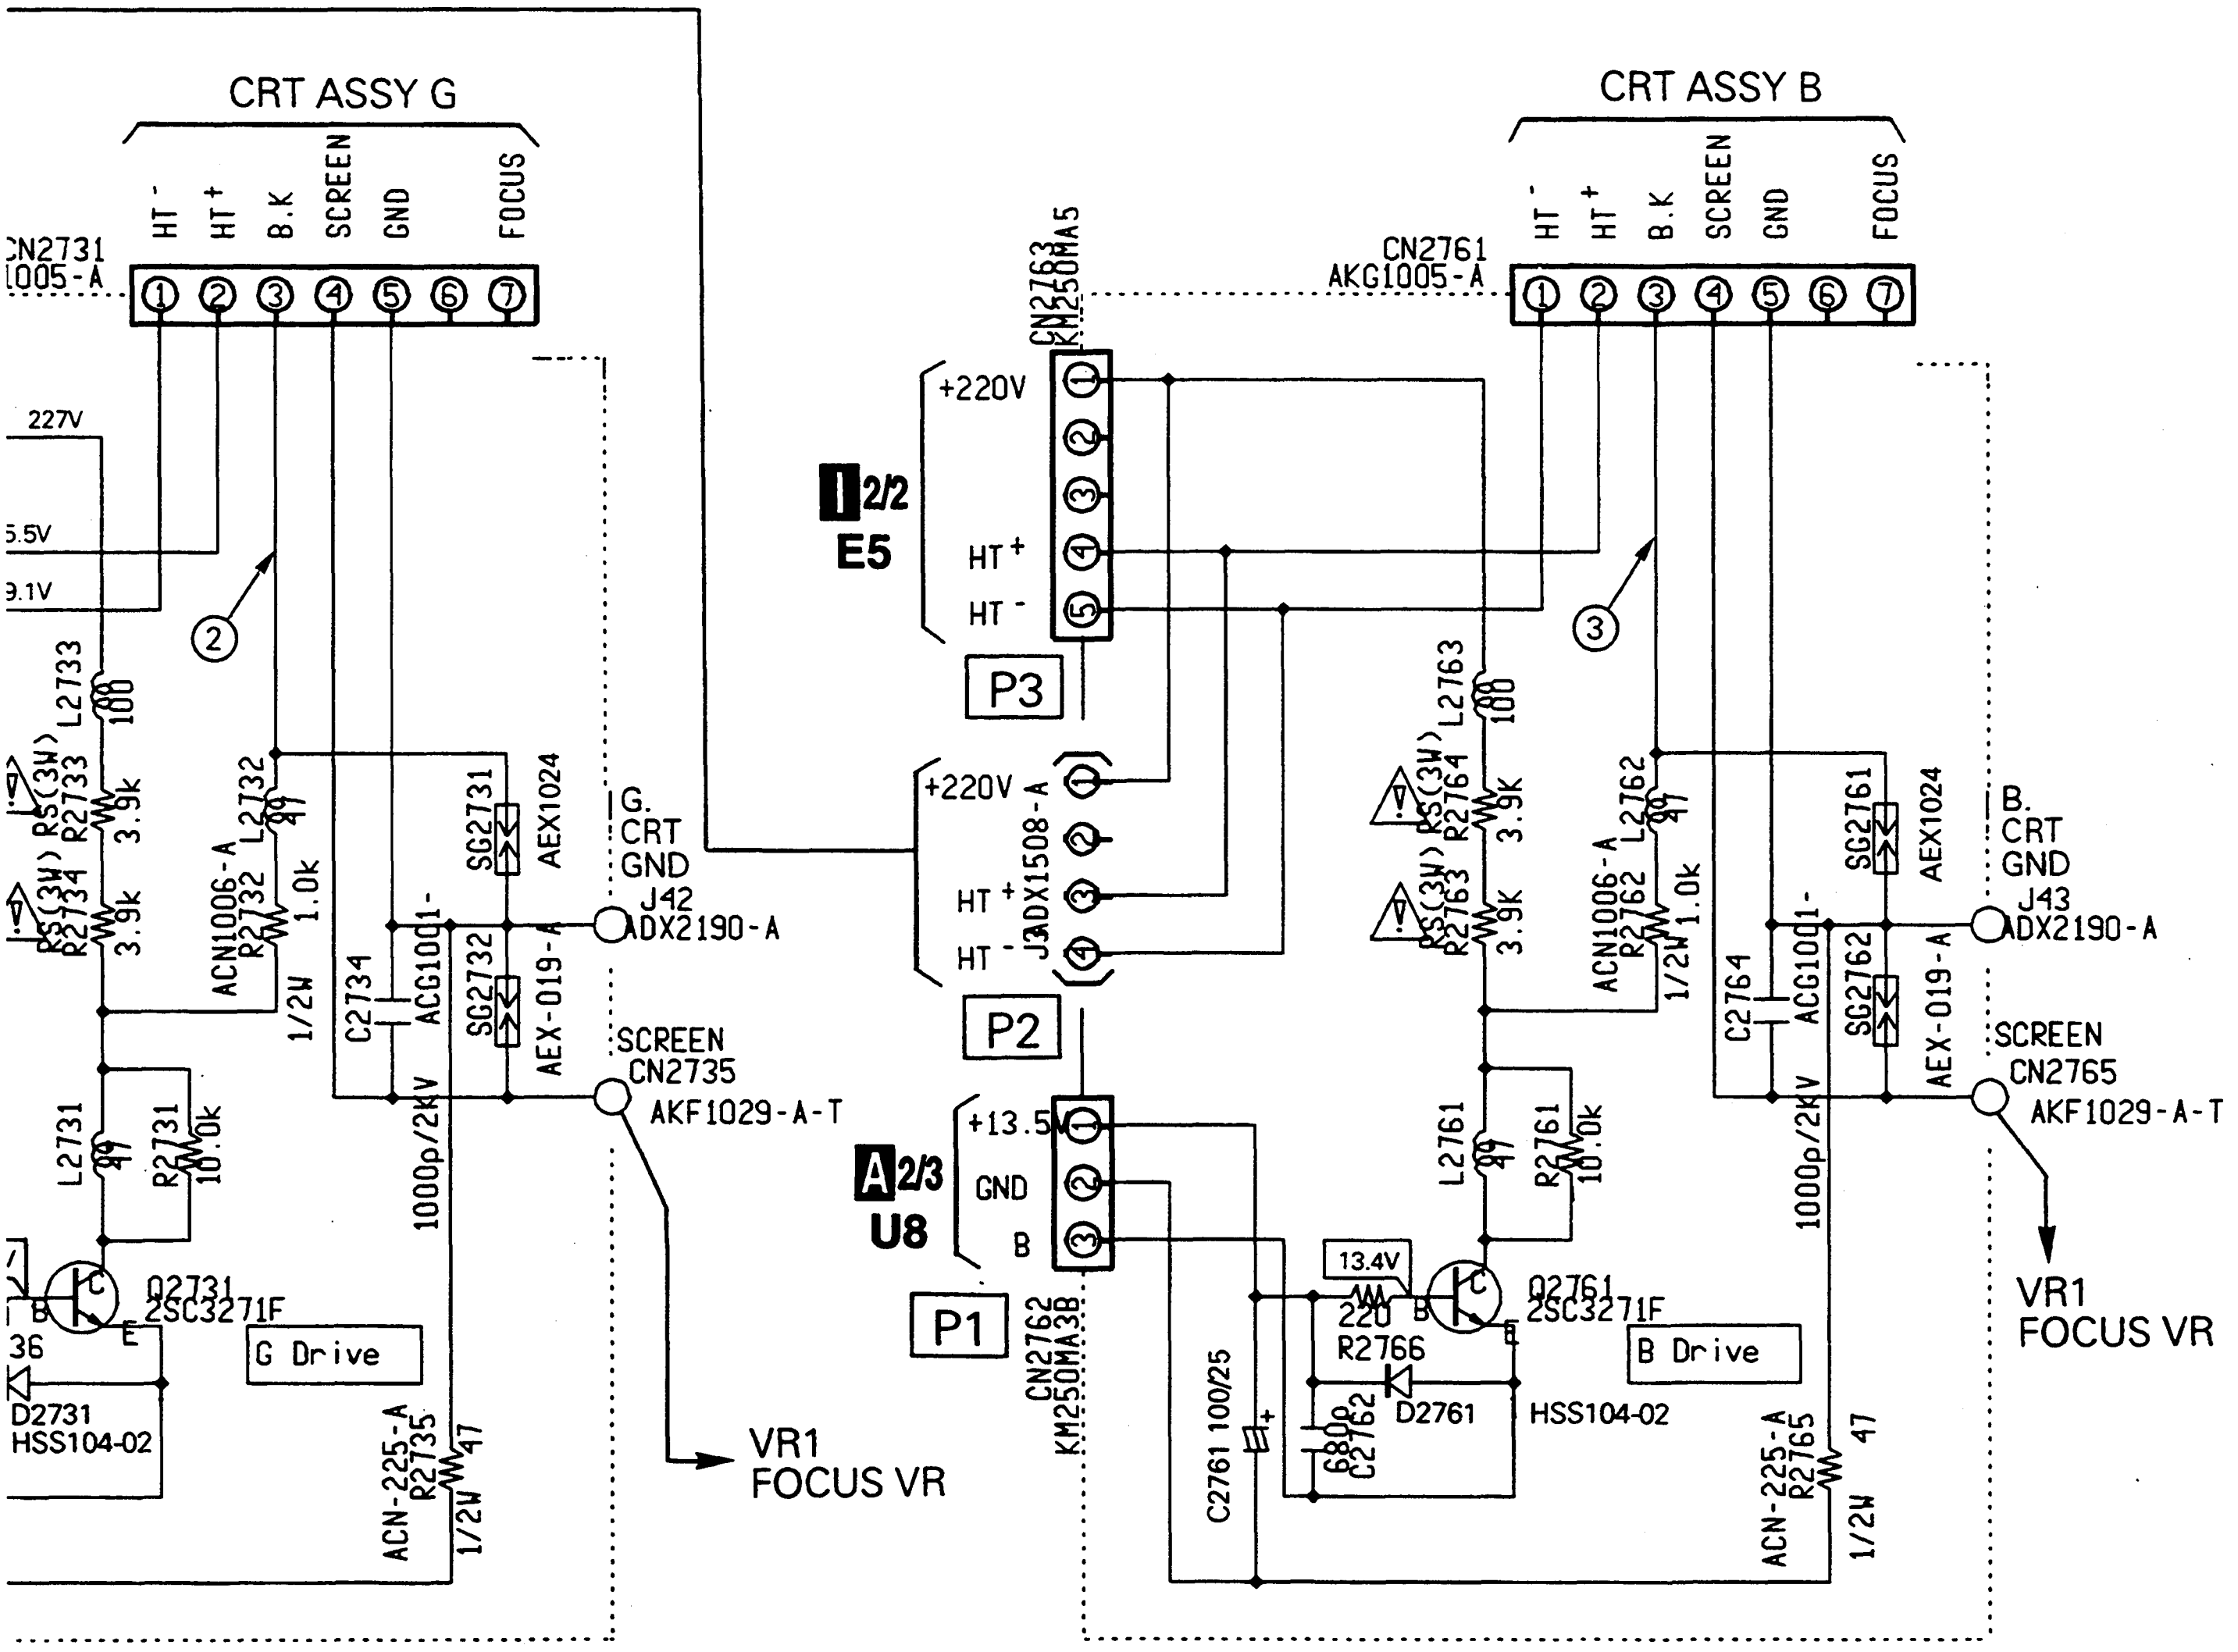
CRT ASSY G
HT -
HT +
B.K
SCREEN
GND
FOCUS
CN2731
1005-A
227V
5.5V
9.1V
②
L2733 100
RS(3W) R2733 3.9k
RS(3W) R2734 3.9k
ACN1006-A R2732 1.0k 1/2W
L2732 47
C2734
ACG1001-
1000p/2kV
SG2731 AEX1024
SG2732 AEX-019-A
G. CRT GND
J42 ADX2190-A
SCREEN CN2735 AKF1029-A-T
VR1 FOCUS VR
L2731 47
R2731 10.0k
Q2731 2SC3271F
B
E
36
D2731 HSS104-02
G Drive
ACN-225-A R2735 47 1/2W
CN2763 KM250MA5
I 2/2 E5
+220V
HT +
HT -
P3
+220V
J3 ADX1508-A
HT +
HT -
P2
A 2/3 U8
+13.5V
GND
B
P1
CN2762 KM250MA3B
CRT ASSY B
HT -
HT +
B.K
SCREEN
GND
FOCUS
CN2761
AKG1005-A
③
L2763 100
RS(3W) R2764 3.9k
RS(3W) R2763 3.9k
ACN1006-A R2762 1.0k 1/2W
L2762 47
C2764
ACG1001-
1000p/2kV
SG2761 AEX1024
SG2762 AEX-019-A
B. CRT GND
J43 ADX2190-A
SCREEN CN2765 AKF1029-A-T
VR1 FOCUS VR
L2761 47
R2761 10.0k
13.4V
220 R2766
Q2761 2SC3271F
B
E
D2761
HSS104-02
B Drive
C2761 100/25
680p C2762
ACN-225-A R2765 47 1/2W

MP ASSY (AWZ6192)

H B CRT AMP ASSY (AWZ6193)

② CN2731- pin 3 (G B.K)
V : 50V/div, H : 20μsec/div

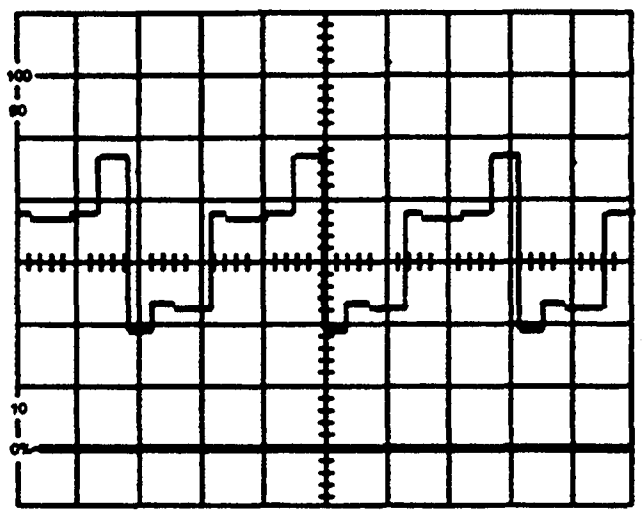

③ CN2761- pin 3 (B B.K)
V : 50V/div, H : 20μsec/div

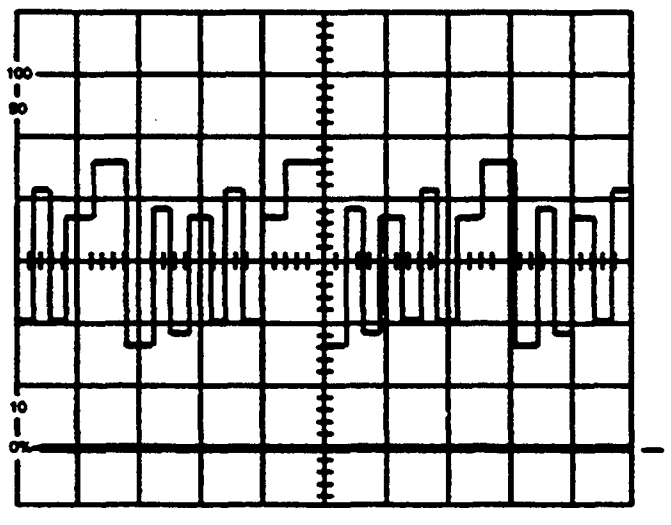

3.13 POWER SUPPLY SERVICE ASSY (1/2)

▭ : CHARGED SECTION

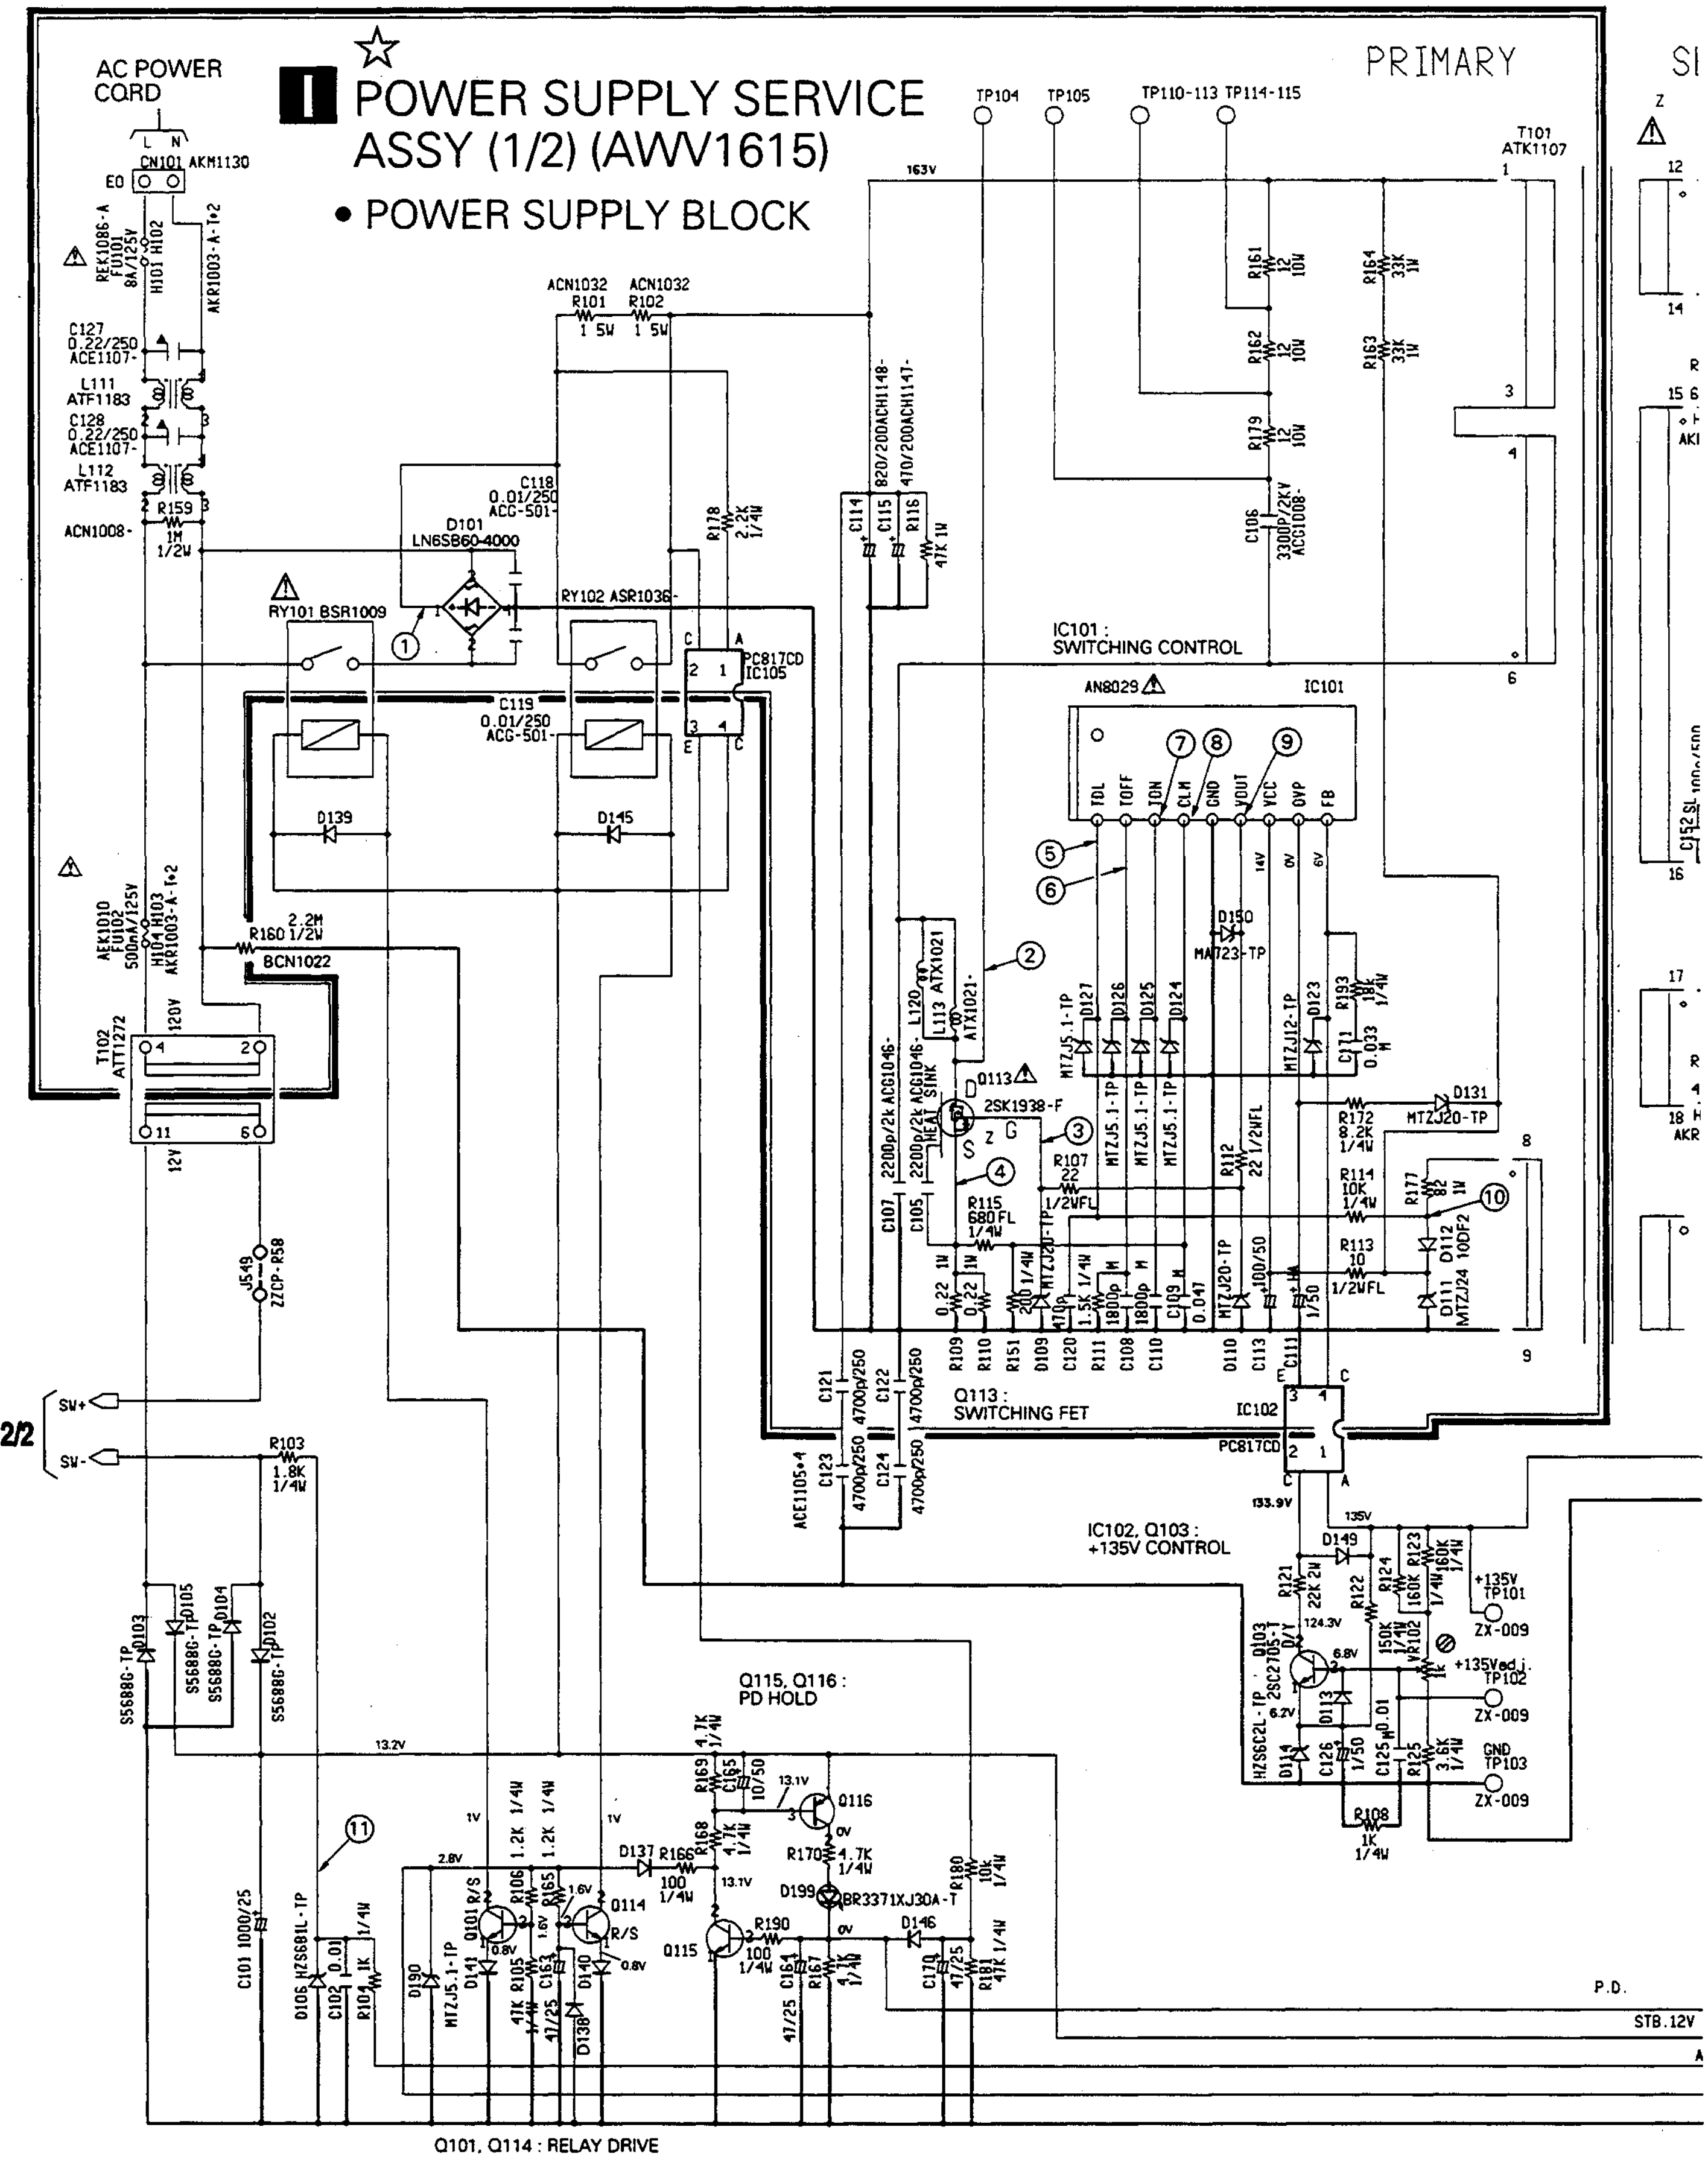
I POWER SUPPLY SERVICE ASSY (1/2) (AWV1615)
• POWER SUPPLY BLOCK
PRIMARY
AC POWER CORD
CN101 AKM1130
EO
REK1086-A FU101 8A/125V
H101 H102
AKR1003-A-1•2
C127 0.22/250 ACE1107-
L111 ATF1183
C128 0.22/250 ACE1107-
L112 ATF1183
R159 1M 1/2W
ACN1008-
ACN1032 R101 1 5W
ACN1032 R102 1 5W
C118 0.01/250 ACG-501-
D101 LN6SB60-4000
RY101 BSR1009
RY102 ASR1036-
R178 2.2K 1/4W
PC817CD IC105
C119 0.01/250 ACG-501-
D139
D145
AEK1010 FU102 500mA/125V
H103 H104
AKR1003-A-1•2
R160 2.2M 1/2W
BCN1022
T102 ATT1272
120V
12V
J549 ZZCP-R58
SW+
SW-
2/2
R103 1.8K 1/4W
TP104 TP105 TP110-113 TP114-115
163V
T101 ATK1107
R161 12 10W
R162 12 10W
R179 12 10W
R164 33K 1W
R163 33K 1W
C114 820/200ACH1148-
C115 470/200ACH1147-
R116 47K 1W
C106 3300P/2KV ACG1008-
IC101 : SWITCHING CONTROL
AN8029
IC101
TDL TOFF TON CLM GND VOUT VCC OVP FB
14V 0V 6V
D150 MA723-TP
L120 L113 ATX1021 ATX1021-
HEAT SINK
Q113 2SK1938-F
ACG1046-
C107 2200p/2k
C105 2200p/2k
R107 22 1/2WFL
R115 680FL 1/4W
D127 D126 D125 D124 D123
MTZJ5.1-TP
MTZJ12-TP
R193 18K 1/4W
C171 0.033 M
R172 8.2K 1/4W
D131 MTZJ20-TP
R112 22 1/2WFL
R114 10K 1/4W
R177 82 1W
R113 10 1/2WFL
D112 10DF2
D111 MTZJ24
MTZJ20-TP
0.22 1W
200 1/4W
1.5K 1/4W
1800p M
0.047
100/50
1/50
R109 R110 R151 D109 C120 R111 C108 C110 C109 D110 C113 C111
C121 4700p/250
C122 4700p/250
C123 4700p/250
C124 4700p/250
ACE1105-4
Q113 : SWITCHING FET
IC102 PC817CD
133.9V
135V
IC102, Q103 : +135V CONTROL
D149
R121 22K 2W
R122
R124 160K 1/4W
R123 160K 1/4W
124.3V
+135V TP101 ZX-009
Q103 2SC2705-T O/Y
6.8V
R150 150K 1/4W
VR102 1K
+135Vadj. TP102 ZX-009
6.2V
D113
D114 HZS6C2L-TP
C126 1/50
C125 0.01
R125 3.6K 1/4W
GND TP103 ZX-009
R108 1K 1/4W
D103 S5688G-TP
D105 S5688G-TP
D104 S5688G-TP
D102 S5688G-TP
13.2V
Q115, Q116 : PD HOLD
R169 4.7K 1/4W
C165 10/50
13.1V
Q116
R168 4.7K 1/4W
R170 4.7K 1/4W
D199 BR3371XJ30A-T
R180 10K 1/4W
D137
R166 100 1/4W
R106 1.2K 1/4W
R165 1.2K 1/4W
2.8V
1V
1.6V
0.8V
Q101 R/S
Q114 R/S
Q115
R190 100 1/4W
D146
C101 1000/25
D106 HZS6B1L-TP
C102 0.01
R104 1K 1/4W
D190
D141 MTZJ5.1-TP
R105 47K 1/4W
C163 47/25
D140
D138
C164 47/25
R167 4.7K 1/4W
C170 47/25
R181 47K 1/4W
P.D.
STB.12V
Q101, Q114 : RELAY DRIVE

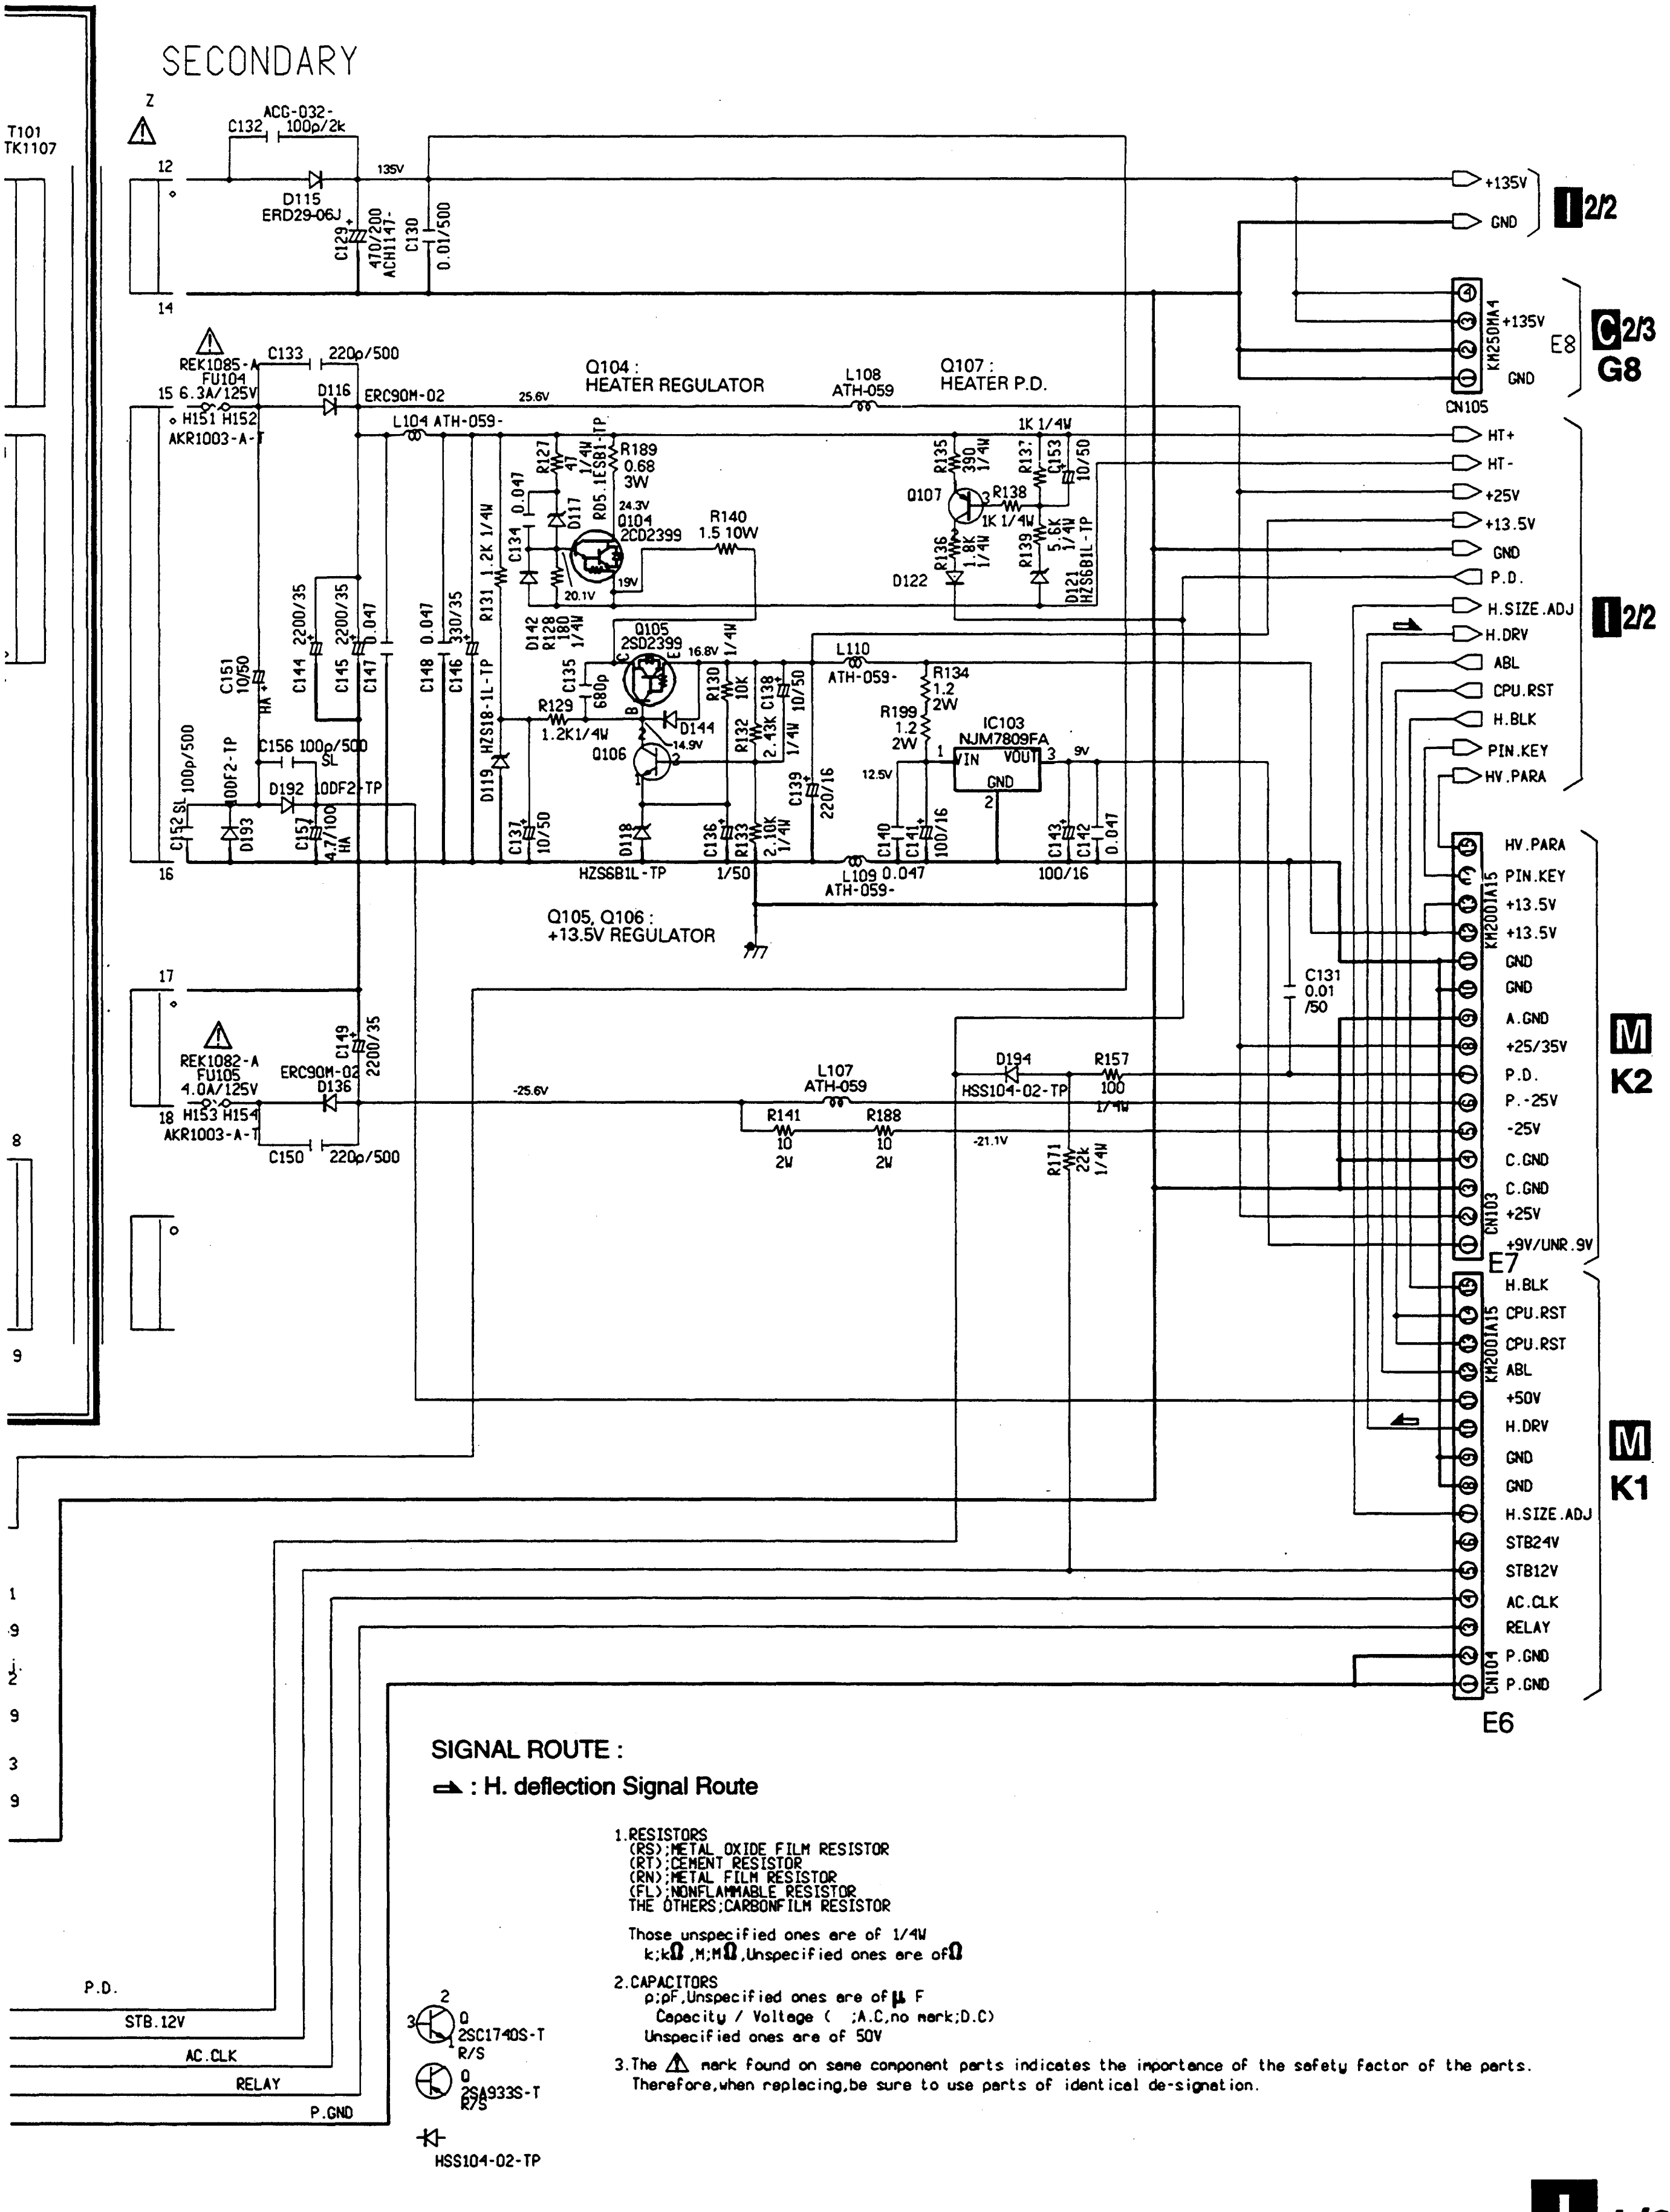
SECONDARY
T101
TK1107
Z
C132 ACG-032- 100p/2k
D115 ERD29-06J
135V
C129 470/200 ACH1147-
C130 0.01/500
12
14
REK1085-A FU104 6.3A/125V
H151 H152 AKR1003-A-T
C133 220p/500
D116 ERC90M-02
25.6V
Q104 : HEATER REGULATOR
L108 ATH-059
Q107 : HEATER P.D.
L104 ATH-059-
R127 47 1/4W
R189 0.68 3W
RD5.1ESB1-TP
D117
C134 0.047
Q104 2CD2399
24.3V
19V
20.1V
R140 1.5 10W
R135 390 1/4W
R137 1K 1/4W
C153 10/50
Q107
R138 1K 1/4W
R136 1.8K 1/4W
R139 5.6K 1/4W
D121 HZS6B1L-TP
D122
C151 10/50
C144 2200/35
C145 2200/35
C147 0.047
C148 0.047
C146 330/35
R131 1.2K 1/4W
D142 R128 180 1/4W
Q105 2SD2399
16.8V
R130 10K 1/4W
C138 10/50
L110 ATH-059-
R134 1.2 2W
R199 1.2 2W
IC103 NJM7809FA
VIN VOUT GND
12.5V
9V
C135 680p
R129 1.2K1/4W
D144
14.9V
Q106
R132 2.43K 1/4W
C139 220/16
C156 100p/500 SL
C152 100p/500 SL
D192 10DF2-TP
D193 10DF2-TP
C157 4.7/100 HA
D119 HZS18-1L-TP
C137 10/50
D118 HZS6B1L-TP
C136 1/50
R133 2.10K 1/4W
C140 0.047
C141 100/16
L109 ATH-059-
C143 100/16
C142 0.047
16
Q105, Q106 : +13.5V REGULATOR
17
18
C149 2200/35
REK1082-A FU105 4.0A/125V
H153 H154 AKR1003-A-T
ERC90M-02 D136
C150 220p/500
-25.6V
L107 ATH-059
R141 10 2W
R188 10 2W
D194 HSS104-02-TP
R157 100 1/4W
-21.1V
R171 22k 1/4W
C131 0.01 /50
+135V
GND
I 2/2
KM250MA4
+135V
GND
CN105
E8
C 2/3
G8
HT+
HT-
+25V
+13.5V
GND
P.D.
H.SIZE.ADJ
H.DRV
ABL
CPU.RST
H.BLK
PIN.KEY
HV.PARA
I 2/2
KM200IA15
CN103
HV.PARA
PIN.KEY
+13.5V
+13.5V
GND
GND
A.GND
+25/35V
P.D.
P.-25V
-25V
C.GND
C.GND
+25V
+9V/UNR.9V
E7
M
K2
KM200IA15
CN104
H.BLK
CPU.RST
CPU.RST
ABL
+50V
H.DRV
GND
GND
H.SIZE.ADJ
STB24V
STB12V
AC.CLK
RELAY
P.GND
P.GND
E6
M
K1
P.D.
STB.12V
AC.CLK
RELAY
P.GND
2SC1740S-T R/S
2SA933S-T R/S
HSS104-02-TP

SIGNAL ROUTE :

➡ : H. deflection Signal Route

1.RESISTORS
(RS):METAL OXIDE FILM RESISTOR
(RT):CEMENT RESISTOR
(RN):METAL FILM RESISTOR
(FL):NONFLAMMABLE RESISTOR
THE OTHERS:CARBONFILM RESISTOR

Those unspecified ones are of 1/4W
k;kΩ ,M;MΩ ,Unspecified ones are of Ω

2.CAPACITORS
p;pF,Unspecified ones are of μ F
Capacity / Voltage (;A.C,no mark;D.C)
Unspecified ones are of 50V

3.The ⚠ mark found on some component parts indicates the importance of the safety factor of the parts.
Therefore,when replacing,be sure to use parts of identical de-signation.

3.14 POWER SUPPLY SERVICE ASSY (2/2)

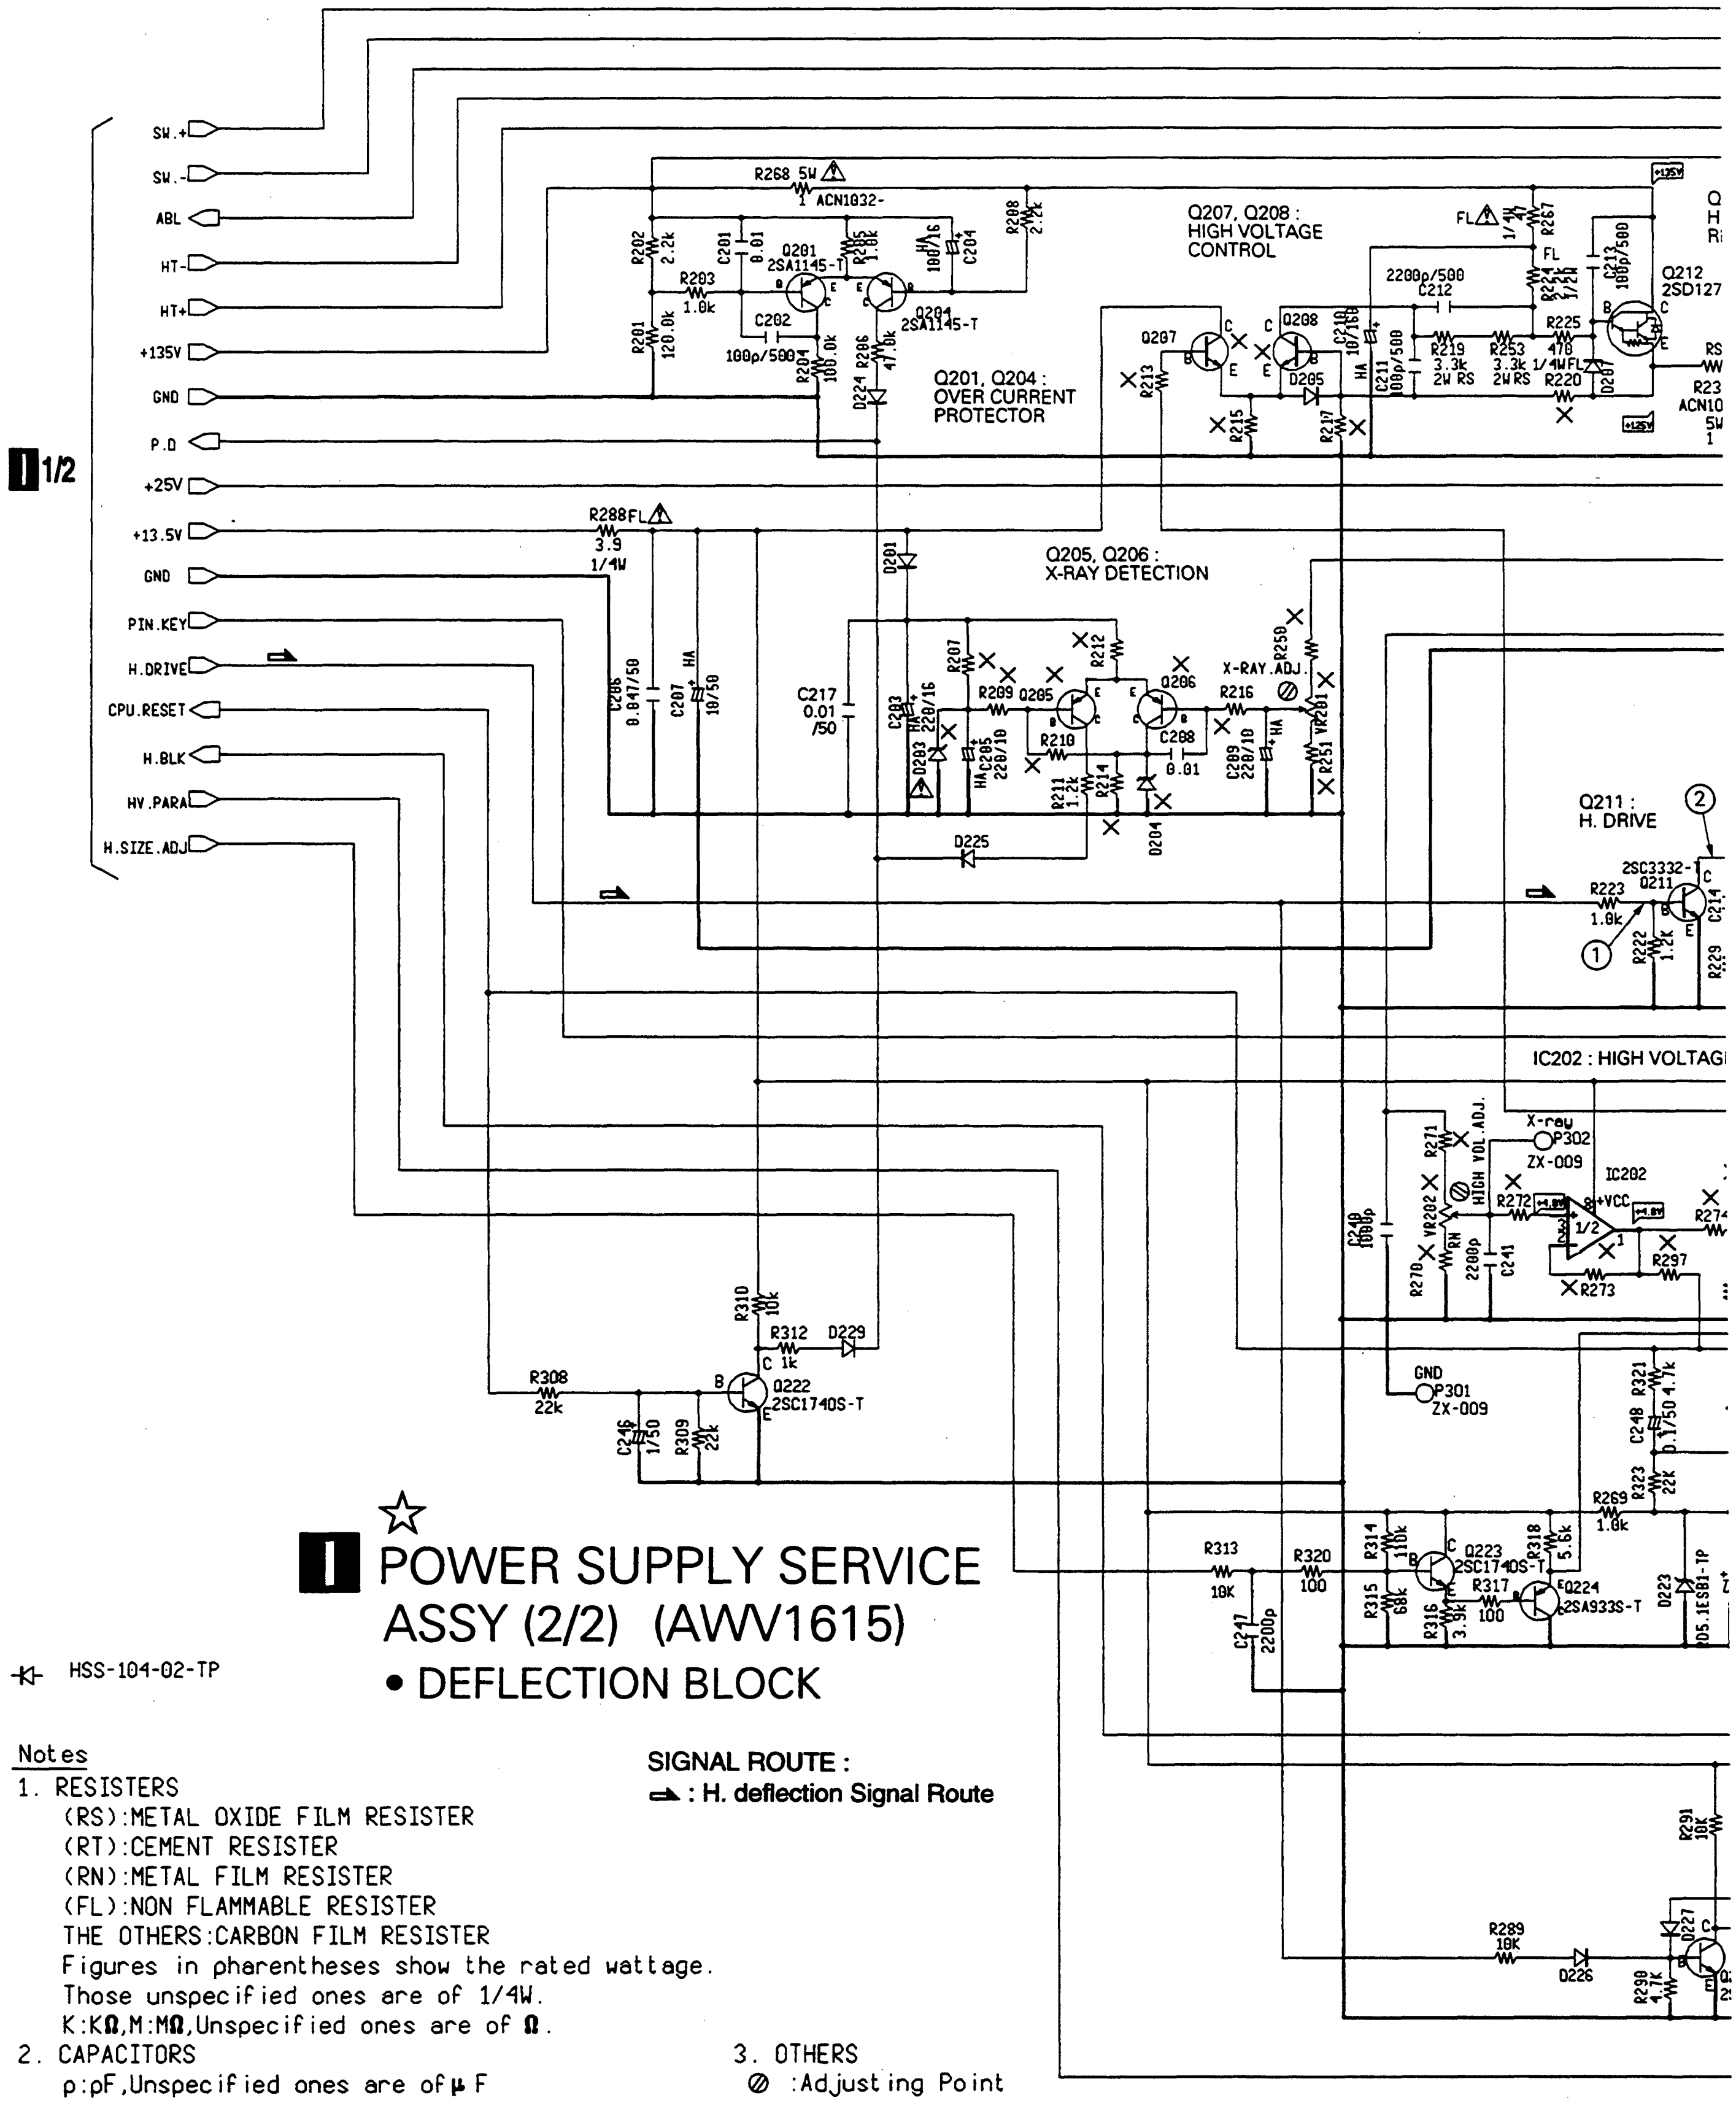
I 1/2
SW.+
SW.-
ABL
HT-
HT+
+135V
GND
P.D
+25V
+13.5V
GND
PIN.KEY
H.DRIVE
CPU.RESET
H.BLK
HV.PARA
H.SIZE.ADJ
R268 5W ⚠ 1 ACN1032-
Q201 2SA1145-T
Q204 2SA1145-T
Q201, Q204 : OVER CURRENT PROTECTOR
Q207, Q208 : HIGH VOLTAGE CONTROL
Q212 2SD127
Q205, Q206 : X-RAY DETECTION
X-RAY.ADJ.
R288FL ⚠ 3.9 1/4W
Q211 : H. DRIVE
2SC3332-T Q211
IC202 : HIGH VOLTAG
X-ray P302 ZX-009
HIGH VOL.ADJ.
IC202
GND P301 ZX-009
Q222 2SC1740S-T
Q223 2SC1740S-T
Q224 2SA933S-T
R289 10K
D226
HSS-104-02-TP

☆ **I** POWER SUPPLY SERVICE ASSY (2/2) (AWV1615)
• DEFLECTION BLOCK

SIGNAL ROUTE :
➡ : H. deflection Signal Route

Notes
1. RESISTERS
   (RS):METAL OXIDE FILM RESISTER
   (RT):CEMENT RESISTER
   (RN):METAL FILM RESISTER
   (FL):NON FLAMMABLE RESISTER
   THE OTHERS:CARBON FILM RESISTER
   Figures in pharentheses show the rated wattage.
   Those unspecified ones are of 1/4W.
   K:KΩ,M:MΩ,Unspecified ones are of Ω.
2. CAPACITORS
   p:pF,Unspecified ones are of µF
   Capacity/Voltage
   Unspecified ones are of 50V
3. OTHERS
   ⊘ :Adjusting Point
   The ⚠ mark found on same component parts indicates the importance of the safety factor of the part. Therefore,when replacing,be sure to use parts of identical designation.

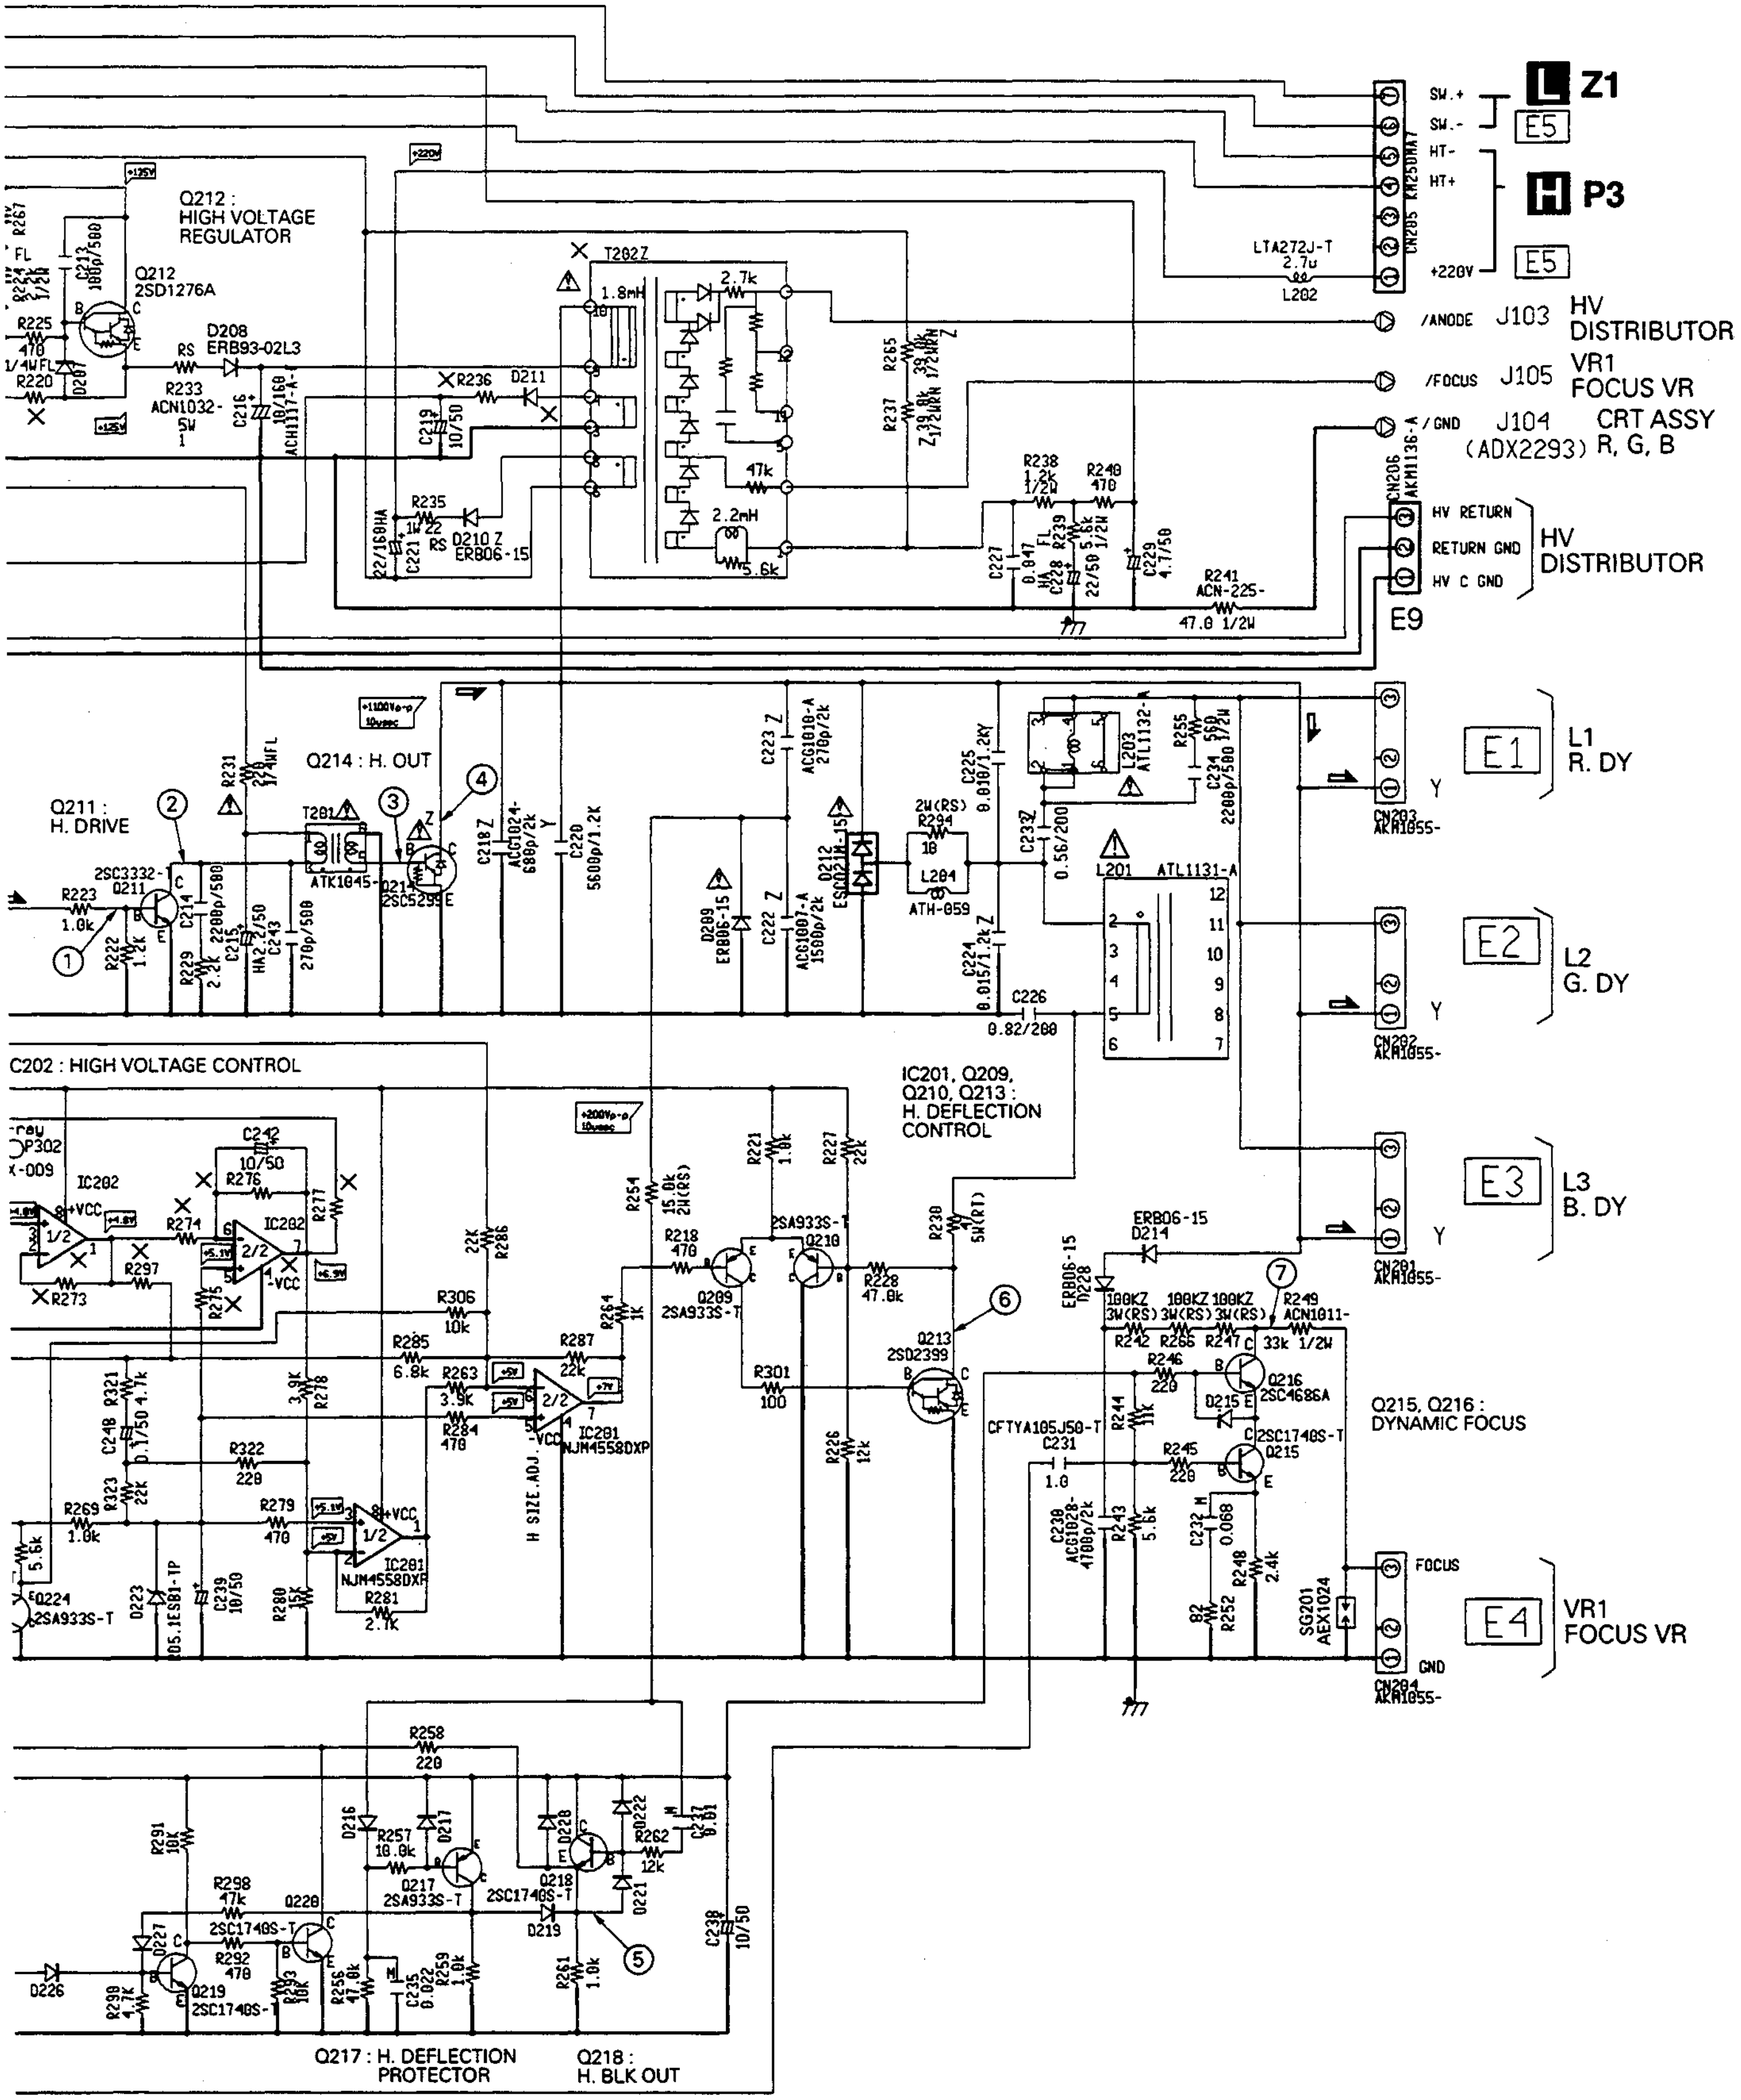
L Z1
E5
H P3
E5
SW.+
SW.-
HT-
HT+
+220V
CN205 KM250NA7
LTA272J-T
2.7u
L202
/ANODE J103 HV DISTRIBUTOR
/FOCUS J105 VR1 FOCUS VR
/GND J104 CRT ASSY
(ADX2293) R, G, B
CN206 AKM1136-A
HV RETURN
RETURN GND
HV C GND
HV DISTRIBUTOR
E9
Q212 : HIGH VOLTAGE REGULATOR
Q212 2SD1276A
D208 ERB93-02L3
R233 ACN1032-5W
R225 470
R220
C216 10/160
C219 10/50
R236
D211
T202
1.8mH
2.7k
47k
2.2mH
5.6k
R235 22
D210 ERB06-15
C221 22/160HA
R265 39.0k
R237 39.0k
R238 1.2k 1/2W
R240 470
C227 0.047
C228 22/50
R239 5.6k 1/2W
C229 4.7/50
R241 ACN-225- 47.0 1/2W
Q211 : H. DRIVE
2SC3332 Q211
R223 1.0k
R222 1.0k
C214 2200p/500
R229 2.2k
C215 4.7/50
C243 270p/500
R231 2.0 1/4WFL
T201 ATK1045
Q214 : H. OUT
Q214 2SC5299
C218
C217 ACG1024- 680p/2k
C220 5600p/1.2K
C223 ACG1010-A 270p/2k
D209 ERB06-15
C222 ACG1007-A 1500p/2k
D212 ESC021M-15
2W(RS) R294 10
L204 ATH-059
C225 0.010/1.2KV
C233 0.56/200
C224 0.015/1.2k
C226 0.82/200
L203 ATL1132-A
R255 560 1/2W
C234 2200p/500
L201 ATL1131-A
E1 L1 R. DY
CN203 AKM1055-
E2 L2 G. DY
CN202 AKM1055-
E3 L3 B. DY
CN201 AKM1055-
Y
IC202 : HIGH VOLTAGE CONTROL
IC202 1/2
IC202 2/2
C242 10/50
R276
R277
R274
R297
R273
R275
R321 4.7k
C240 0.1/50
R323 22K
R322 220
R269 1.0k
Q224 2SA933S-T
D223 D5.1ESB1-TP
C239 10/50
R280
R279 470
IC201 1/2 NJM4558DXP
R281 2.7k
R278 3.9K
R286 22K
R306 10k
R285 6.8k
R263 3.9k
R284 470
R287 22k
IC201 2/2 NJM4558DXP
H SIZE ADJ.
R264 1K
R254 15.0k 2W(RS)
R218 470
Q209 2SA933S-T
R221 1.0k
Q210 2SA933S-T
R227 22k
R228 47.0k
R301 100
R226 12k
R230 5W(RT)
Q213 2SD2399
IC201, Q209, Q210, Q213 : H. DEFLECTION CONTROL
D214 ERB06-15
R242 100KZ 3W(RS)
R266 100KZ 3W(RS)
R247 100KZ 3W(RS)
R249 ACN1011- 33k 1/2W
R246 220
Q216 2SC4686A
D215
Q215 2SC1740S-T
R245 220
R244 11k
CFTYA105J50-T C231 1.0
C230 ACG1028- 4700p/2k
R243 5.6k
C232 0.068
R248 2.4k
R252 82
SG201 AEX1024
Q215, Q216 : DYNAMIC FOCUS
FOCUS
GND
E4 VR1 FOCUS VR
CN204 AKM1055-
R258 220
R291 10K
R298 47k
Q220 2SC1740S-T
R292 470
R293 10K
Q219 2SC1740S-T
R290 4.7K
D226
D227
D216
R257 10.0k
D217
Q217 2SA933S-T
R256 47.0k
C235 0.022
R259 1.0k
D218
Q218 2SC1740S-T
D222
R262 12k
D221
D219
R261 1.0k
C237 0.01
C238 10/50
Q217 : H. DEFLECTION PROTECTOR
Q218 : H. BLK OUT
① ② ③ ④ ⑤ ⑥ ⑦

3.15 FRONT CONTROL, INDICATOR, POWER SW AND CONNECTOR A ASSEMBLIES

J FRONT CONTROL ASSY (AWZ6186)

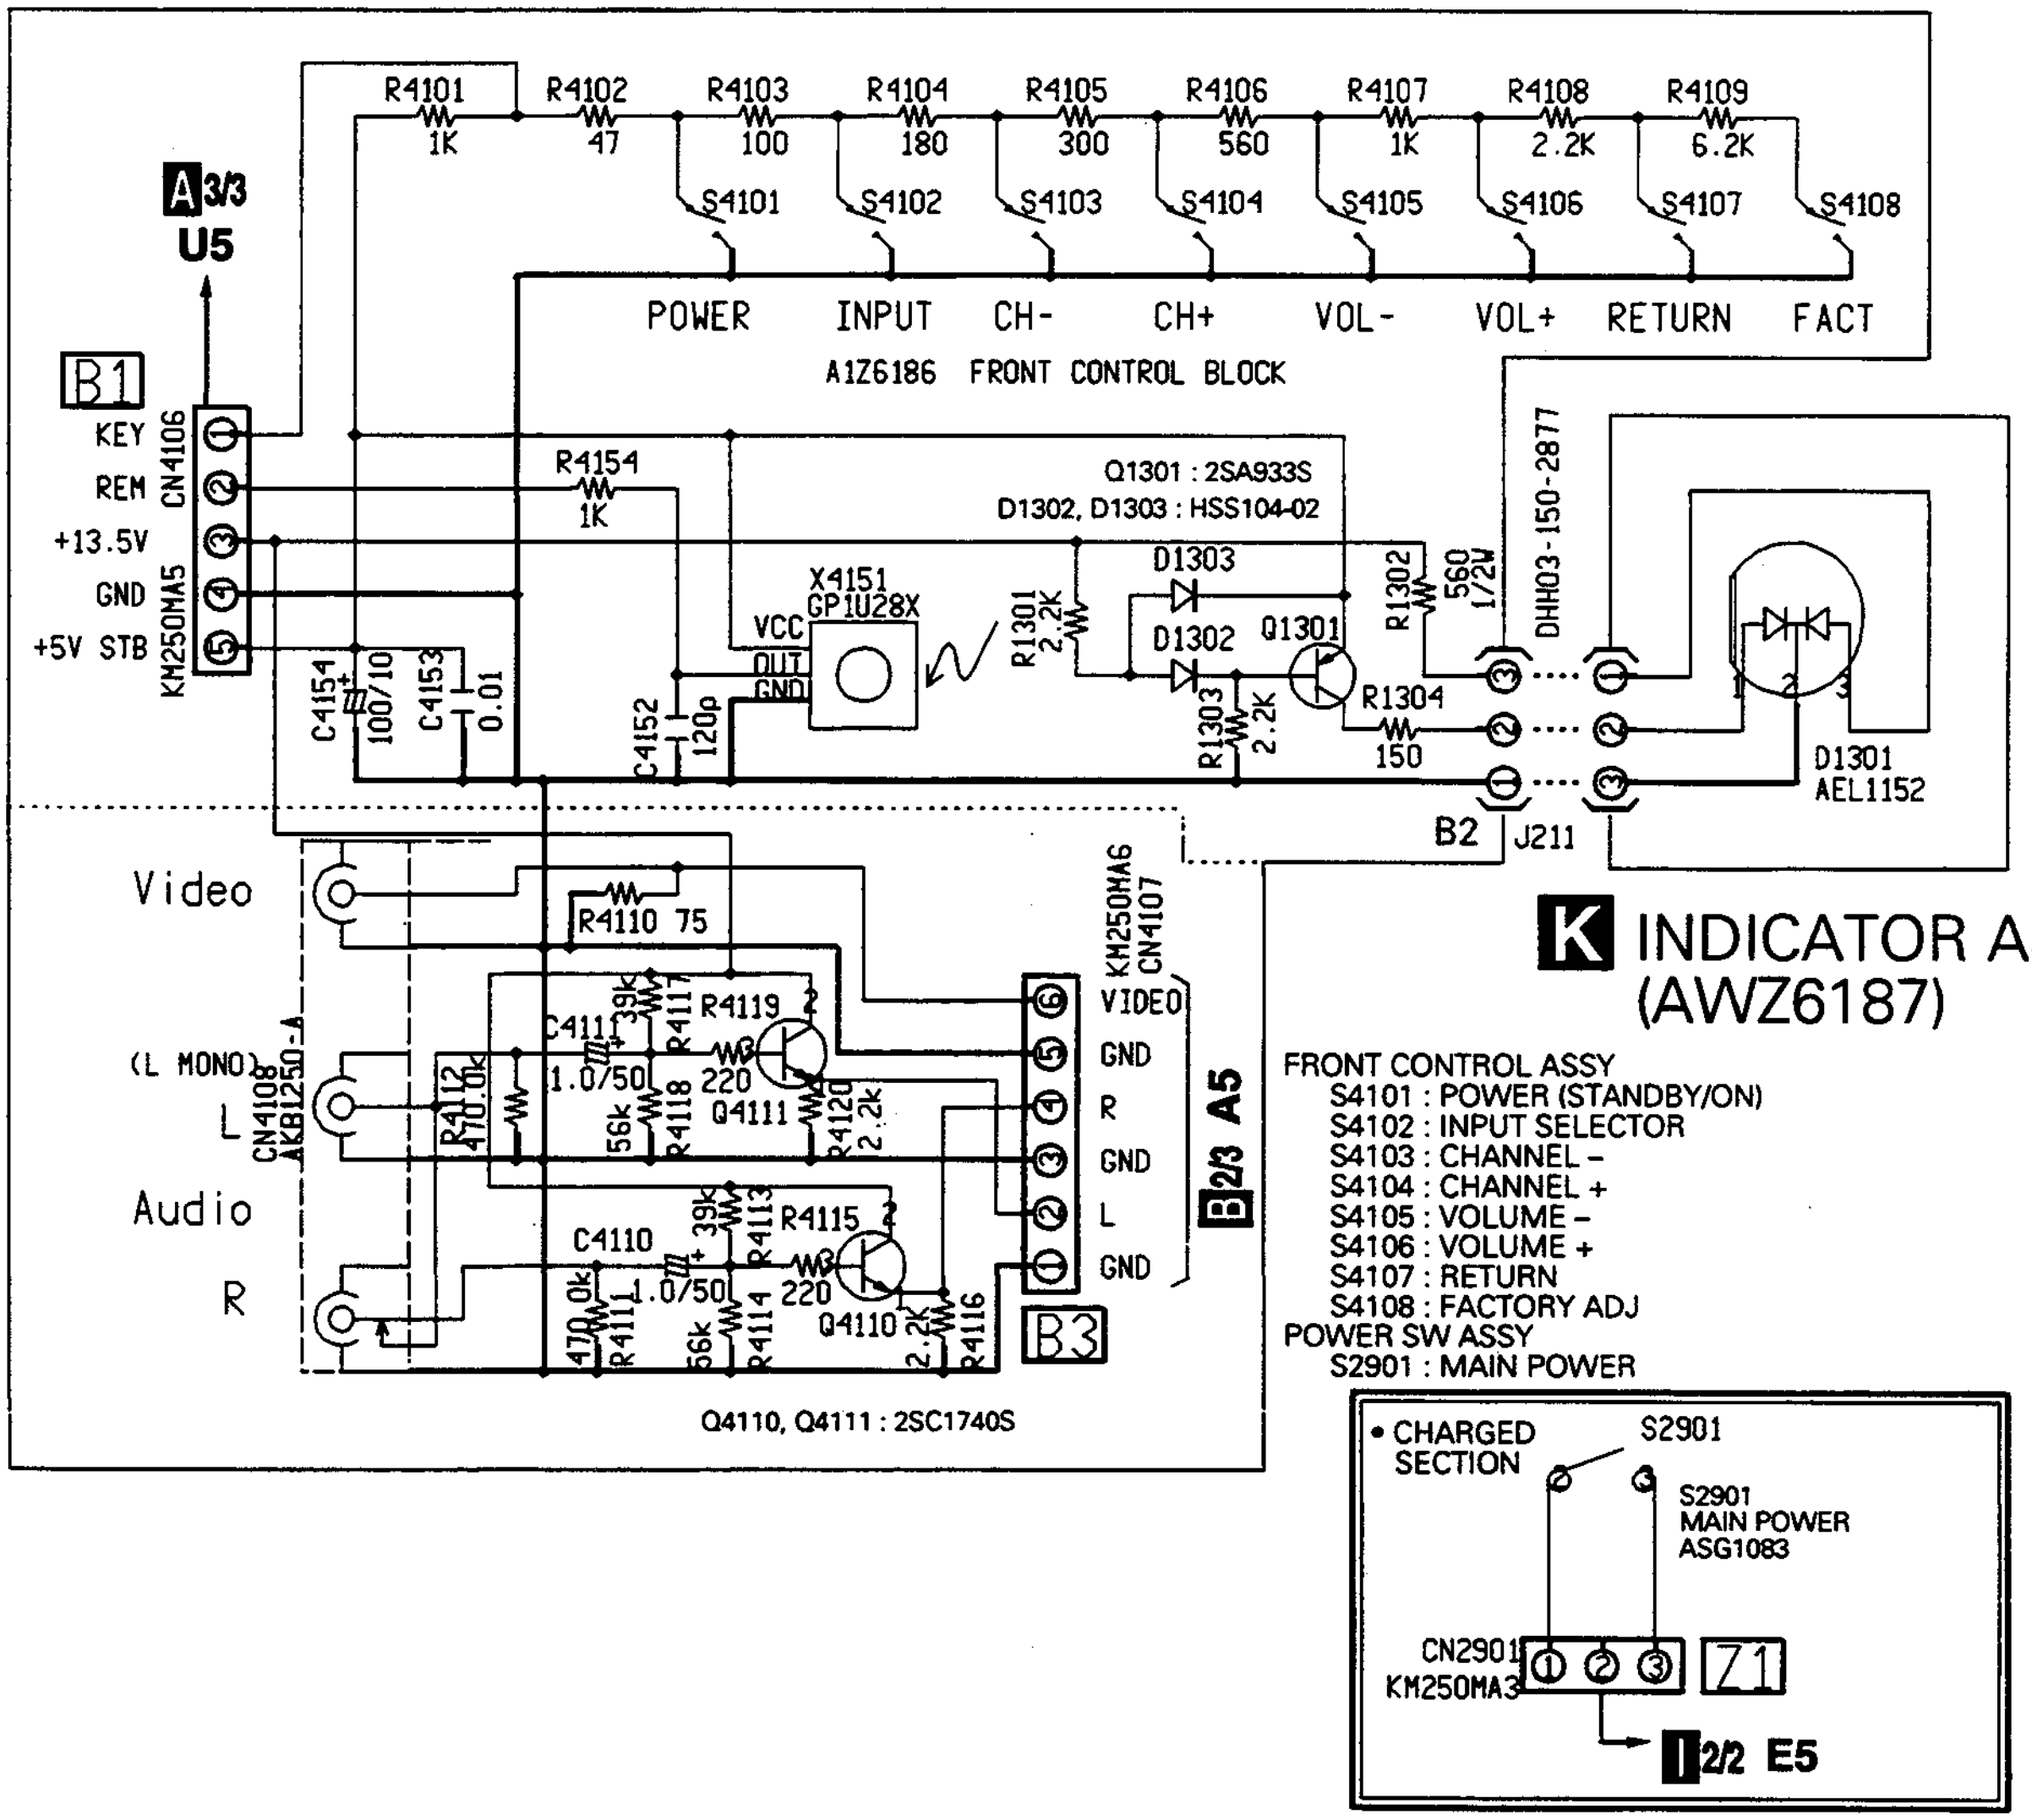
R4101 1K
R4102 47
R4103 100
R4104 180
R4105 300
R4106 560
R4107 1K
R4108 2.2K
R4109 6.2K
S4101
S4102
S4103
S4104
S4105
S4106
S4107
S4108
POWER
INPUT
CH-
CH+
VOL-
VOL+
RETURN
FACT
A1Z6186 FRONT CONTROL BLOCK
A 3/3 U5
B1
KEY
REM
+13.5V
GND
+5V STB
CN4106
KM250MA5
R4154 1K
Q1301 : 2SA933S
D1302, D1303 : HSS104-02
X4151 GP1U28X
VCC
OUT
GND
R1301 2.2K
D1303
D1302
Q1301
R1302 560 1/2W
DHH03-150-2877
R1303 2.2K
R1304 150
C4154 100/10
C4153 0.01
C4152 120p
D1301 AEL1152
B2
J211
Video
(L MONO)
L
Audio
R
CN4108 AKB1250-A
R4110 75
C4111 1.0/50
39k R4117
R4119 220
Q4111
R4112 470.0k
56k R4118
R4120 2.2k
C4110 1.0/50
39k R4113
R4115 220
Q4110
470.0k R4111
56k R4114
2.2k R4116
B3
KM250MA6 CN4107
VIDEO
GND
R
GND
L
GND
B 2/3 A5
Q4110, Q4111 : 2SC1740S
• CHARGED SECTION
S2901
S2901 MAIN POWER ASG1083
CN2901 KM250MA3
Z1
I 2/2 E5

K INDICATOR ASSY (AWZ6187)

FRONT CONTROL ASSY
S4101 : POWER (STANDBY/ON)
S4102 : INPUT SELECTOR
S4103 : CHANNEL –
S4104 : CHANNEL +
S4105 : VOLUME –
S4106 : VOLUME +
S4107 : RETURN
S4108 : FACTORY ADJ
POWER SW ASSY
S2901 : MAIN POWER

L POWER SW ASSY (AWZ6188)

M CONNECTOR A ASSY (AWZ6189)

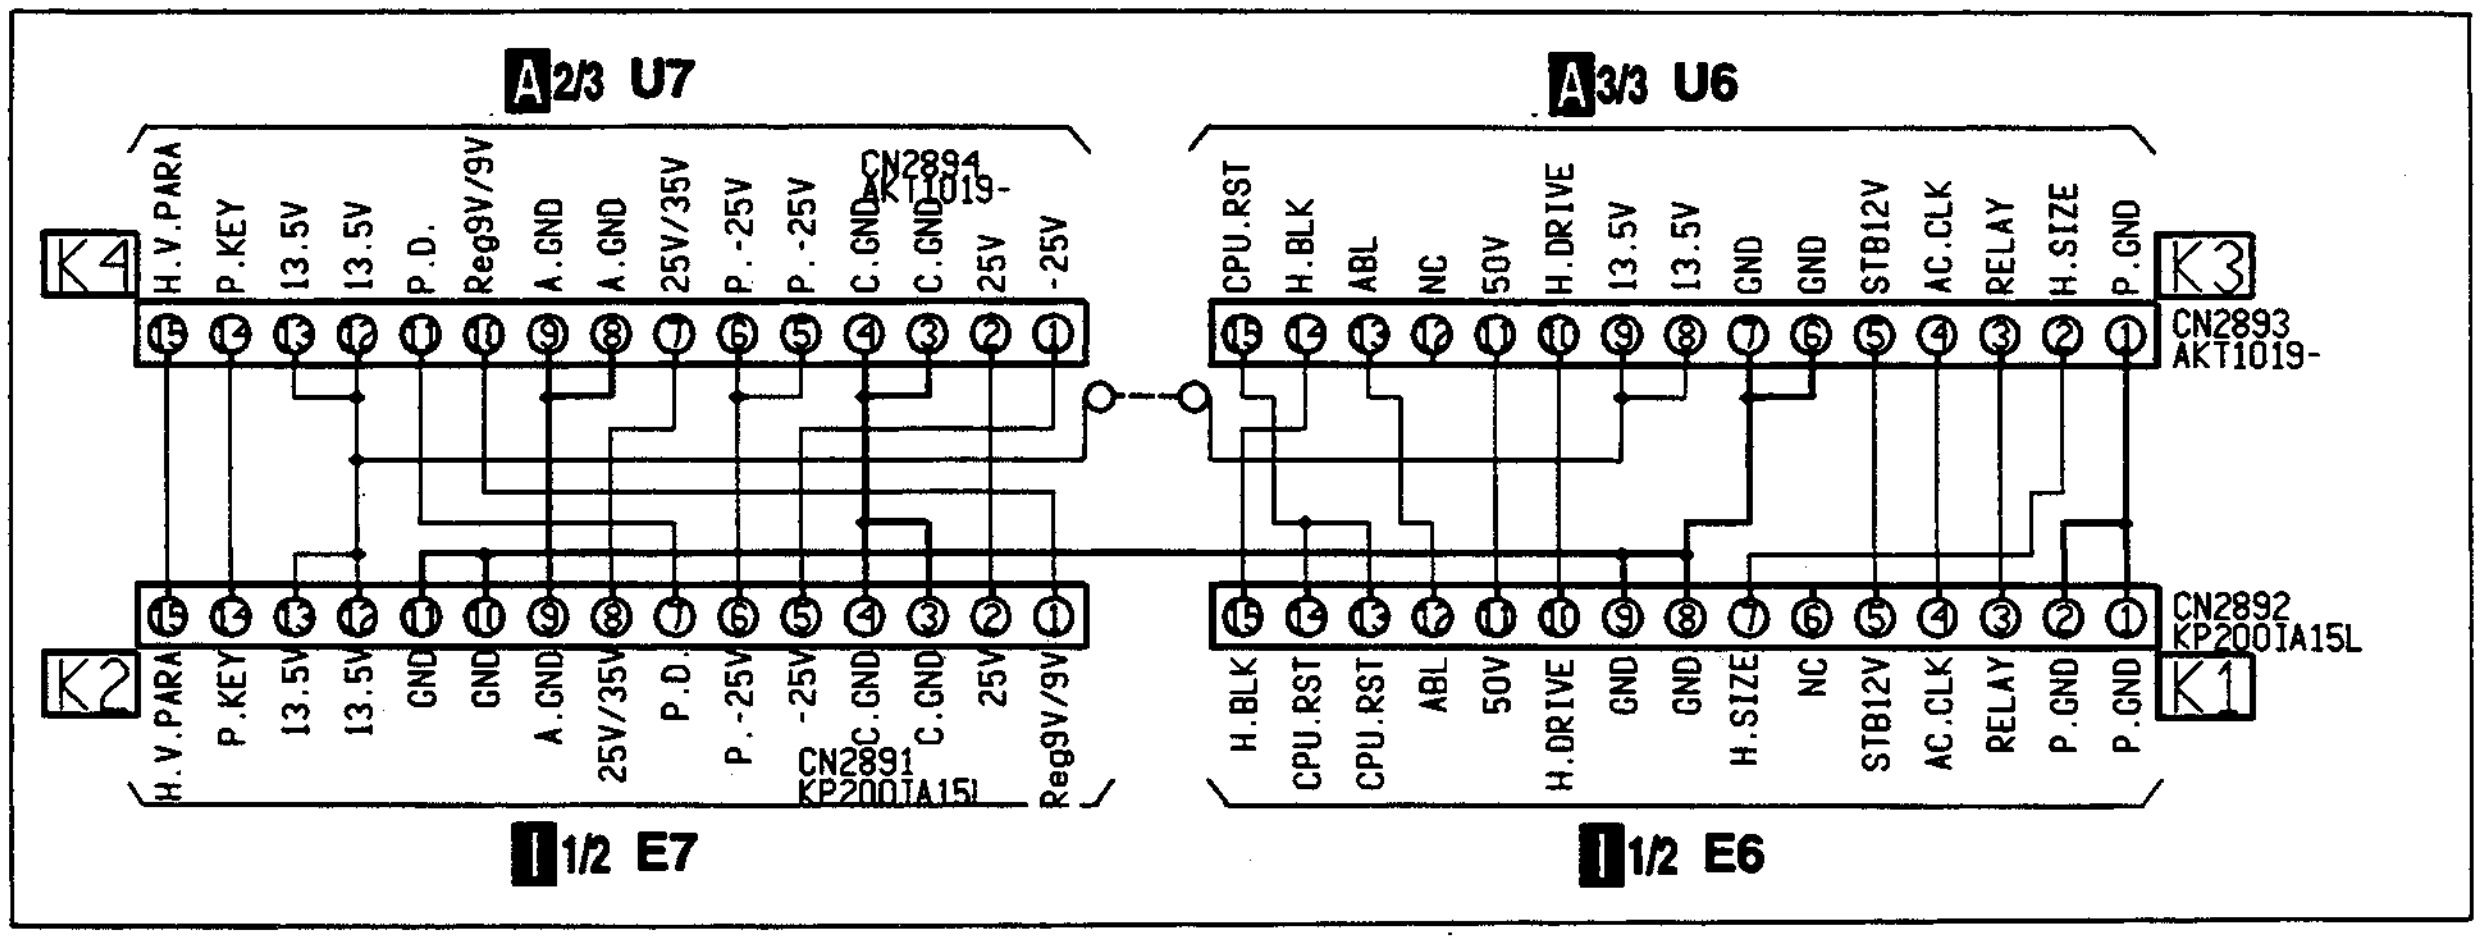
A 2/3 U7
A 3/3 U6
K4
H.V.PARA
P.KEY
13.5V
13.5V
P.D.
Reg9V/9V
A.GND
A.GND
25V/35V
P.-25V
P.-25V
C.GND
C.GND
25V
-25V
CN2894 AKT1019-
CPU.RST
H.BLK
ABL
NC
50V
H.DRIVE
13.5V
13.5V
GND
GND
STB12V
AC.CLK
RELAY
H.SIZE
P.GND
K3
CN2893 AKT1019-
CN2892 KP200IA15L
K2
H.V.PARA
P.KEY
13.5V
13.5V
GND
GND
A.GND
25V/35V
P.D.
P.-25V
-25V
C.GND
C.GND
25V
Reg9V/9V
CN2891 KP200IA15L
H.BLK
CPU.RST
CPU.RST
ABL
50V
H.DRIVE
GND
GND
H.SIZE
NC
STB12V
AC.CLK
RELAY
P.GND
P.GND
K1
I 1/2 E7
I 1/2 E6

3.16 WAVEFORMS AND VOLTAGES

A 1/3 TUNER • VIDEO ASSY (1/3)
• TUNER BLOCK

- Input signal : 9ch (Air 187.25MHz)
- Video signal : Color bar (87.5% Mod., 1kHZ ±25kHz dev.), 60dBμ input
- Range : DC range (Unless otherwise noted)

① **TV FRONT END pin 18 (VI)**
V : 1V/div, H : 20μsec/div

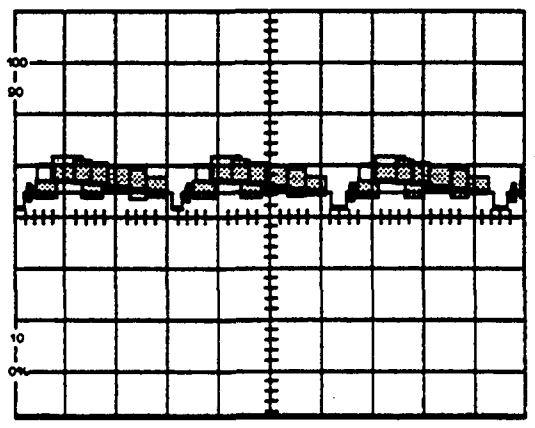

② **J697 (TV V1)**
V : 1V/div, H : 20μsec/div

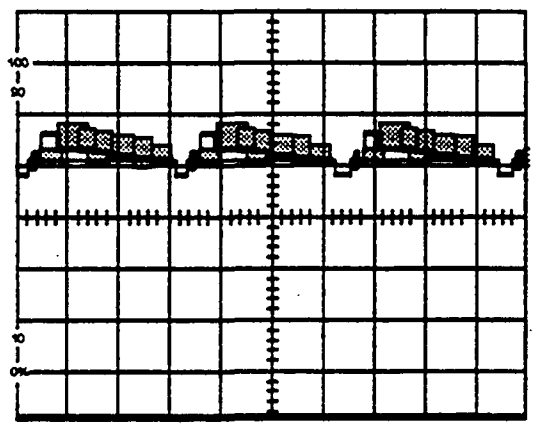

③ **D4508 Cathode (TV L)**
V : 1V/div, H : 0.5msec/div

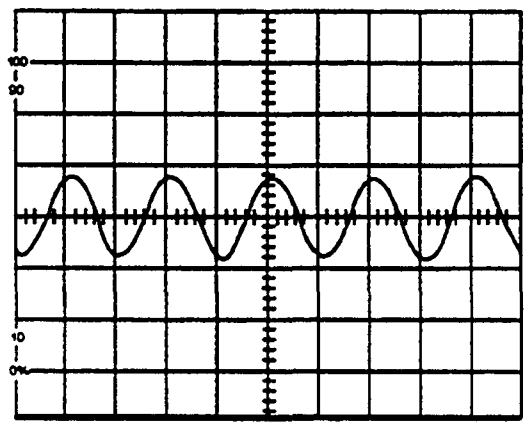

④ **D4509 Cathode (TV R)**
V : 1V/div, H : 0.5msec/div

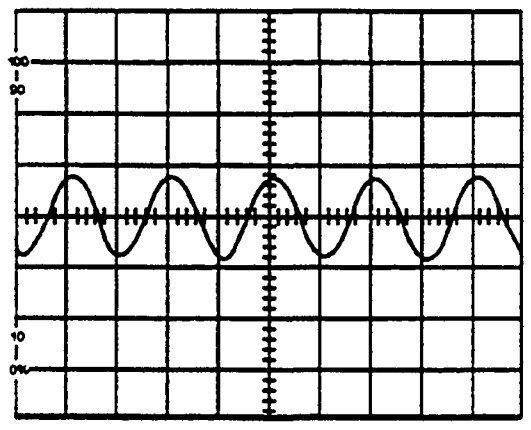

⑤ **Foot of R4538 (H SYNC 1)**
V : 1V/div, H : 20μsec/div

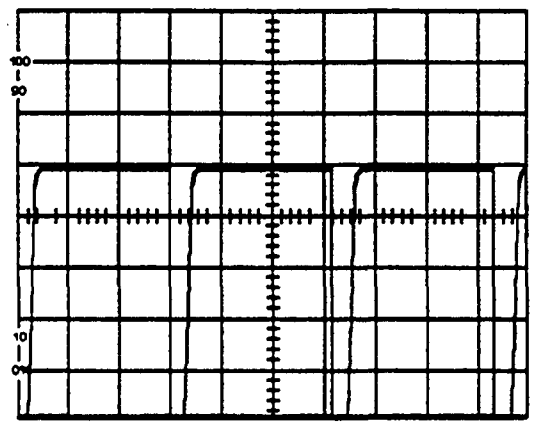

⑥ **Q4502 Emitter (AFT 1)**
V : 1V/div, H : 20μsec/div

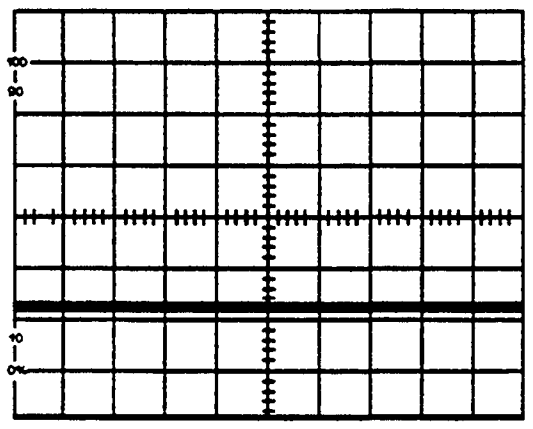

⑦ **J704 (MPX)**
V : 1V/div, H : 0.5msec/div

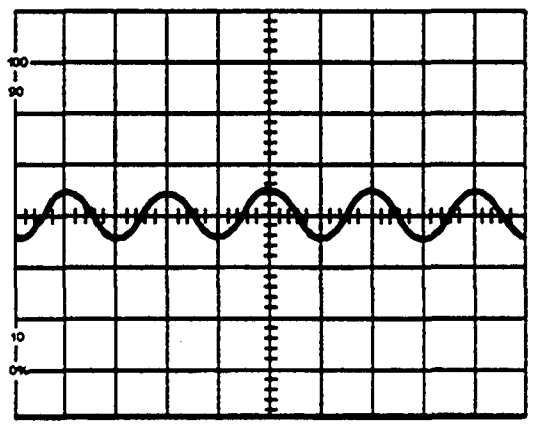

TV FRONT END (AXF1084)

Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	5.4	10	NC
2	5.4	11	0
3	GND	12	0
4	–	13	9
5	–	14	4.5
6	9	15	GND
7	5	16	2.2
8	NC	17	NC
9	33	18	4.7

IC4501 (CXA1734S)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	–	10	5.2	19	4	28	4
2	–	11	4	20	4	29	4
3	GND	12	4.4	21	4	30	NC
4	GND	13	4	22	1.8		
5	1.3	14	4	23	4		
6	1.3	15	9	24	4		
7	4	16	3	25	4		
8	4	17	GND	26	2		
9	6.4	18	4	27	1.3		

A 2/3 TUNER • VIDEO ASSY (2/3)
• VIDEO BLOCK

IC501 (TA8845BN)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	9	0	17	0	25	0	33	0	41	9.3	49	0	57	4.8
2	0	10	5.4	18	3.4	26	1.7	34	5.5	42	6.3	50	6.5	58	4.8
3	5.2	11	0.8	19	3.6	27	0	35	5.5	43	9.2	51	4.9	59	5
4	7.2	12	7.1	20	3.5	28	0	36	0	44	0	52	6.5	60	0
5	NC	13	1.1	21	12.5	29	4.5	37	9.2	45	0	53	5.7	61	2.6
6	2.4	14	0	22	0	30	4.4	38	9.2	46	9.1	54	3.3	62	4.4
7	8.7	15	4.2	23	0	31	4.5	39	4.9	47	3.1	5	8.7	63	0
8	2.1	16	4.2	24	0	32	1.9	40	6.2	48	12.5	56	4.8	64	0

- Input signal : Color bar (87.5% Mod., 1kHZ ± 25kHz dev.)
- Picture quality : STANDARD
- Range : DC range (Unless otherwise noted)

① **IC501-pin 58**
V : 1V/div, H : 20μsec/div

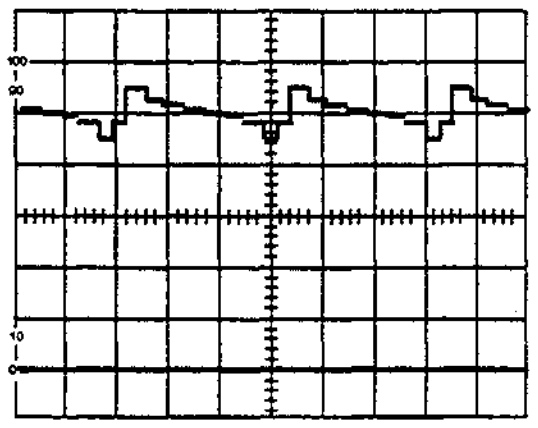

② **D540 Anode**
V : 0.5V/div, H : 20μsec/div

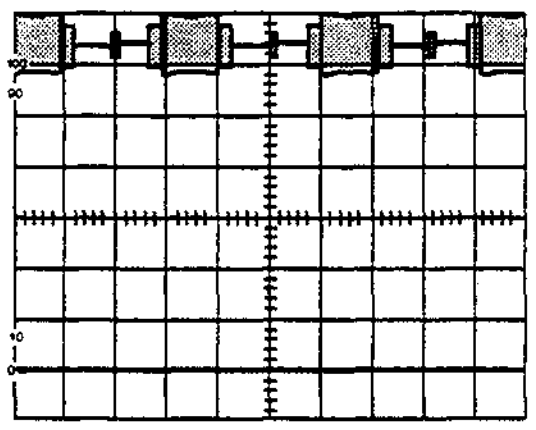

③ **IC501-pin 61**
V : 0.5V/div, H : 20μsec/div

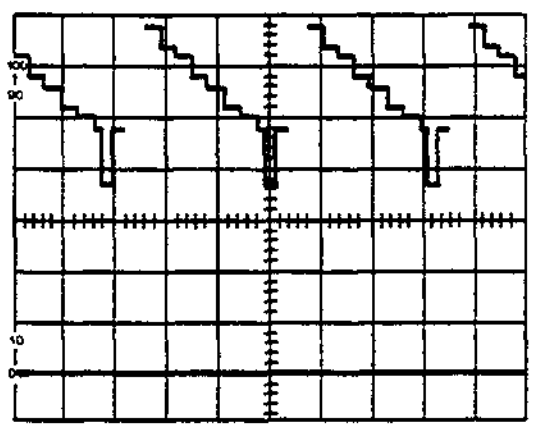

④ **IC501-pin 62**
V : 0.1V/div, H : 5msec/div

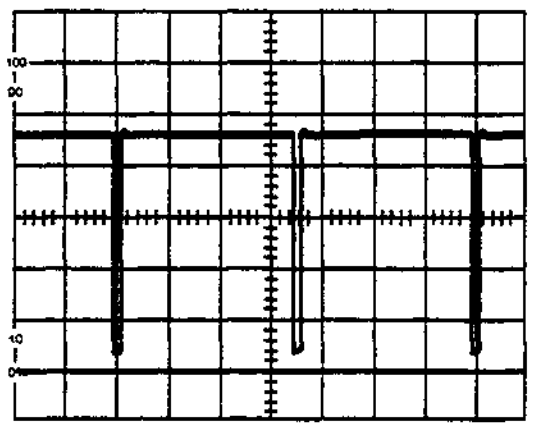

⑤ **D519 Cathode**
V : 1V/div, H : 20μsec/div

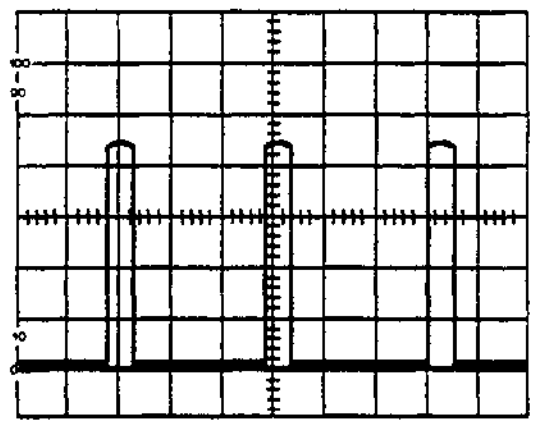

⑥ **D509 Cathode**
V : 1V/div, H : 20μsec/div

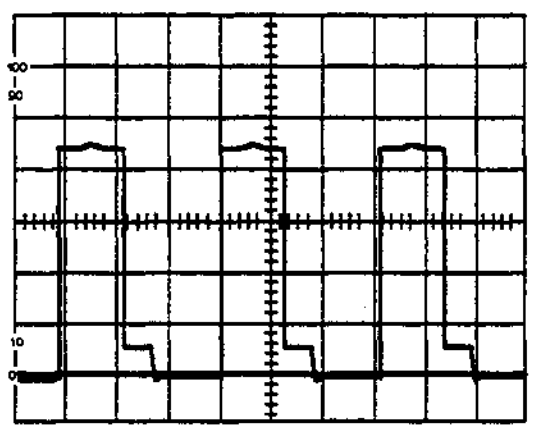

⑦ **D523 Cathode**
V : 1V/div, H : 20μsec/div

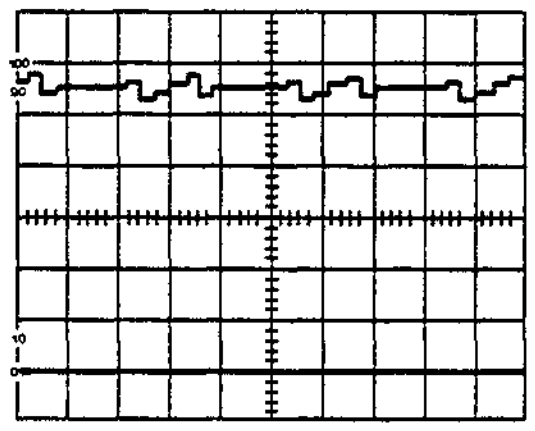

⑧ **D524 Cathode**
V : 1V/div, H : 20μsec/div

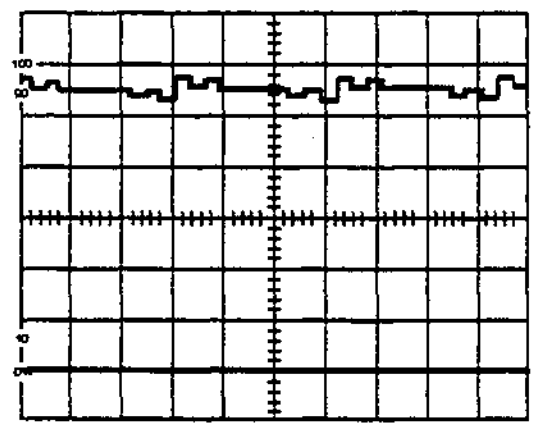

⑨ **Q533 Collector**
V : 1V/div, H : 20μsec/div

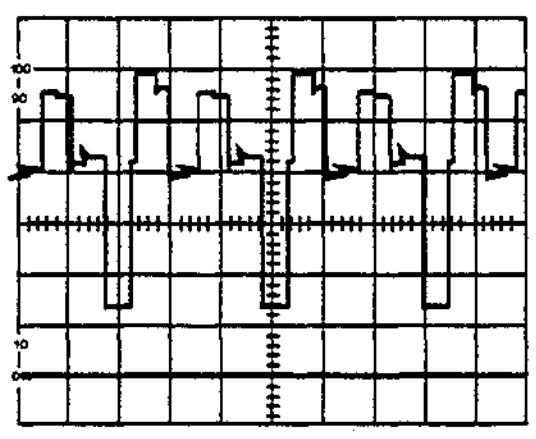

⑩ **Q532 Collector**
V : 1V/div, H : 20μsec/div

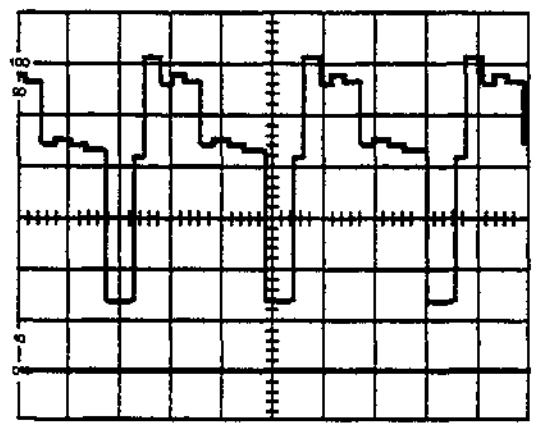

⑪ **Q531 Collector**
V : 1V/div, H : 20μsec/div

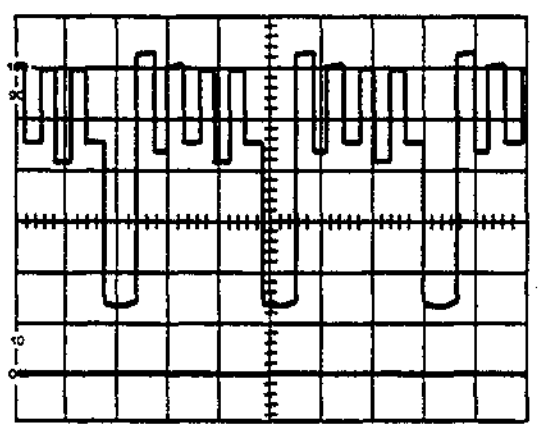

⑫ **Q509 Base**
V : 1V/div, H : 20μsec/div

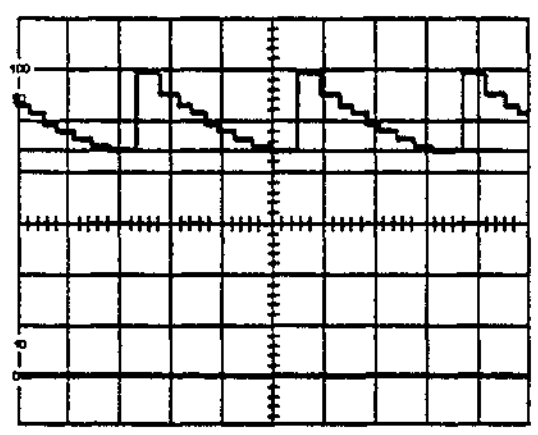

B 2/3 AV I/O ASSY (2/3)

- AV I/O, Y/C SEP, S INPUT AND SUB WOOFER BLOCKS

① **MONITOR OUT VIDEO**
V : 0.5V/div, H : 10msec/div

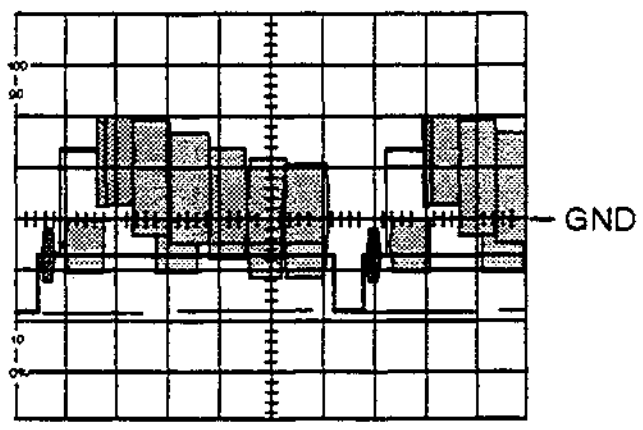

② **MONITOR OUT L ch**
V : 0.5V/div, H : 10msec/div

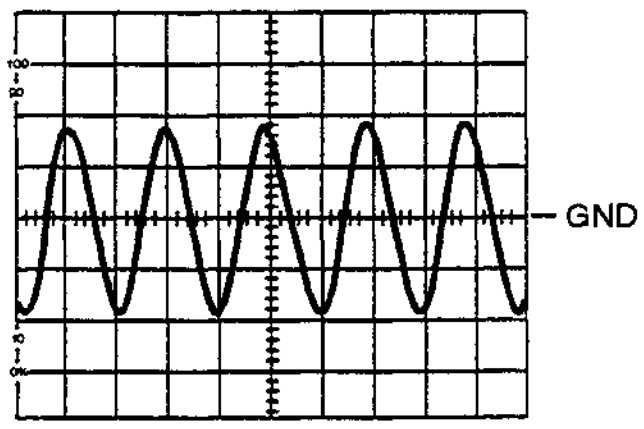

③ **F3201- VIDEO IN**
V : 1V/div, H : 10msec/div

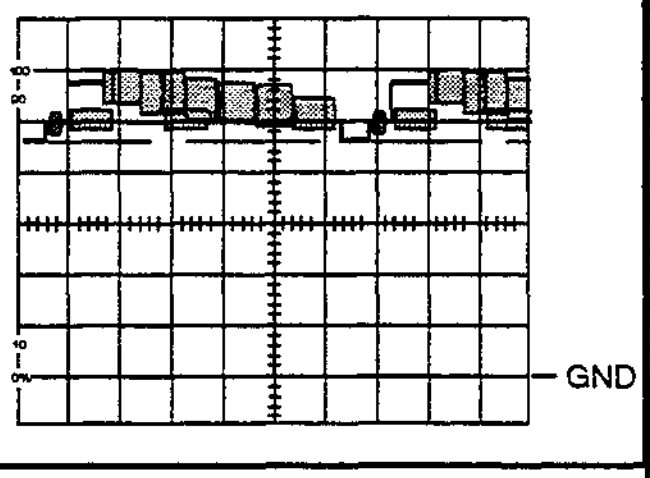

④ **F3201- Y OUT**
V : 1V/div, H : 10msec/div

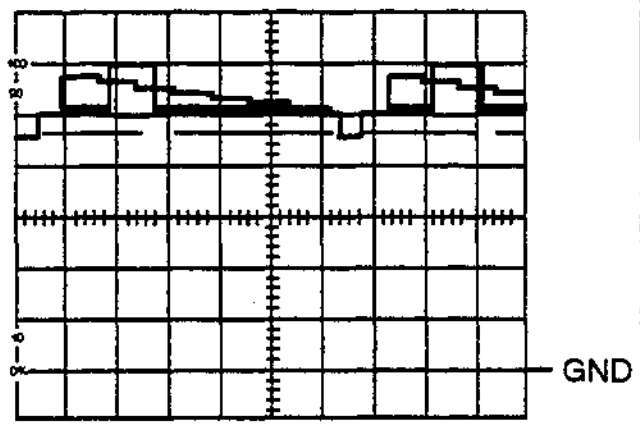

⑤ **F3201- C OUT**
V : 1V/div, H : 10msec/div

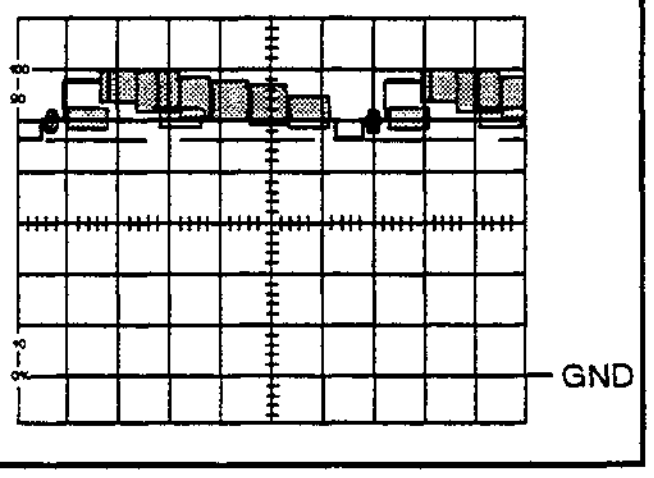

IC3201
(MC14066BF)

Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	4.3	8	8.4
2	4.3	9	8.4
3	4.3	10	8.4
4	5.4	11	8.4
5	0	12	12.2
6	0	13	12.2
7	0	14	12.2

IC1602
(BA7644AN)

Pin No.	Voltage (V)
1	7.5
2	0.2
3	0.2
4	7.5
5	0
6	7.5
7	12.2
8	7.5
9	0
10	6.1

IC1603
(BA7644AN)

Pin No.	Voltage (V)
1	7.5
2	0
3	0
4	7.5
5	0
6	7.5
7	12.2
8	7.5
9	0
10	6.1

IC1601
(TC4052BF)

Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	6.8	9	0.2
2	7.2	10	0.2
3	6.8	11	7.2
4	7.1	12	6.9
5	7.2	13	6.9
6	0	14	7.2
7	0	15	7.2
8	0	16	12.2

B 3/3 AV I/O ASSY (3/3)

- P IN P, V-CHIP AND CNR BLOCKS

① IC3003-pin 1
V : 0.5V/div, H : 10msec/div

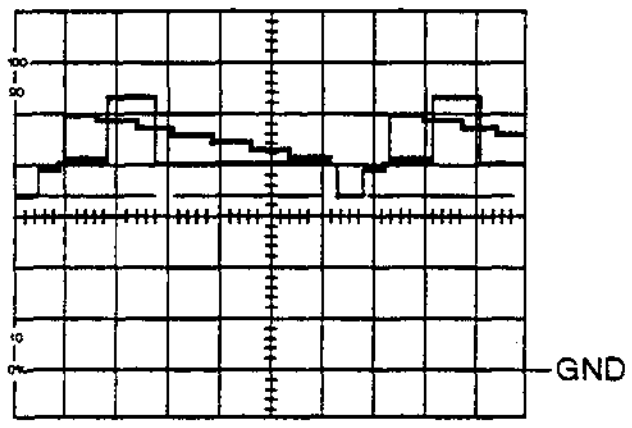

② IC3003-pin 3
V : 0.5V/div, H : 10msec/div

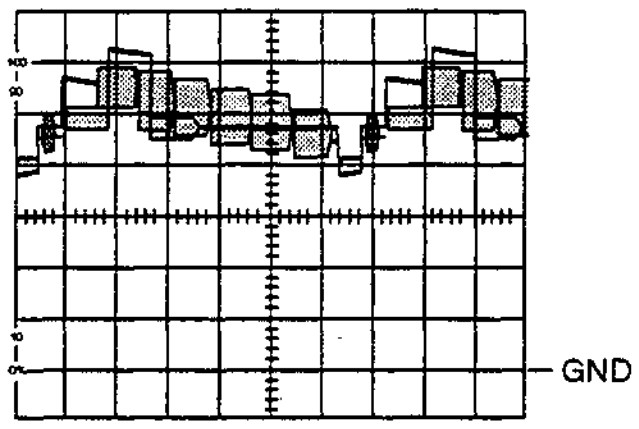

③ IC3003-pin 56
V : 0.5V/div, H : 10msec/div

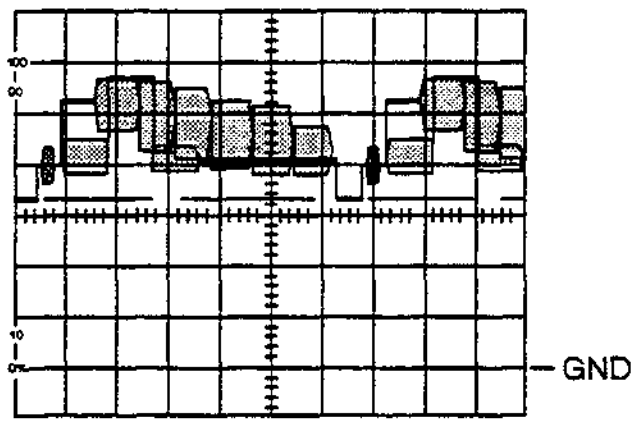

④ IC3002-pin 6
V : 0.5V/div, H : 10msec/div

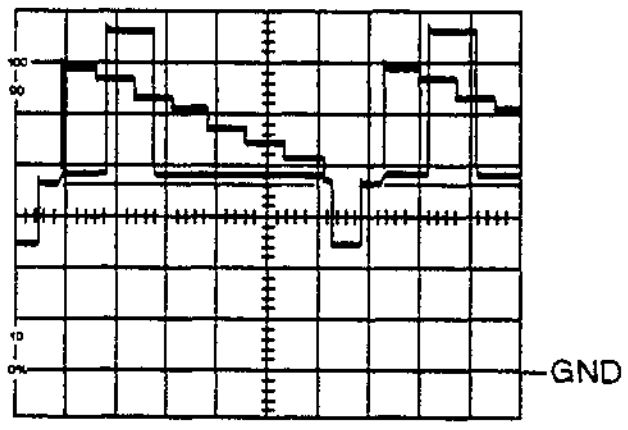

⑤ IC3002-pin 8
V : 0.5V/div, H : 10msec/div

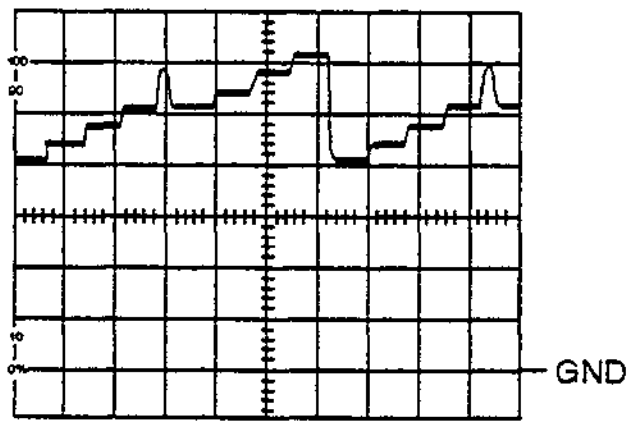

⑥ IC3002-pin 10
V : 0.5V/div, H : 10msec/div

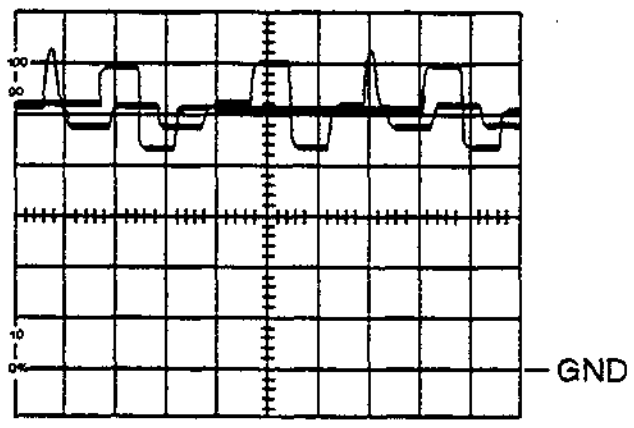

⑦ IC3003-pin 28
V : 0.5V/div, H : 10msec/div

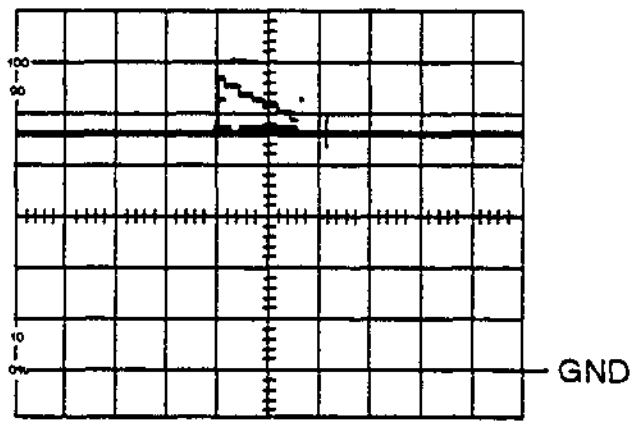

⑧ IC3003-pin 25
V : 0.5V/div, H : 10msec/div

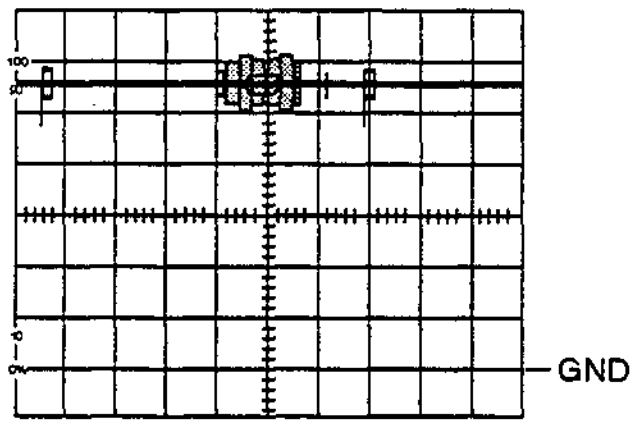

⑨ IC3003-pin 17
V : 0.5V/div, H : 10msec/div

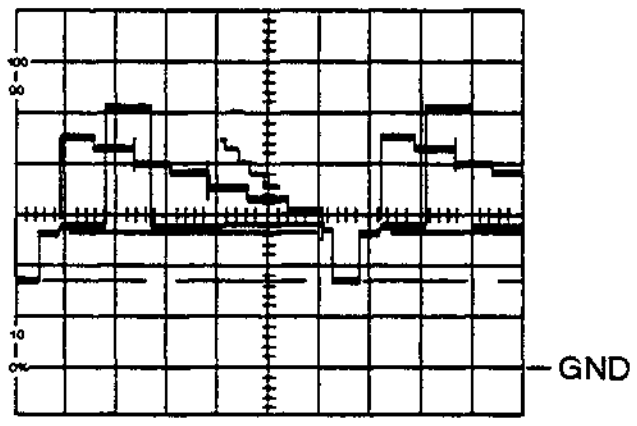

⑩ IC3003-pin 15
V : 0.5V/div, H : 10msec/div

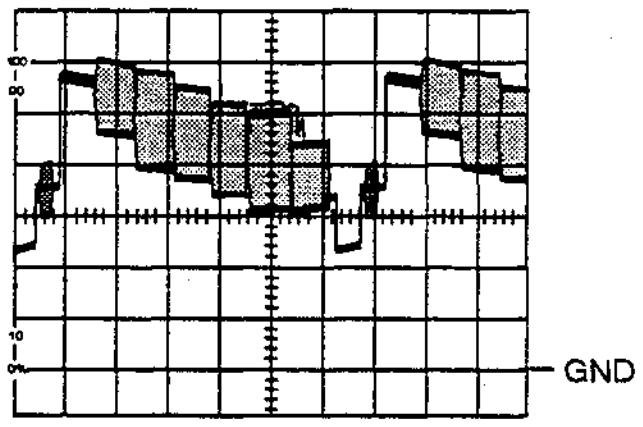

⑪ Upper : Q3011 Emitter
⑫ Lower : IC3301-pin 10
V : 1V/div, H : 10msec/div

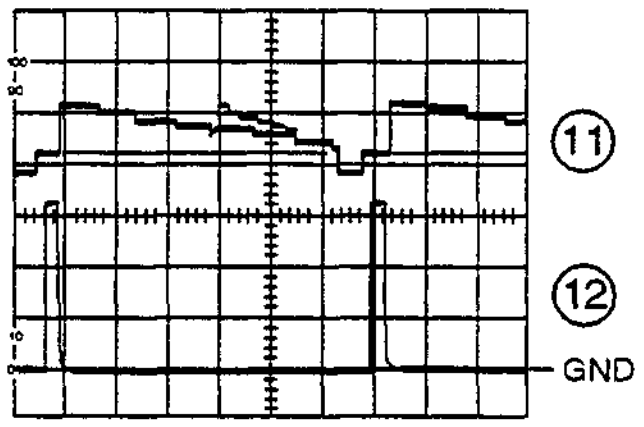

⑬ A3-pin 3 (C OUT)
V : 2V/div, H : 10msec/div

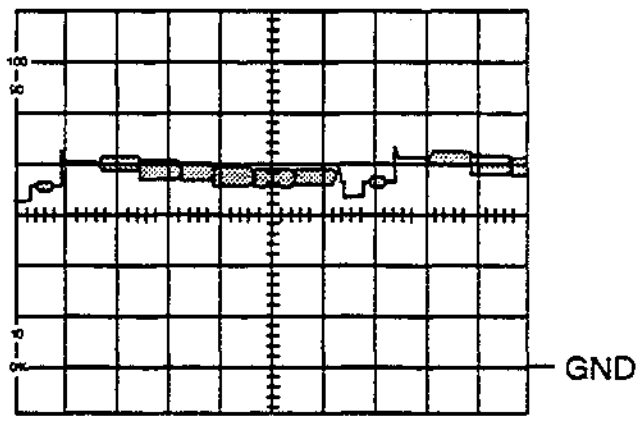

IC3002 (HD49420FS)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	11	1.8	21	2.5	31	2.3	41	–	51	–	61	–	71	4.1
2	1.5	12	0	22	2.5	32	5.1	42	–	52	–	62	–	72	0.1
3	5.1	13	5.1	23	5.1	33	–	43	–	53	–	63	–	73	–
4	1.5	14	5.1	24	4.6	34	5.1	44	–	54	–	64	–	74	4.1
5	3.4	15	5.1	25	2.5	35	5	45	–	55	–	65	–	75	2.4(*3) 2 (*4)
6	2.3	16	2.5	26	3.7	36	5	46	–	56	–	66	–	76	0
7	4.2 (*1) 0 (*2)	17	2.6	27	3.6	37	4.7	47	–	57	–	67	–	77	2.5
8	2.6	18	5.1	28	0	38	–	48	5	58	–	68	–	78	2.4
9	5.2	19	3.7	29	2.5	39	–	49	–	59	–	69	–	79	0
10	2.6	20	3.6	30	0	40	–	50	–	60	–	70	–	80	2.1

Note ; (*1) : Main picture display ON, (*2) : Main picture display OFF
(*3) : Sub picture display ON, (*4) : Sub picture display OFF

IC3003 (HA11579)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	2.1	9	3.6	17	1.7	25	2.7	33	1.7	41	0.5(*1) 1.9(*2)	49	1.6
2	0	10	3.5	18	3	26	0	34	2.5	42	–	50	0
3	2.5	11	2.6	19	–	27	2.3	35	3	43	–	51	4.9
4	0	12	3.8	20	5.1	28	2.3	36	4.2	44	4.3	52	1.6
5	5.2	13	2.6	21	0	29	2.5	37	2.3	45	0	53	–
6	0	14	2.8	22	2.8	30	2.5	38	2.4	46	0	54	4.4
7	1.9	15	2.2	23	2	31	3.2	39	–	47	0	55	–
8	1.9	16	1.6	24	5.1	32	3.2	40	0.5(*1) 1.9(*2)	48	–	56	2.3

Note ; (*1) : Main picture display ON
(*2) : Main picture display OFF

IC3301 (MC14011BF)

Pin No.	Voltage (V)
1	4
2	1
3	4
4	4
5	1
6	1
7	0
8	4.7
9	4.7
10	0.1
11	0.4
12	4.4
13	4.4
14	4.8

IC3006 (TC4538BF)

Pin No.	Voltage (V)
1	0
2	5
3	5.1
4	0
5	5
6	0
7	5
8	0
9	5
10	0
11	5
12	0
13	5.1
14	5
15	0
16	5.1

C 1/3 AMP ASSY (1/3)

• CONVER AMP AND V. DEFLECTION BLOCKS

- Input signal :Color bar
- Picture quality : STANDARD
- Range : DC range (Unless otherwise noted)

① **G6 pin 6 (SVR)**
V : 0.5V/div, H : 2msec/div

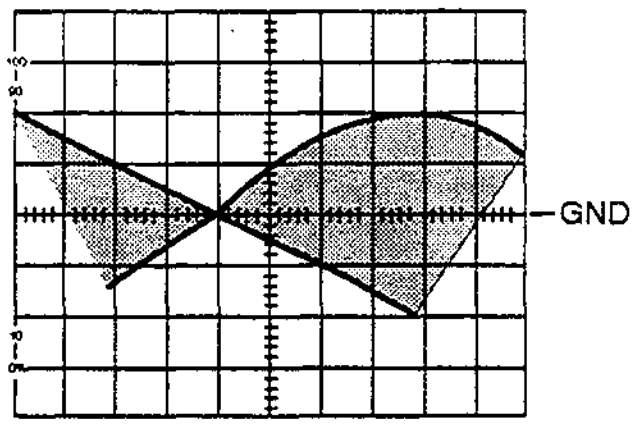

③ **G5 pin 6 (SVR)**
V : 0.5V/div, H : 2msec/div

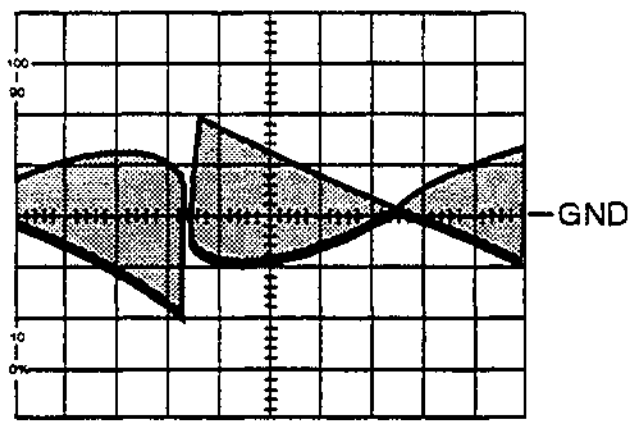

⑤ **G4 pin 6 (SVR)**
V : 0.5V/div, H : 2msec/div

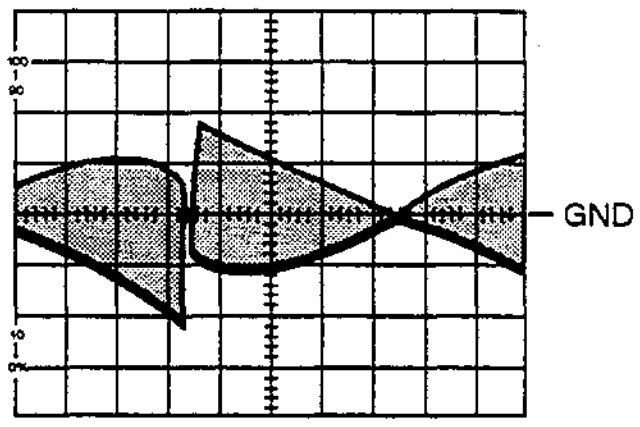

⑦ **G4 pin 2 (VR)**
V : 0.5V/div, H : 5msec/div

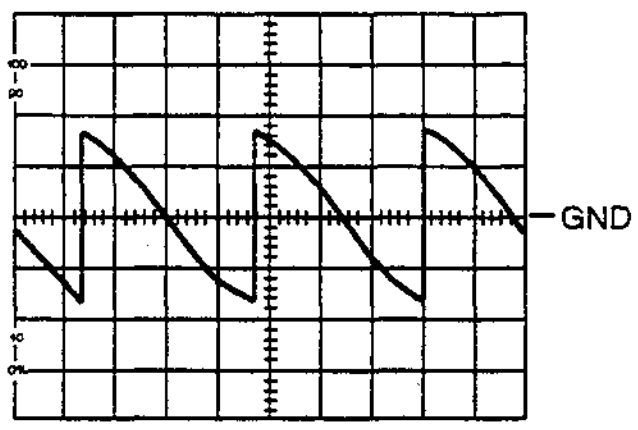

② **G6 pin 4 (SHR)**
V : 0.5V/div, H : 20μsec/div

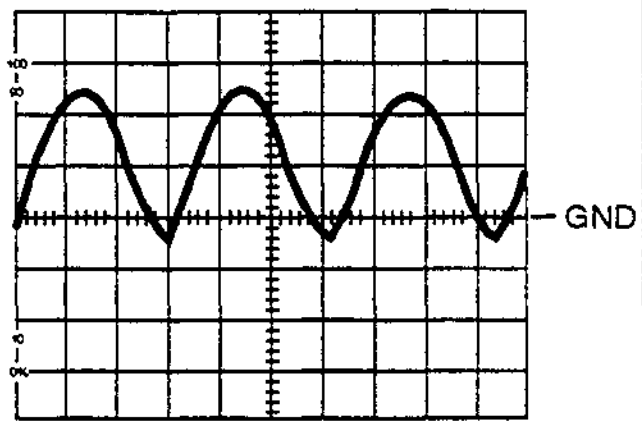

④ **G5 pin 4 (SHR)**
V : 0.2V/div, H : 20μsec/div

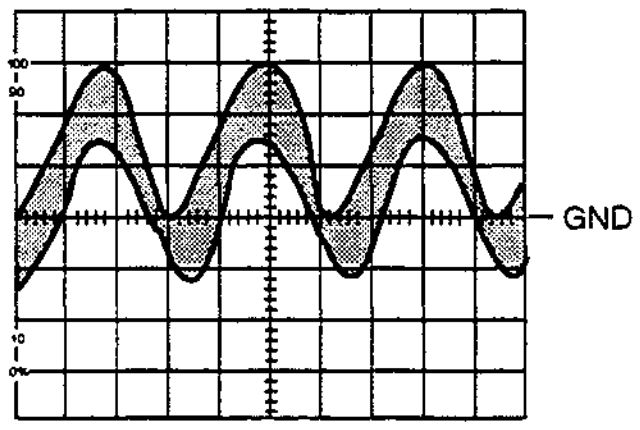

⑥ **G4 pin 4 (SHR)**
V : 0.2V/div, H : 20μsec/div

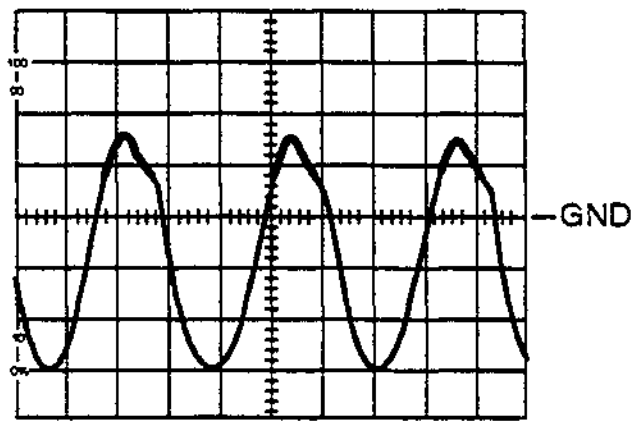

D CONVER CONTROL ASSY

IC2301 (PM0011AS)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	15	0	29	0.1
2	-1	16	-0.8	30	0.1
3	0	17	0	31	5
4	-1	18	-1	32	4
5	0	19	0	33	5
6	-0.4	20	-0.5	34	5
7	0	21	5	35	0
8	5	22	-0.5	36	0
9	-4.8	23	0	37	0
10	5	24	0.1	38	0.1
11	5	25	-0.1	39	0.1
12	4	26	0.1	40	0.1
13	5	27	0.1	41	0.1
14	-2	28	0.1	42	0.1

IC2302 (PM0011AS)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	15	0	29	0.1
2	-1	16	-0.8	30	0.1
3	0	17	0	31	5
4	-1	18	-1	32	4
5	0	19	0	33	5
6	-0.4	20	-0.5	34	5
7	0	21	5	35	0
8	5	22	0	36	0
9	-4.8	23	0	37	0
10	5	24	0.1	38	0
11	5	25	-0.2	39	0
12	4	26	0.1	40	0
13	5	27	0.1	41	-0.4
14	-2	28	0.1	42	0

IC2303 (PM0011AS)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	15	0	29	0.1
2	-1	16	-0.8	30	-0.1
3	0	17	0	31	5
4	-1	18	-1	32	4
5	0	19	0	33	5
6	-0.4	20	-0.5	34	5
7	0	21	5	35	0
8	5	22	-0.5	36	0
9	-4.8	23	-0.4	37	0
10	5	24	0.2	38	0
11	5	25	-0.2	39	0
12	4	26	0.1	40	0.1
13	5	27	0.1	41	0.6
14	-2	28	0.1	42	0

IC2307 (PA0053B)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0.4	7	-1	13	0.3
2	1.1	8	0	14	1.2
3	5	9	-4.9	15	0
4	0	10	0.2	16	-2.1
5	-1	11	0.5	17	1.2
6	0	12	-1	18	-1.5

IC2308 (PA0053B)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0.2	7	-1.1	13	0.4
2	1.2	8	0	14	1.2
3	5	9	-4.9	15	0
4	0	10	0.2	16	-0.6
5	-0.8	11	0.5	17	1.2
6	0	12	-0.8	18	-1.5

- Input signal : Color bar
- Picture quality : STANDARD
- Range : DC range (Unless otherwise noted)

① **D2301 Anode**
V : 2V/div, H : 20μsec/div

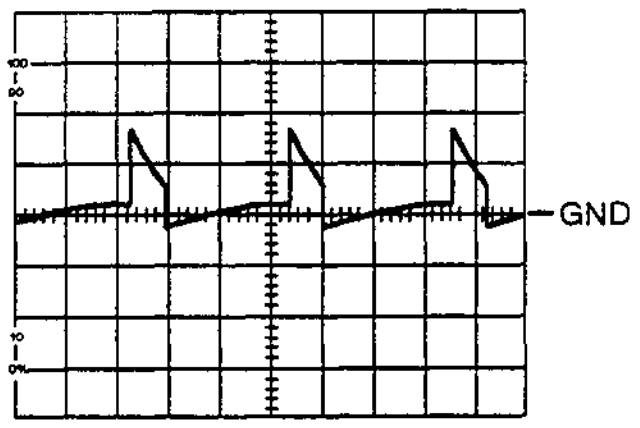

② **Between R2314 and R2315**
V : 2V/div, H : 5msec/div

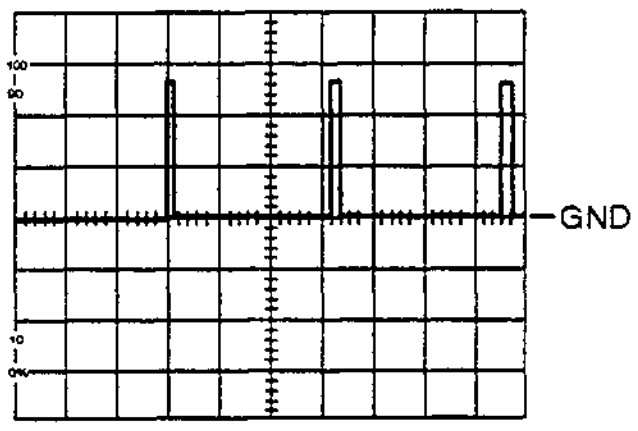

③ **Q2304 Base**
V : 0.5V/div, H : 20μsec/div

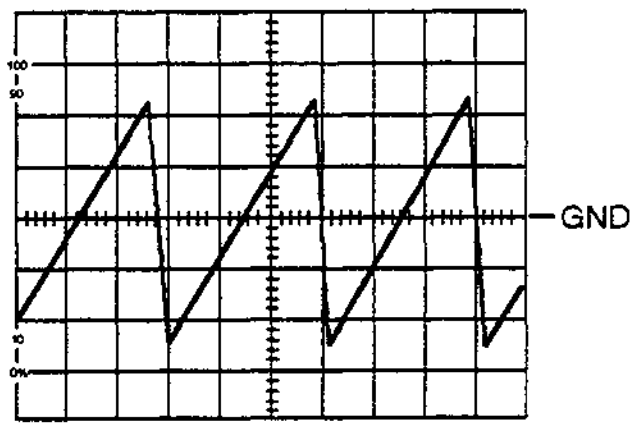

④ **Q2302 Base**
V : 1V/div, H : 20μsec/div

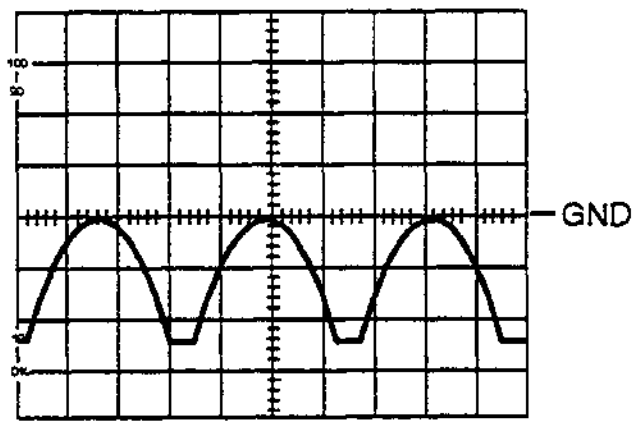

⑤ **IC2307-pin 6**
V : 0.5V/div, H : 20μsec/div

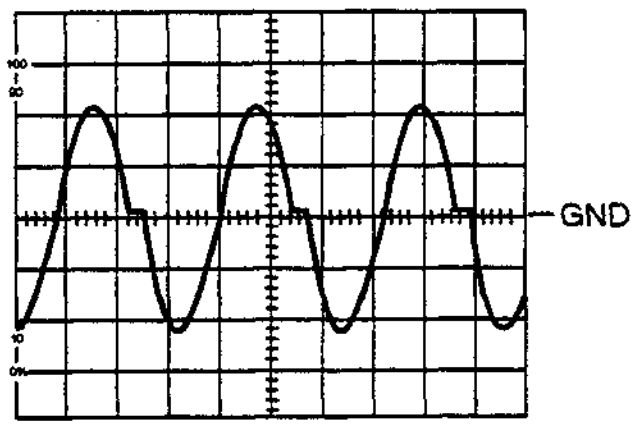

⑥ **IC2307-pin 7**
V : 1V/div, H : 20μsec/div

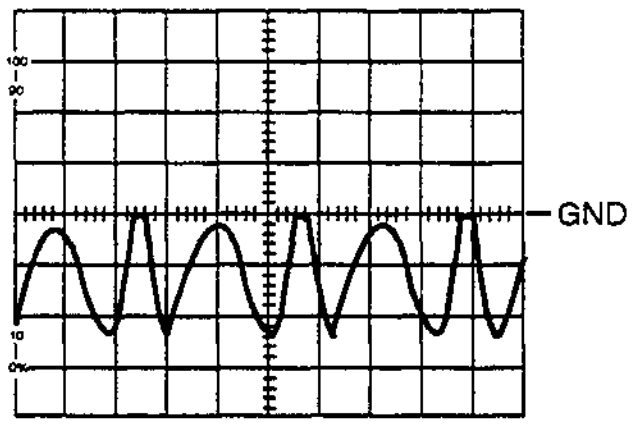

⑦ **Q2306 Base**
V : 0.5V/div, H : 5msec/div

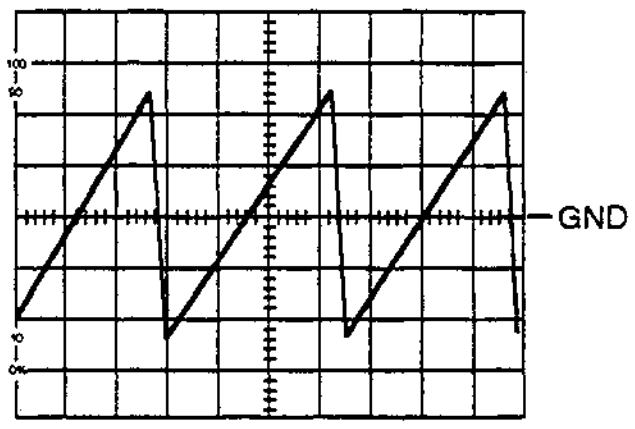

⑧ **Q2308 Base**
V : 1V/div, H : 5msec/div

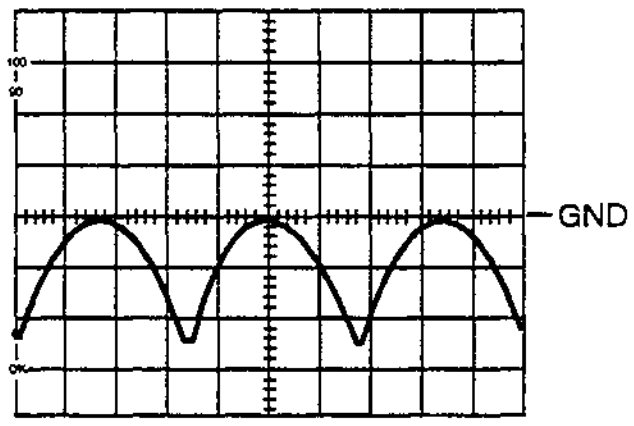

⑨ **IC2308-pin 6**
V : 0.5V/div, H : 5msec/div

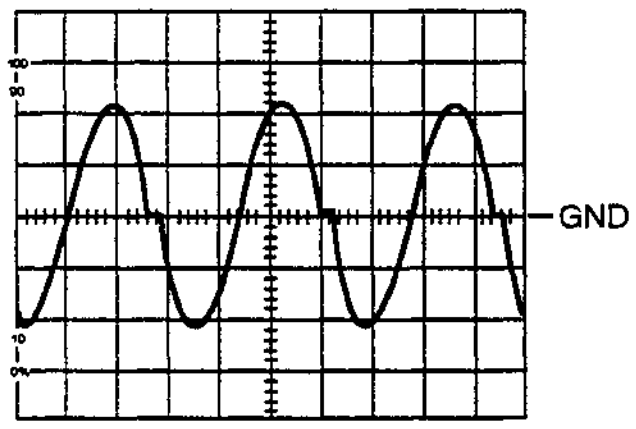

⑩ **IC2308-pin 7**
V : 1V/div, H : 5msec/div

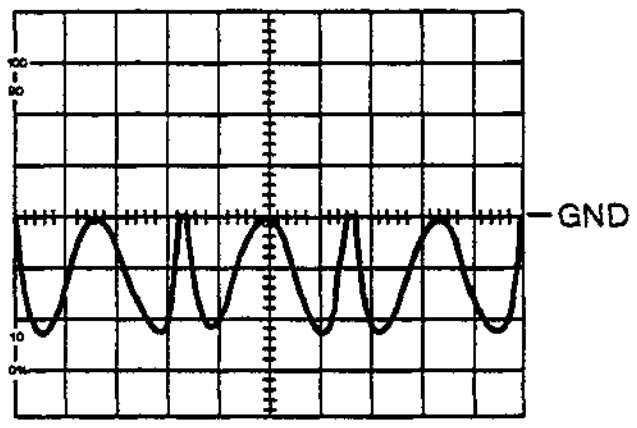

⑪ **C2371 ⊖ side**
V : 0.5V/div, H : 2msec/div

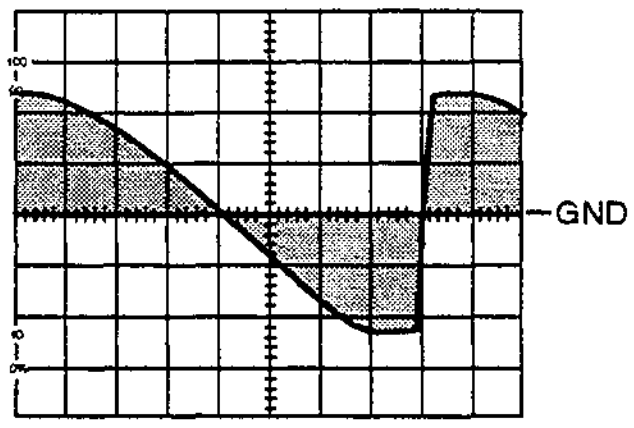

⑫ **C2363 ⊖ side**
V : 0.5V/div, H : 2msec/div

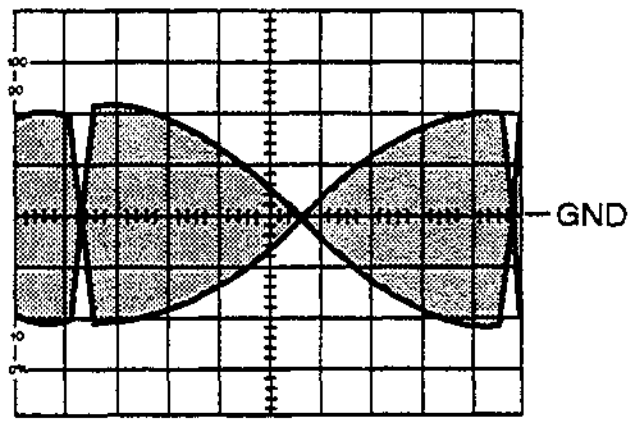

⑬ **C2370 ⊖ side**
V : 0.5V/div, H : 2msec/div

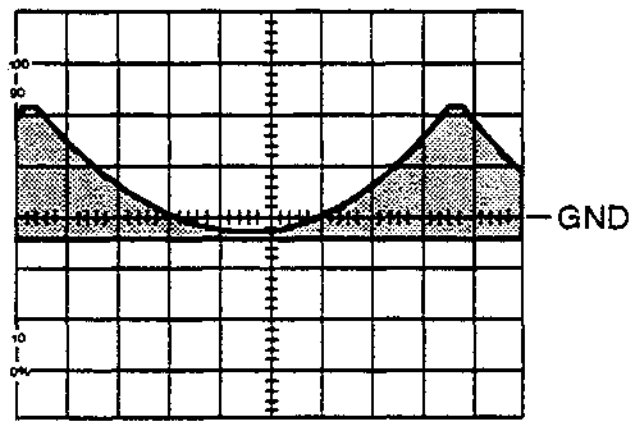

⑭ **IC2305-pin 1**
V : 1V/div, H : 2msec/div

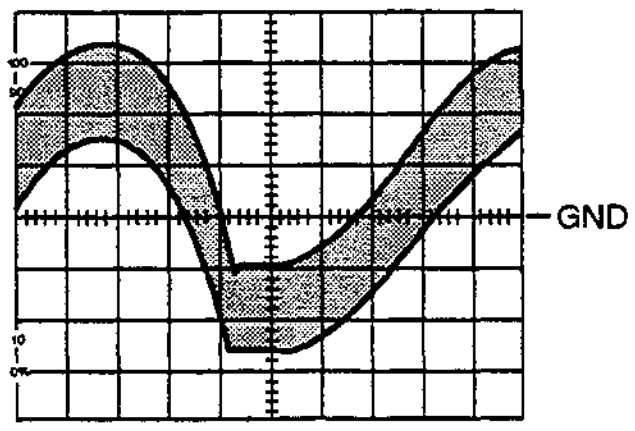

⑮ **IC2304-pin 1**
V : 0.5V/div, H : 5msec/div

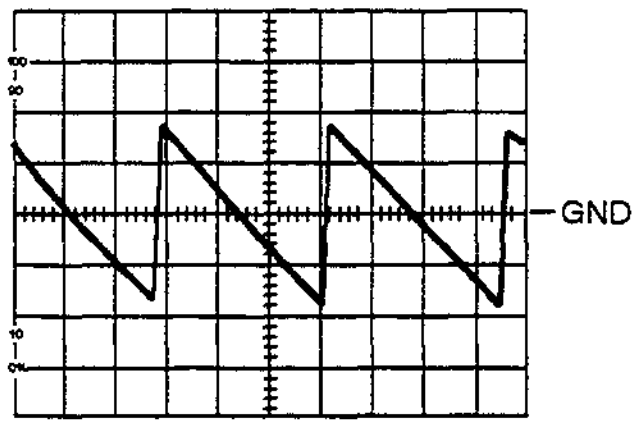

⑯ **IC2304-pin 7**
V : 0.5V/div, H : 5msec/div

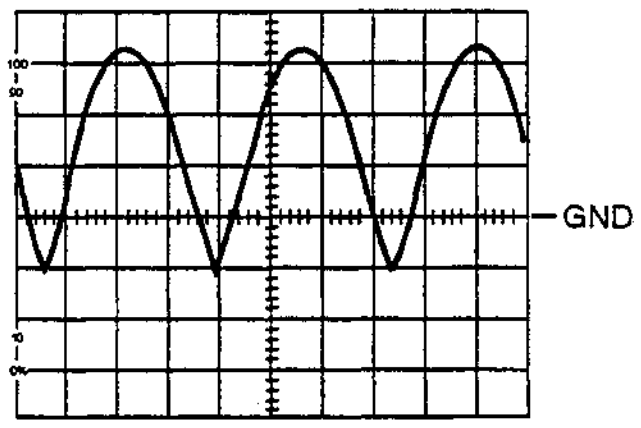

⑰ **IC2306-pin 7**
V : 0.5V/div, H : 20μsec/div

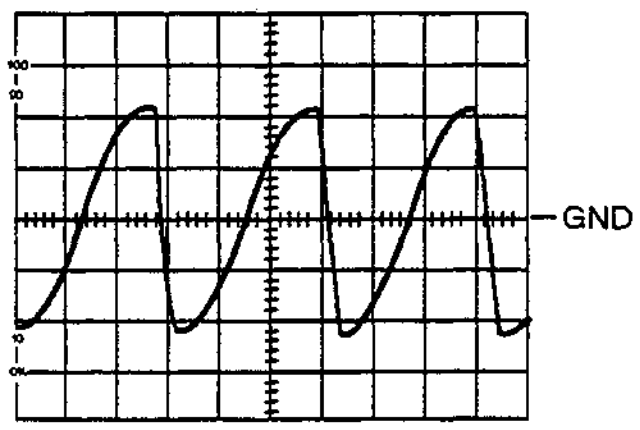

⑱ **IC2306-pin 1**
V : 0.5V/div, H : 5msec/div

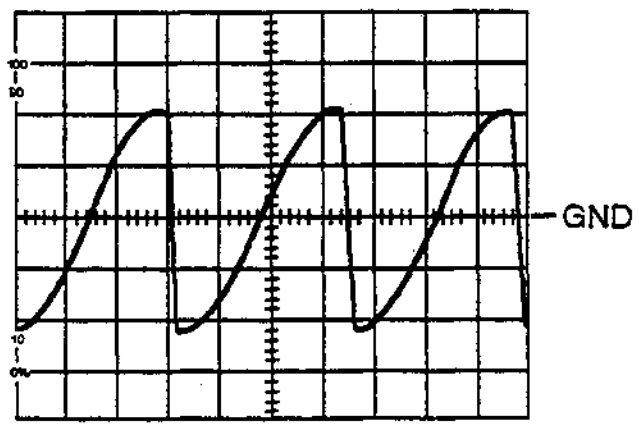

I 1/2 POWER SUPPLY SERVICE ASSY (1/2)

• POWER SUPPLY BLOCK

① **D101-pin 1**
V : 20V/div, H : 2nsec/div

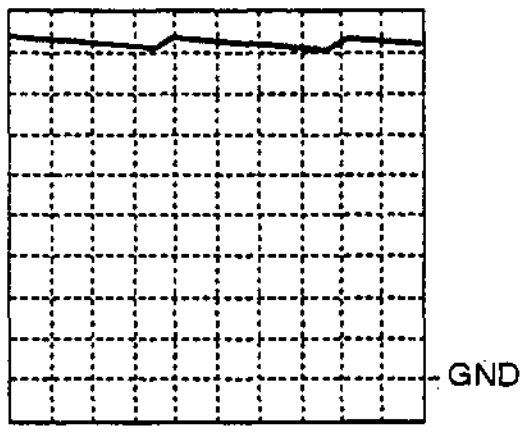

⑤ **IC101-pin 1**
V : 1V/div, H : 5µsec/div

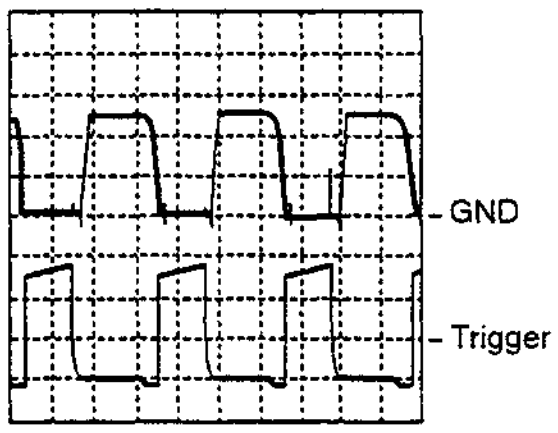

⑦ **IC101-pin 3**
V : 0.5V/div, H : 5µsec/div

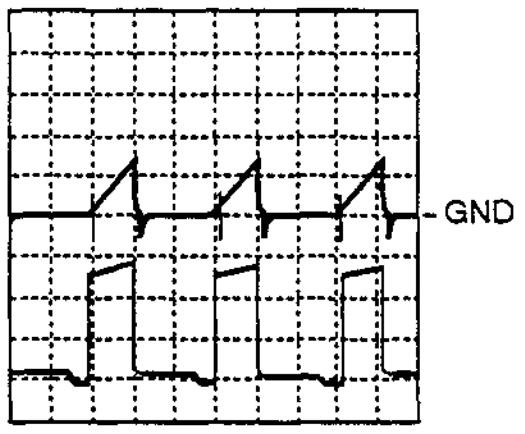

⑩ **D112 Anode**
V : 10V/div, H : 5µsec/div

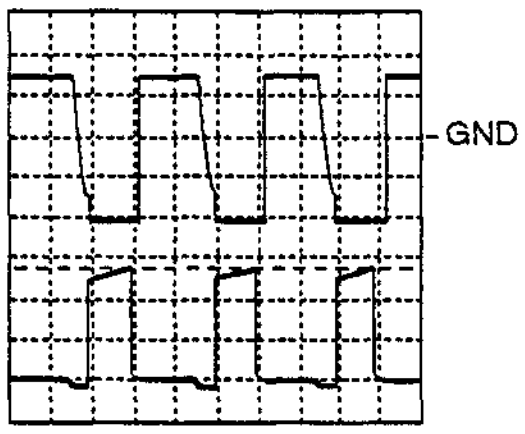

② **Upper : Q113 Drain**
V : 100V/div, H : 5µsec/div
③ **Lower : Q113 Gate**
V : 5V/div, H : 5µsec/div

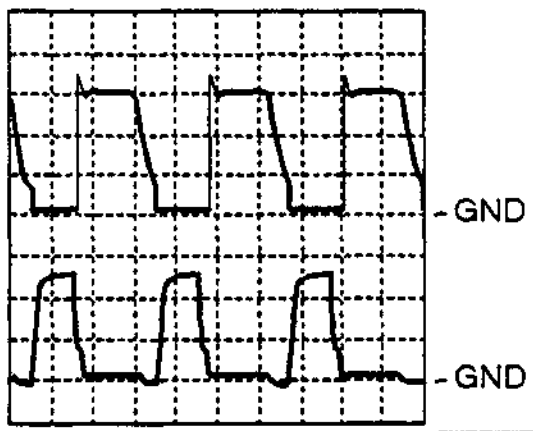

⑥ **IC101-pin 2**
V : 0.5V/div, H : 5µsec/div

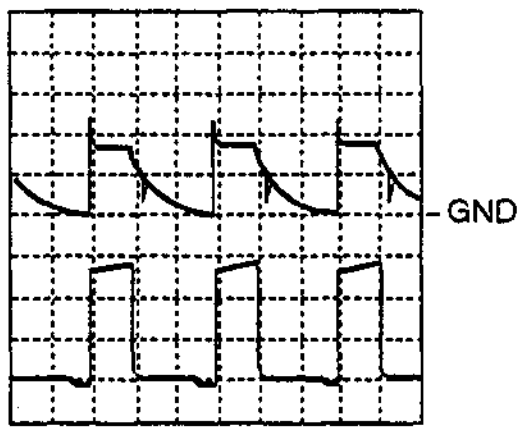

⑧ **IC101-pin 4**
V : 0.2V/div, H : 5µsec/div

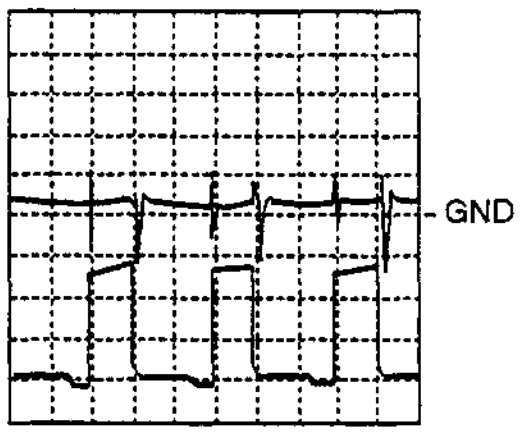

⑪ **D106 Cathode**
V : 2V/div, H : 5msec/div

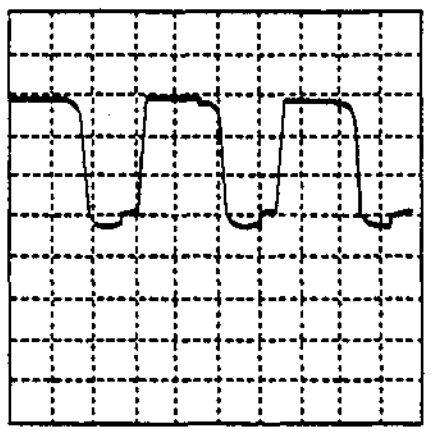

④ **Upper : Q113 Source**
V : 0.2V/div, H : 5µsec/div
⑨ **Lower : IC101-pin 6** (Trigger)
V : 5V/div, H : 5µsec/div

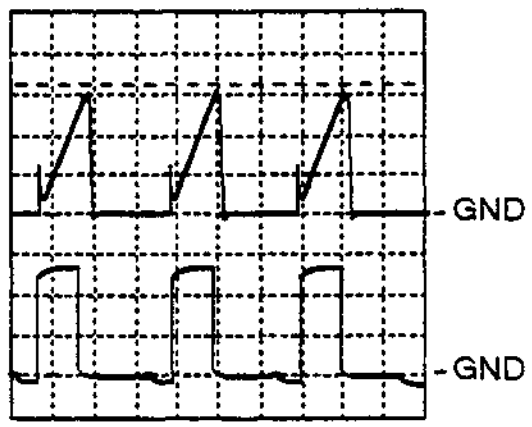

I 2/2 POWER SUPPLY SERVICE ASSY (2/2)

• DEFLECTION BLOCK

⑤ **Upper : Q218 Emitter**
V : 5V/div, H : 20µsec/div
① **Lower : Q211 Base**
V : 0.5V/div, H : 20µsec/div

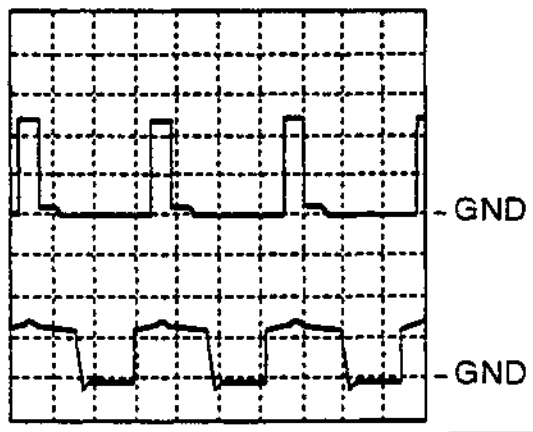

③ **Q214 Base**
V : 5V/div, H : 20µsec/div

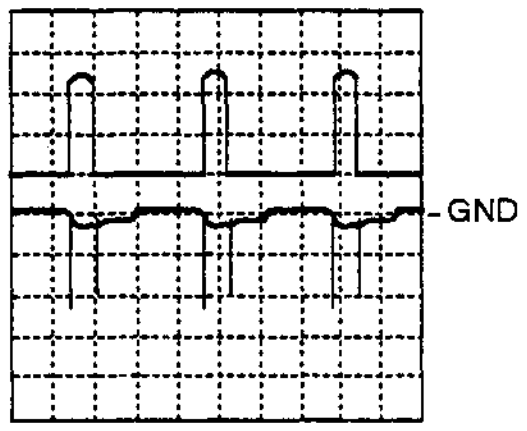

⑥ **Upper : V. BLK (Trigger)**
Lower : Q213 Collector
V : 10V/div, H : 5msec/div

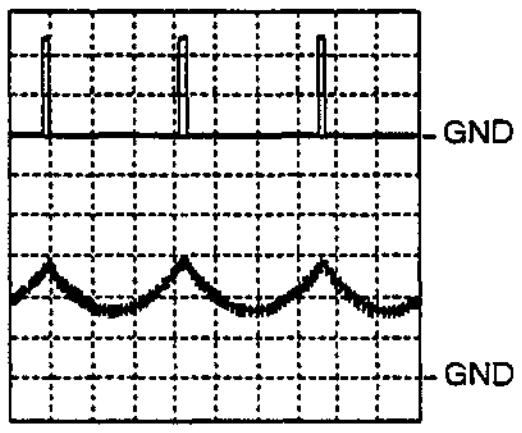

⑦-2/2 **Q216 Collector**
V : 200V/div, H : 20µsec/div

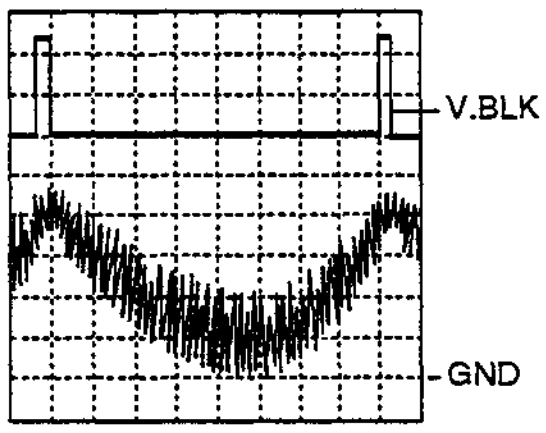

② **Q211 Collector**
V : 20V/div, H : 20µsec/div

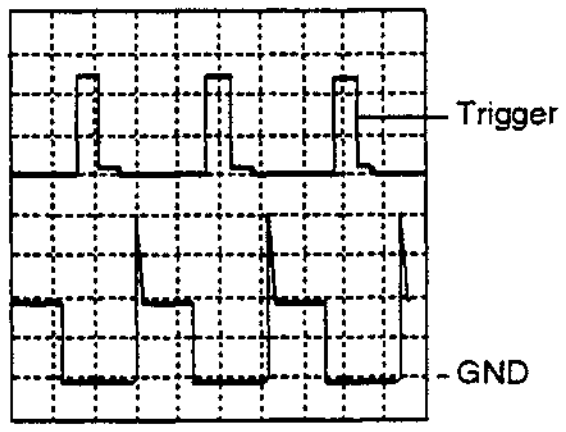

④ **Q214 Collector**
V : 200V/div, H : 20µsec/div

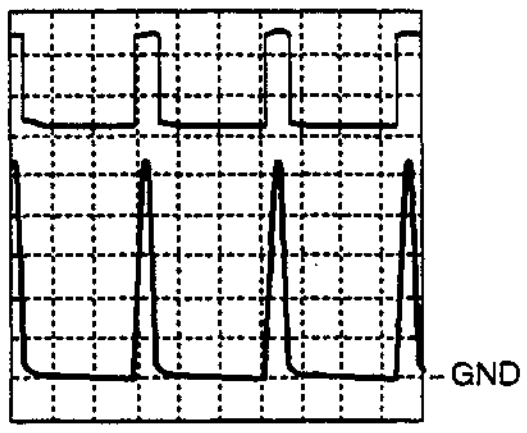

⑦-1/2 **Q216 Collector**
V : 200V/div, H : 20µsec/div

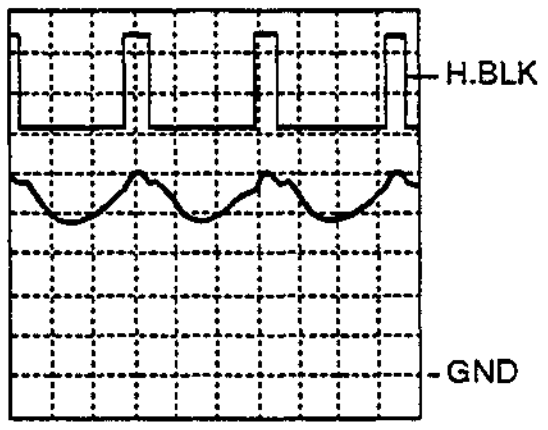

4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
   For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

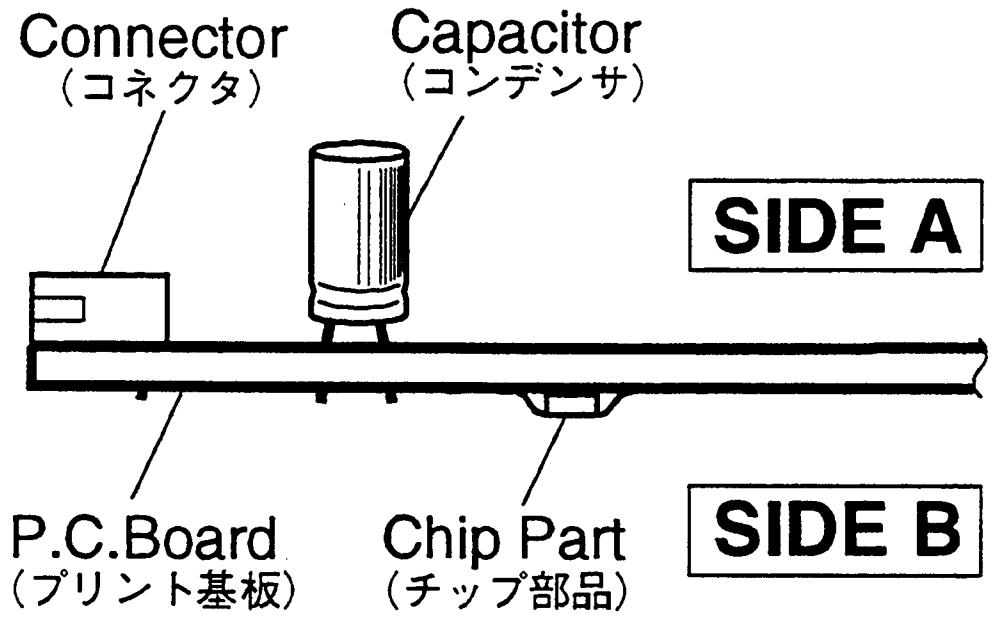
Connector
(コネクタ)
Capacitor
(コンデンサ)
SIDE A
P.C.Board
(プリント基板)
Chip Part
(チップ部品)
SIDE B

4.1 TUNER • VIDEO ASSY (GUIDE PAGE)

A TUNER • VIDEO ASSY

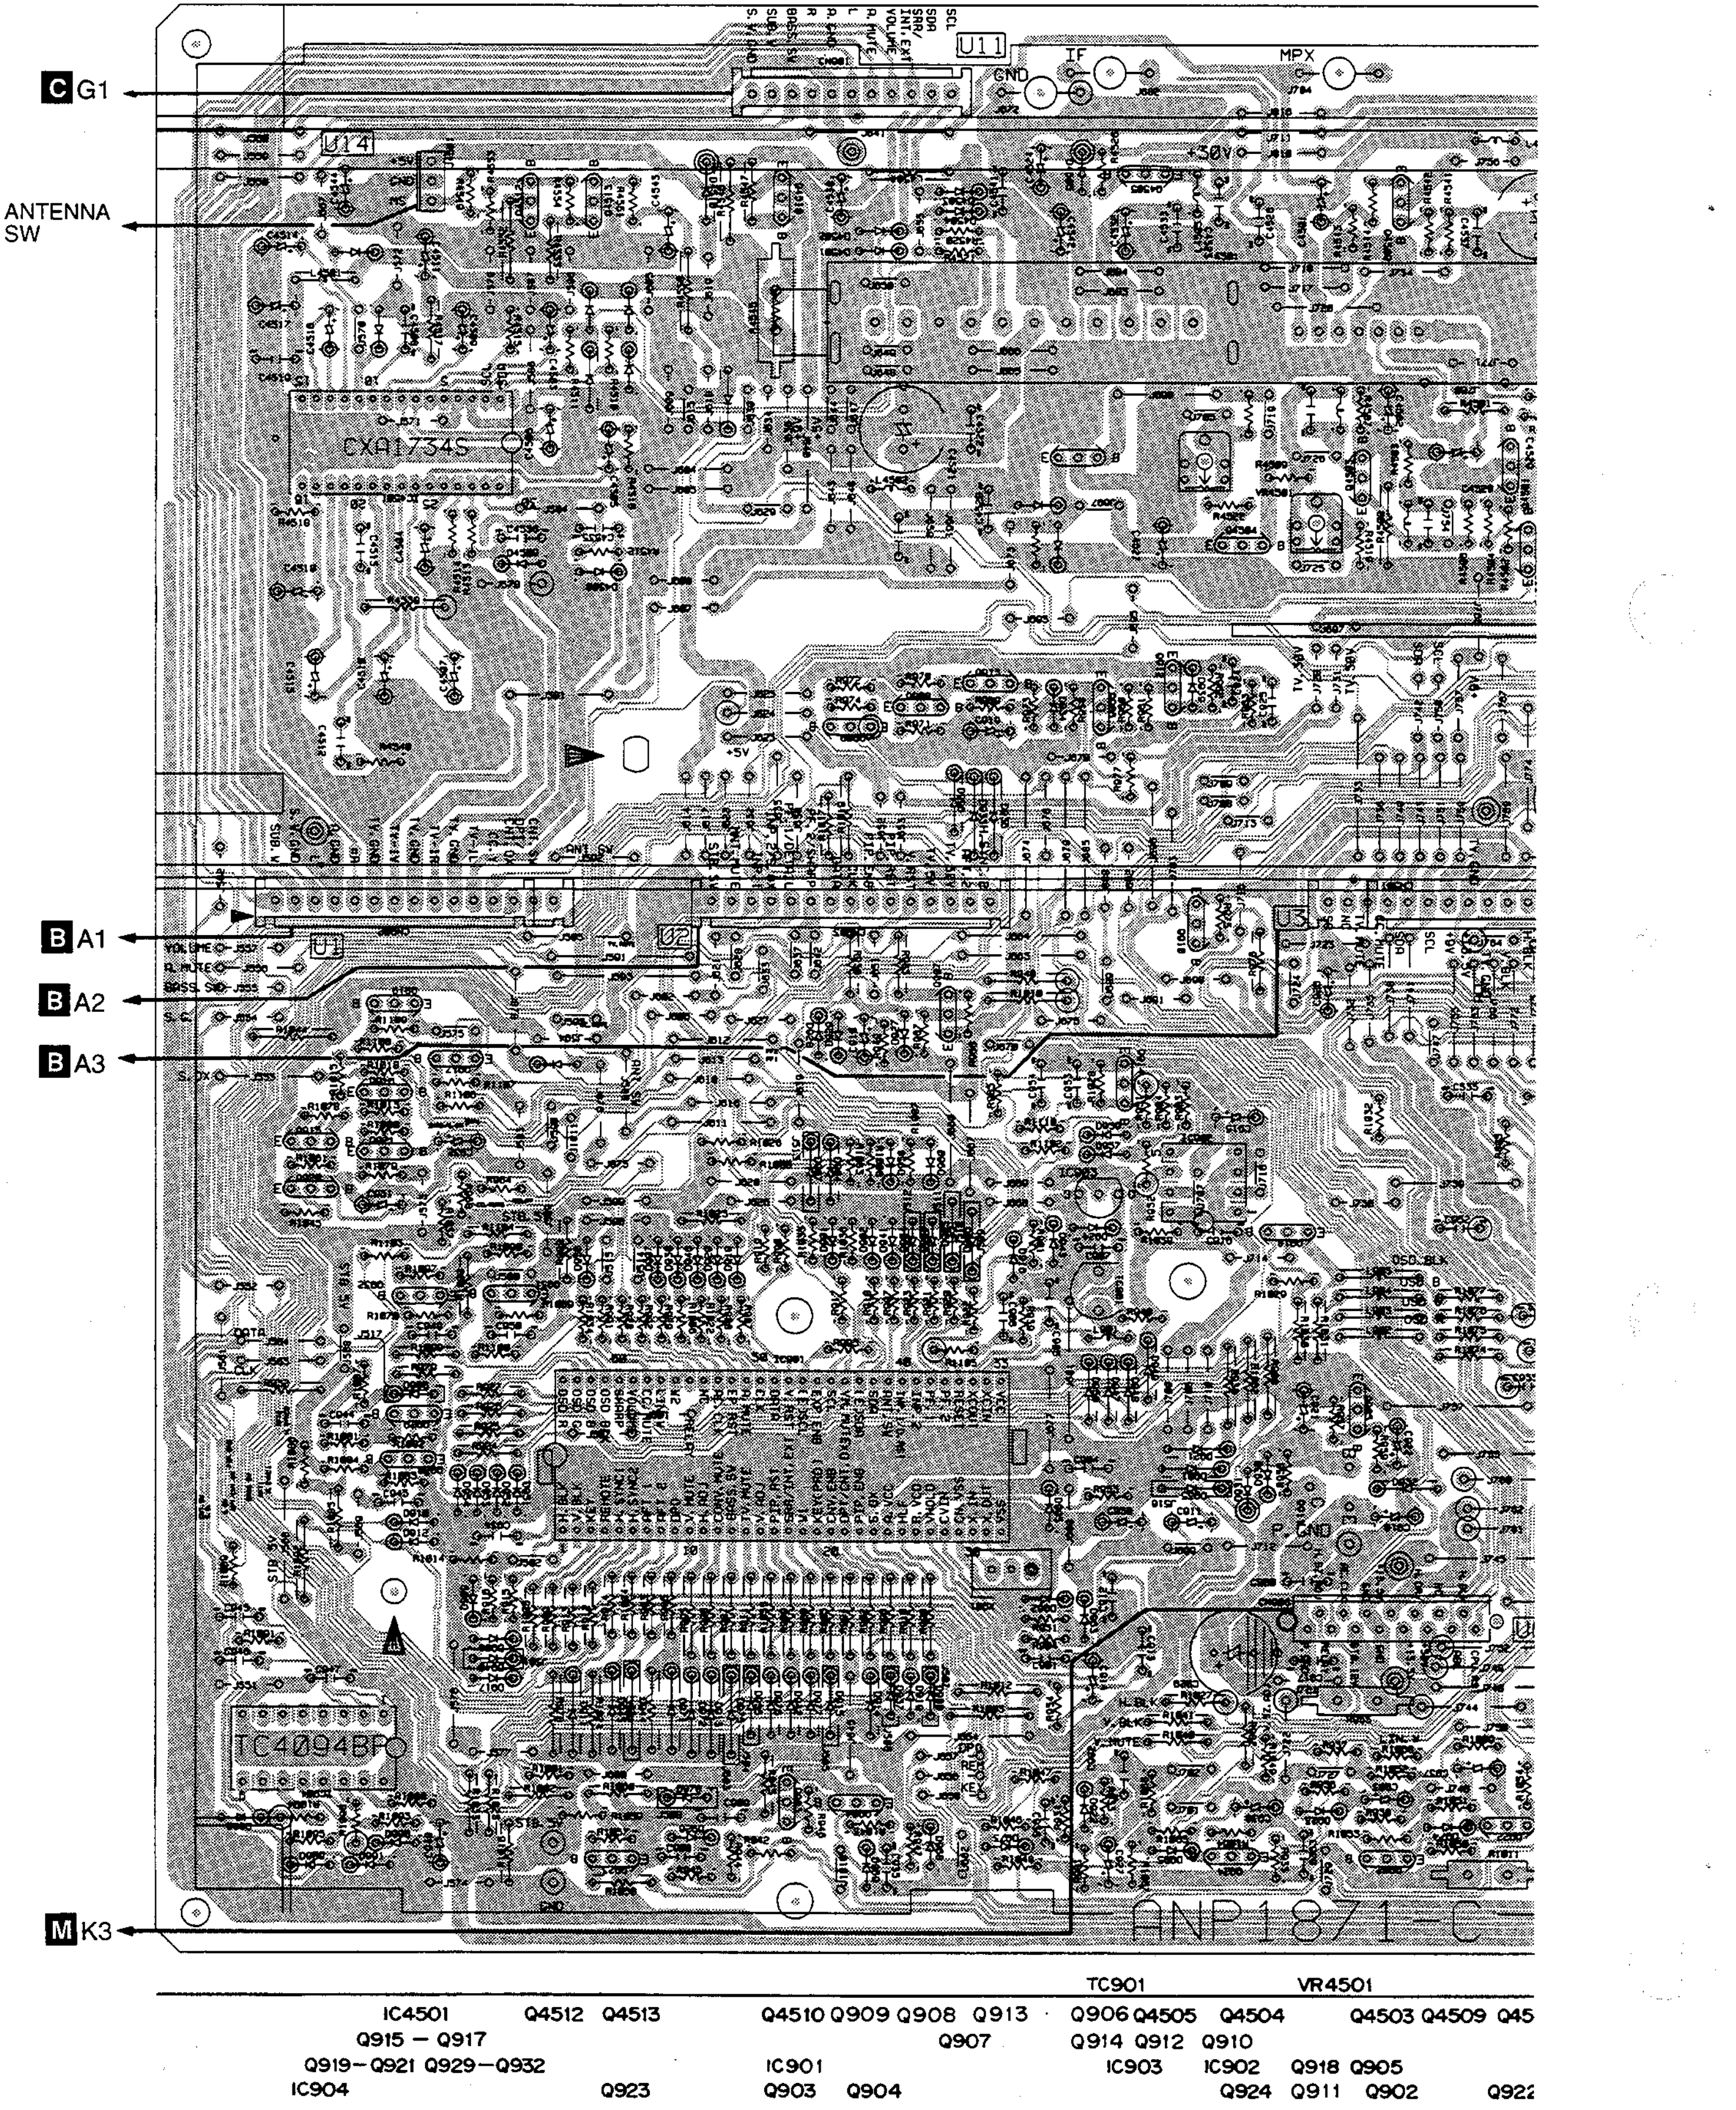
C G1
ANTENNA SW
B A1
B A2
B A3
M K3
U11
U14
U1
U2
U3
IF
MPX
GND
+30V
+5V
CXA1734S
TC4094BF
VOLUME
R. MUTE
BASS. SW
S. C
OSD_BLK
P. GND
GND
ANP1871-C
TC901
VR4501
IC4501
Q4512
Q4513
Q4510
Q909
Q908
Q913
Q906
Q4505
Q4504
Q4503
Q4509
Q45
Q915 – Q917
Q907
Q914
Q912
Q910
Q919–Q921
Q929–Q932
IC901
IC903
IC902
Q918
Q905
IC904
Q923
Q903
Q904
Q924
Q911
Q902
Q92

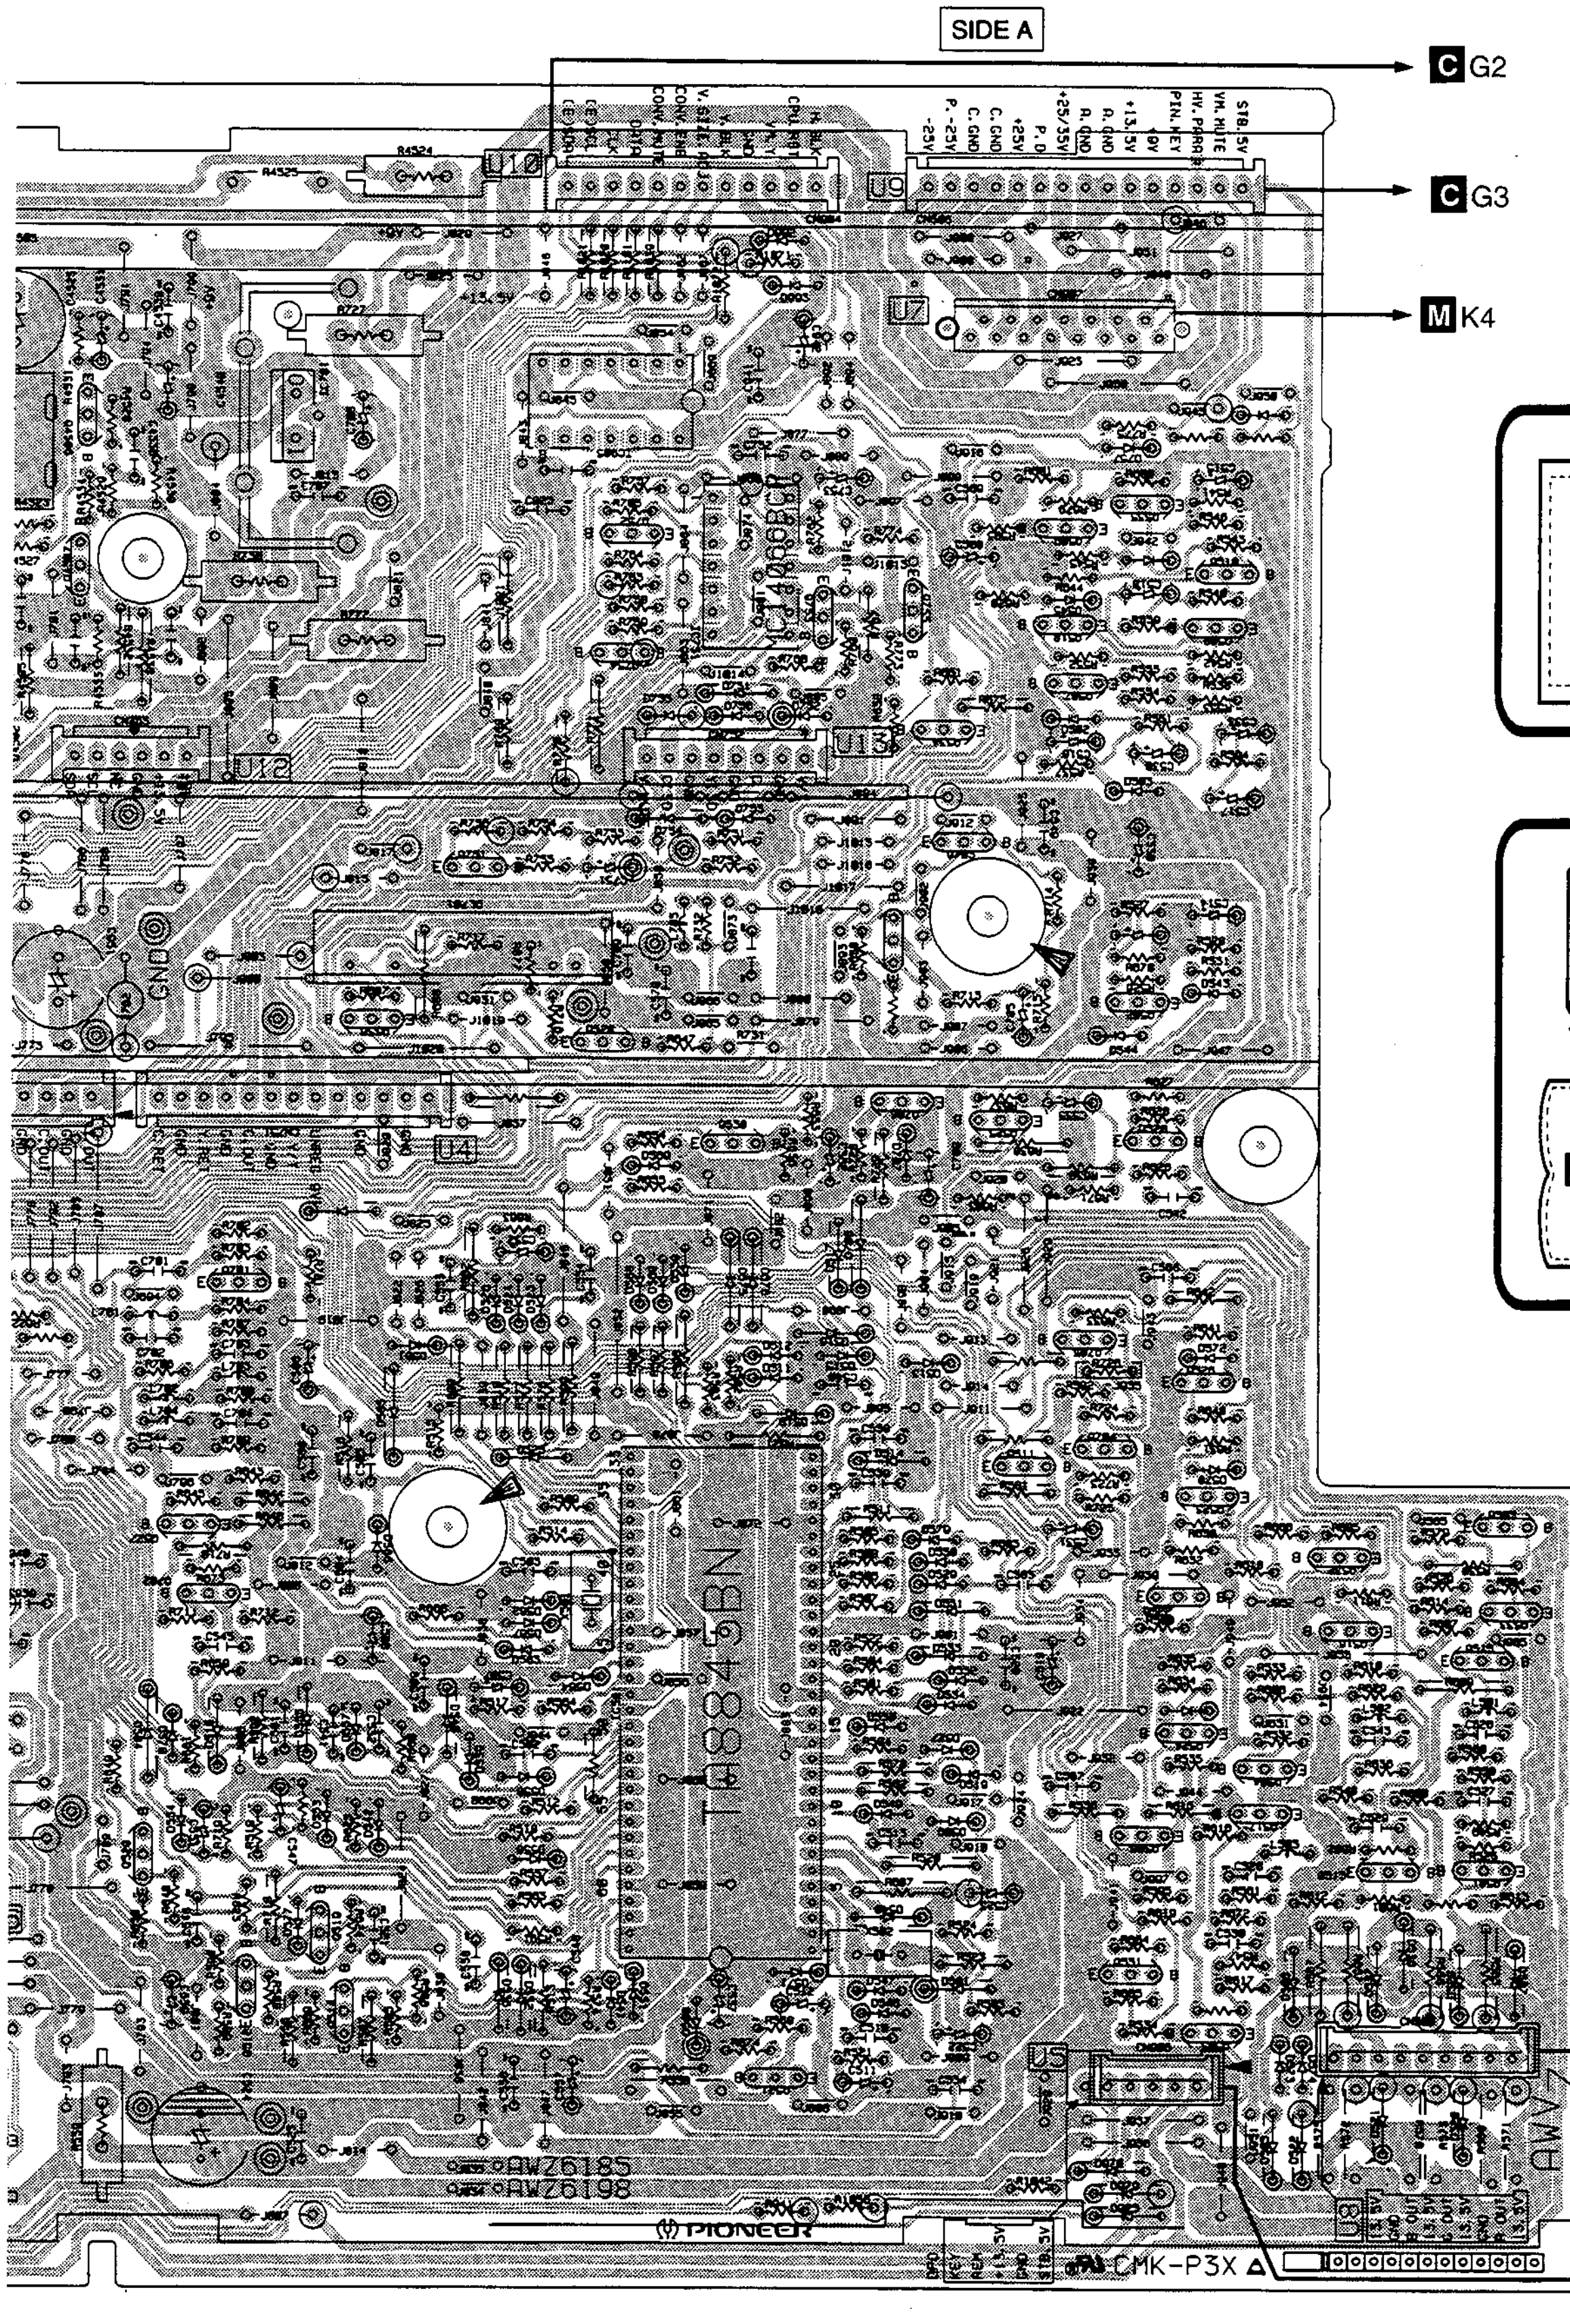
SIDE A
C G2
C G3
M K4
F M1
G N1
H P1
J B1
U10
U9
U7
U12
U13
U4
U5
GND
AWZ6185
AWZ6198
PIONEER
CMK-P3X
AWZ

01 Q4502 Q4506 Q4507 IC701
Q527 Q701 Q536 Q751
Q702 Q519
: Q529 Q512 Q514
IC905 Q752 IC751 Q753 Q755
Q528 Q754 Q530
IC501
Q521
Q507 – Q510
Q706 Q534 Q703 Q518 Q535 Q502 Q526 Q532 Q503
Q525 Q531 Q520 Q522–Q524 Q516 Q515 Q533
Q511 Q705 Q704 Q504–Q506 Q517 Q513 Q501

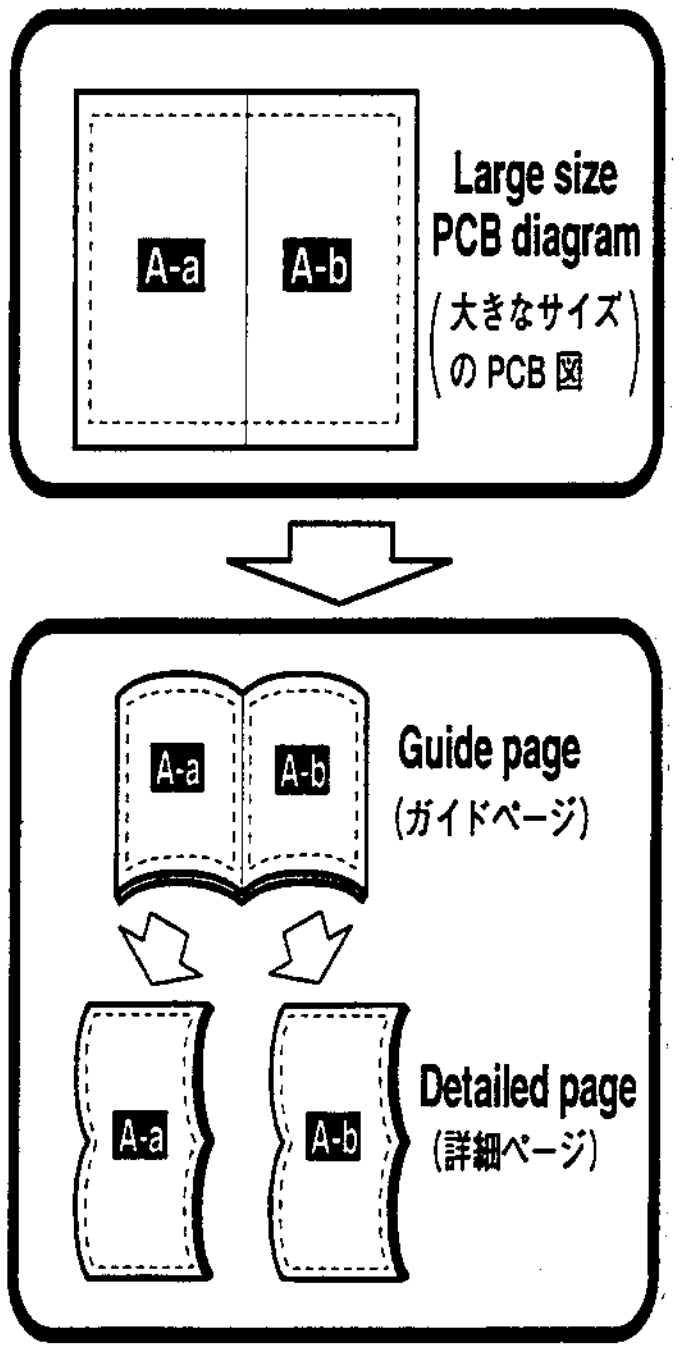
A-a
A-b
Large size PCB diagram
(大きなサイズのPCB図)
Guide page
(ガイドページ)
Detailed page
(詳細ページ)

A TUNER • VIDEO ASSY

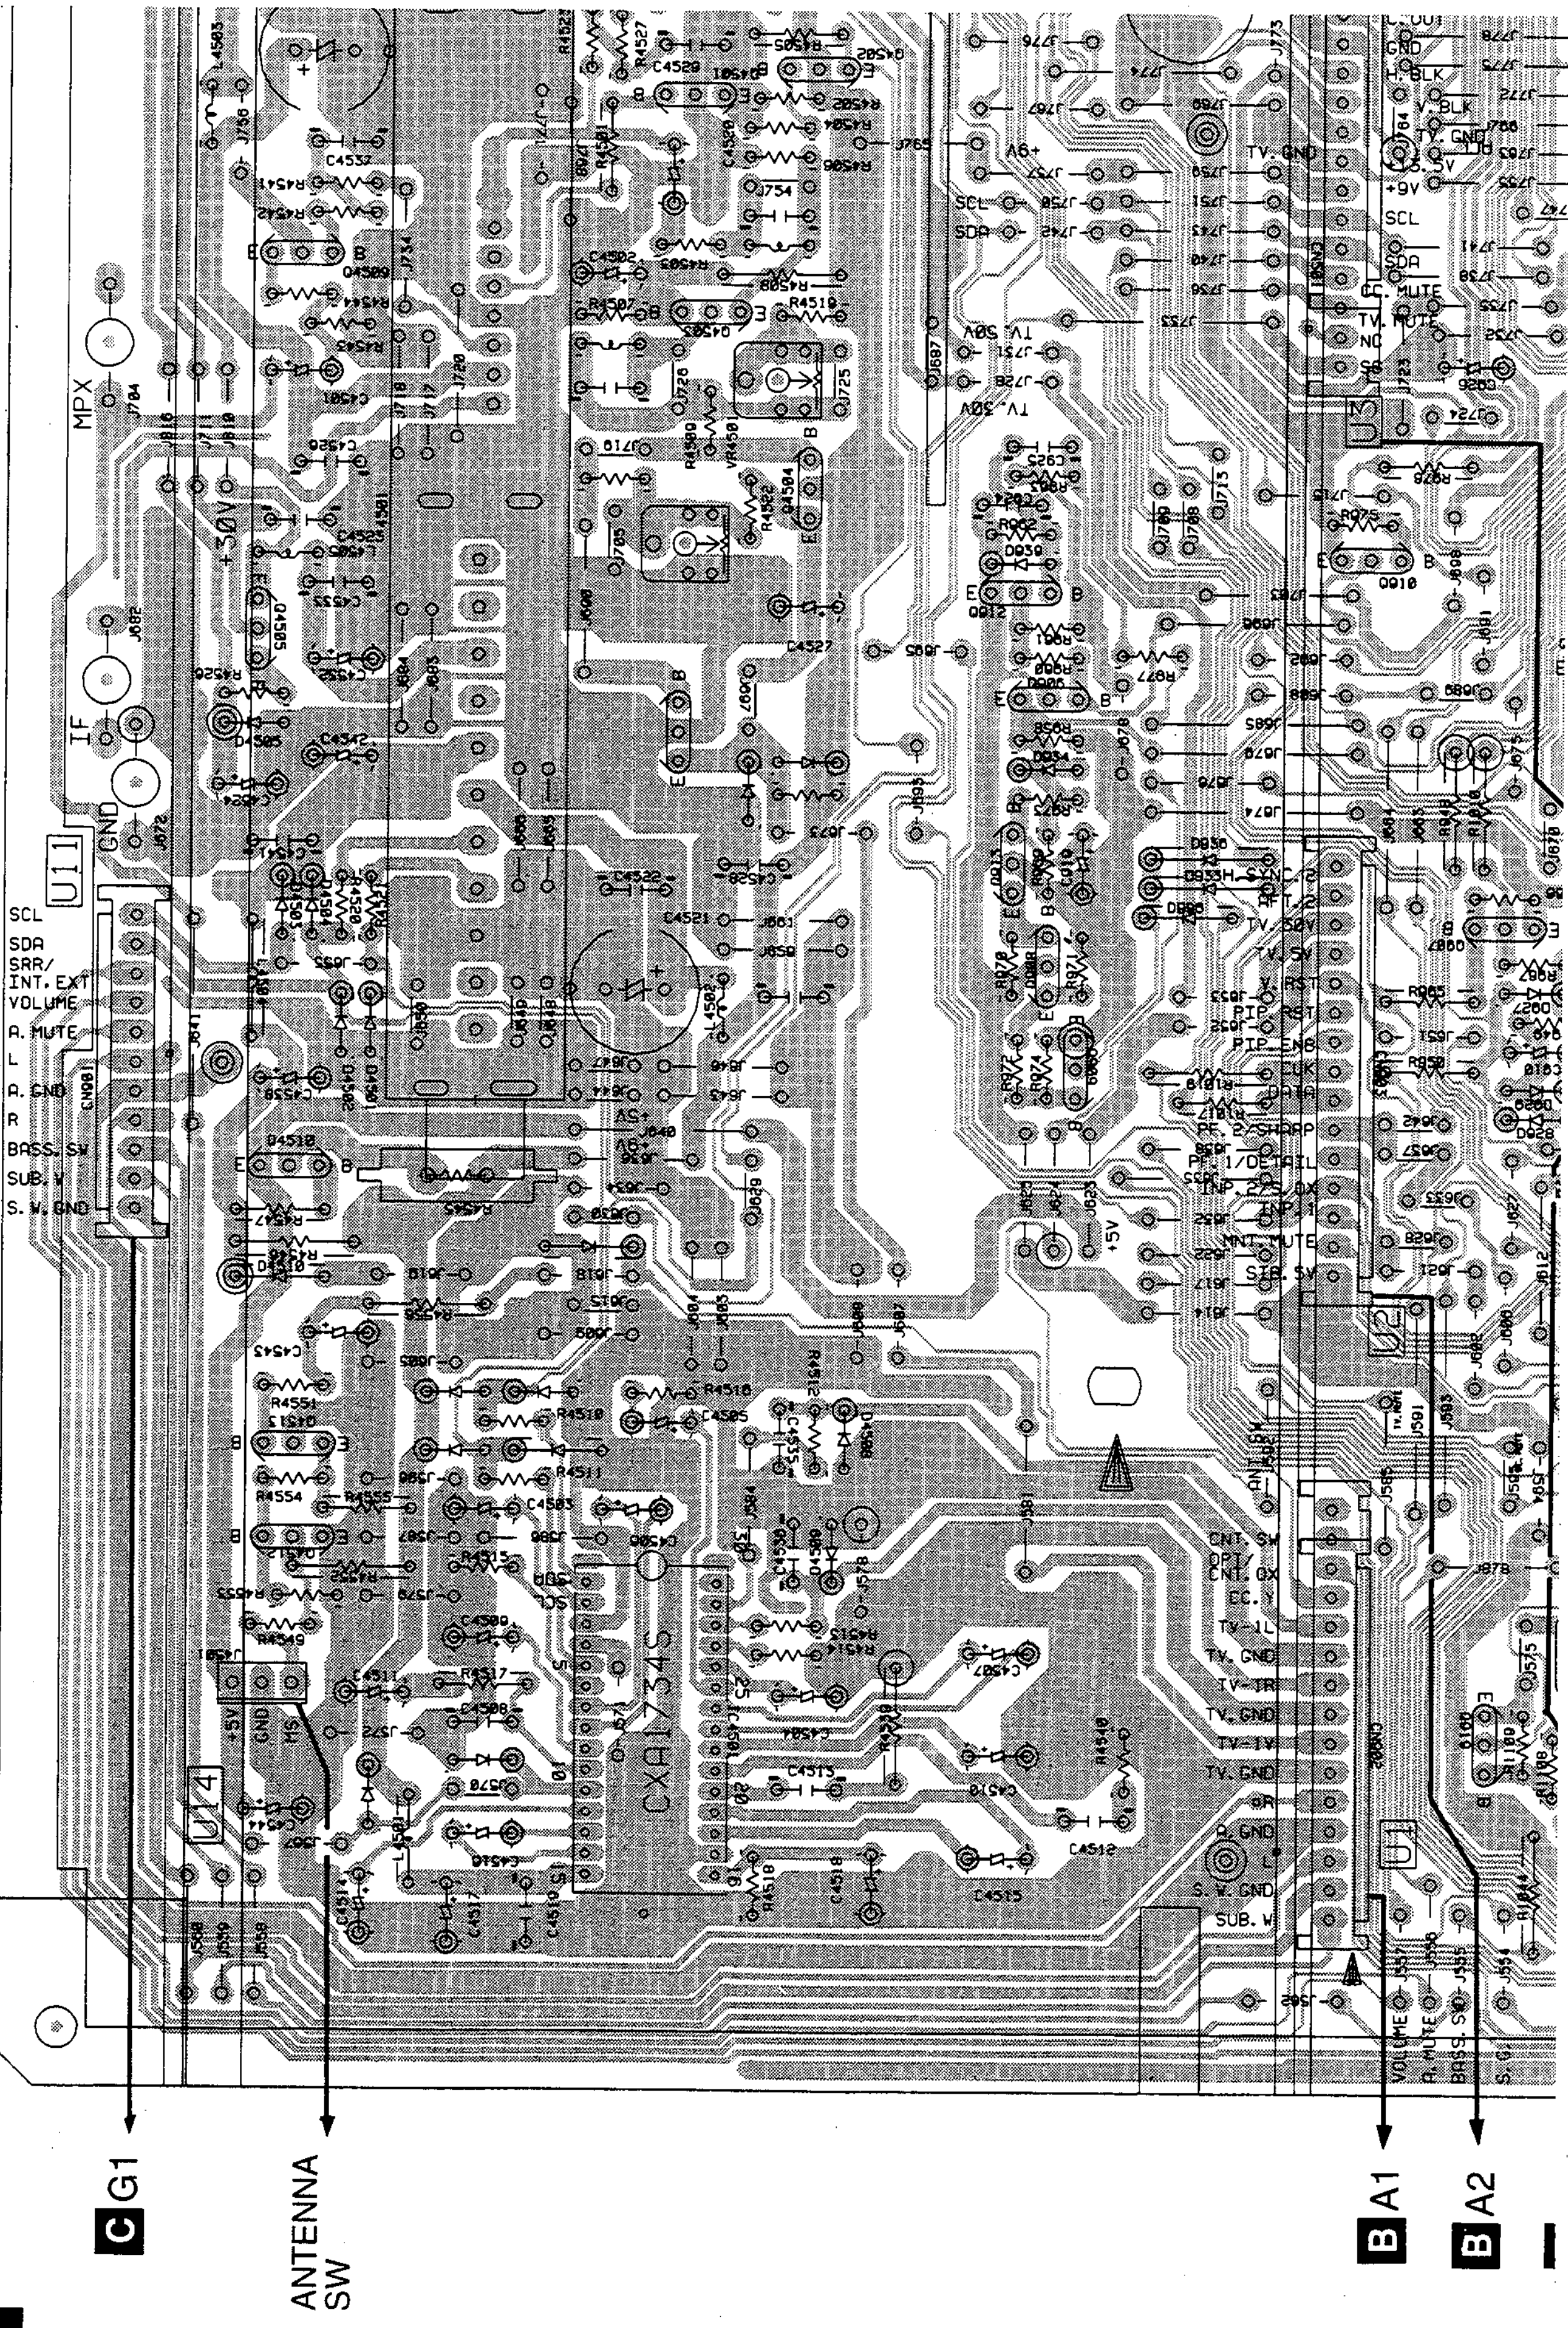
SCL
SDA
SRR/INT.EXT
VOLUME
A.MUTE
L
A.GND
R
BASS.SW
SUB.W
S.W.GND
CN901
U11
GND
IF
MPX
+30V
CXA1734S
U14
5V
GND
MS
TV.GND
+9V
SCL
SDA
CC.MUTE
TV.MUTE
NC
U13
TV 50V
TV 30V
H.SYNC
AFT
TV.50V
TV.5V
V.RST
PIP.RST
PIP.ENB
CLK
DATA
PF.2/SHARP
PF.1/DETAIL
INP.2/S.DX
INP.1
MNT.MUTE
SIR.5V
+5V
A6+
A5+
CNT.SW
OPT/CNT.DX
EC.Y
TV-1L
TV.GND
TV-1R
TV.GND
TV-1V
TV.GND
R
A.GND
L
S.W.GND
SUB.W
U12
U1
VOLUME
A.MUTE
BASS.SW
S.G
C G1
ANTENNA SW
B A1
B A2

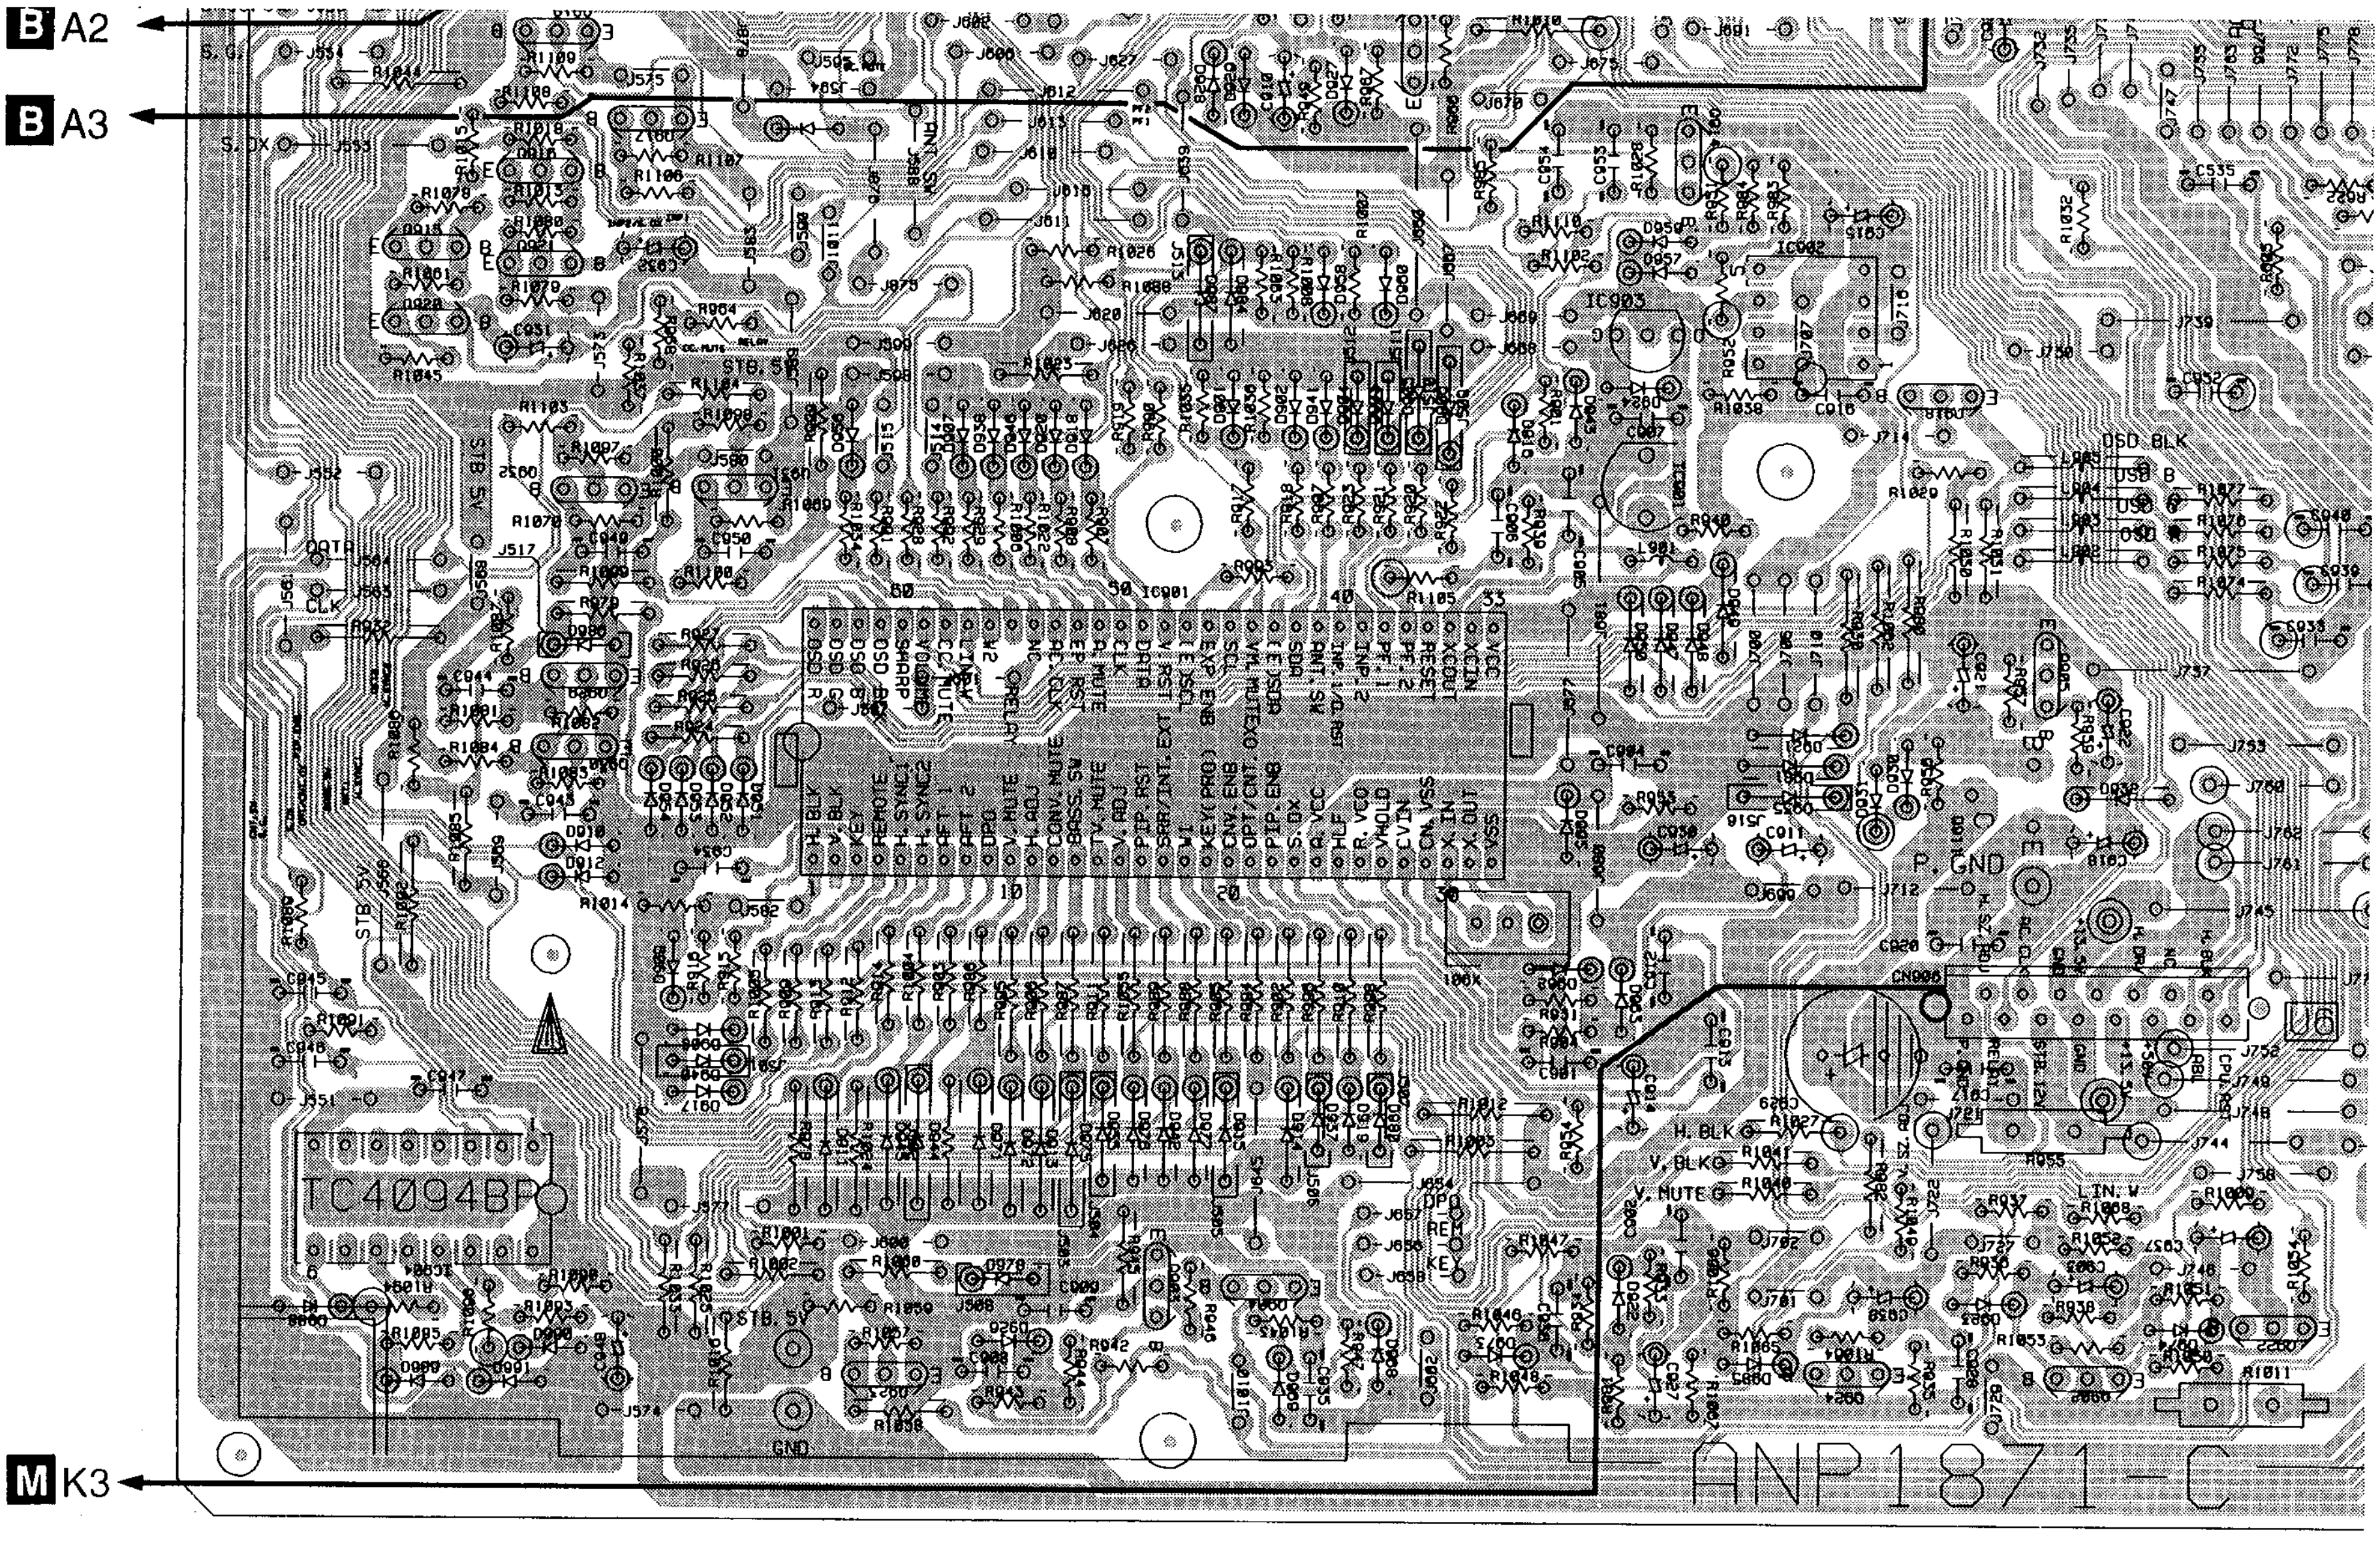
B A2
B A3
M K3
S.DX
S.G
DATA
CLK
STB.5V
TC4094BP
IC901
VCC
XCIN
XCOUT
RESET
PF.2
PF.1
INP.2
INP.1/O.RST
ANT.SW
SDA
(E)SDA
VM.MUTEXO
SCL
EXP ENB
(E)SCL
V.RST
DATA
CLK
A.MUTE
EP.RST
AC.CLK
NC
RELAY
W2
LIN.W
CC.MUTE
VOLUME
SHARP
OSD BLK
OSD B
OSD G
OSD R
VSS
X.OUT
X.IN
CN.VSS
CVIN
VHOLD
R.VCO
HLF
R.VCC
S.DX
PIP.ENB
OPT/CNT
CNV.ENB
KEY(PRO)
W1
SRV/INT.EXT
PIP.RST
V.ADJ
TV.MUTE
BASS.SW
CONV.MUTE
H.ADJ
V.MUTE
DPG
OPT 2
OPT 1
H.SYNC2
H.SYNC1
REMOTE
KEY
V.BLK
H.BLK
P.GND
CN906
H.BLK
V.BLK
V.MUTE
LIN.W
DPG
REM
KEY
GND
ANP1871-C

TC901 VR4501

IC4501 Q4512 Q4513 Q4510 Q909 Q908 Q913 Q906 Q4505 Q4504 Q4503 Q4509 Q4501

Q915 – Q917 Q907 Q914 Q912 Q910

Q919 – Q921 Q929 – Q932 IC901 IC903 IC902 Q918 Q905

IC904 Q923 Q903 Q904 Q924 Q911 Q902 Q922

A-a A-b

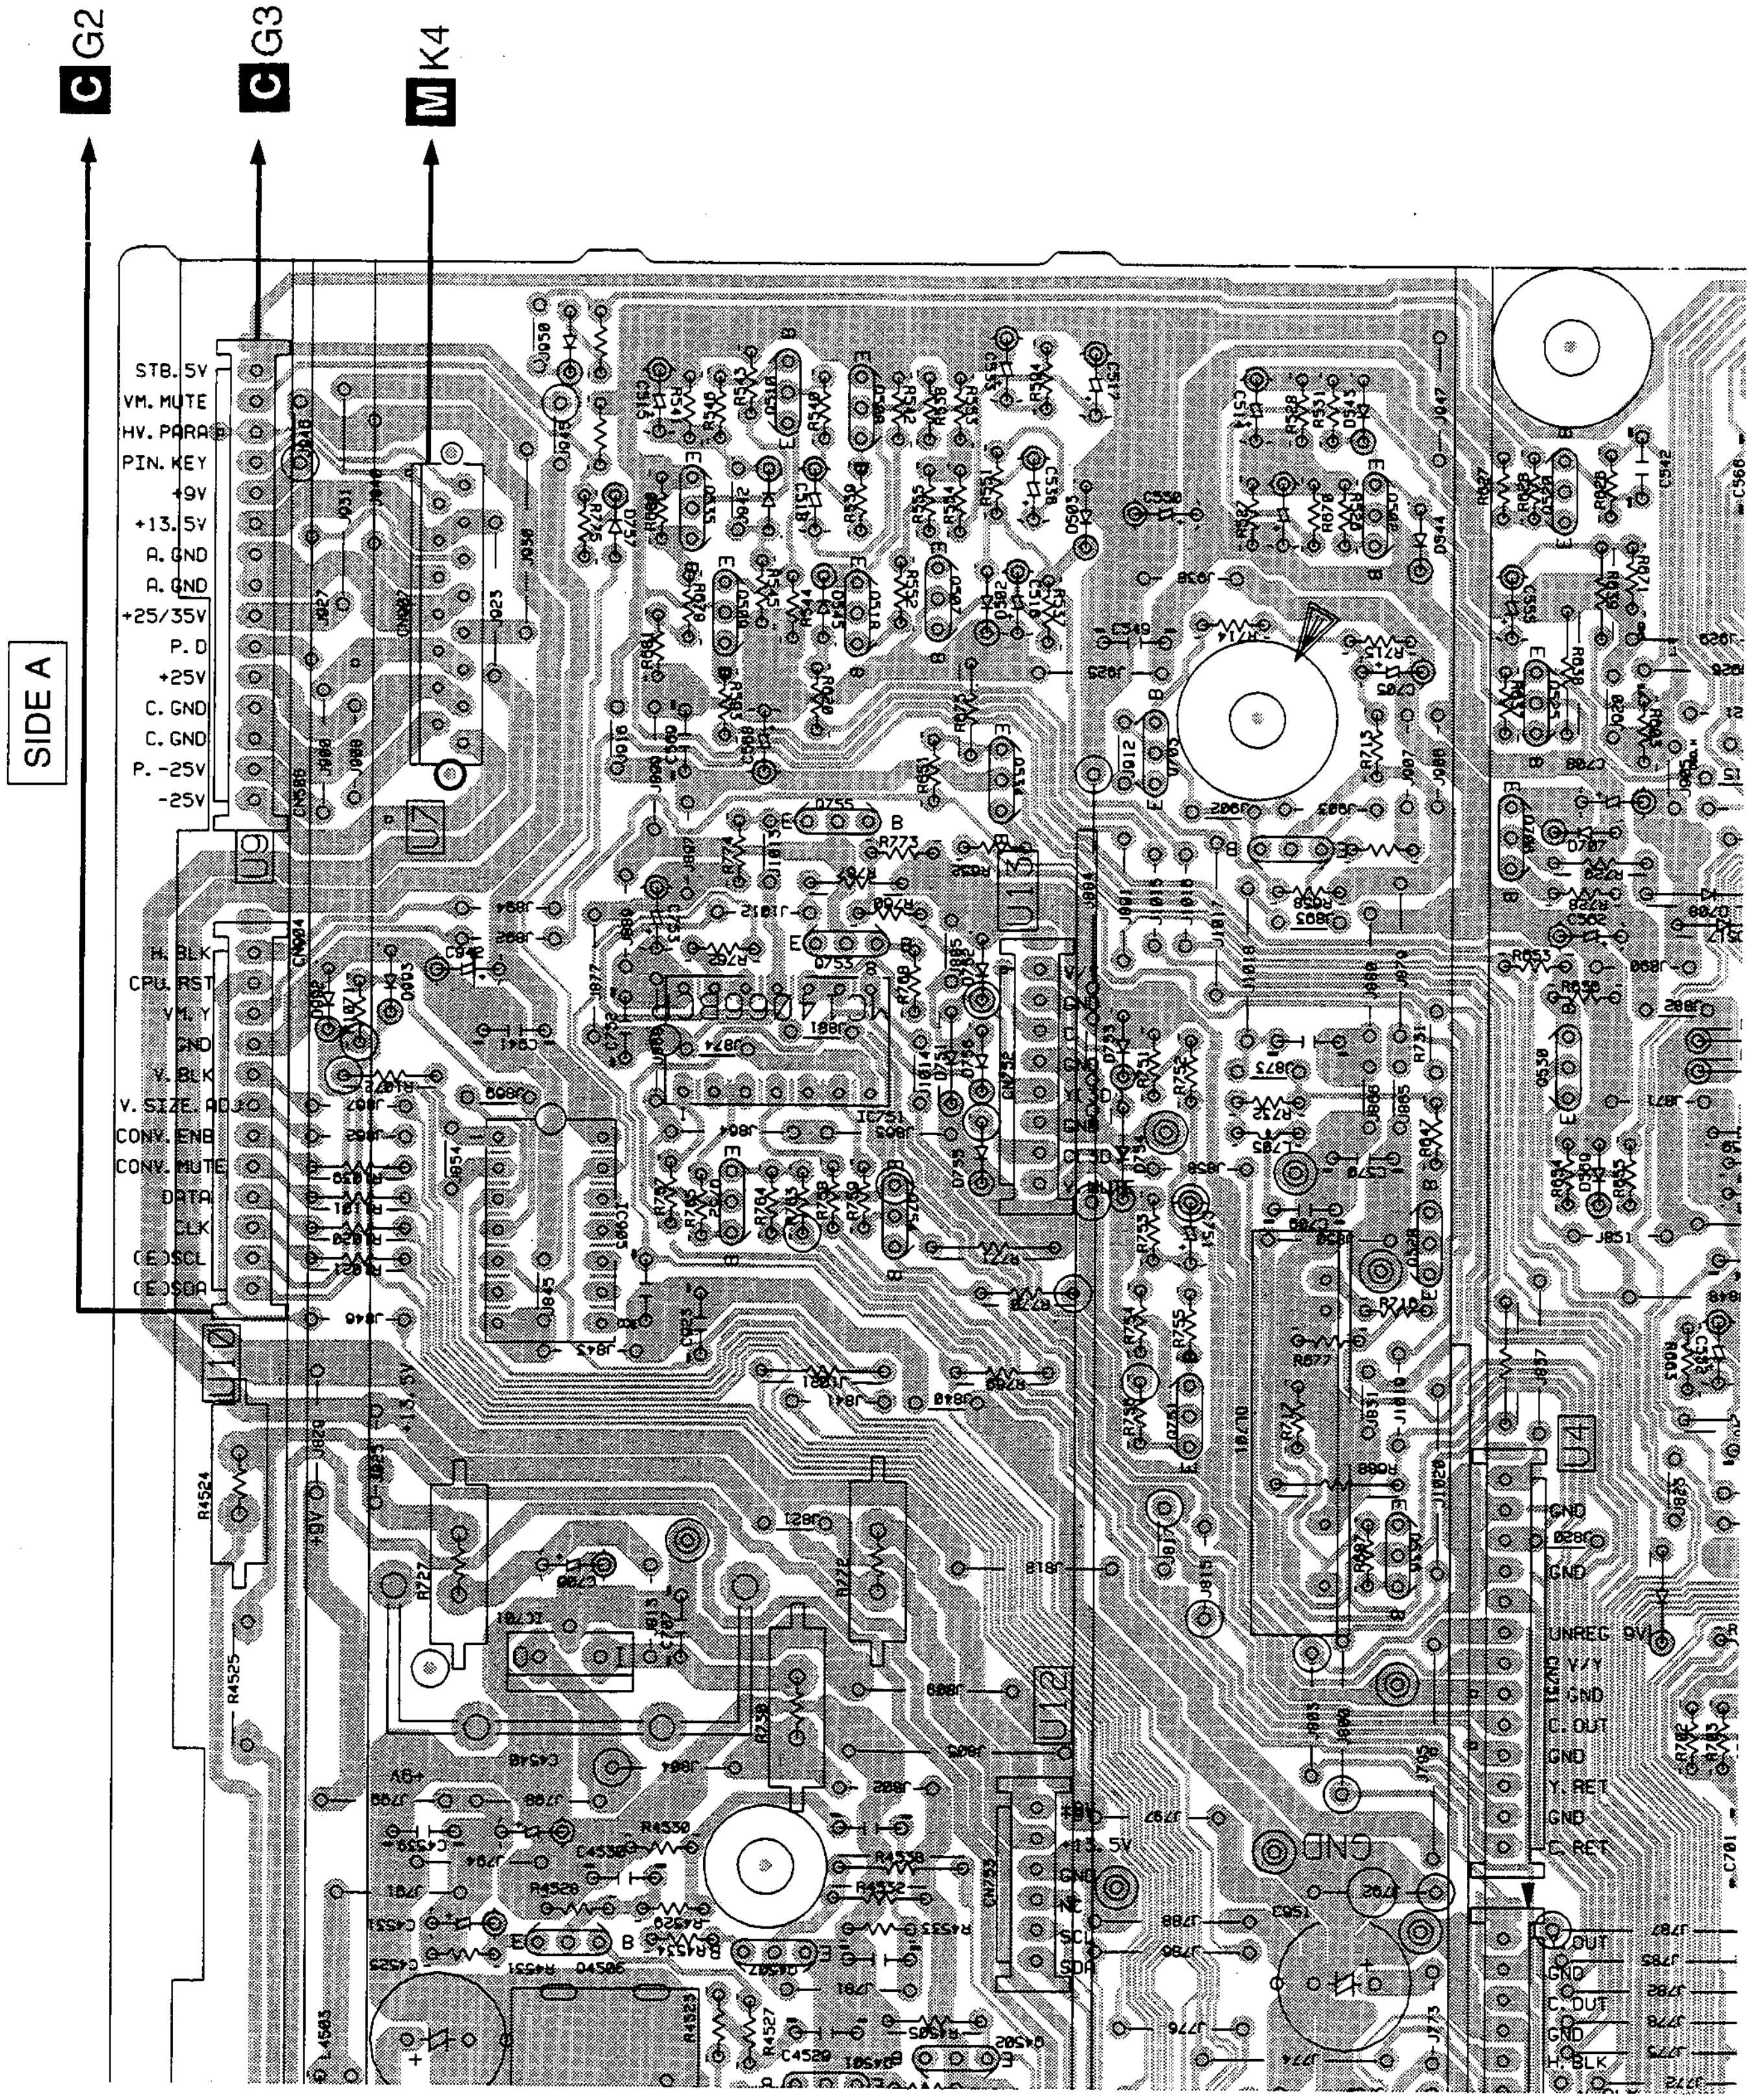
C G2
C G3
M K4
SIDE A
STB.5V
VM.MUTE
HV.PARA
PIN.KEY
+9V
+13.5V
A.GND
A.GND
+25/35V
P.D
+25V
C.GND
C.GND
P.-25V
-25V
U9
U7
H.BLK
CPU.RST
VM.Y
GND
V.BLK
V.SIZE.ADJ
CONV.ENB
CONV.MUTE
DATA
CLK
CE)SCL
CE)SDA
U10
U11
U12
U4
+15V
+9V
+13.5V
GND
GND
UNREG 9V
V/Y
GND
C.OUT
GND
Y.RET
GND
C.RET
OUT
GND
C.OUT
GND
H.BLK
+15V
GND
NC
SCL
SDA
GND
IC751
IC781
CN751
CN501
CN504

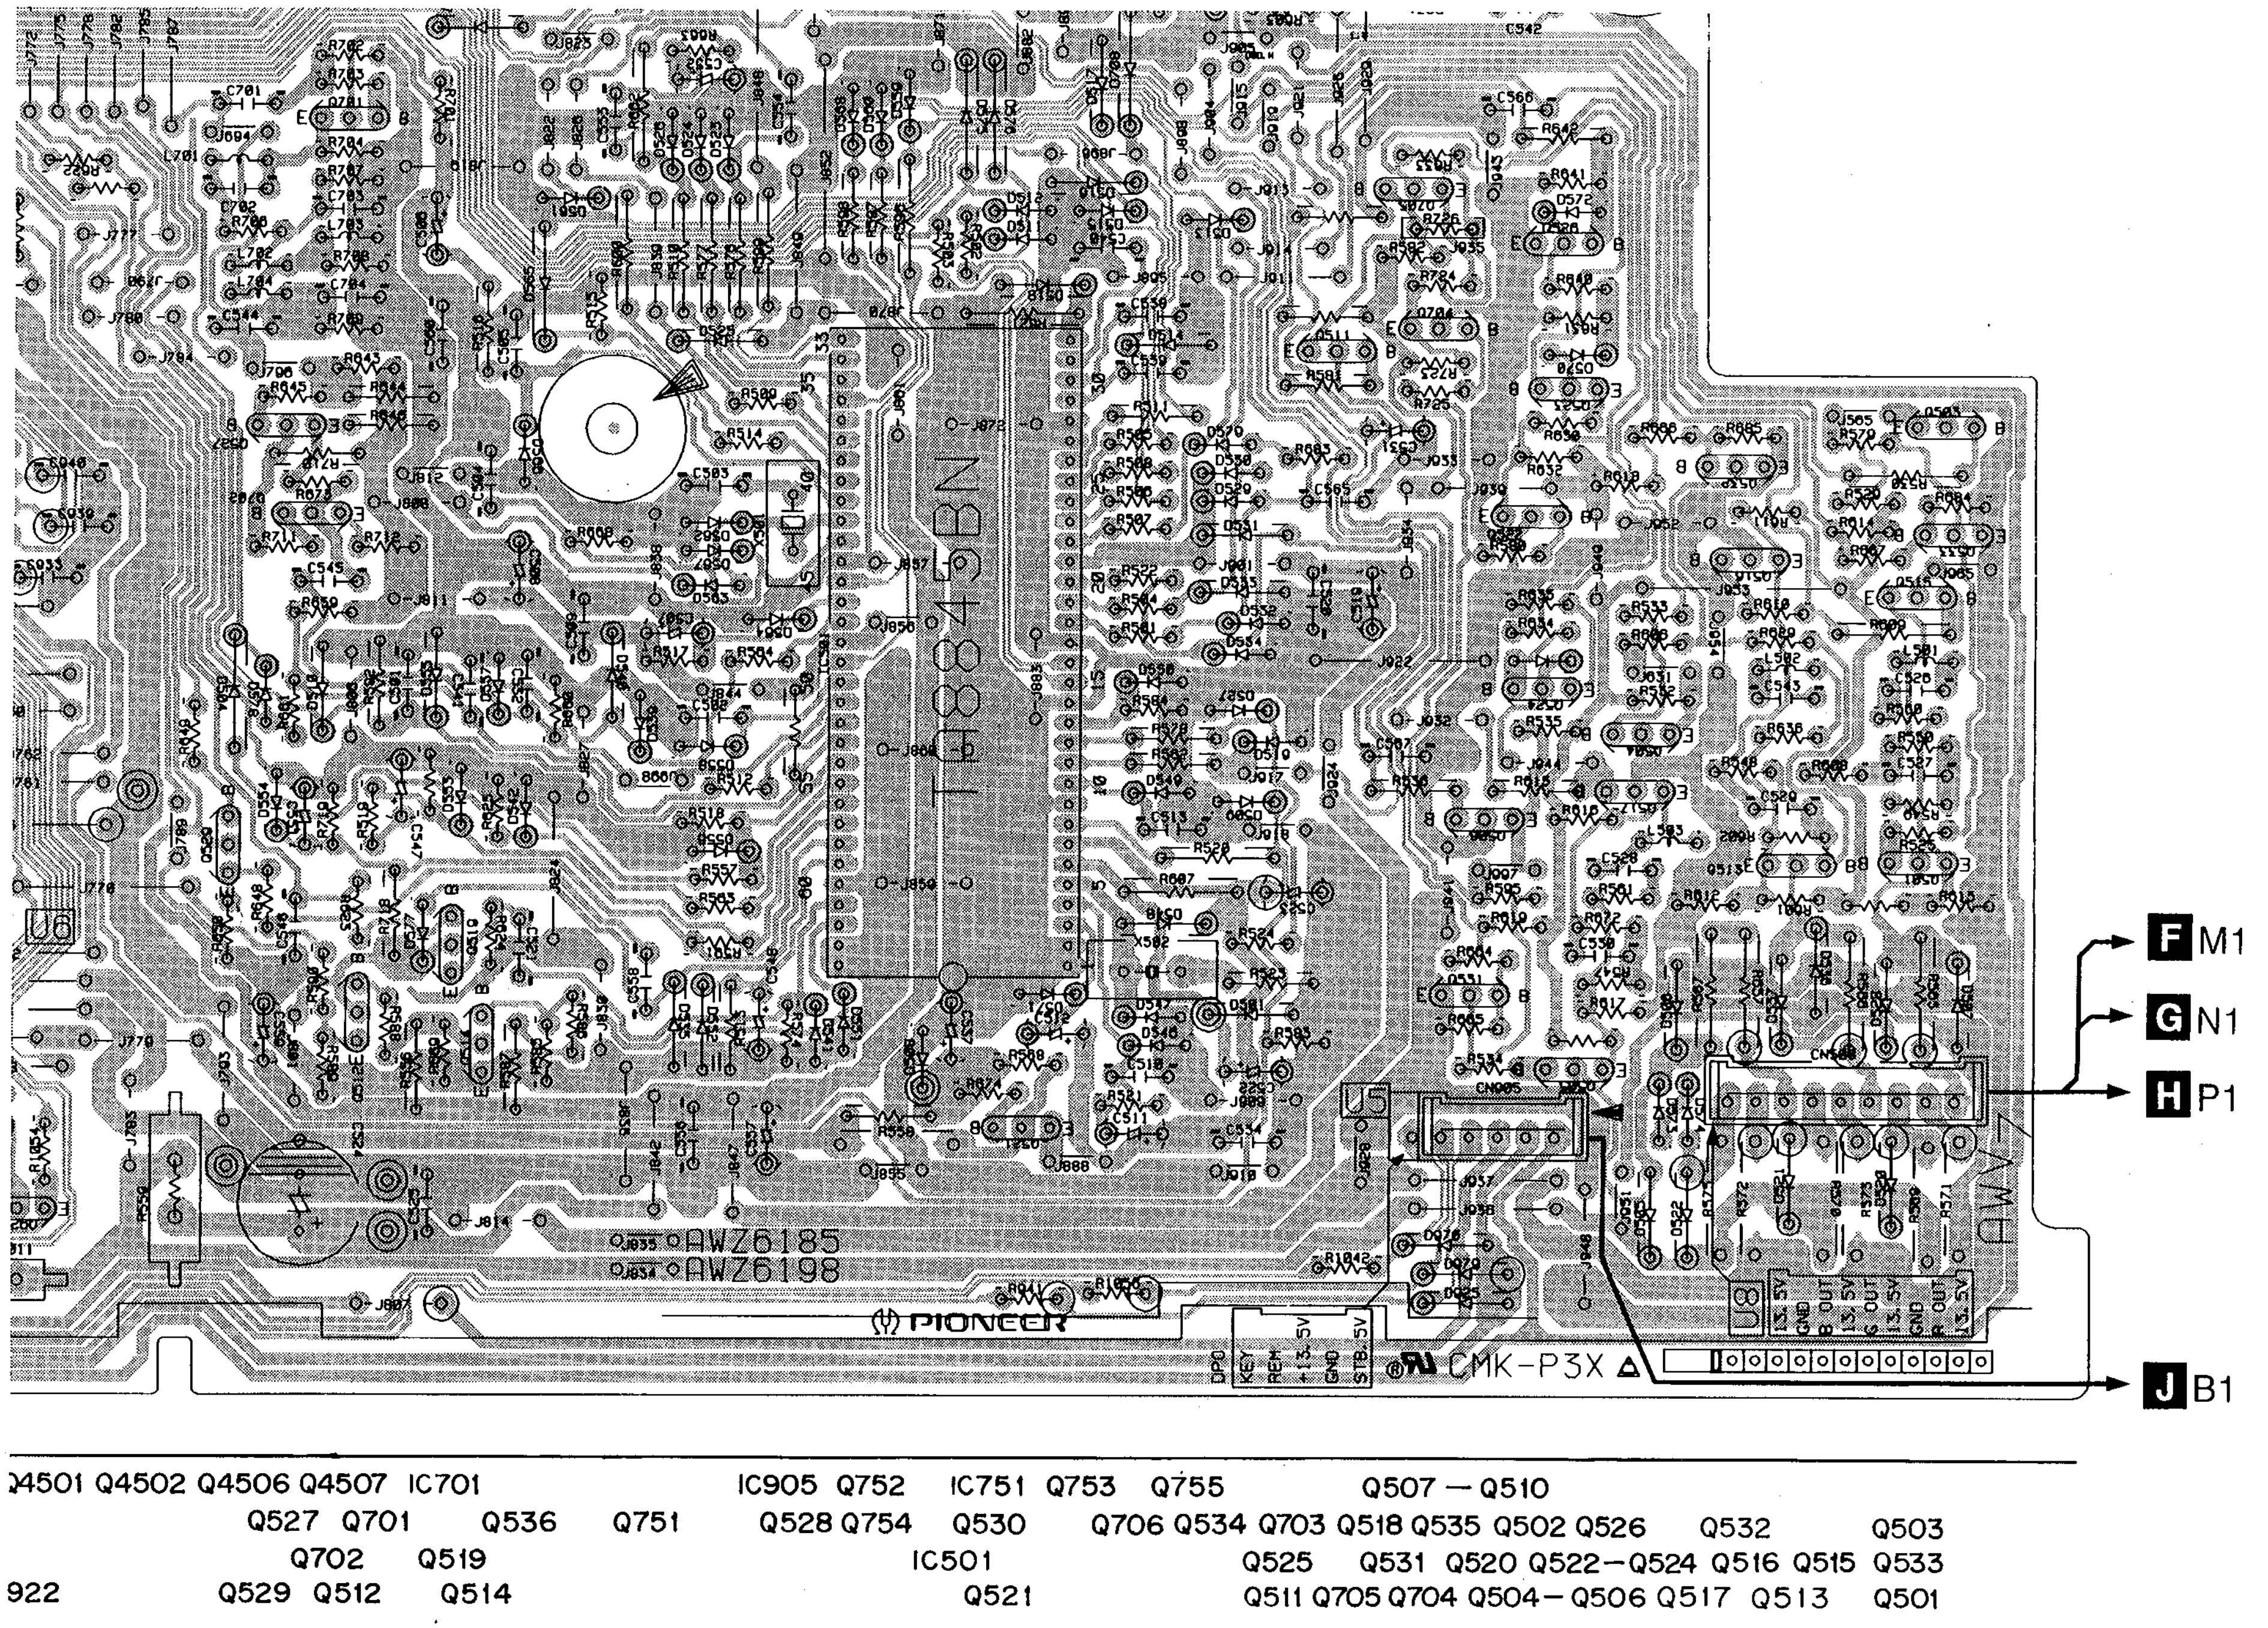
F M1
G N1
H P1
J B1
CMK-P3X
AWZ6185
AWZ6198
PIONEER
TA8843BN
DPO KEY REM +13.5V GND STB.5V
13.5V B OUT GND 13.5V G OUT 13.5V R OUT GND 13.5V
Q4501 Q4502 Q4506 Q4507 IC701
Q527 Q701
Q702
Q529 Q512
Q536
Q519
Q514
Q751
IC905 Q752
Q528 Q754
IC751 Q753
Q530
IC501
Q521
Q755
Q706 Q534 Q703 Q518 Q535 Q502 Q526
Q525 Q531 Q520 Q522−Q524 Q516 Q515 Q533
Q511 Q705 Q704 Q504−Q506 Q517 Q513 Q501
Q507 — Q510
Q532
Q503
922

A-a A-b

4.2 AV I/O ASSY

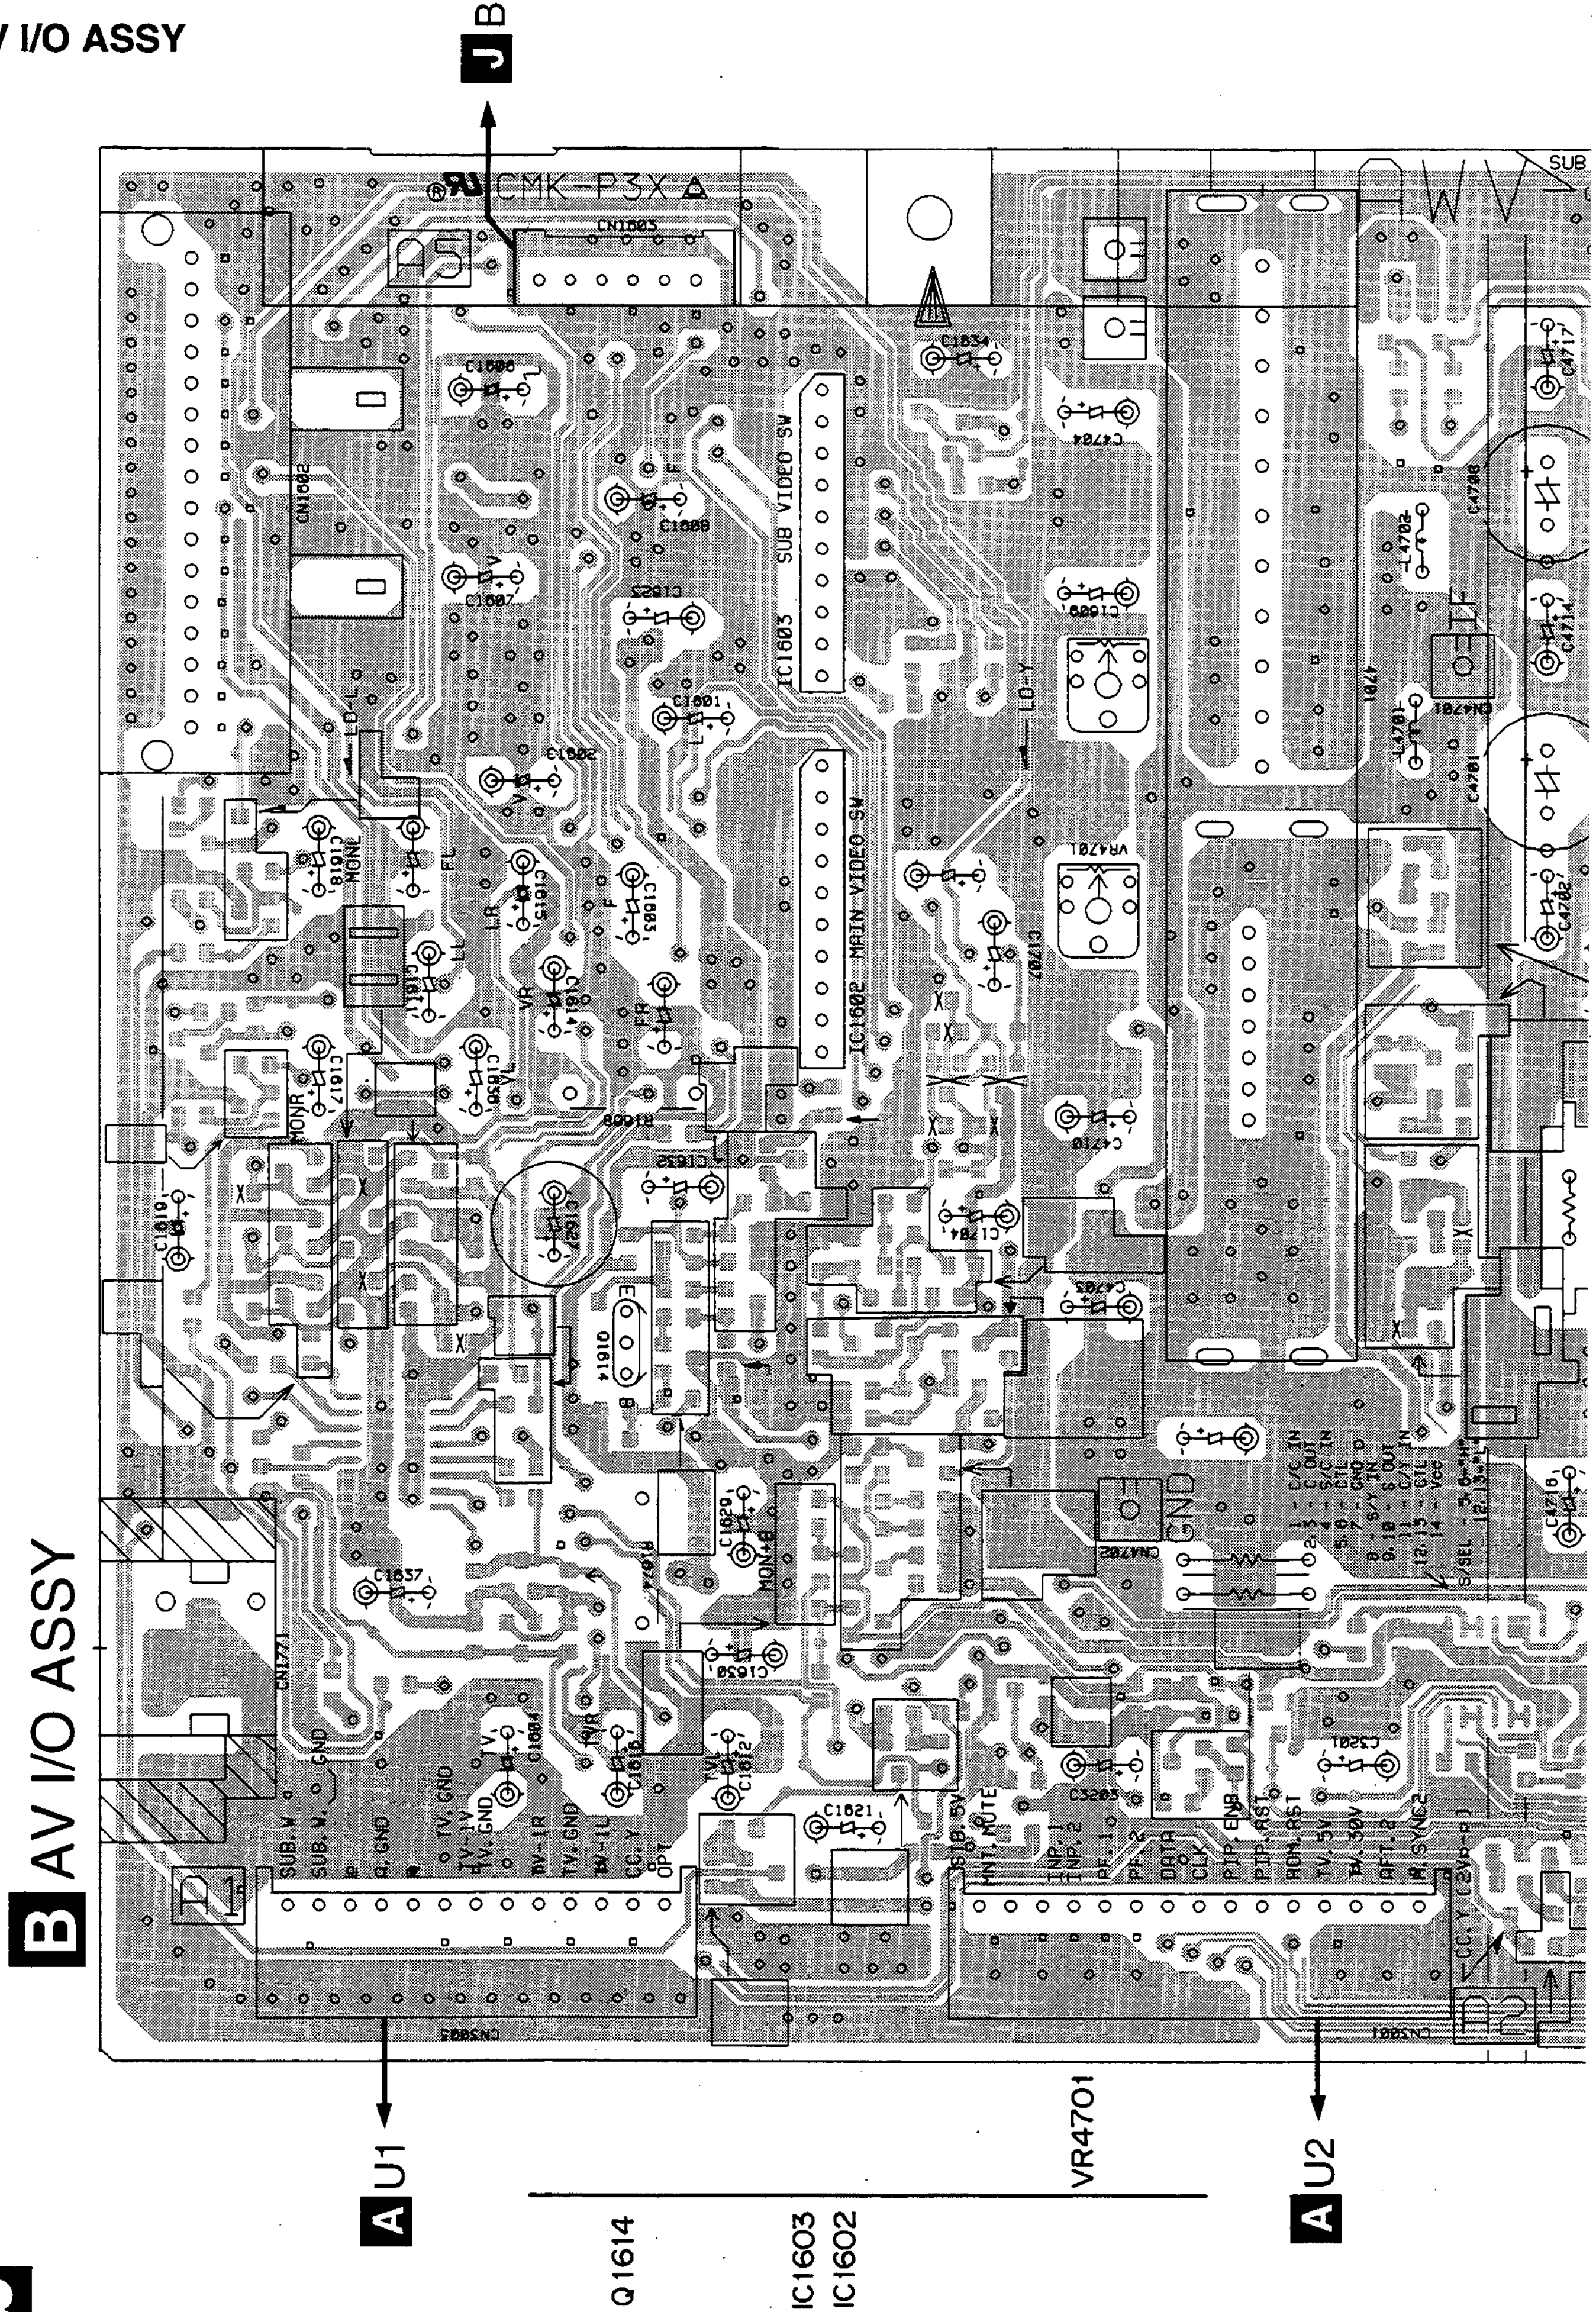
J B3
B AV I/O ASSY
A U1
A U2
CMK-P3X
CN1603
CN1602
SUB VIDEO SW
IC1603
MAIN VIDEO SW
IC1602
CN1771
CN2805
CN2801
CN4702
CN4701
VR4701
Q1614
GND
LD-L
LD-Y
MONL
MONR
MON+B
SUB
C1834
C4704
C4717
C4708
C4714
C4701
C4702
C4710
C1704
C4703
C4716
C3201
C3203
C1621
C1637
C1629
C1630
C1610
C1606
C1608
C1607
C1622
C1601
C1602
C1603
L4702
L4701
R1608
Q1614
Q1602
VR4701
Q1614
IC1603
IC1602

SIDE A

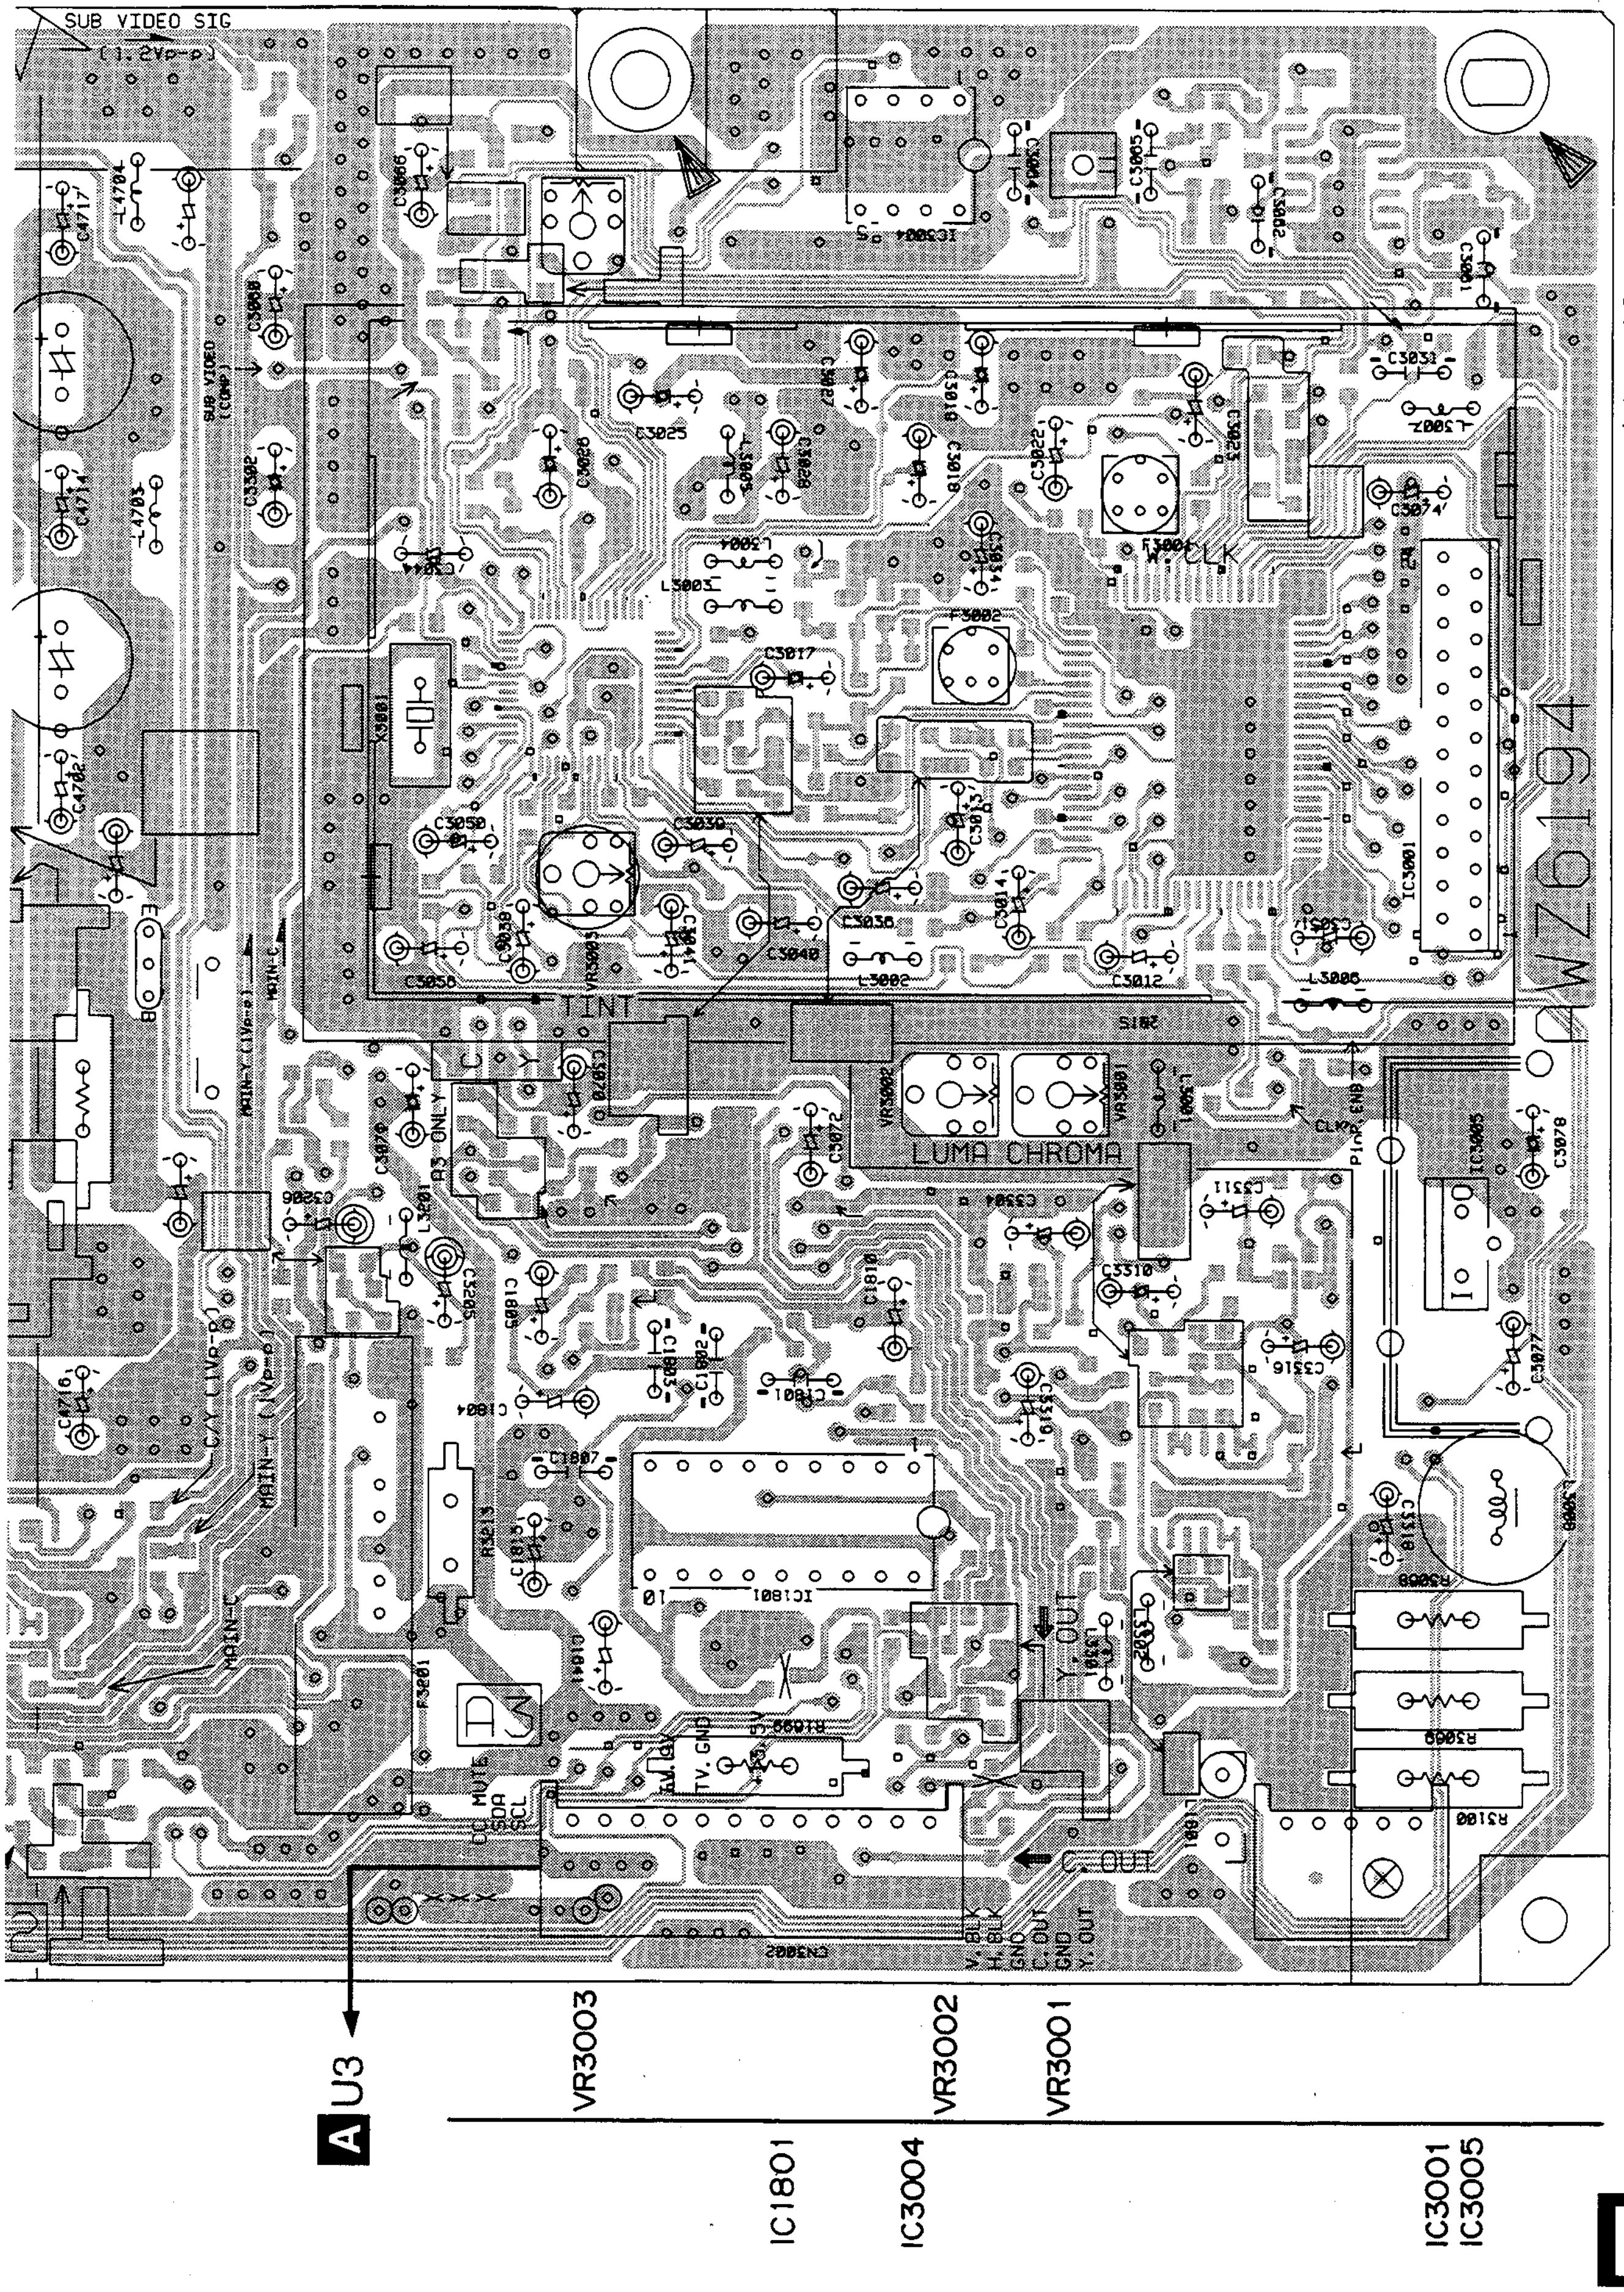
(ANP1873-B)
SUB VIDEO SIG
(1.2Vp-p)
SUB VIDEO (COMP)
MAIN-Y (1Vp-p)
MAIN-C
C/Y (1Vp-p)
TINT
C Y
A3 ONLY
LUMA CHROMA
VR3002
VR3001
IC3001
IC3004
IC3005
IC1801
X3001
F3001
F3002
M.CLK
CLK
ENB
Pin
Y OUT
C OUT
DC MUTE
SDA
SCL
TV GND
V.BLK
H.BLK
GND
C.OUT
GND
Y.OUT
CN3002
R3213
R3008
R3009
R3100
A U3
VR3003
VR3002
VR3001
IC1801
IC3004
IC3001
IC3005

B AV I/O ASSY

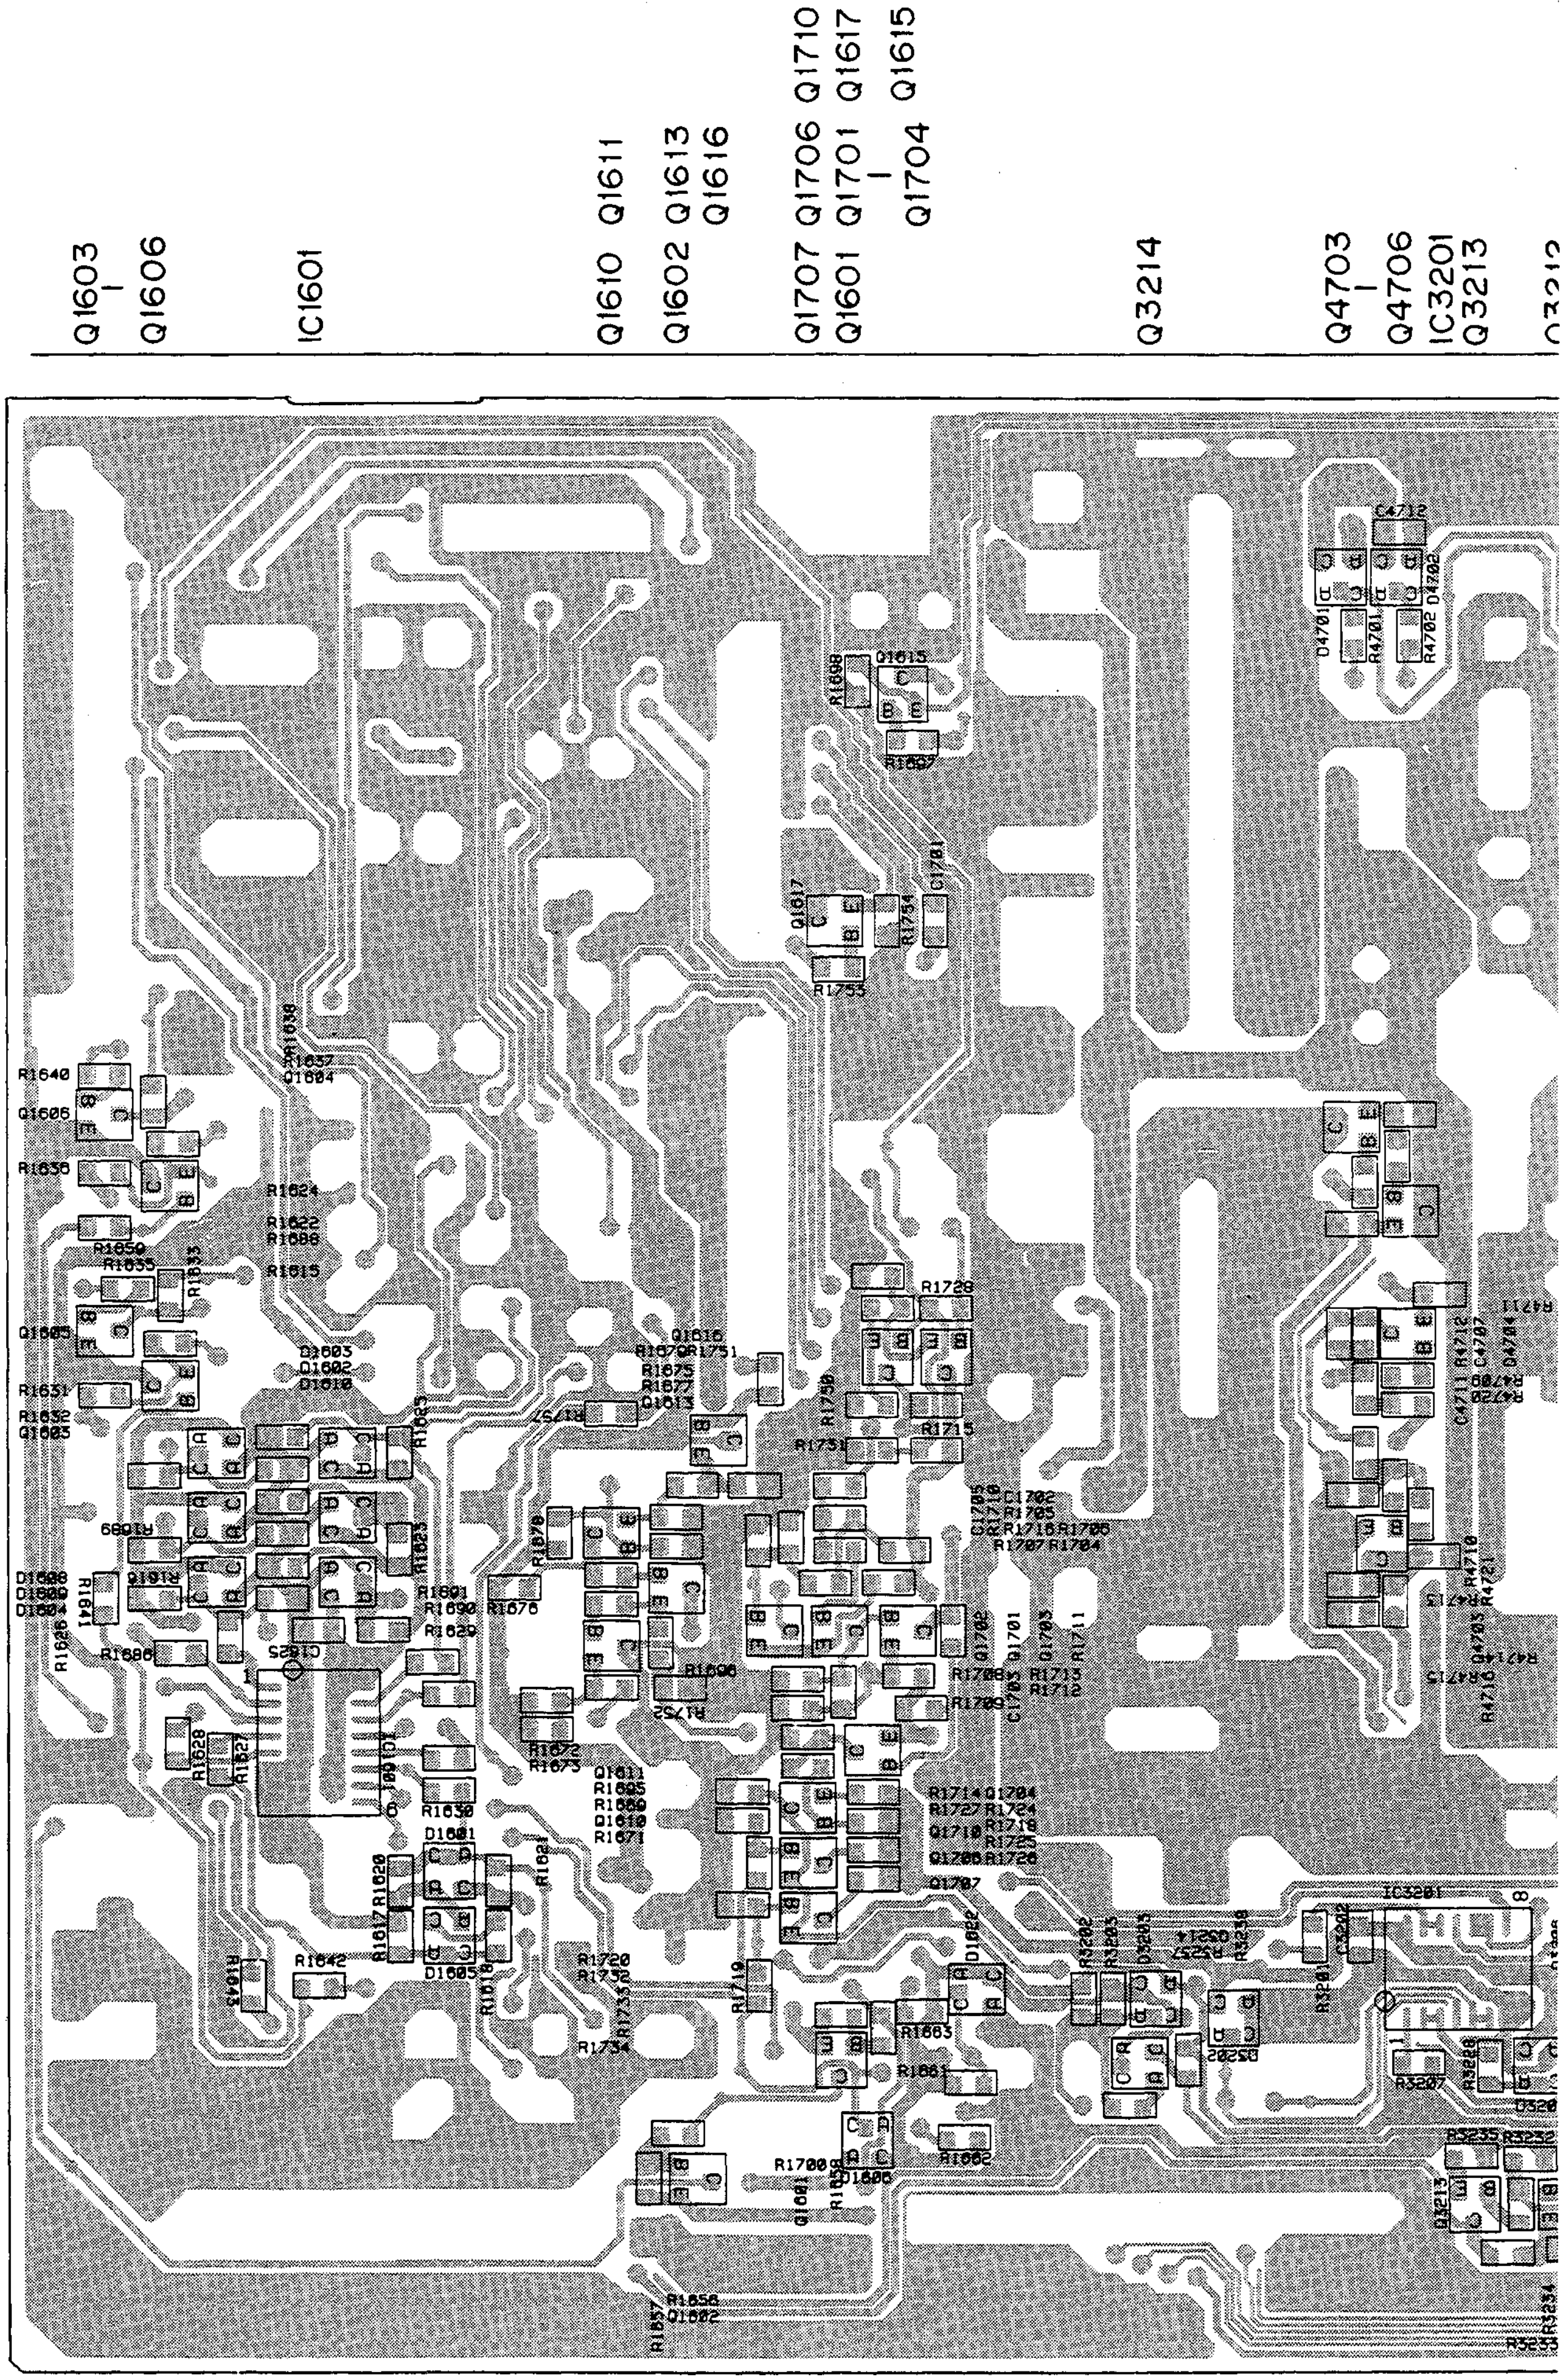
Q1603
–
Q1606
IC1601
Q1610 Q1611
Q1602 Q1613
Q1616
Q1707 Q1706 Q1710
Q1601 Q1701 Q1617
–
Q1704 Q1615
Q3214
Q4703
–
Q4706
IC3201
Q3213
Q3212

SIDE A

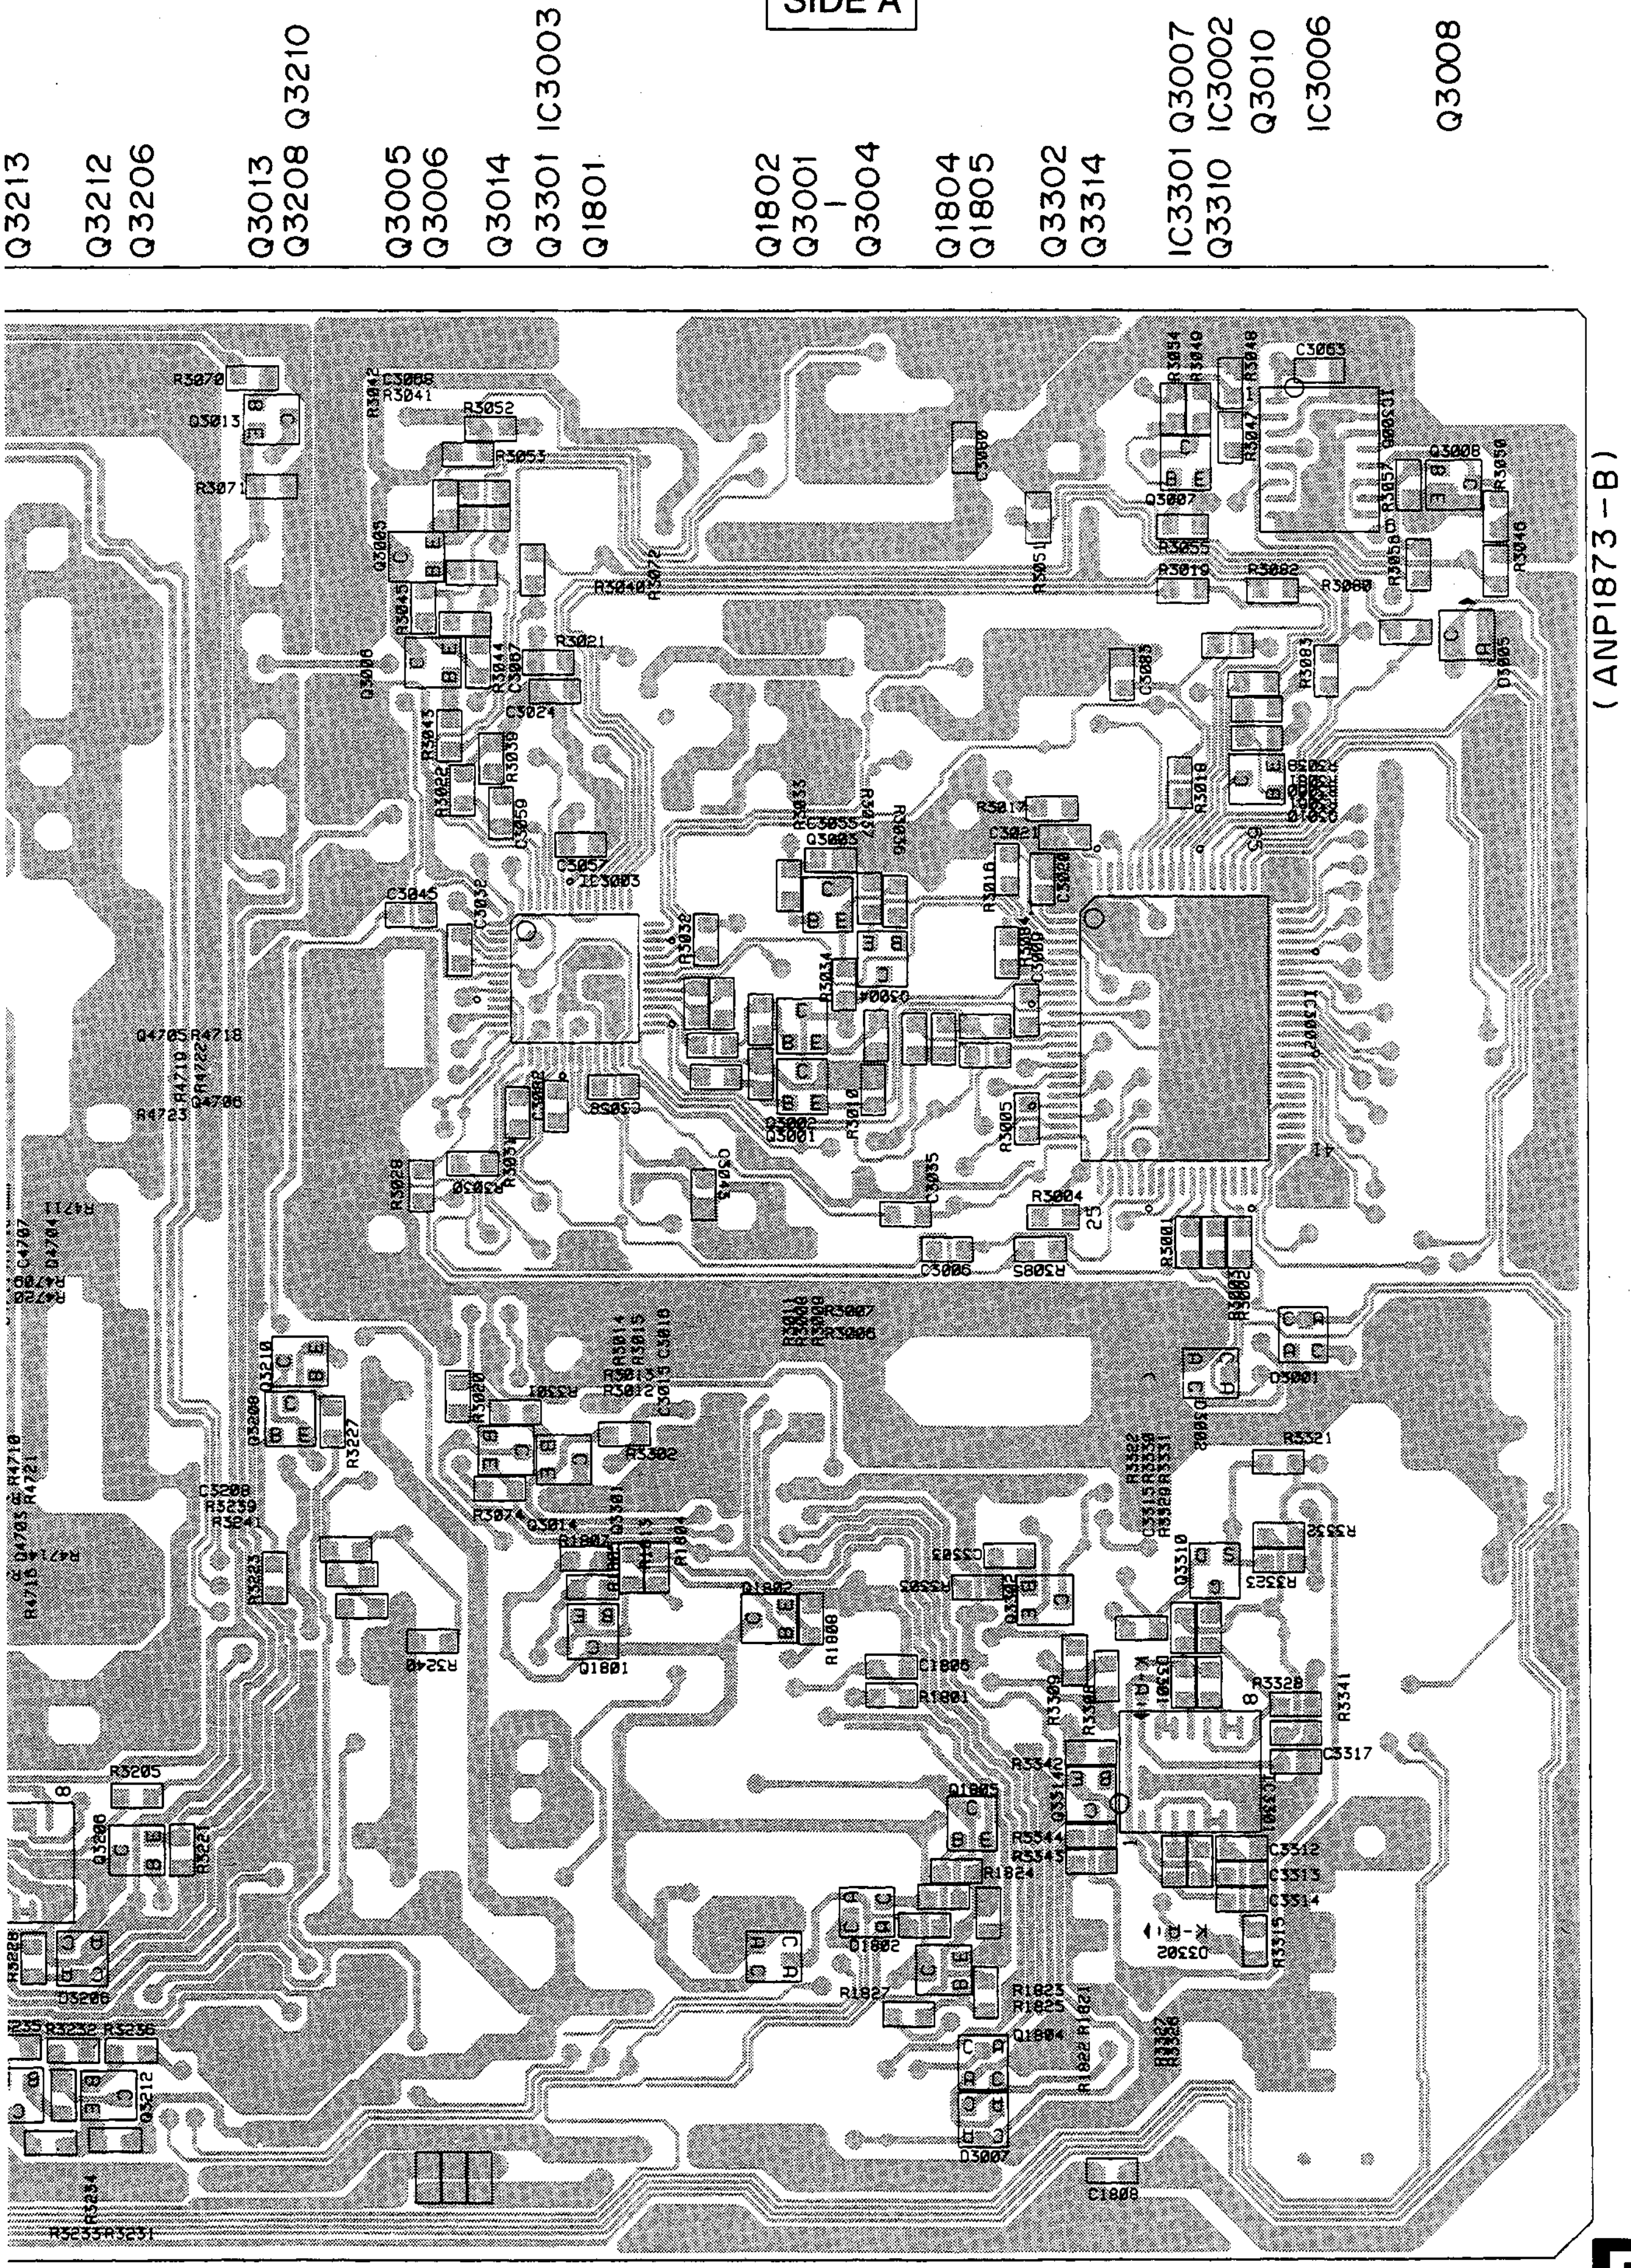
Q3213
Q3212 Q3206
Q3013 Q3208 Q3210
Q3005 Q3006
Q3014
Q3301 IC3003
Q1801
Q1802
Q3001 – Q3004
Q1804
Q1805
Q3302
Q3314
IC3301 Q3007
Q3310 IC3002
Q3010
IC3006
Q3008
(ANP1873-B)

B AV I/O ASSY

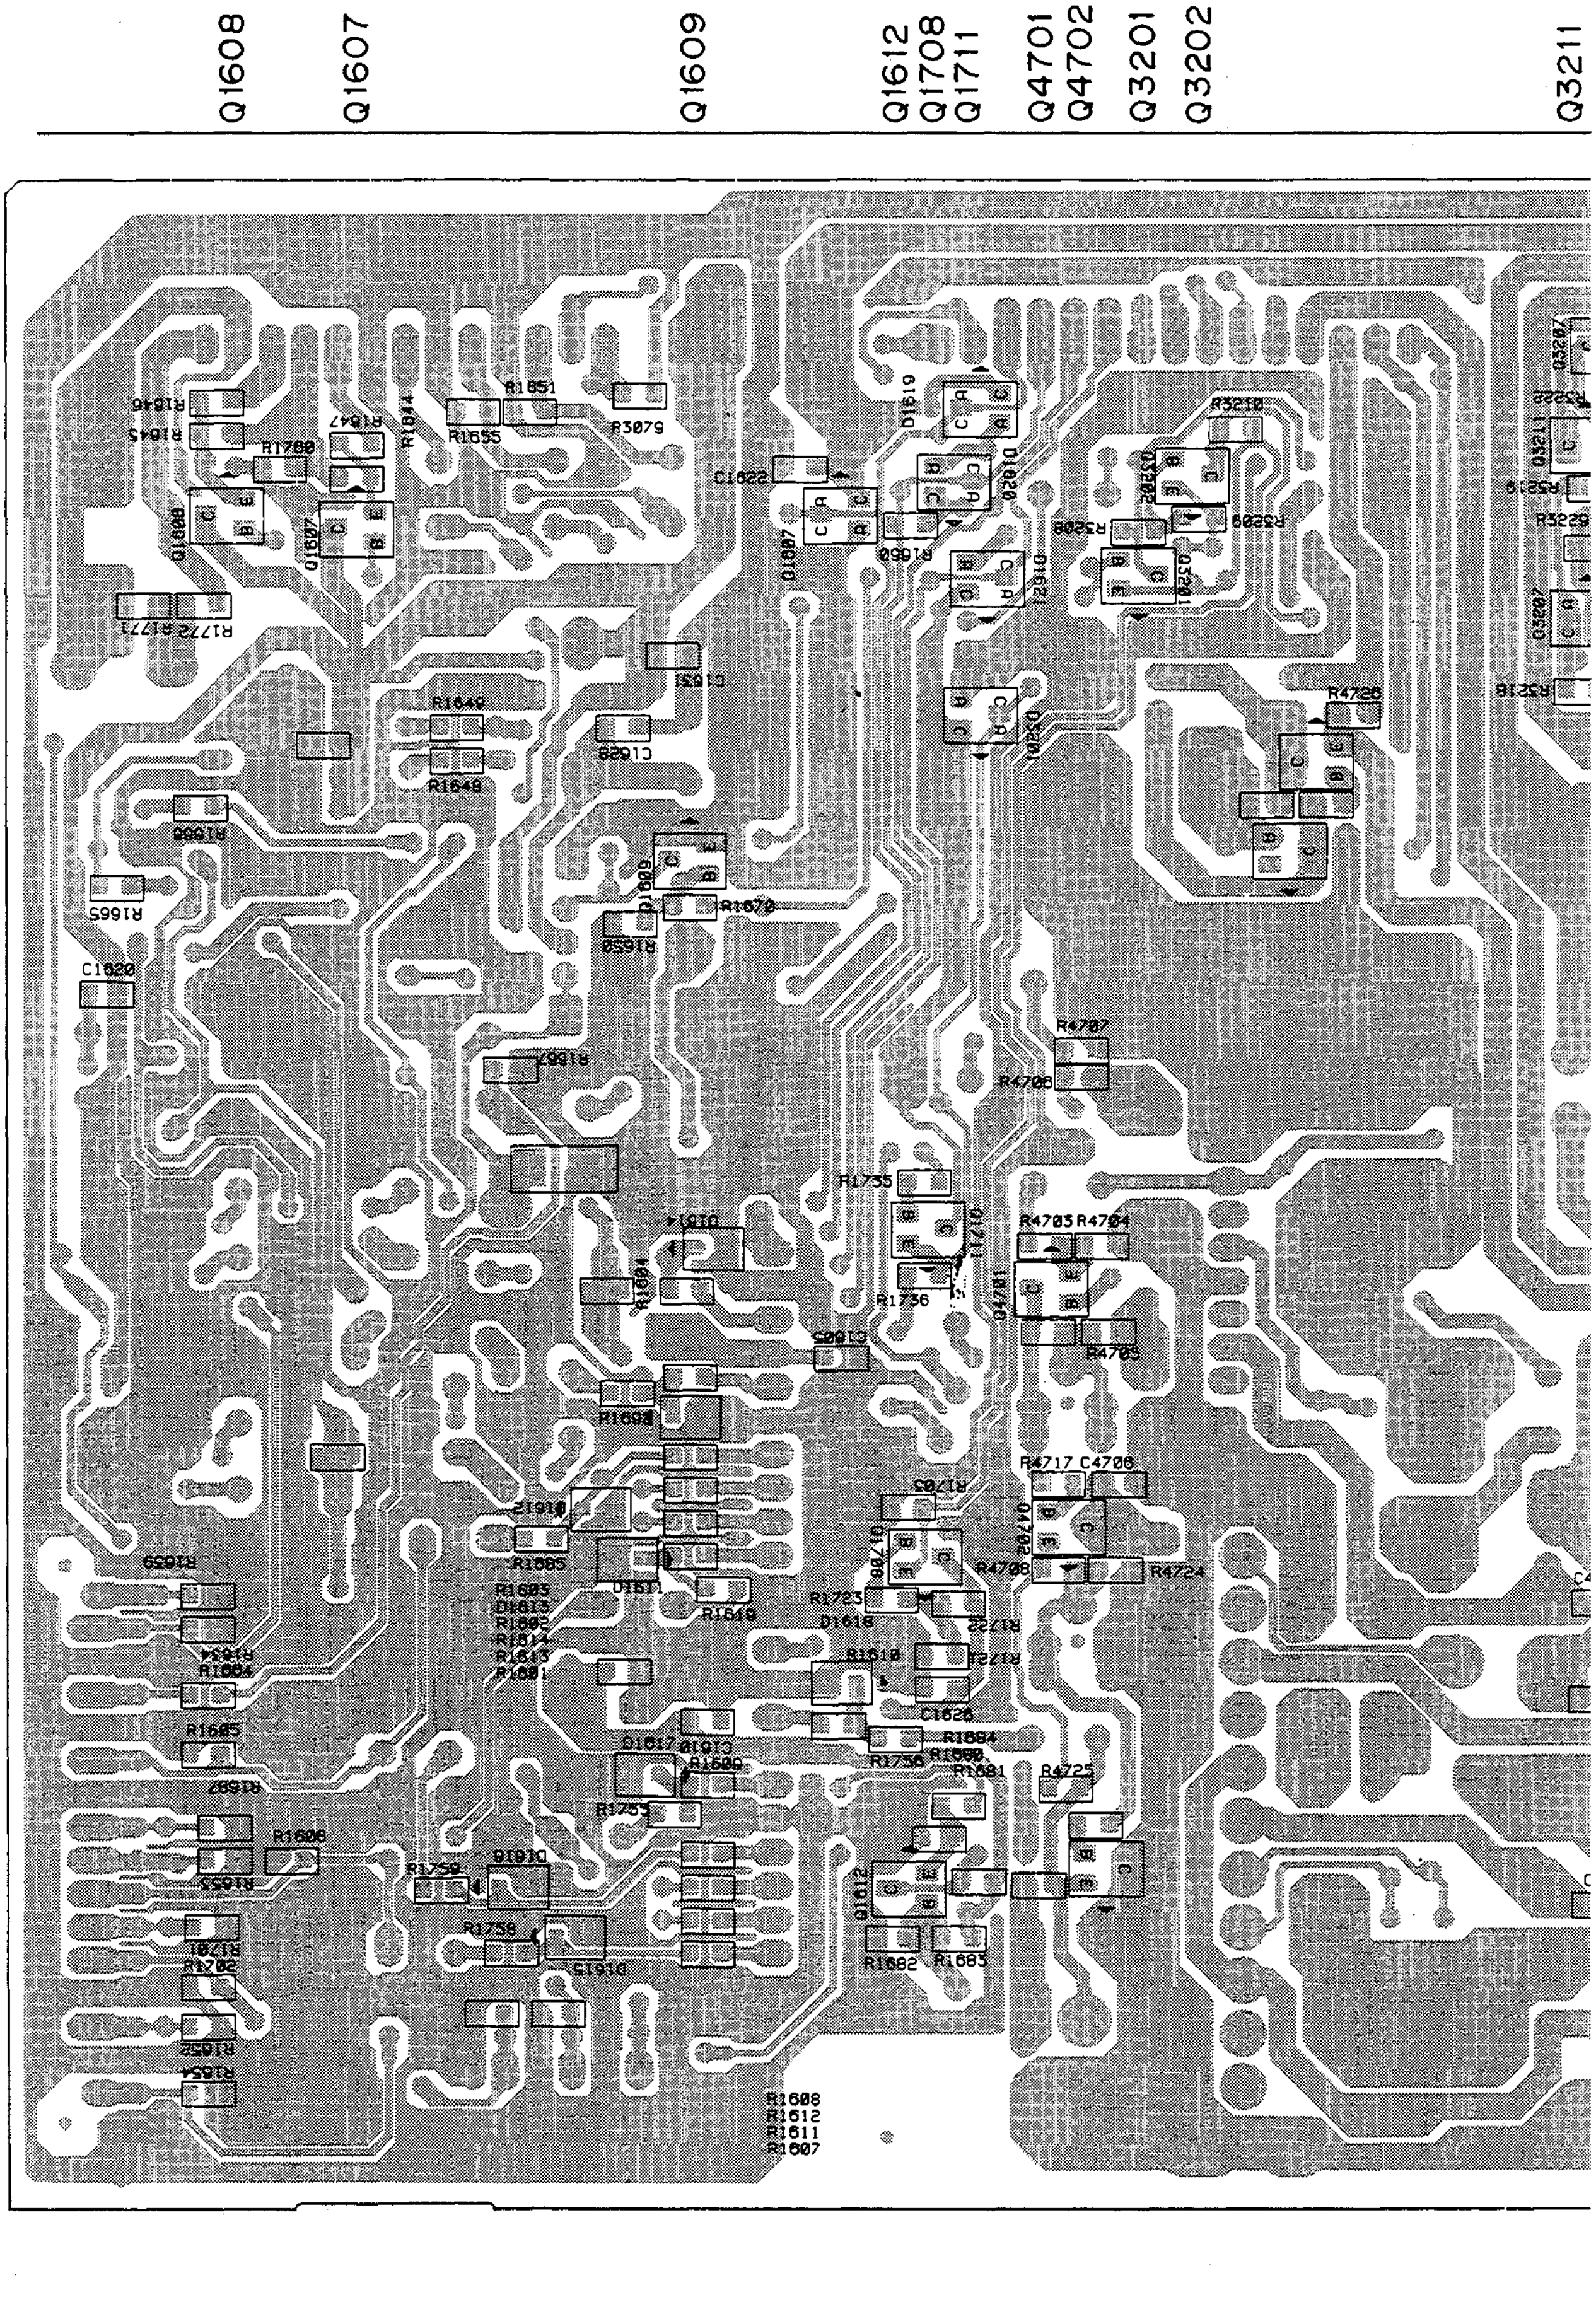
Q1608
Q1607
Q1609
Q1612
Q1708
Q1711
Q4701
Q4702
Q3201
Q3202
Q3211
R1646
R1645
R1760
R1647
R1044
R1651
R1655
R3079
C1622
D1619
R3210
R3222
R3211
R3219
R3229
R3208
R3209
Q1608
Q1607
D1607
R1660
R1772
R1771
C1621
R1649
R1648
C1628
R1666
R1665
R1670
R1650
C1620
R4720
R4707
R4706
R1667
R1755
R4703
R4704
R1736
R4705
R1604
C1605
R1690
R4717
C4706
R1705
C1910
R1685
D1611
R4708
R4724
R1605
D1613
R1602
R1614
R1613
R1601
R1723
D1618
R1722
R1659
R1654
R1604
R1721
R1610
C1626
R1605
D1617
C1610
R1606
R1694
R1680
R1738
R1681
R4725
R1607
R1753
R1606
R1655
R1759
D1616
R1758
C1910
R1701
R1702
R1652
R1654
Q1612
R1682
R1683
R1608
R1612
R1611
R1607

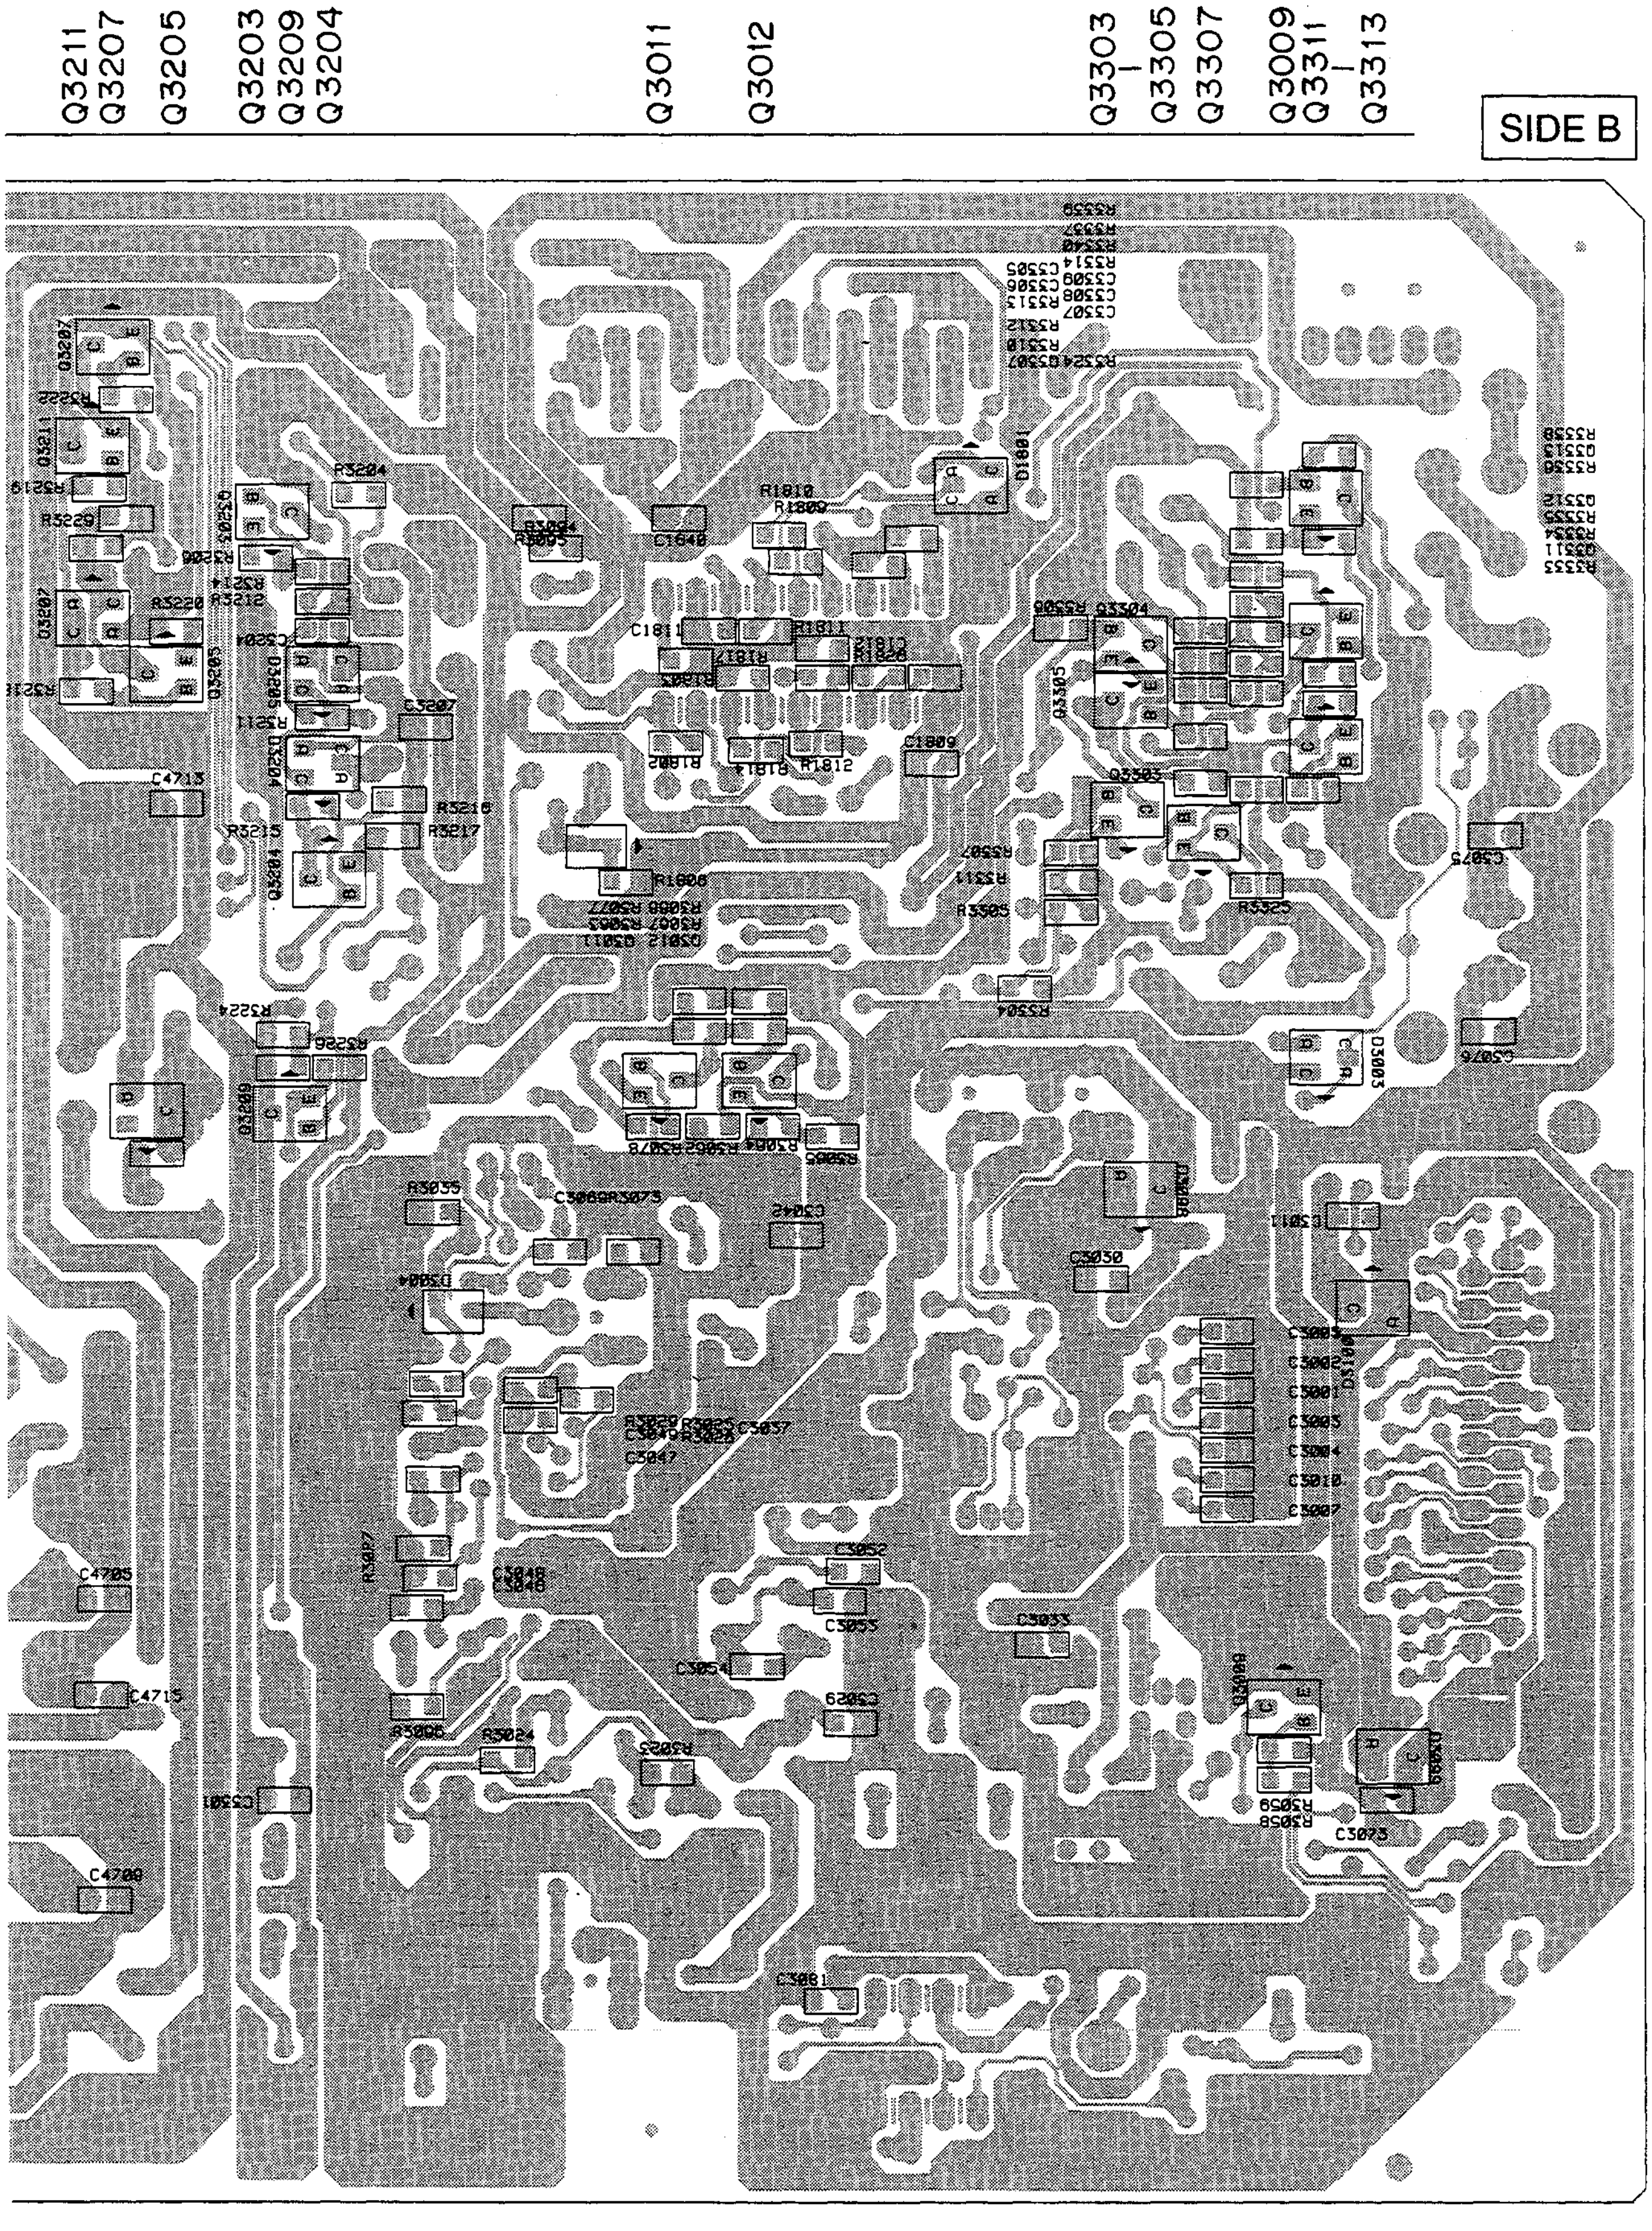
Q3211
Q3207
Q3205
Q3203
Q3209
Q3204
Q3011
Q3012
Q3303
|
Q3305
Q3307
Q3009
Q3311
|
Q3313
SIDE B
(ANP1873－B)
Q3207
Q3211
Q3202
Q3205
Q3204
Q3208
R3222
R3219
R3229
R3220
R3212
R3204
R3211
R3215
R3216
R3217
R3224
R3226
C3207
C4713
C4705
C4715
C4700
C3201
C1840
C1811
C1809
R1810
R1809
R1811
R1808
R1812
D1801
R3504
R3505
R3507
R3511
R3509
R3525
Q3504
Q3505
Q3503
C3075
C3076
D3003
C3011
C3030
C3033
C3042
C3052
C3053
C3054
C3055
C3081
C3073
R3055
R3035
R3024
R3006
R3007
D3004
D3006
D3001
Q3008
C3003
C3002
C3001
C3005
C3004
C3018
C3007
C3037
C3047
C3048
R3058
R3059

4.3 AMP ASSY

(GUIDE PAGE)

☐ : HIGH VOLTAGE GENERATION POINT
(EXCEPTIG THE CHARGED SECTION)

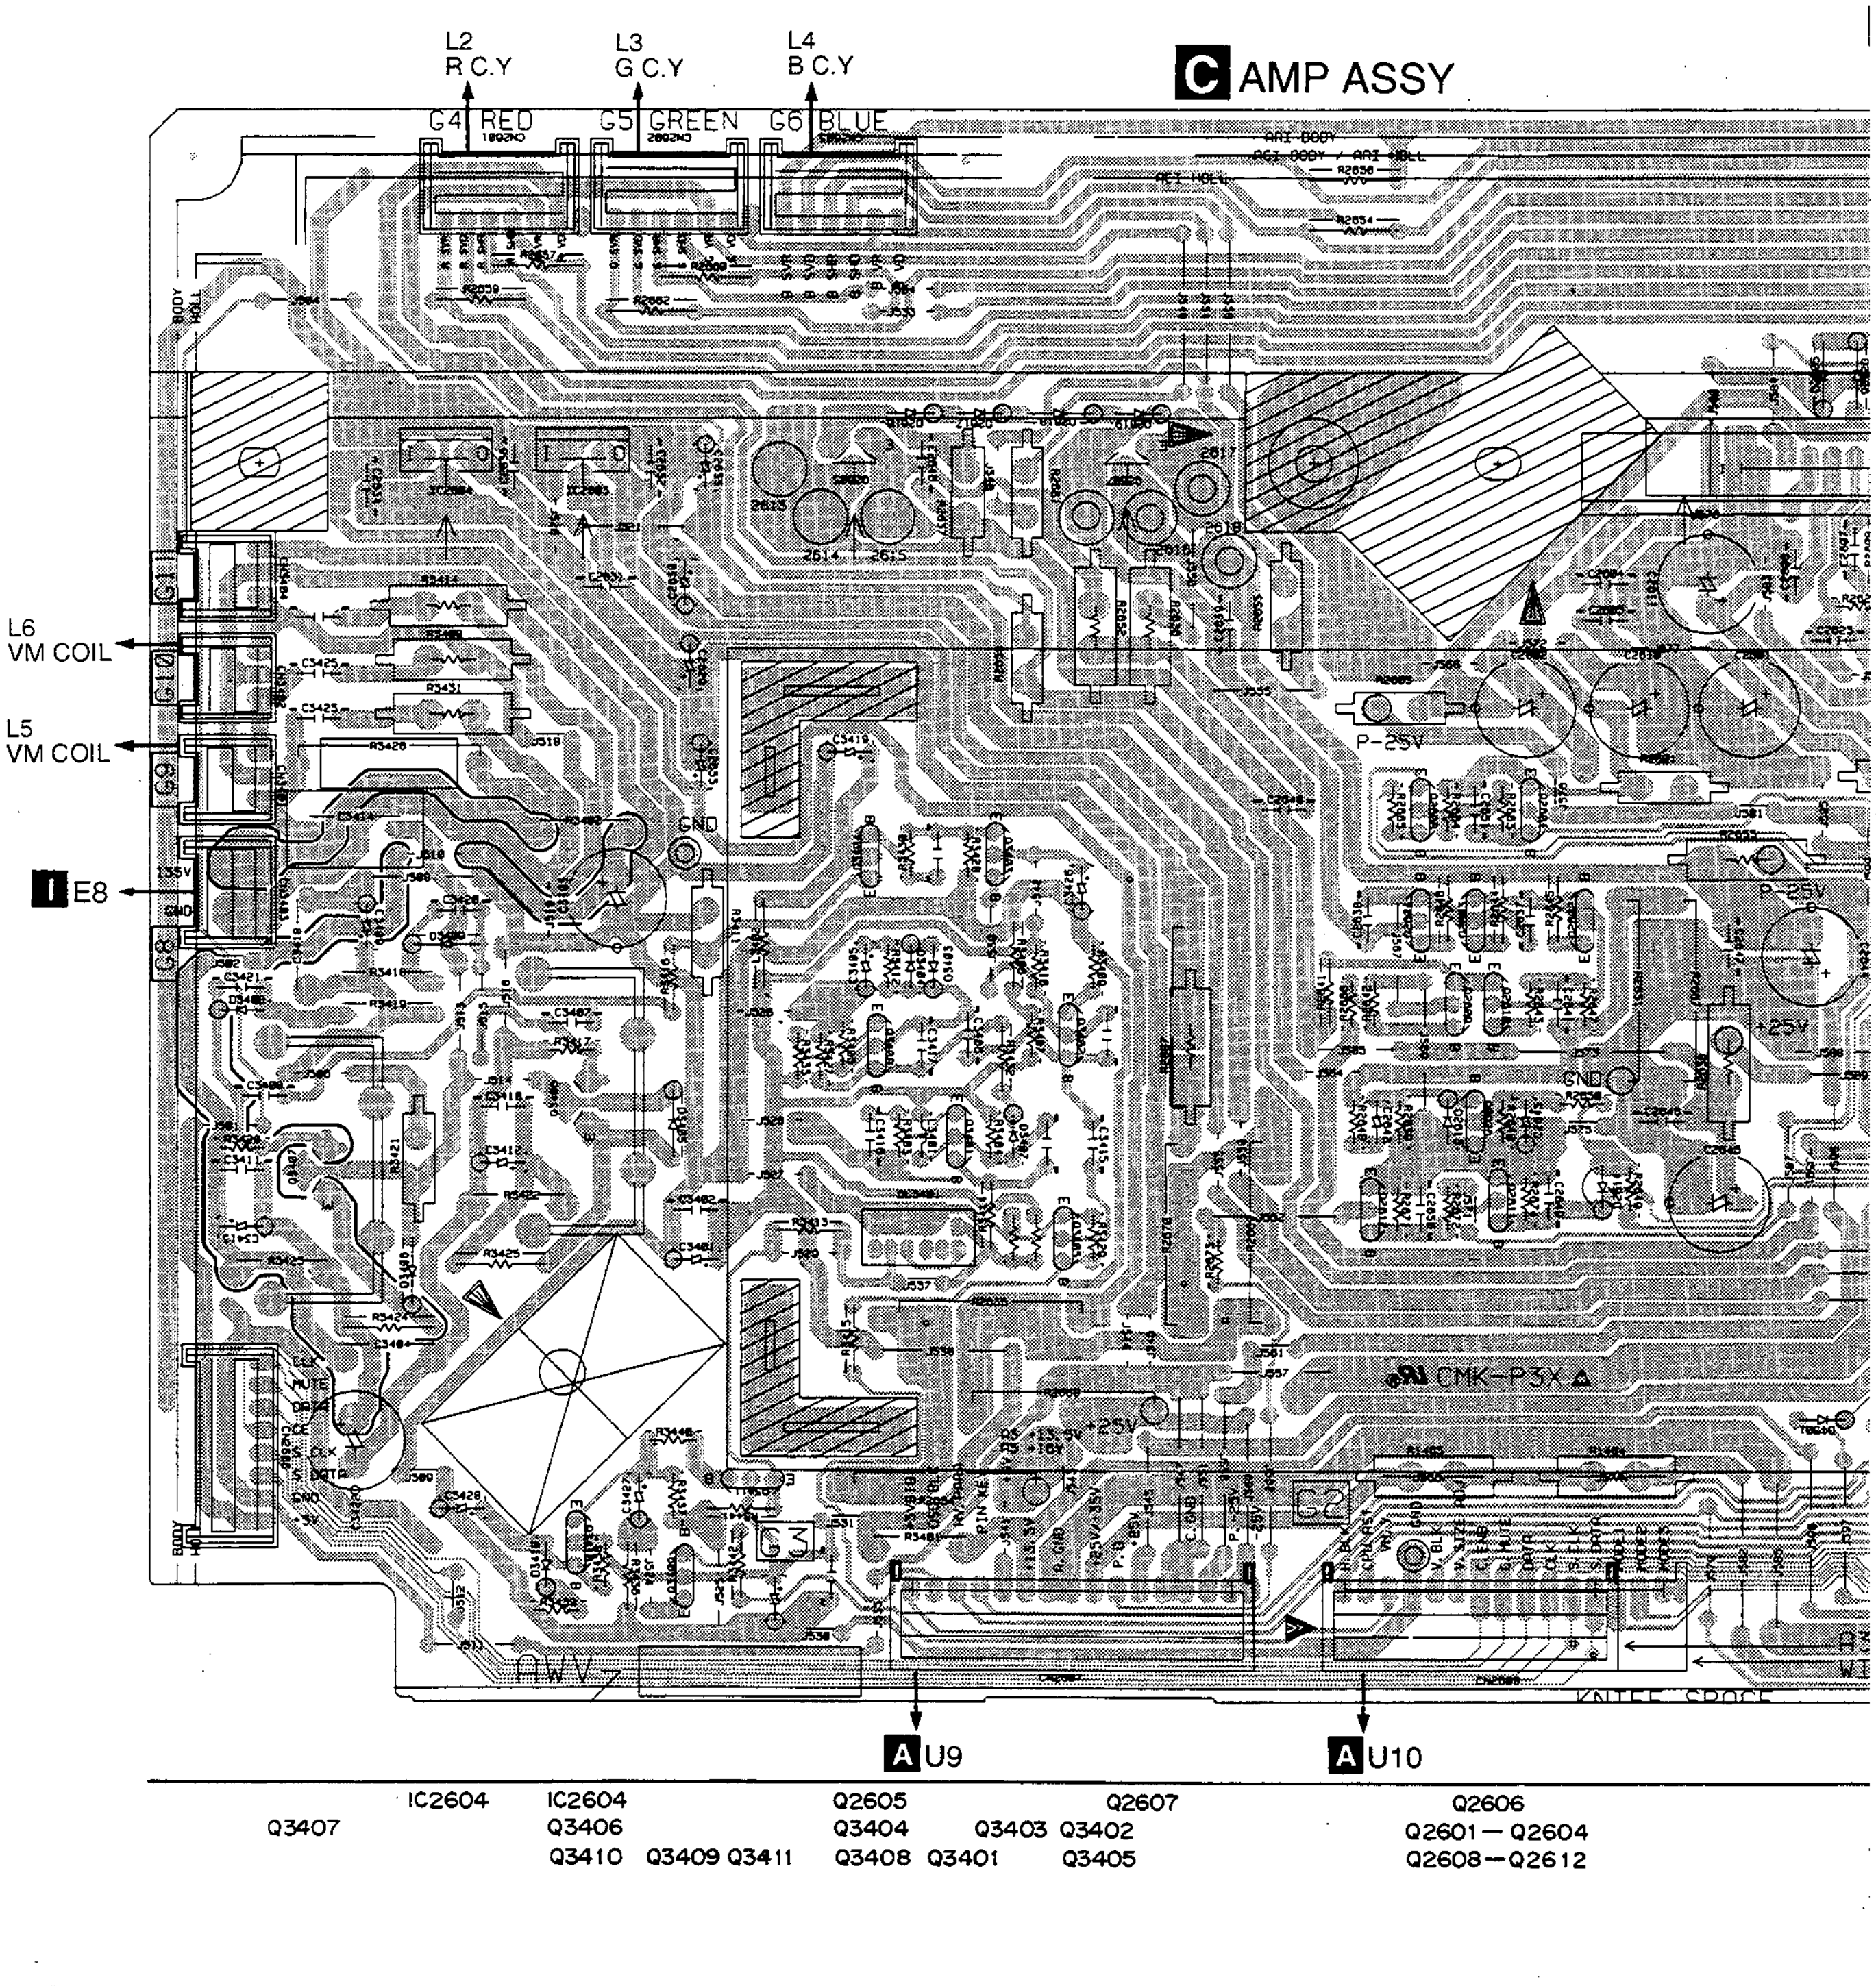
L2
R C.Y
L3
G C.Y
L4
B C.Y
C AMP ASSY
G4 RED
G5 GREEN
G6 BLUE
L6
VM COIL
L5
VM COIL
I E8
G11
G10
G9
G8
135V
GND
P-25V
P-25V
+25V
GND
CMK-P3X
G3
G2
A U9
A U10
IC2604
IC2604
Q3407
Q3406
Q3410
Q3409
Q3411
Q2605
Q3404
Q3408
Q3403
Q3401
Q2607
Q3402
Q3405
Q2606
Q2601 – Q2604
Q2608 – Q2612

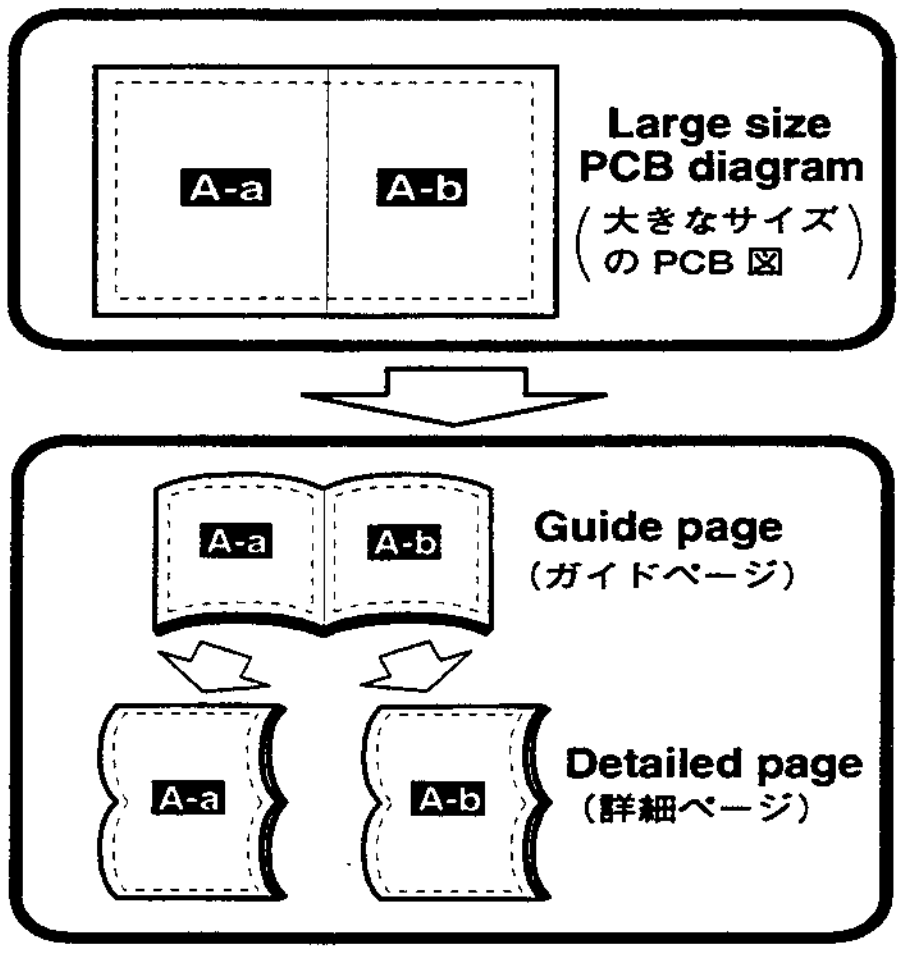
A-a
A-b
Large size PCB diagram
(大きなサイズのPCB図)
Guide page
(ガイドページ)
Detailed page
(詳細ページ)

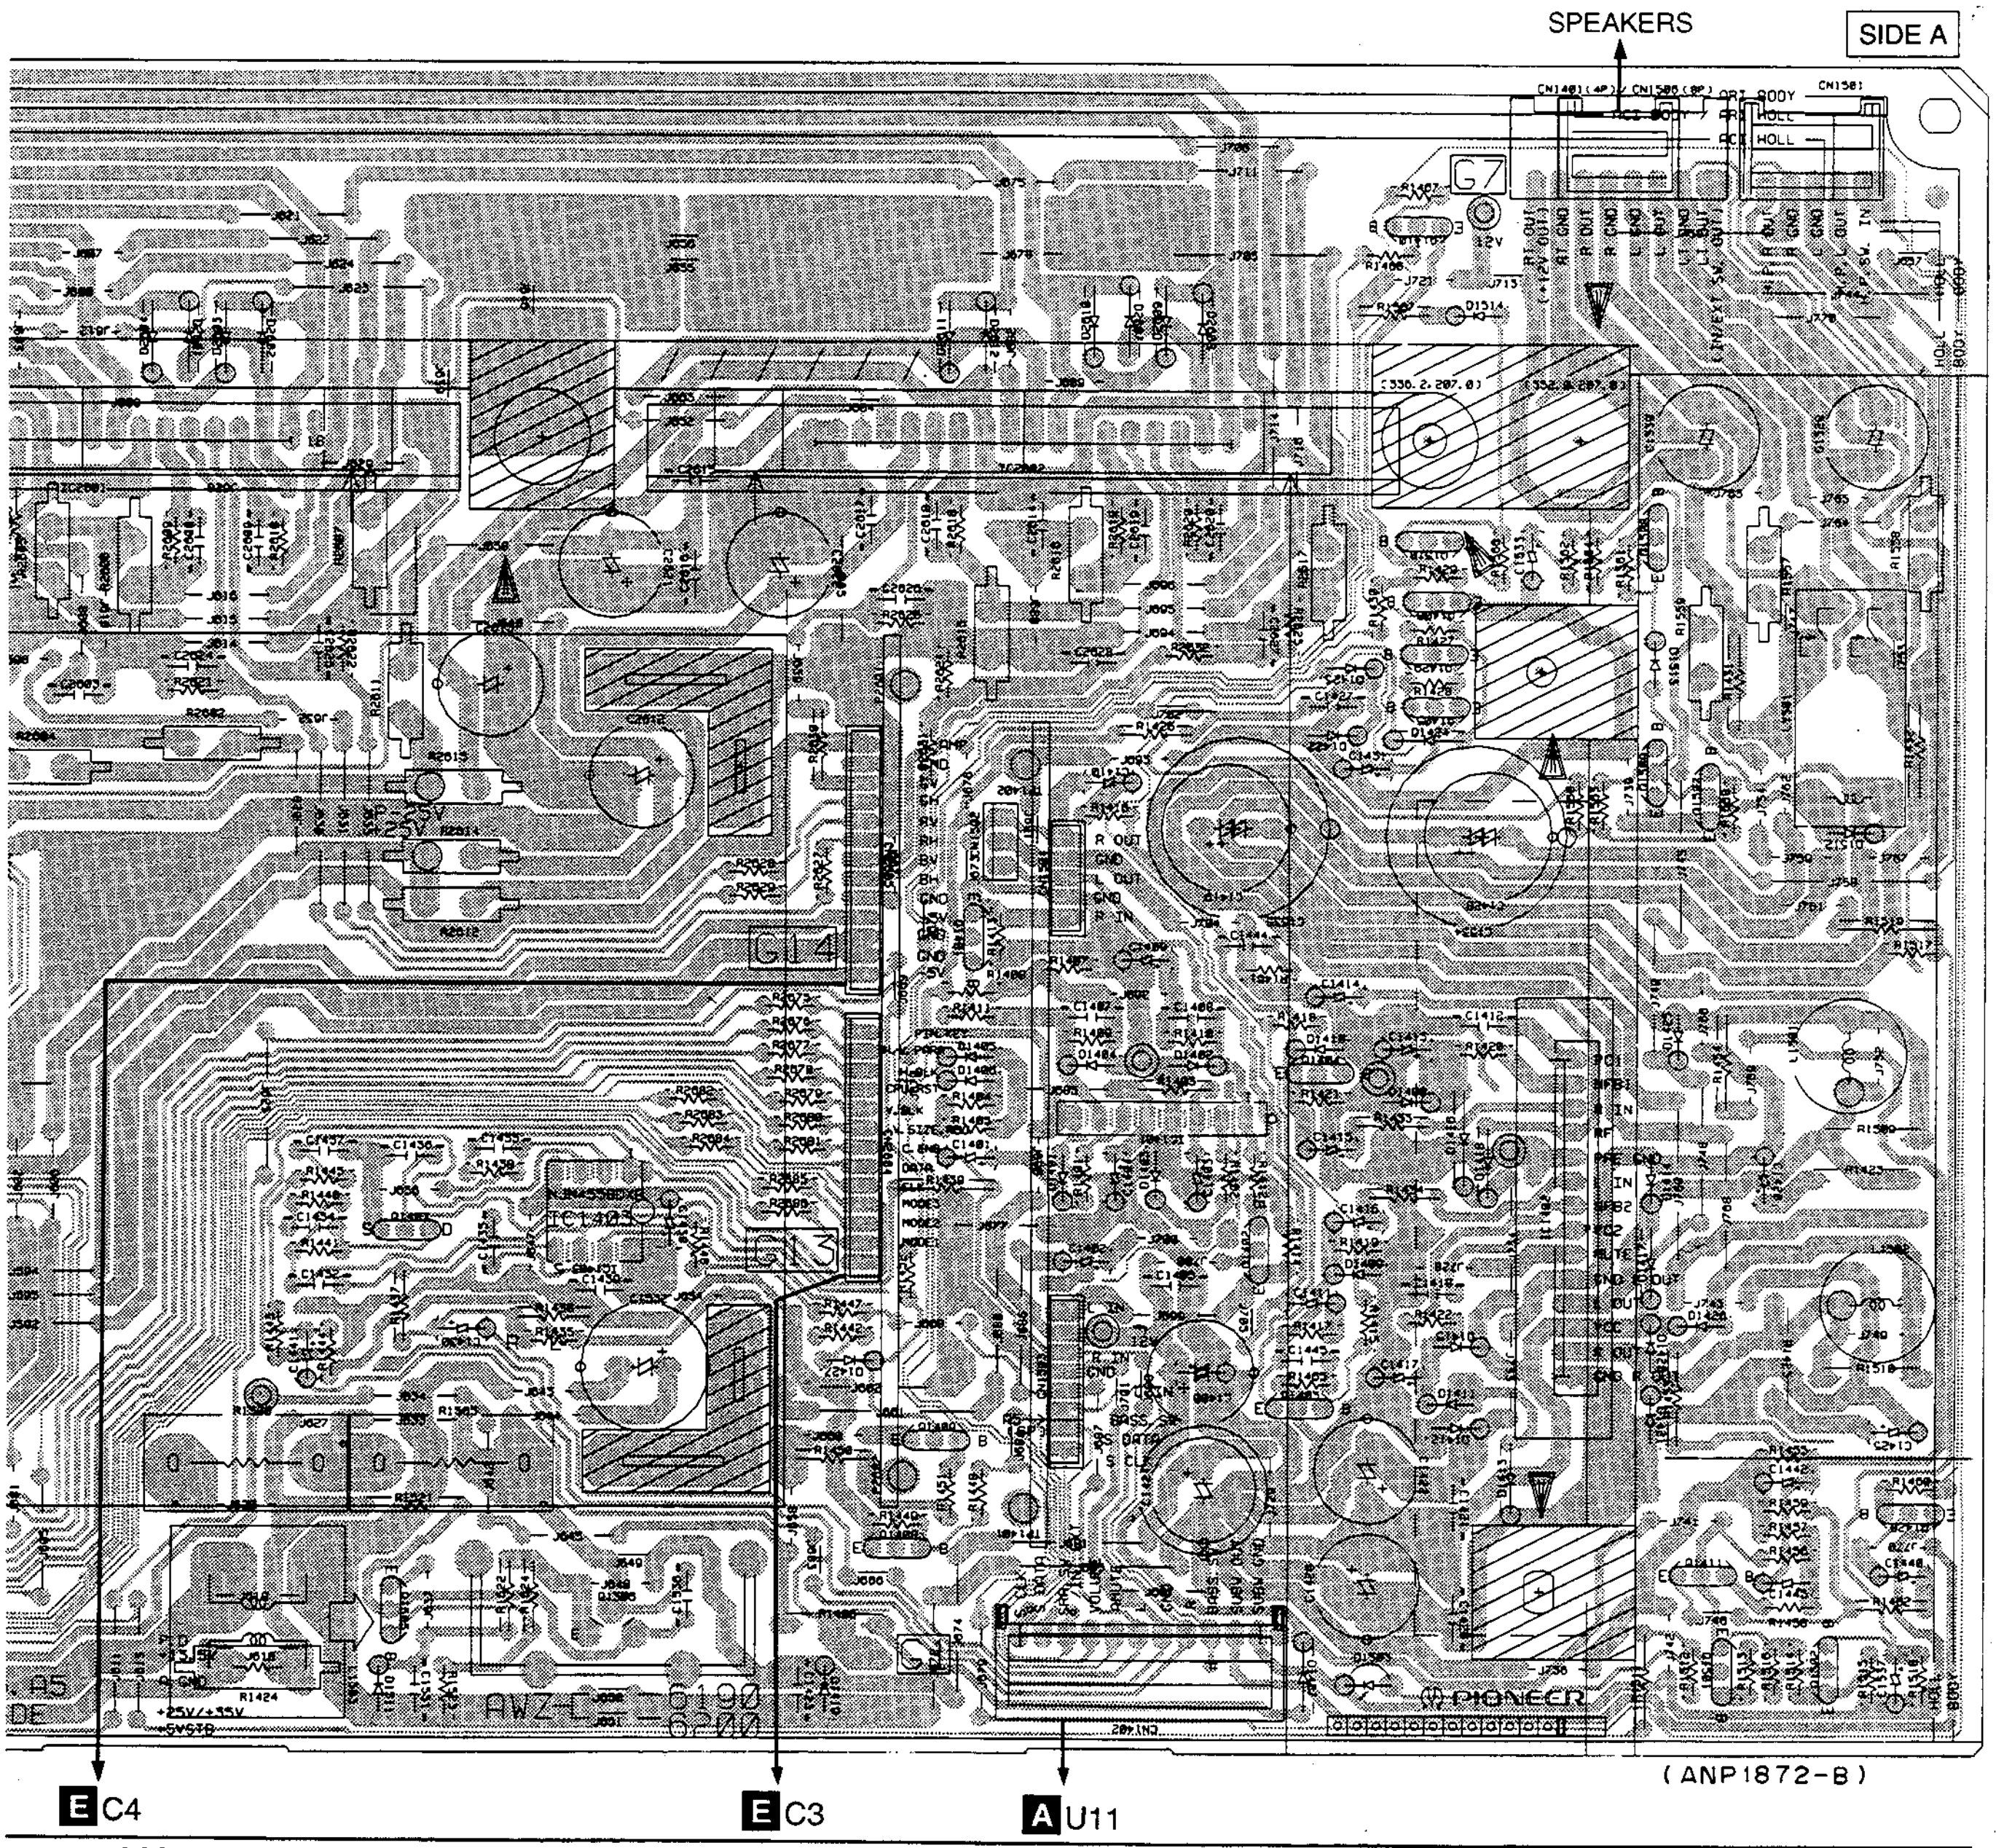
SPEAKERS
SIDE A
G7
G14
G13
PIONEER
AWZ-C
(ANP1872-B)
E C4
E C3
A U11
IC2601
Q1407
Q1505
IC1403
Q1506
IC2602
Q1401
Q1408 Q1409
IC1401
Q1402–Q1404 Q1510
Q1406 Q1429 Q1405
Q1410
IC1402
Q1507–Q1509
Q1411
Q1501
Q1502
Q1428

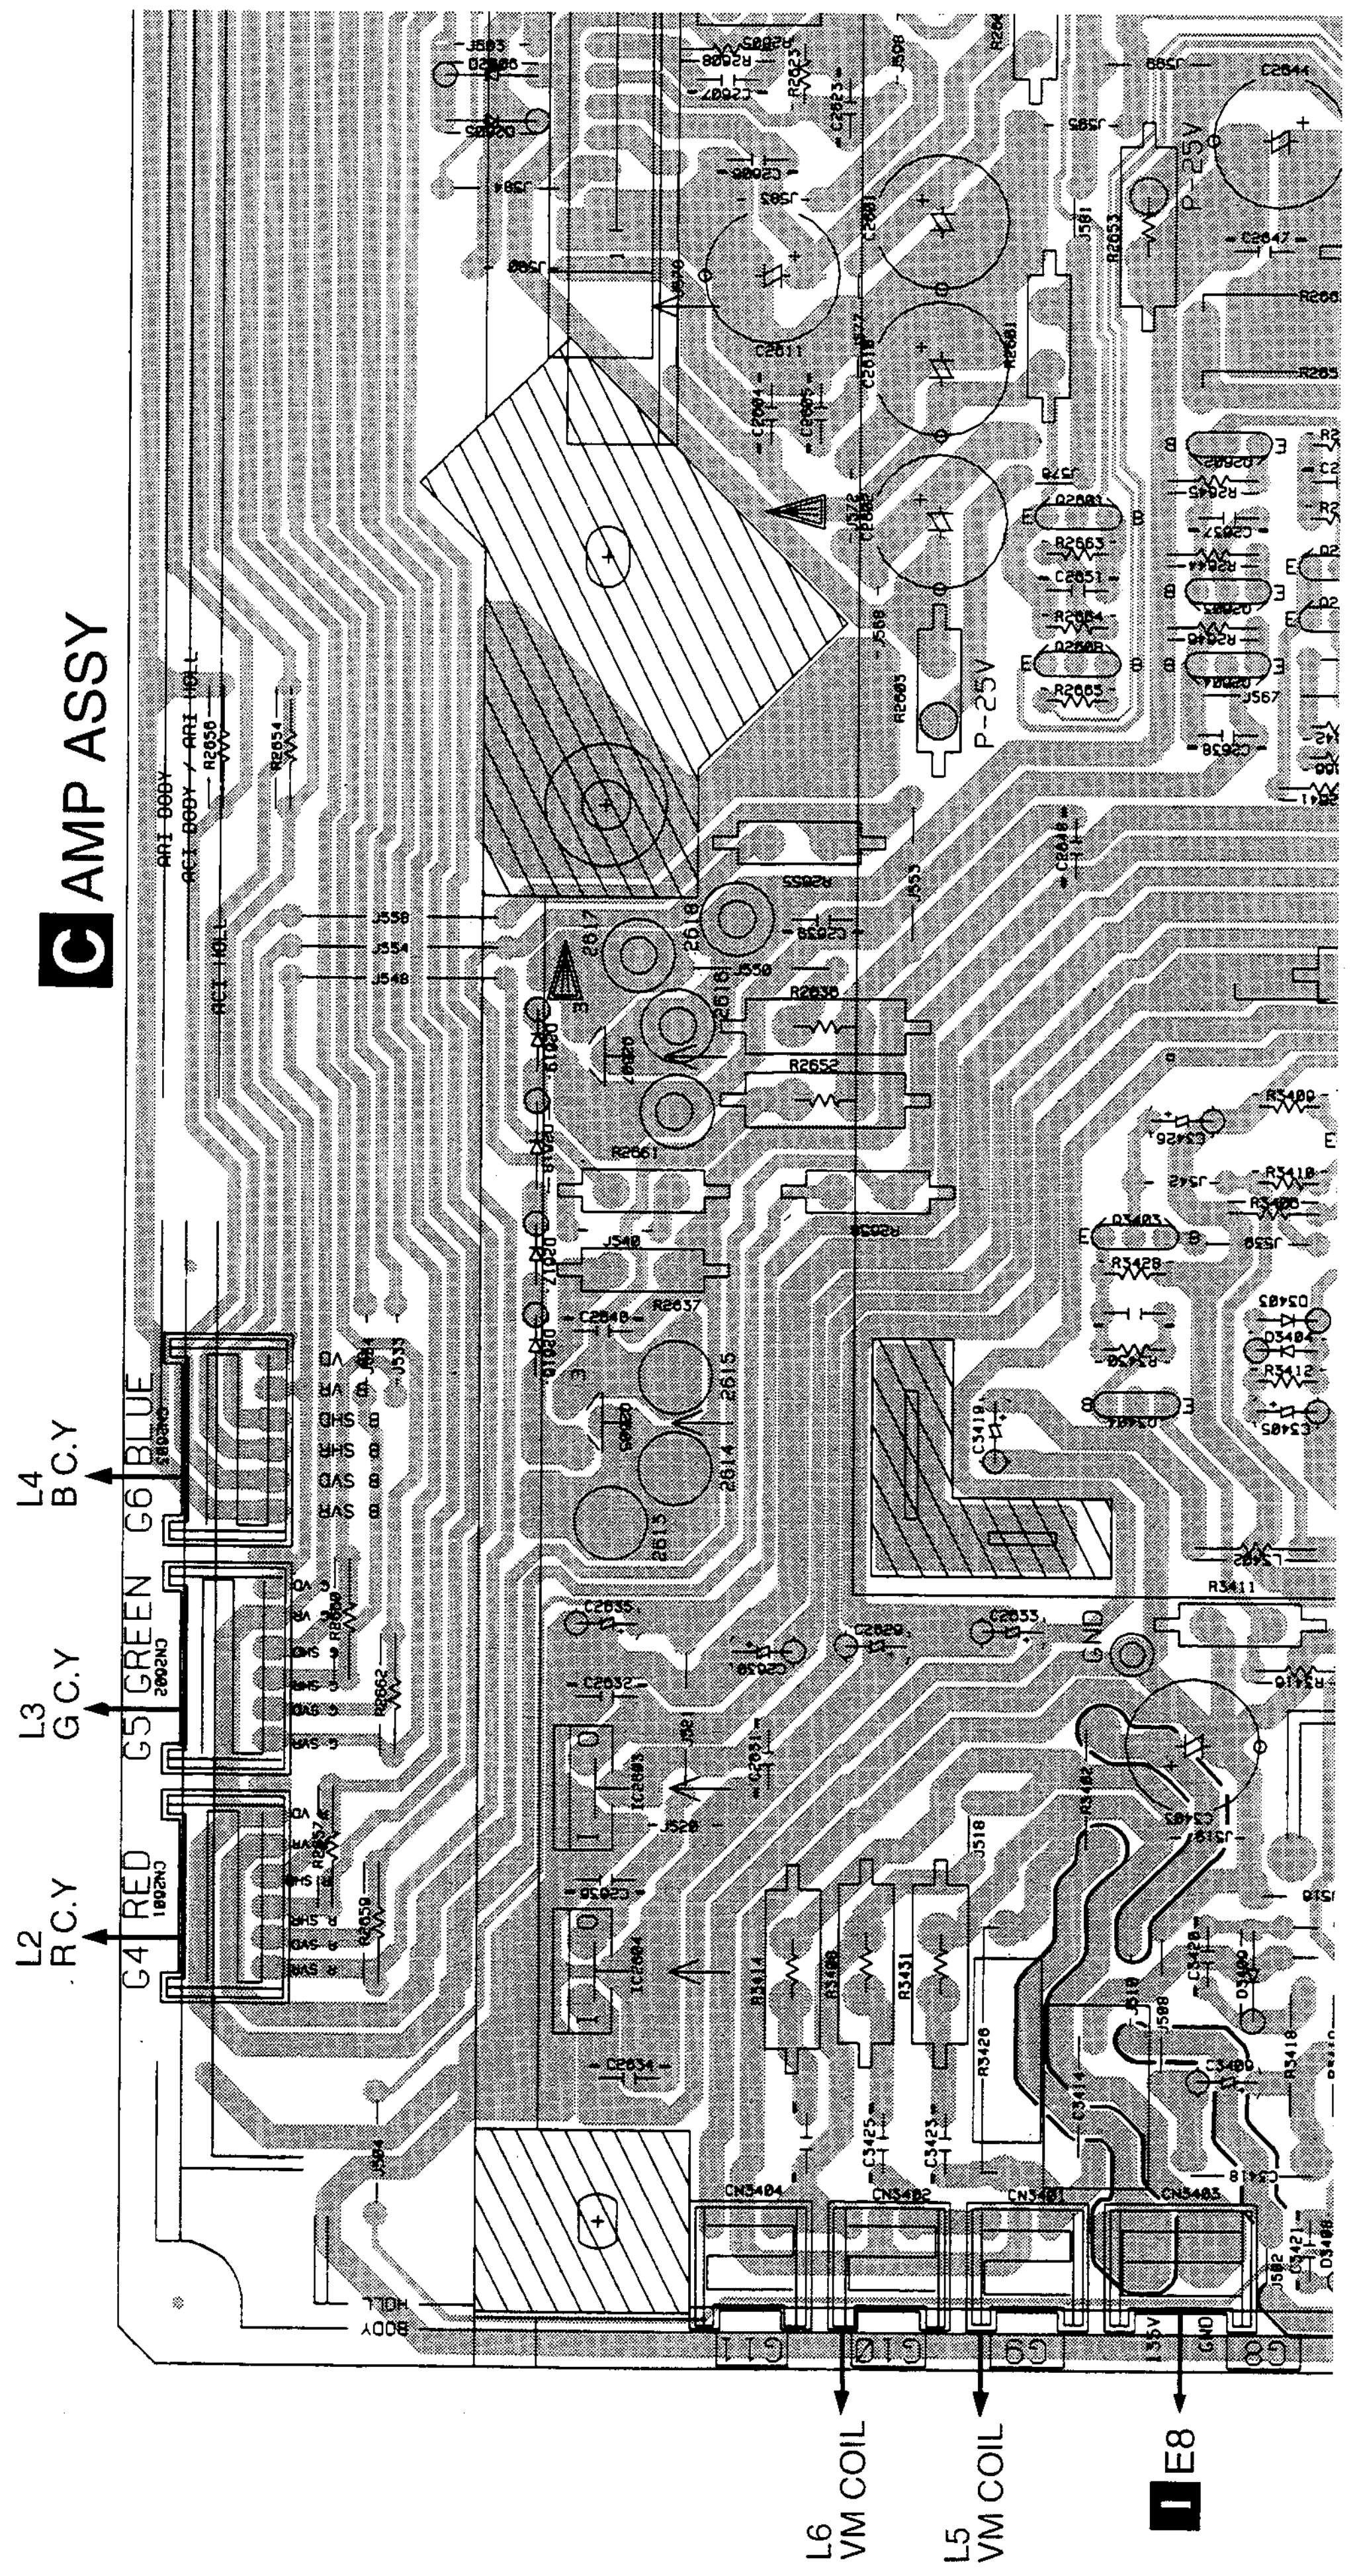
C AMP ASSY
L2
R C.Y
L3
G C.Y
L4
B C.Y
G4 RED
G5 GREEN
G6 BLUE
G11
G10
G9
G8
L6
VM COIL
L5
VM COIL
I E8
P-25V
GND
CN3404
CN3402
CN3401
CN3403
HOLL
BODY
ARI BODY
ACI BODY / ARI HOLL
ACI HOLL

□ : HIGH VOLTAGE GENERATION POINT
(EXCEPTIG THE CHARGED SECTION)

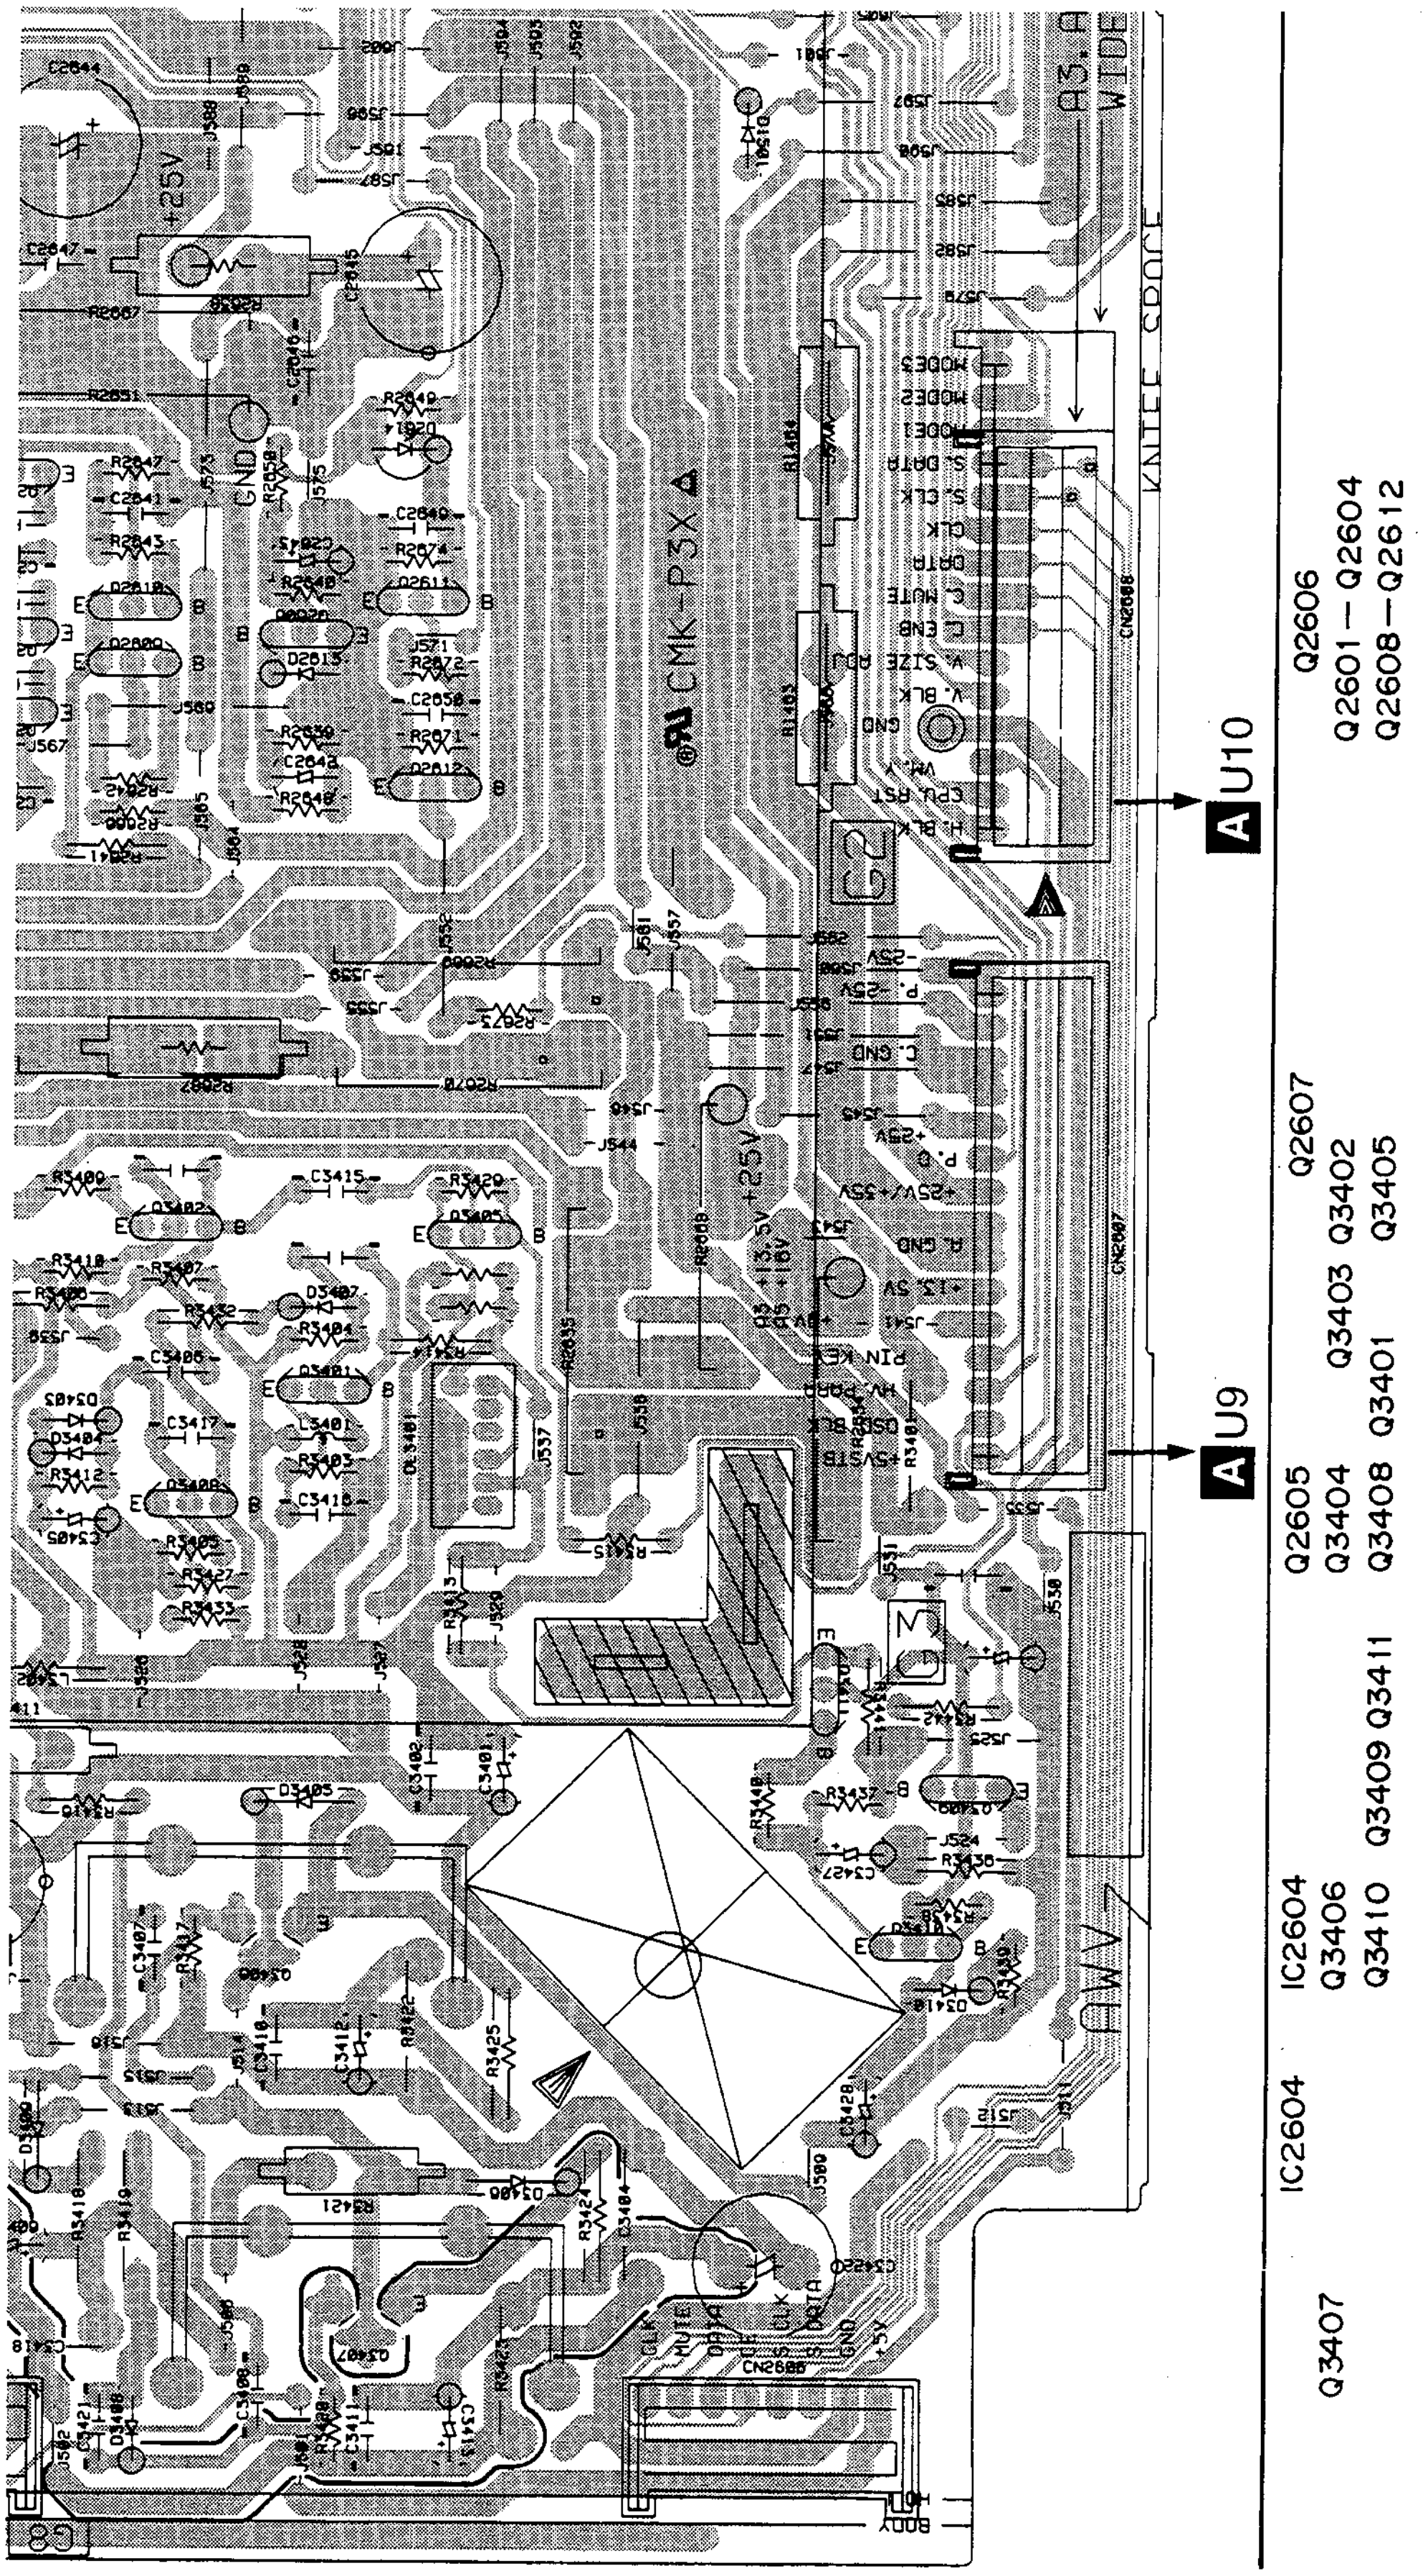
CMK-P3X
A U10
A U9
CN2607
CN2608
CN2605
MODE3
MODE2
MODE1
S. DATA
S. CLK
CLK
DATA
C. MUTE
C. ENB
V. SIZE ADJ
V. BLK
GND
VM. V
CPU RST
H. BLK
-25V
P. -25V
C. GND
+25V
P. G
+25V/+35V
A. GND
+13.5V
PIN KEY
HV. PROG
OSD BLK
+5VSTB
+25V
KNIFE SPACE
A3, A WIDE
BODY
Q3407
IC2604
IC2604
Q3406
Q3410 Q3409 Q3411
Q2605
Q3404
Q3408 Q3401
Q3403
Q2607 Q3402
Q3405
Q2606
Q2601 — Q2604
Q2608 — Q2612

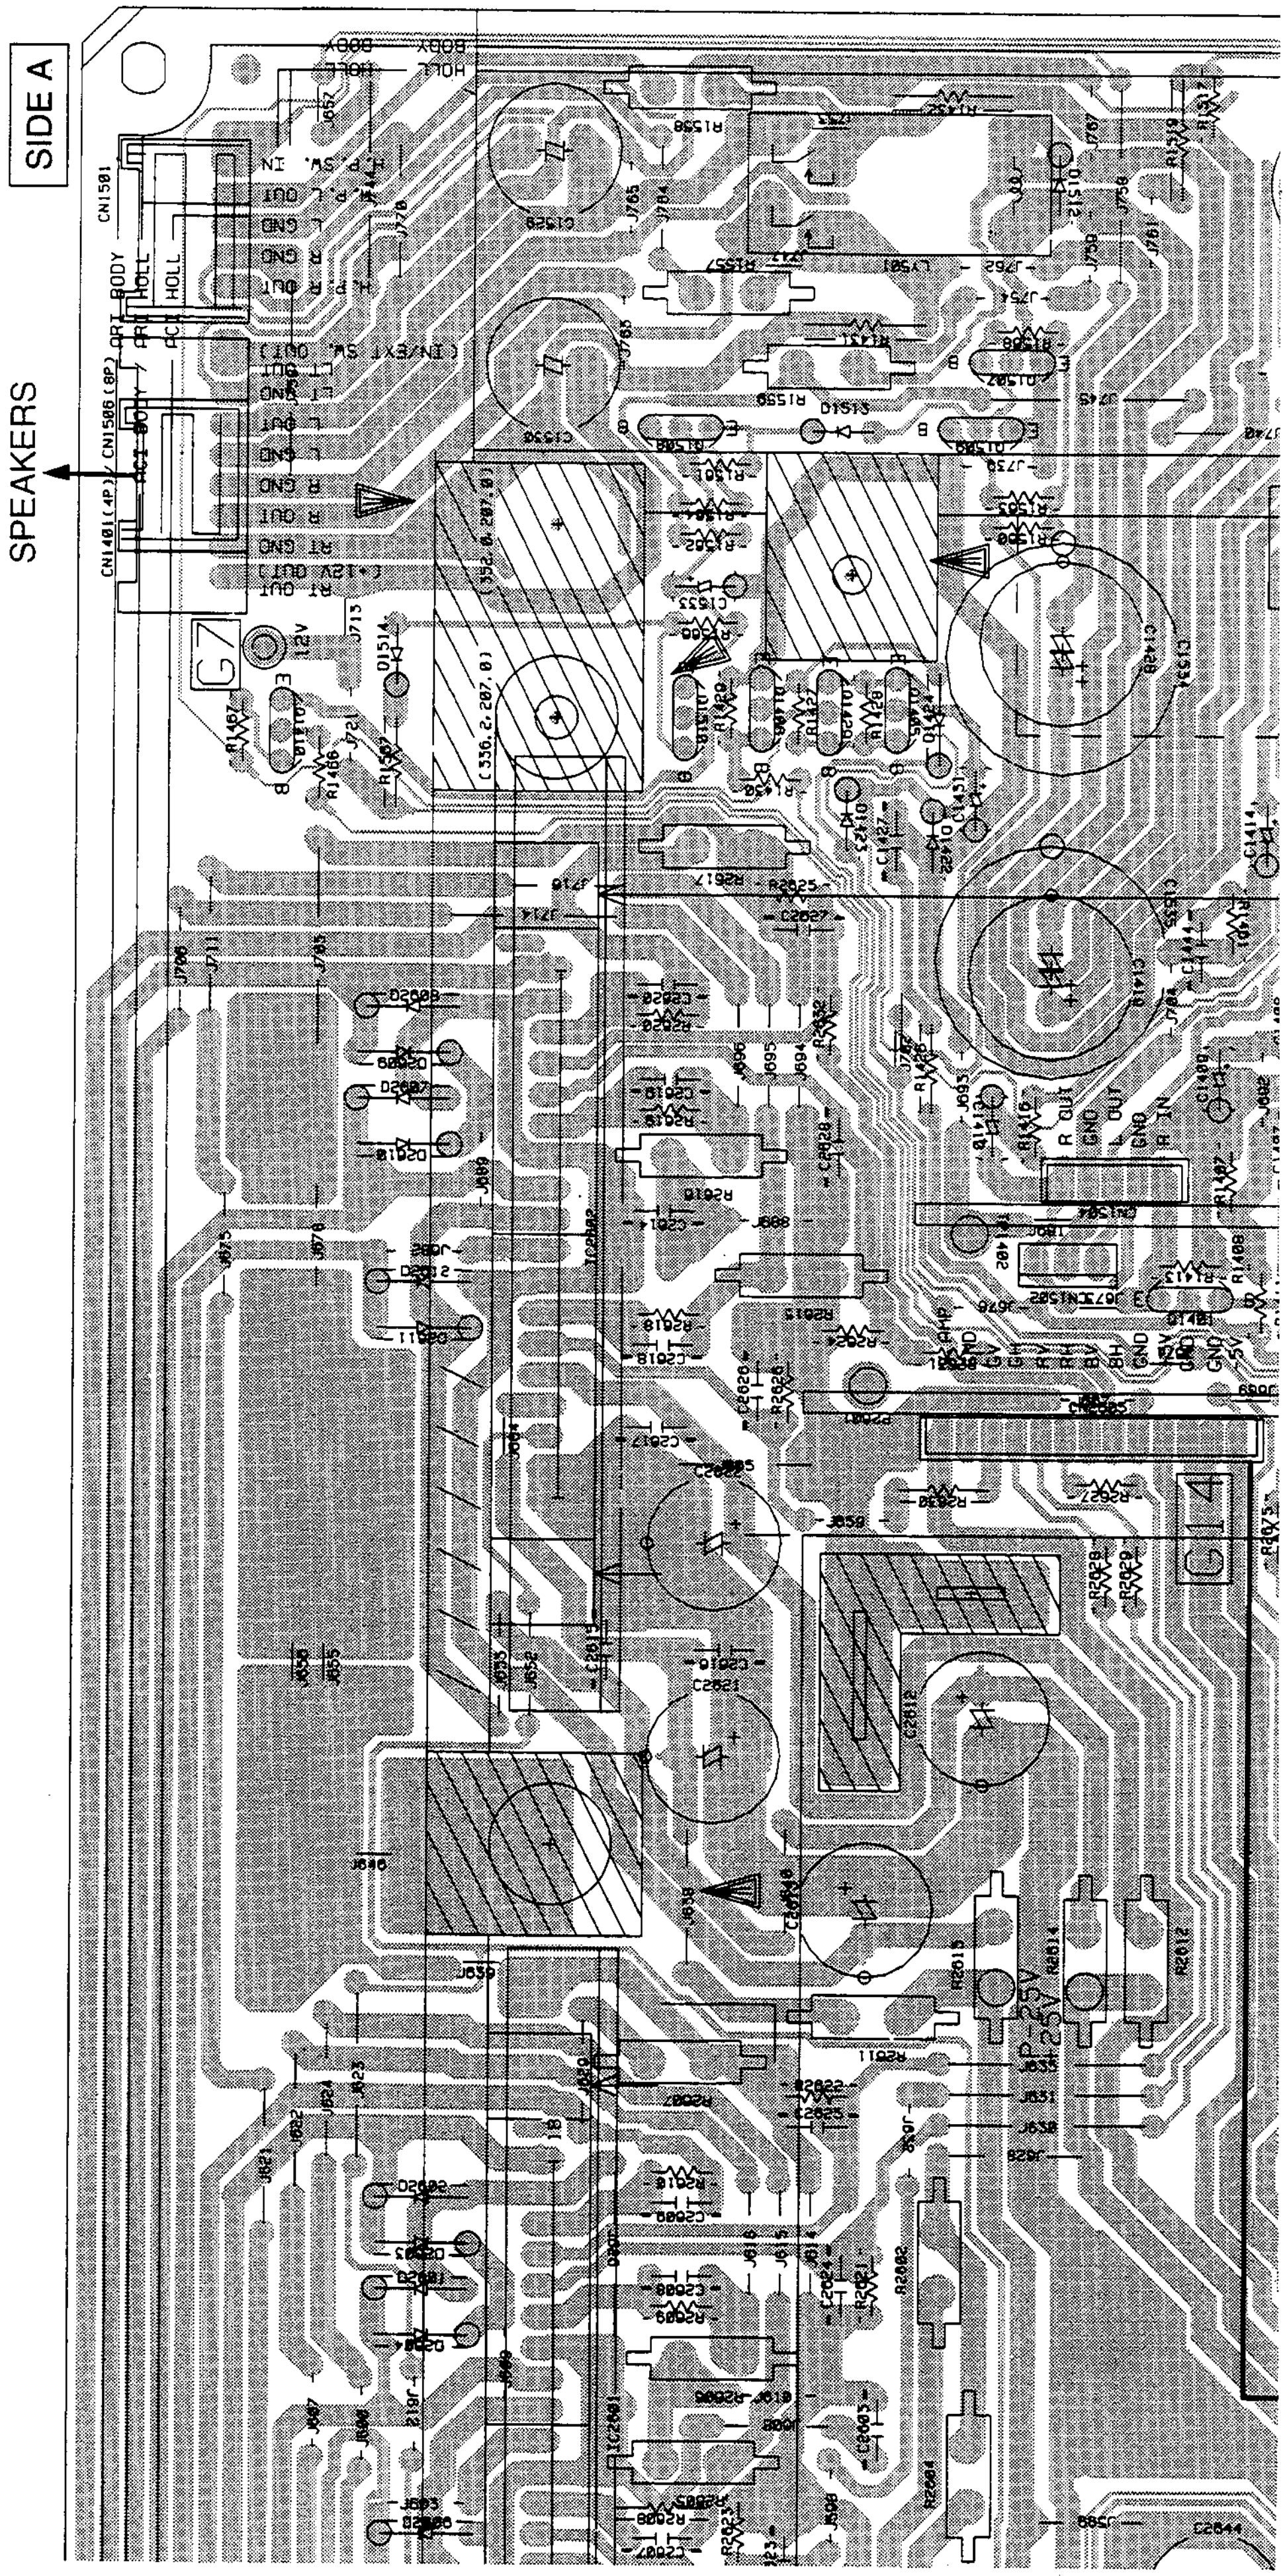
SIDE A
SPEAKERS
CN1501
CN1506(8P)
CN1401(4P)
ORT BODY
ORT HOLL
ACI HOLL
ACI BODY
BODY
HOLL
P.S.W. IN
H.P. L OUT
L GND
R GND
H.P. R OUT
(IN/EXT SW. OUT)
LT OUT
LT GND
L OUT
L GND
R GND
R OUT
RT GND
(+12V OUT)
RT OUT
12V
G7
G14
C1520
C1530
D1513
D1514
Q1502
Q1503
Q1504
Q1505
Q1406
Q1407
C1428
C1418
C2021
C2012
R2617
R2618
R2615
R2614
R2612
CN1402
CN1502
R OUT
GND
L OUT
GND
R IN
L IN
+5V
P-25V

□ : HIGH VOLTAGE GENERATION POINT (EXCEPTIG THE CHARGED SECTION)

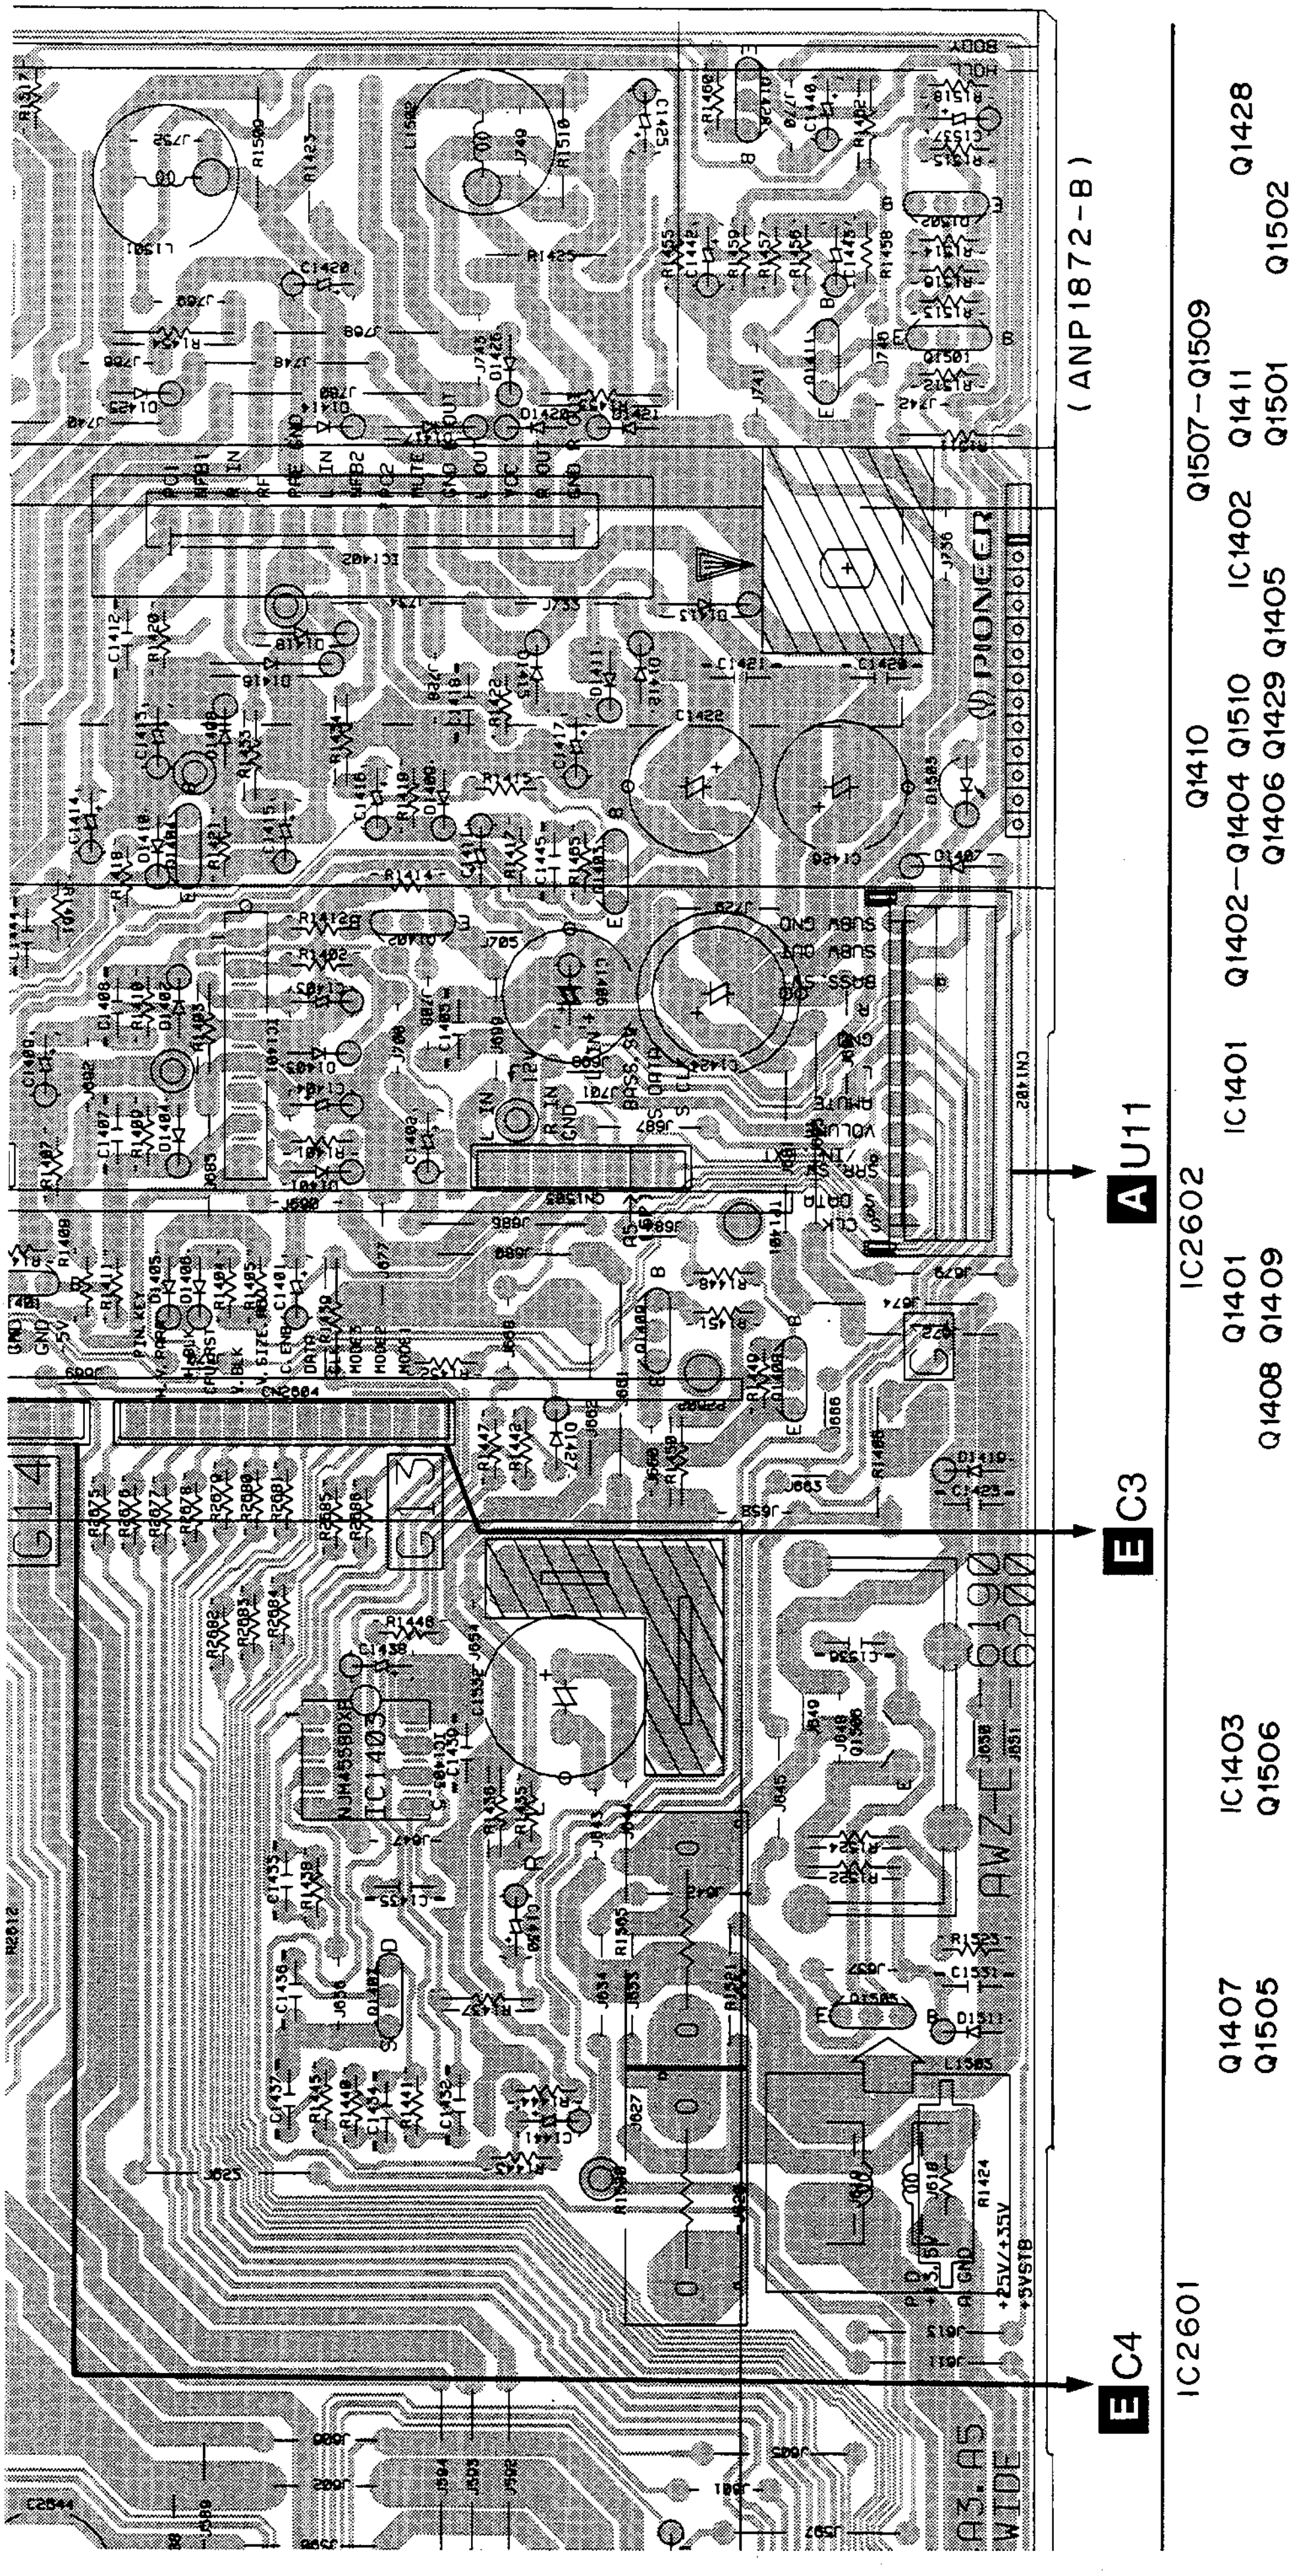
(ANP1872-B)
PIONEER
A U11
E C3
E C4
AWZ-C 6190 6500
A3.A5 WIDE
IC1402
IC1403
NJM4558DX
CN2604
CN1505
CN1401
PU1
RF
PRE GND
L IN
MFB2
PC2
MUTE
GND
L OUT
VCC
R OUT
SUBW GND
SUBW OUT
BASS SW
R IN
L IN
GND
CLK
DATA
VOLUME
ST
P.ON KEY
GND
+5V
+25V/+35V
+5VSTB
IC2601
Q1407
Q1505
IC1403
Q1506
IC2602
Q1401
Q1408 Q1409
IC1401
Q1402–Q1404
Q1406
Q1410
Q1510
Q1429
IC1402
Q1405
Q1507–Q1509
Q1411
Q1501
Q1428
Q1502

4.4 CONVER CONTROL AND CONNECTOR B ASSEMBLIES

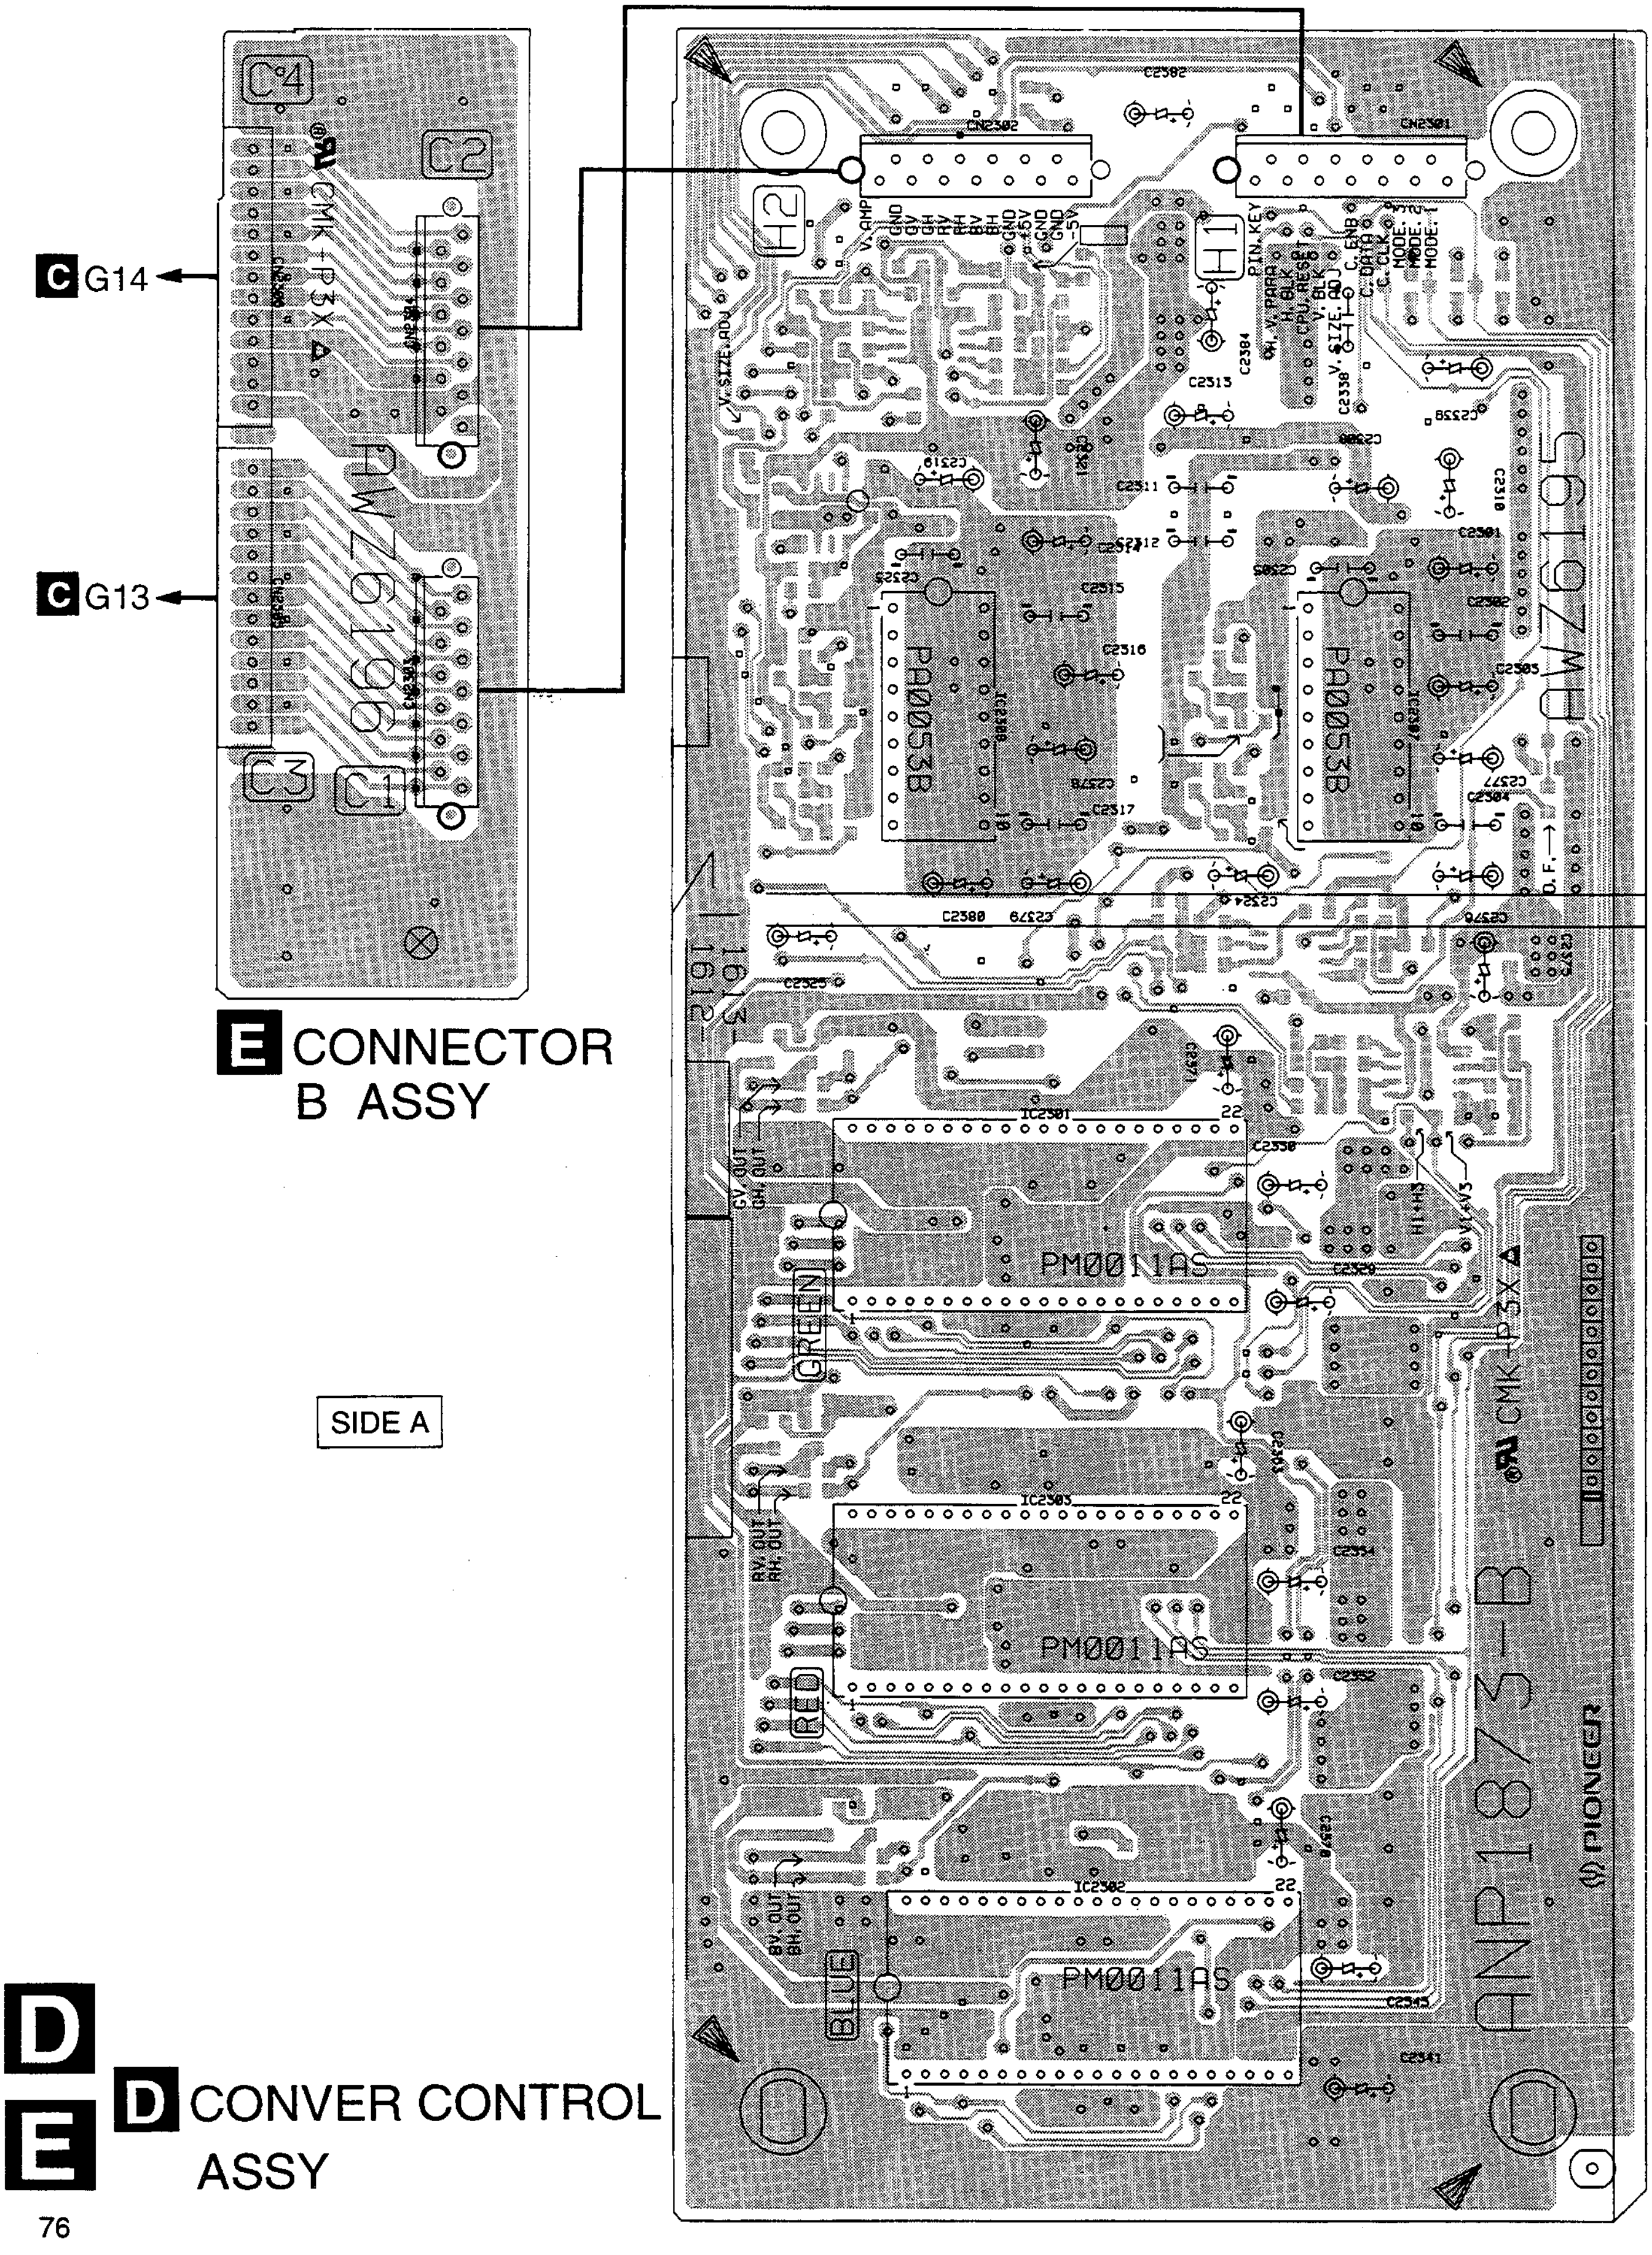
C4
C2
C3
C1
C G14
C G13
CMK-P3X
AWZ6196
C2382
CN2302
CN2301
H2
H1
V.AMP
GND
GV
GH
RV
RH
BV
BH
GND
+15V
GND
GND
5V
P.IN.KEY
V.PARA
H.BLK
CPU.RESET
V.BLK
V.SIZE.ADJ
C.ENB
C.DATA
C.CLK
MODE
MODE
MODE
V.SIZE.ADJ
C2313
C2384
C2319
C2311
C2312
C2315
C2316
C2317
C2301
C2302
C2303
C2304
C2305
C2325
C2326
C2378
C2379
C2380
C2324
C2328
C2330
C2329
C2354
C2352
C2345
C2341
PA0053B
PA0053B
AWZ6195
D.F.
1613-
IC2301
GV.OUT
GH.OUT
PM0011AS
GREEN
H1+H3
V1+V3
CMK-P3X
IC2303
RV.OUT
RH.OUT
PM0011AS
RED
IC2302
BV.OUT
BH.OUT
PM0011AS
BLUE
ANP1873-B
PIONEER
22
1

E CONNECTOR B ASSY

SIDE A

D CONVER CONTROL ASSY

D
E

D CONVER CONTROL ASSY

SIDE A

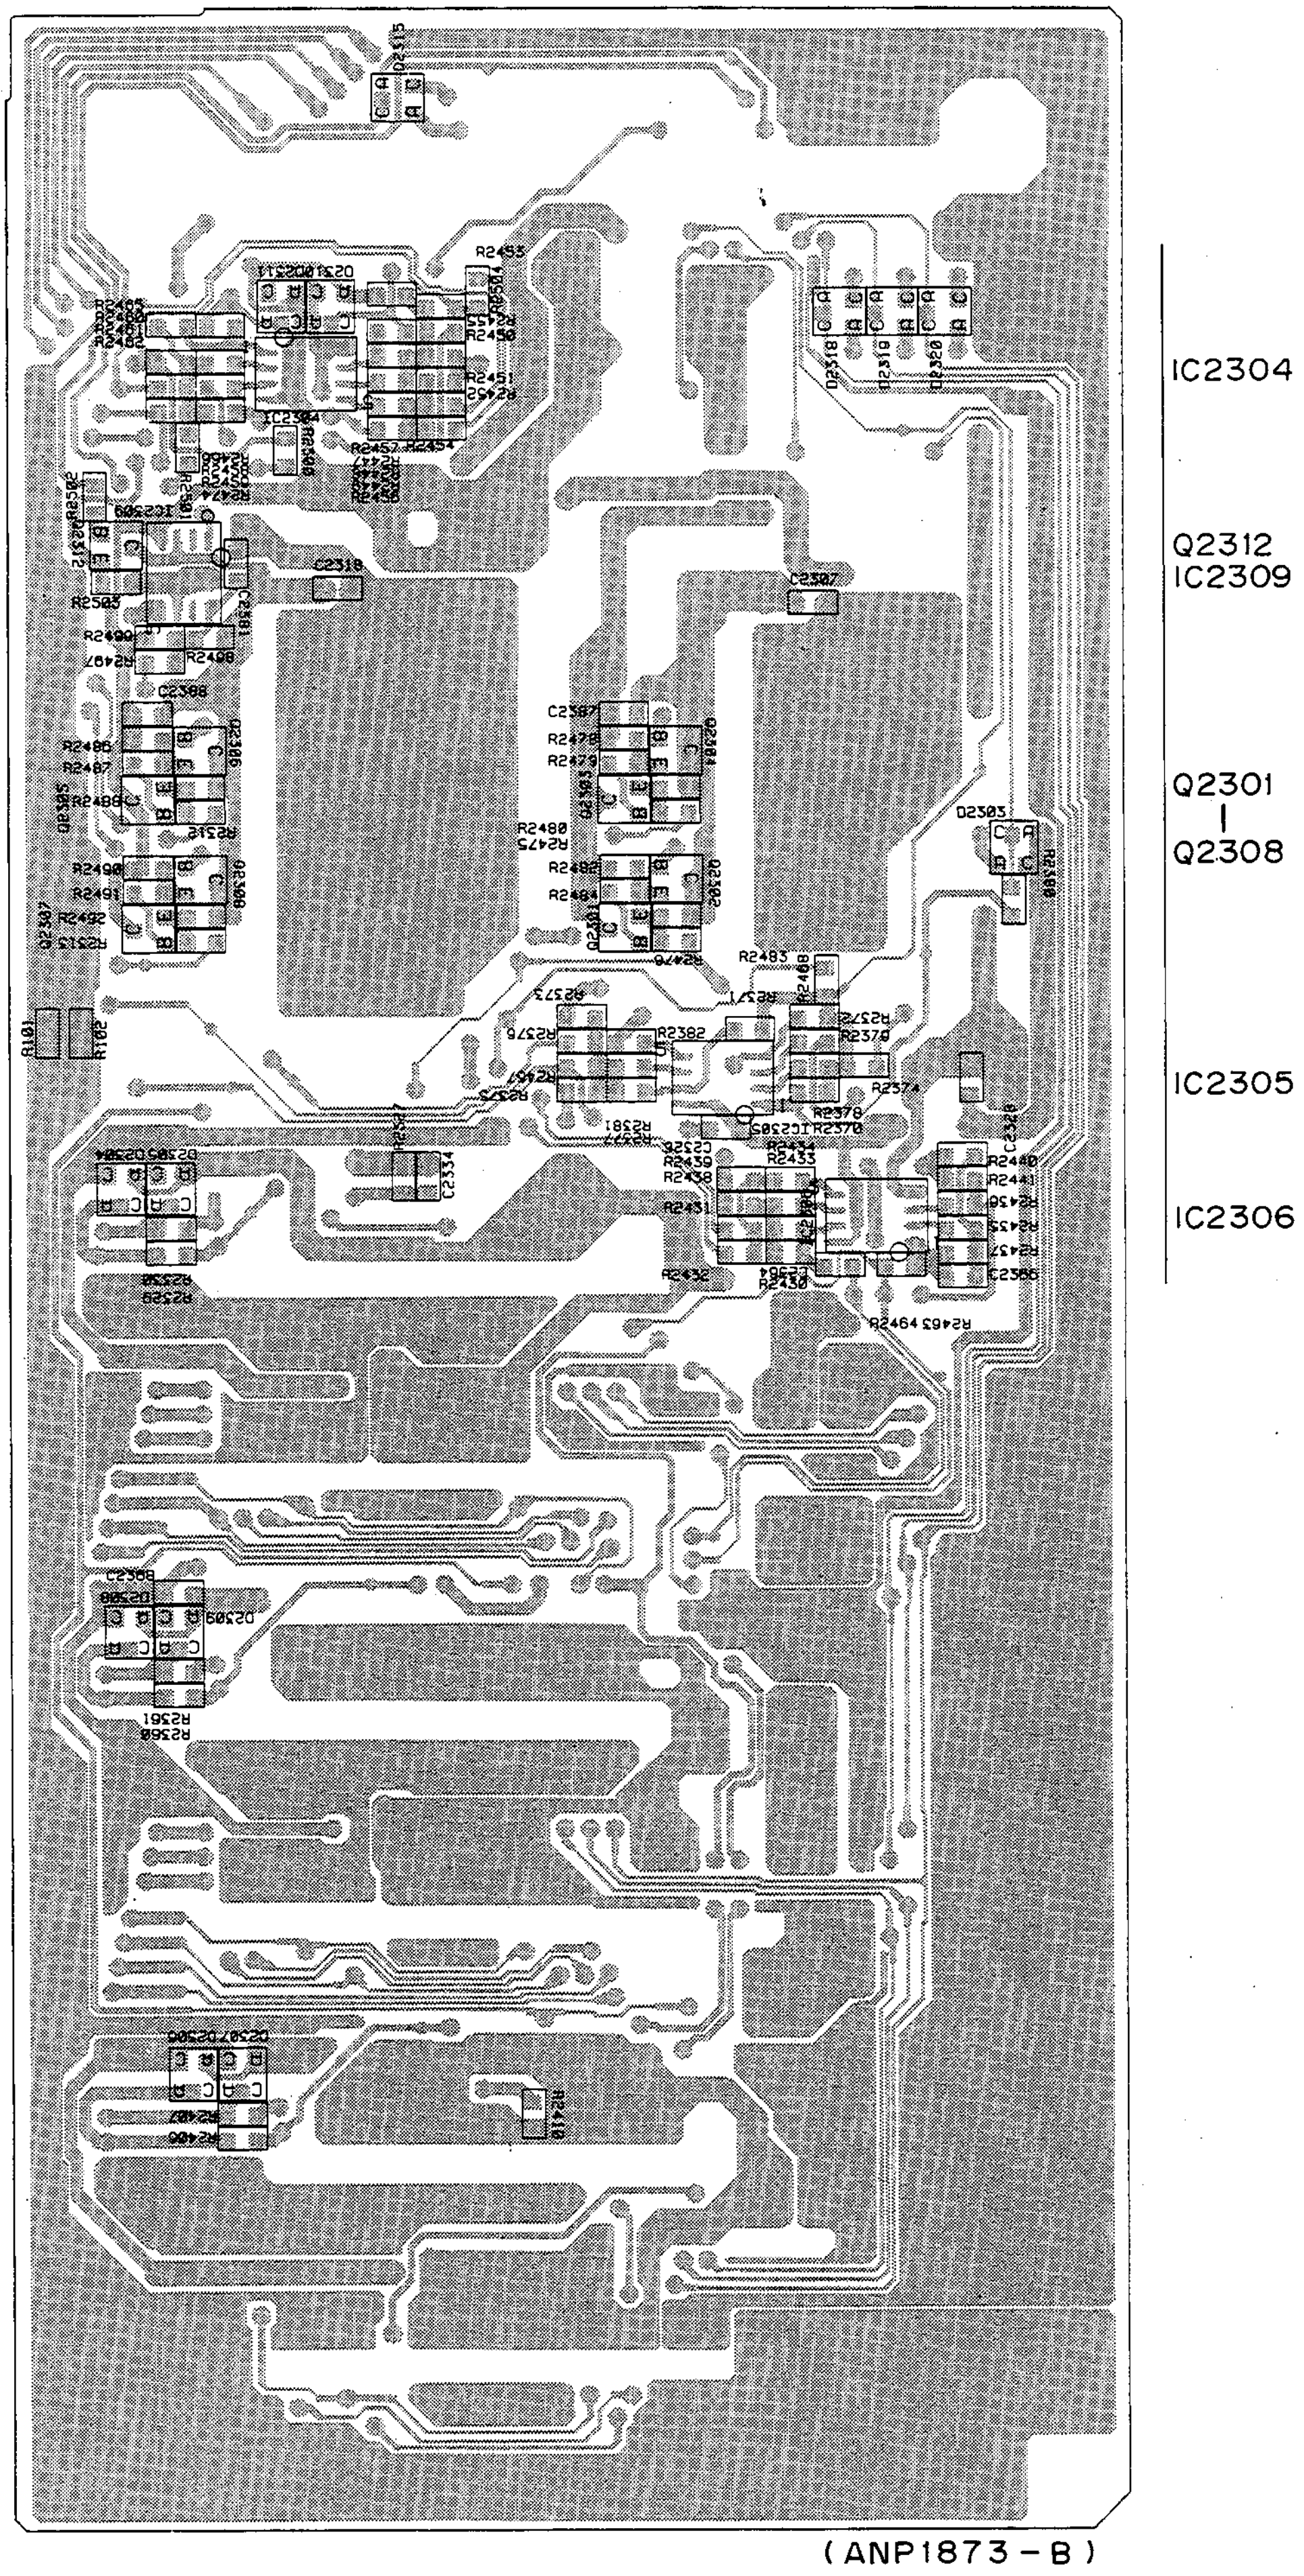
IC2304
Q2312
IC2309
Q2301
Q2308
IC2305
IC2306
D2315
D2311
D2312
D2304
IC2304
IC2309
Q2312
C2310
C2307
C2308
C2387
Q2306
Q2304
Q2303
Q2305
Q2302
Q2301
Q2308
Q2307
D2303
D2318
D2316
D2320
R2453
R2450
R2451
R2452
R2454
R2465
R2460
R2461
R2462
R2503
R2490
R2497
R2498
R2486
R2487
R2488
R2491
R2492
R2480
R2475
R2478
R2479
R2482
R2484
R2476
R2483
R2468
R2373
R2376
R2382
R2371
R2372
R2379
R2374
R2378
R2370
R2381
IC2305
R2567
C2334
D2304
D2305
R2529
R2530
C2326
R2436
R2438
R2431
R2433
R2432
R2430
R2440
R2441
R2456
R2435
R2457
C2386
R2464
R2463
R101
R102
D2308
D2309
C2366
R2560
R2561
D2306
D2307
R2405
R2407
R2410

(ANP1873 − B)

D CONVER CONTROL ASSY

SIDE B

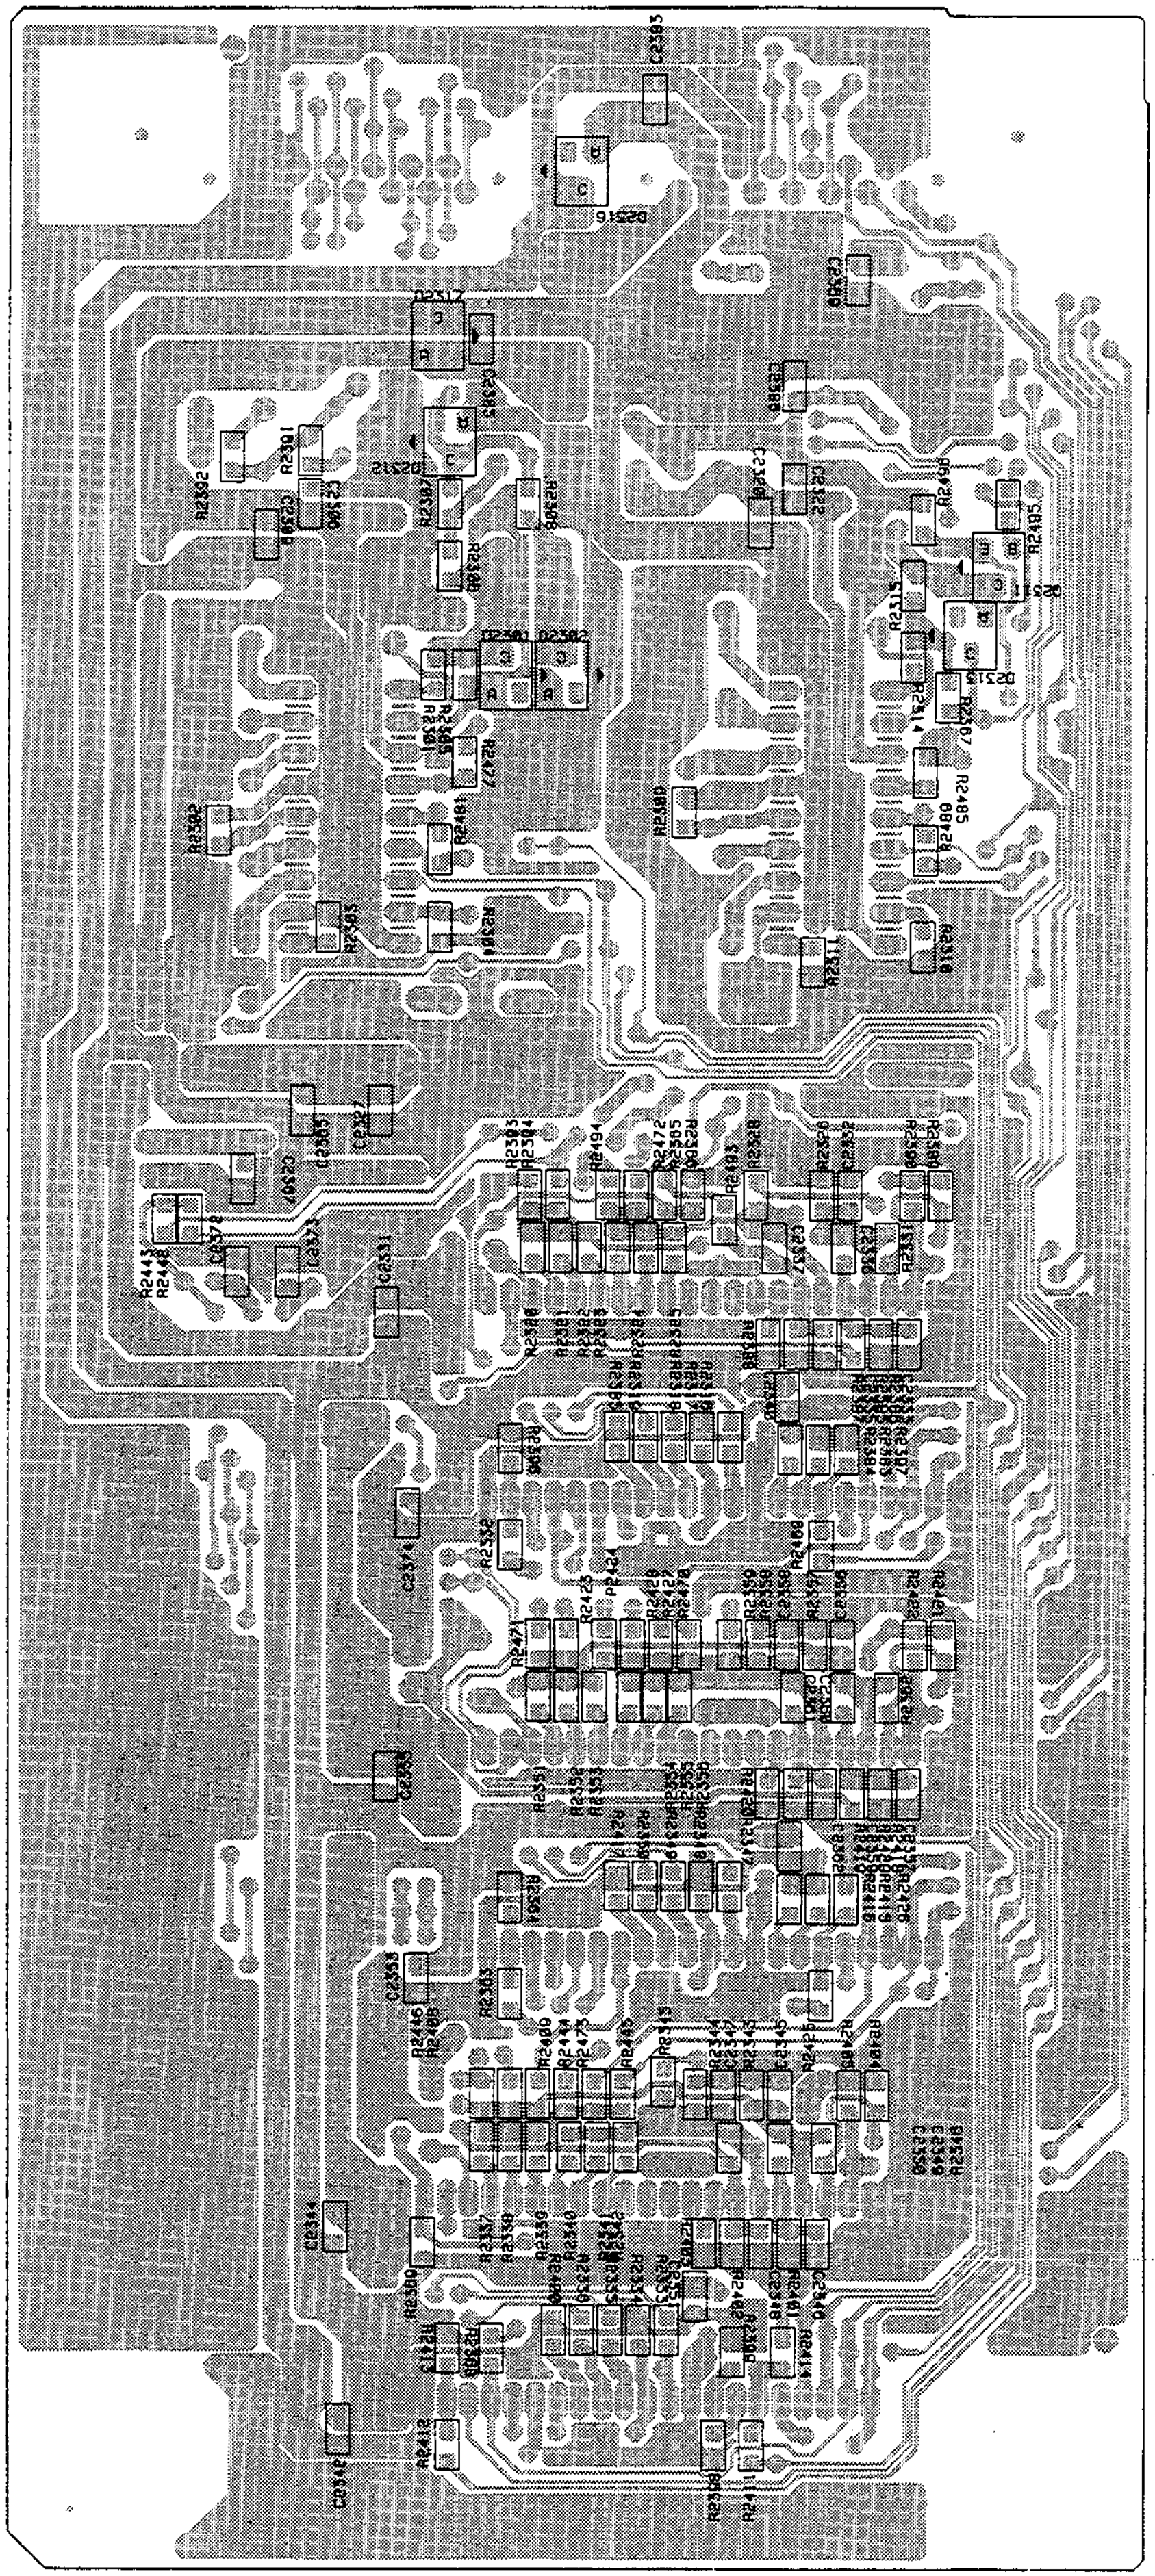

(ANP1873－B)

4.5 R,G AND B CRT AMP ASSEMBLIES

☐ : HIGH VOLTAGE GENERATION POINT
(EXCEPTIG THE CHARGED SECTION)

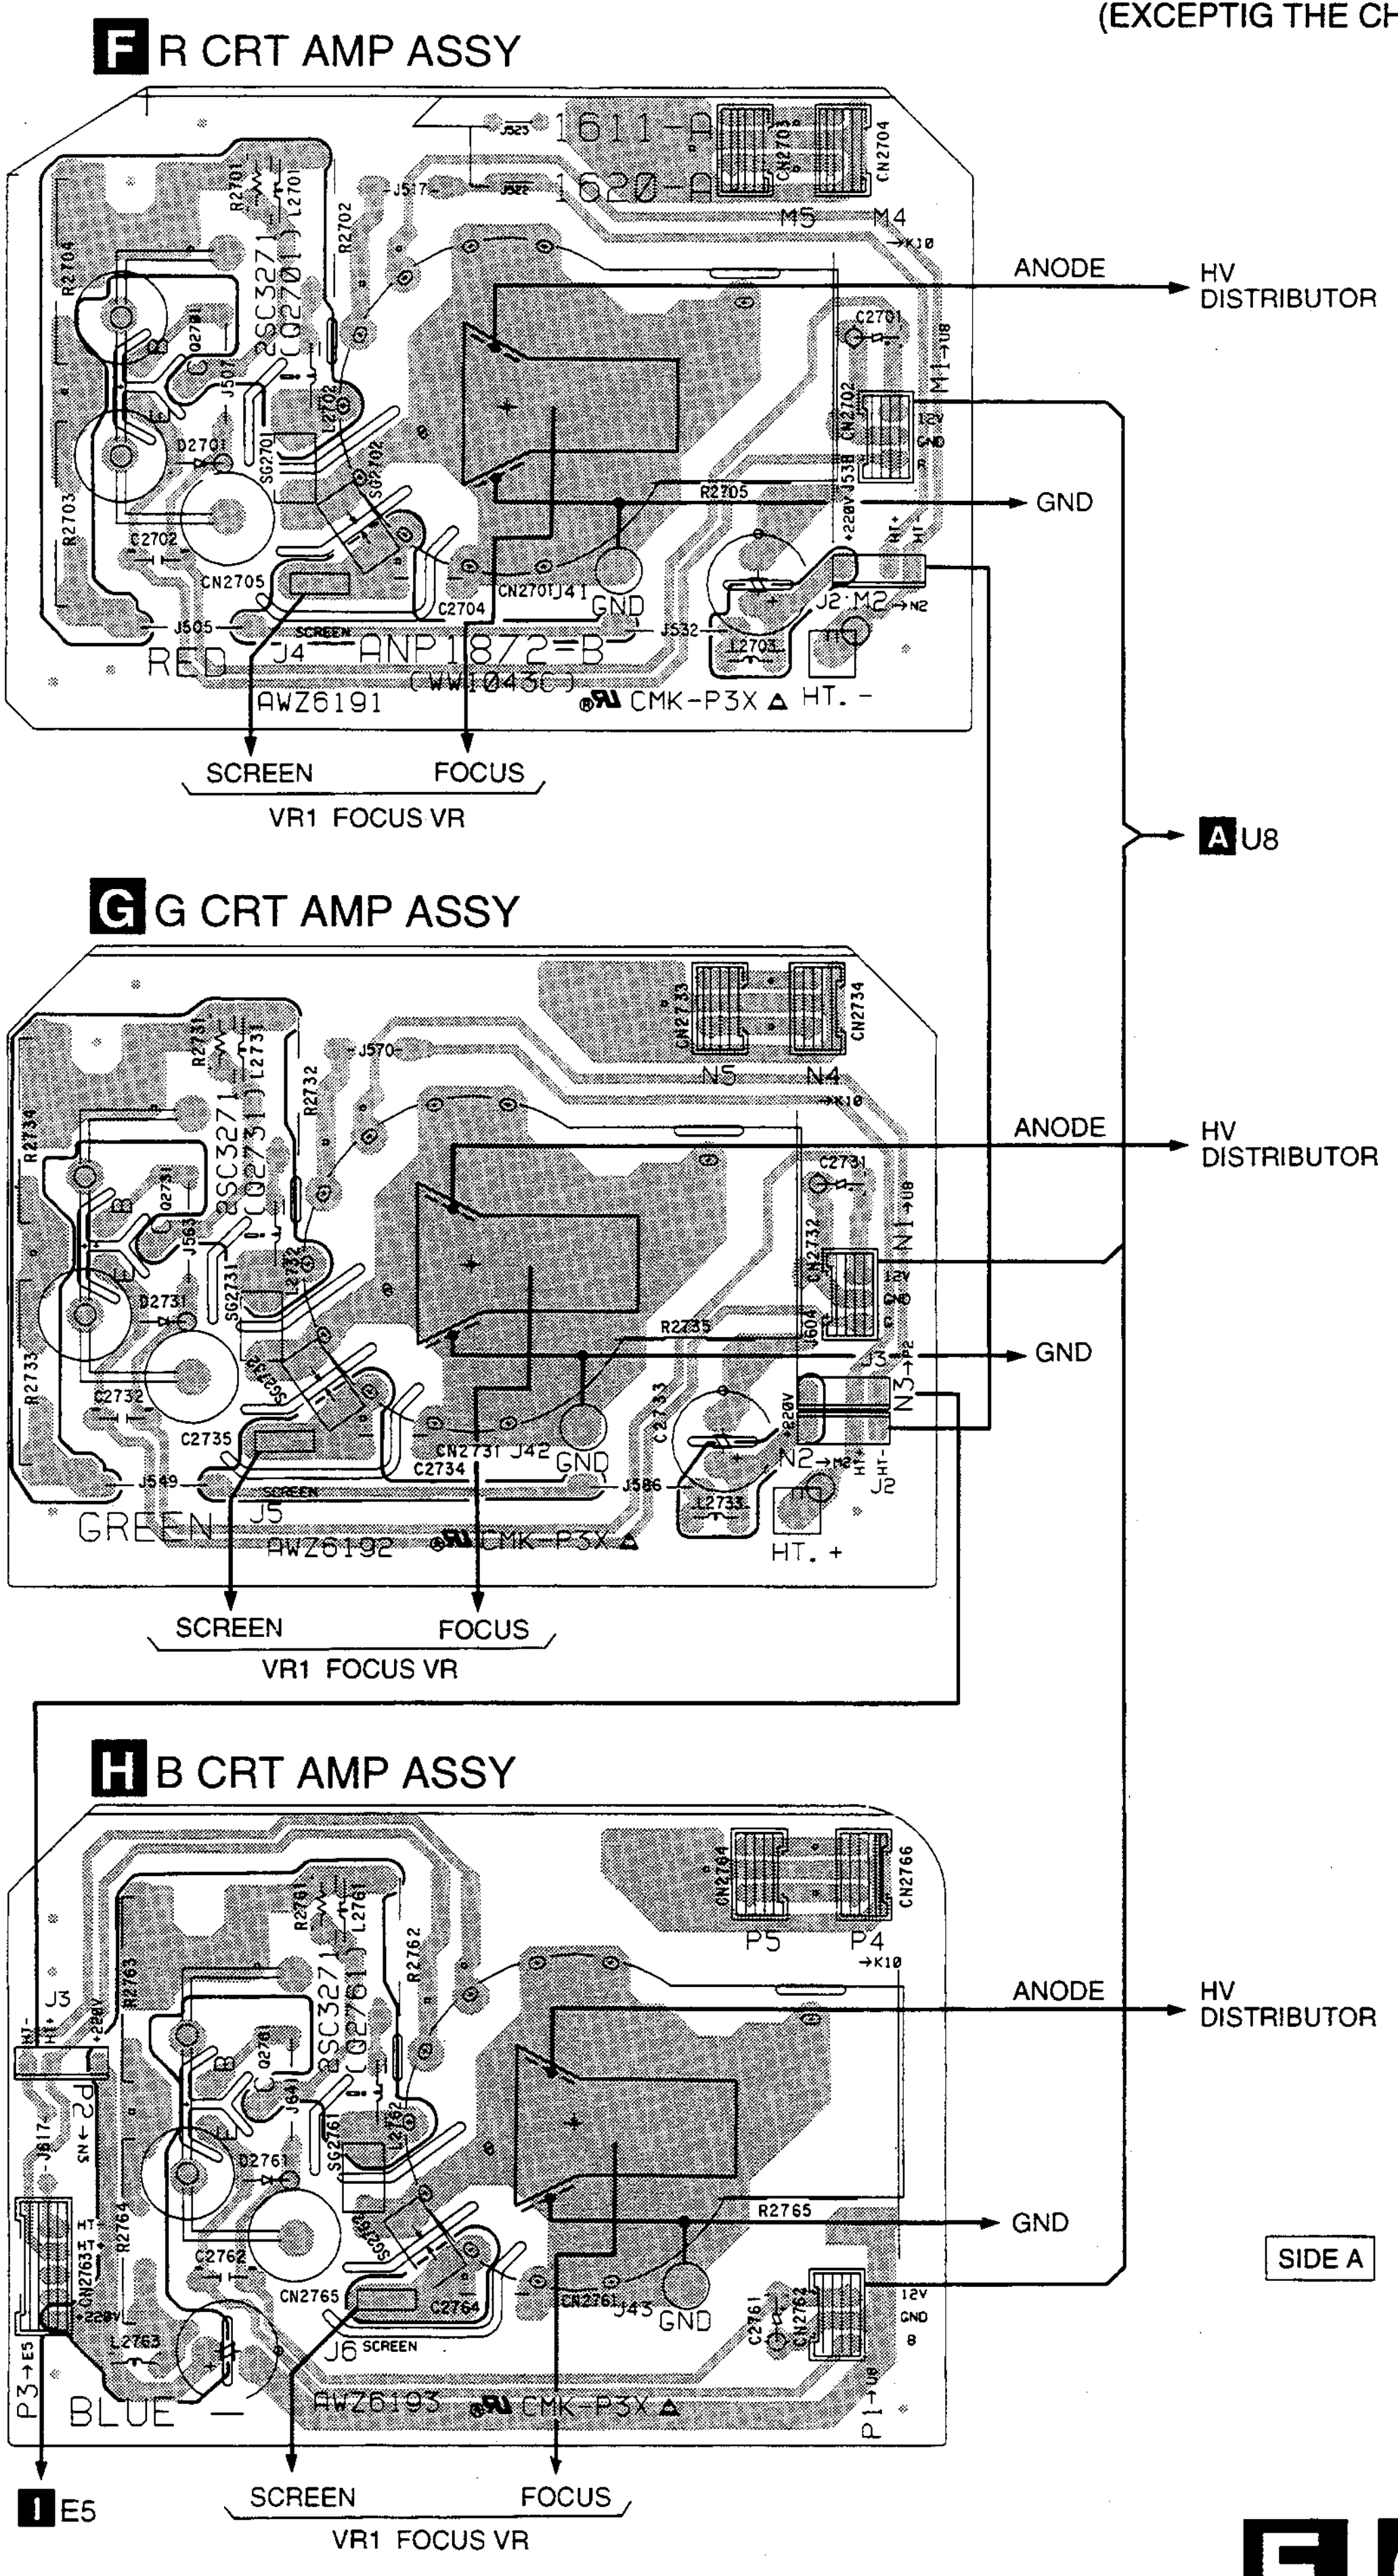
F R CRT AMP ASSY
1611-A
1620-A
CN2703
CN2704
M5
M4
R2701
R2702
R2704
2SC3271
(Q2701)
L2701
Q2701
J507
D2701
SG2701
SG2702
L2702
R2703
C2702
CN2705
C2704
CN2701
J41
GND
C2701
CN2702
M1→U8
12V
GND
R2705
J538
+220V
HT+
HT-
J2
M2→N2
L2703
J505
J4
SCREEN
J532
RED
ANP1872-B
(WW10436)
AWZ6191
CMK-P3X
HT. -
ANODE
HV
DISTRIBUTOR
GND
SCREEN
FOCUS
VR1 FOCUS VR
A U8
G G CRT AMP ASSY
CN2733
CN2734
N5
N4
R2731
R2732
R2734
J570
2SC3271
(Q2731)
L2731
Q2731
J565
D2731
SG2731
L2732
R2733
C2732
C2735
C2731
CN2732
N1→U8
12V
GND
R2735
J604
J3
N3→P2
C2733
+220V
N2→M2
HT+
HT-
J2
L2733
J549
J5
SCREEN
CN2731
J42
C2734
GND
J586
GREEN
AWZ6192
CMK-P3X
HT. +
ANODE
HV
DISTRIBUTOR
GND
SCREEN
FOCUS
VR1 FOCUS VR
H B CRT AMP ASSY
CN2764
CN2766
P5
P4
→K10
R2761
R2762
R2763
2SC3271
(Q2761)
L2761
Q2761
J3
HT-
HT+
+220V
P2→N3
J817
D2761
SG2761
L2762
R2764
C2762
CN2763
CN2765
C2764
CN2761
J43
GND
R2765
C2761
CN2762
12V
GND
L2763
J6
SCREEN
P3→E5
BLUE
AWZ6193
CMK-P3X
P1→U8
ANODE
HV
DISTRIBUTOR
GND
SIDE A
I E5
SCREEN
FOCUS
VR1 FOCUS VR

4.6 POWER SUPPLY SERVICE ASSY

(GUIDE PAGE)

I POWER SUPPLY SERVICE ASSY ▭ : CHARGED SECTION

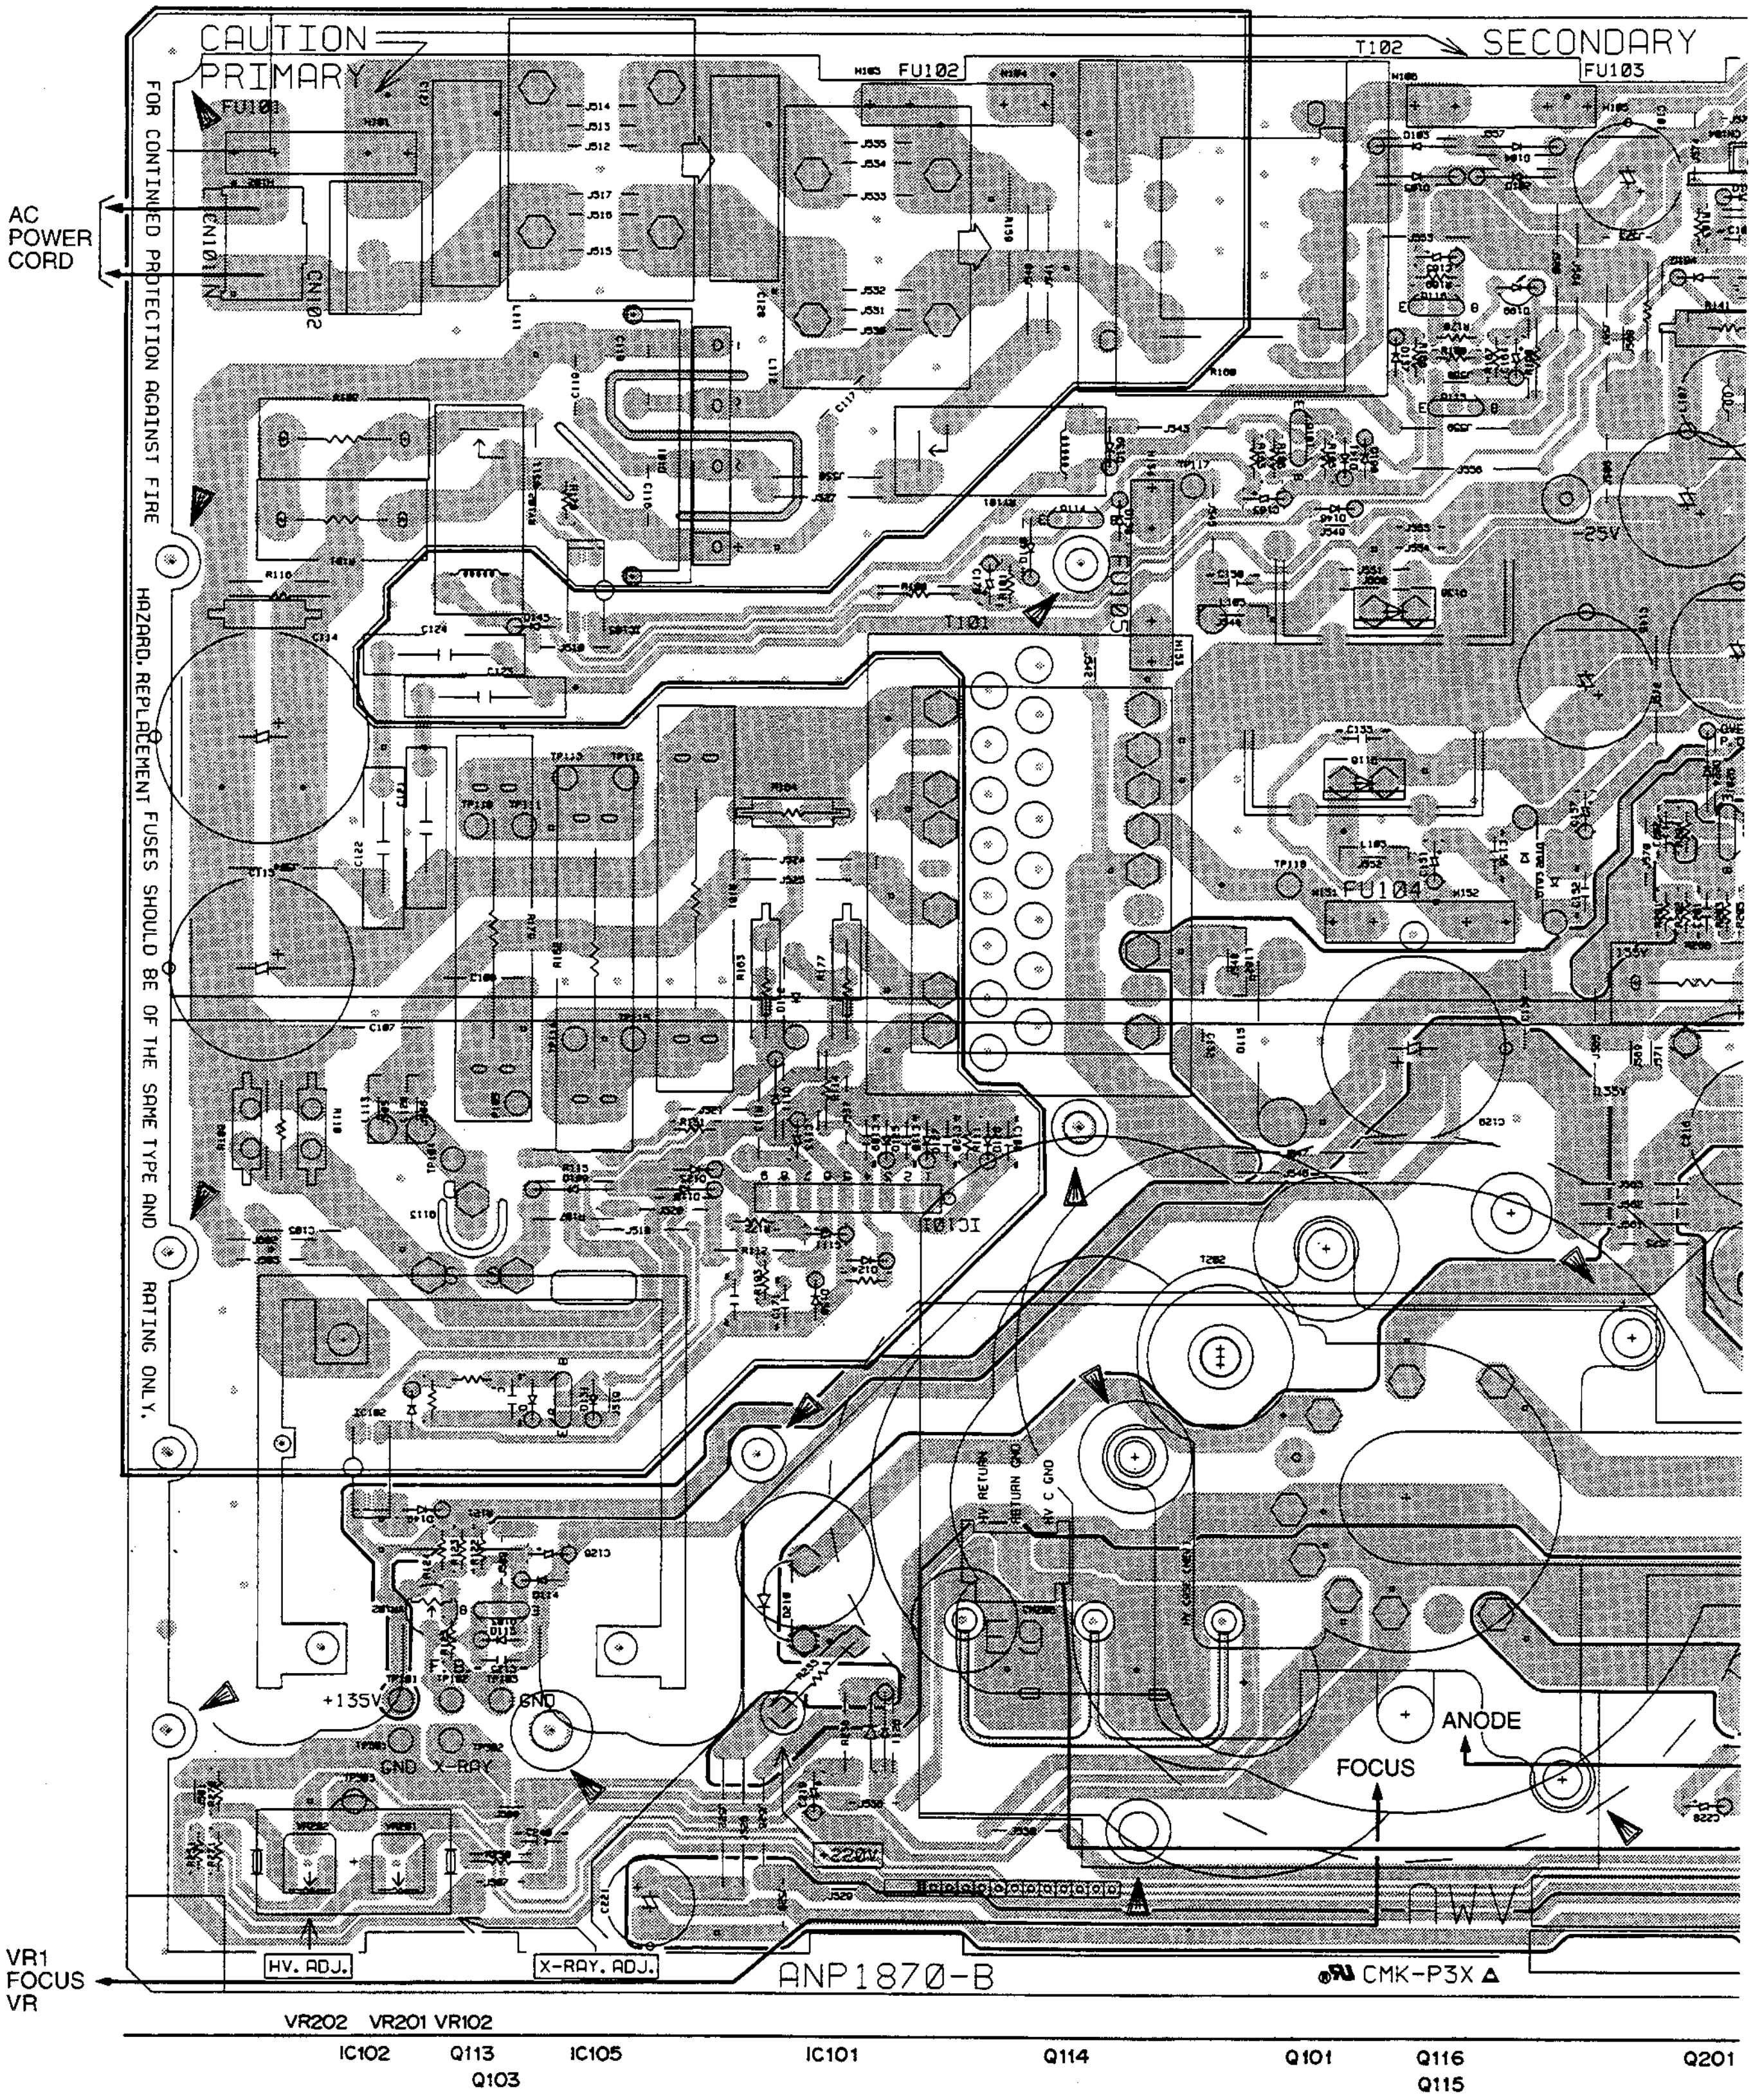
CAUTION
PRIMARY
SECONDARY
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACEMENT FUSES SHOULD BE OF THE SAME TYPE AND RATING ONLY.
FU101
FU102
FU103
FU104
FU105
T101
T102
CN101
CN102
IC101
-25V
135V
+135V
GND
X-RAY
+220V
ANODE
FOCUS
HV RETURN
HV C GND
AC POWER CORD
VR1 FOCUS VR
HV. ADJ.
X-RAY. ADJ.
ANP1870-B
CMK-P3X
VR202
VR201
VR102
IC102
Q113
Q103
IC105
IC101
Q114
Q101
Q116
Q115
Q201

☐ : HIGH VOLTAGE GENERATION POINT
(EXCEPTIG THE CHARGED SECTION)

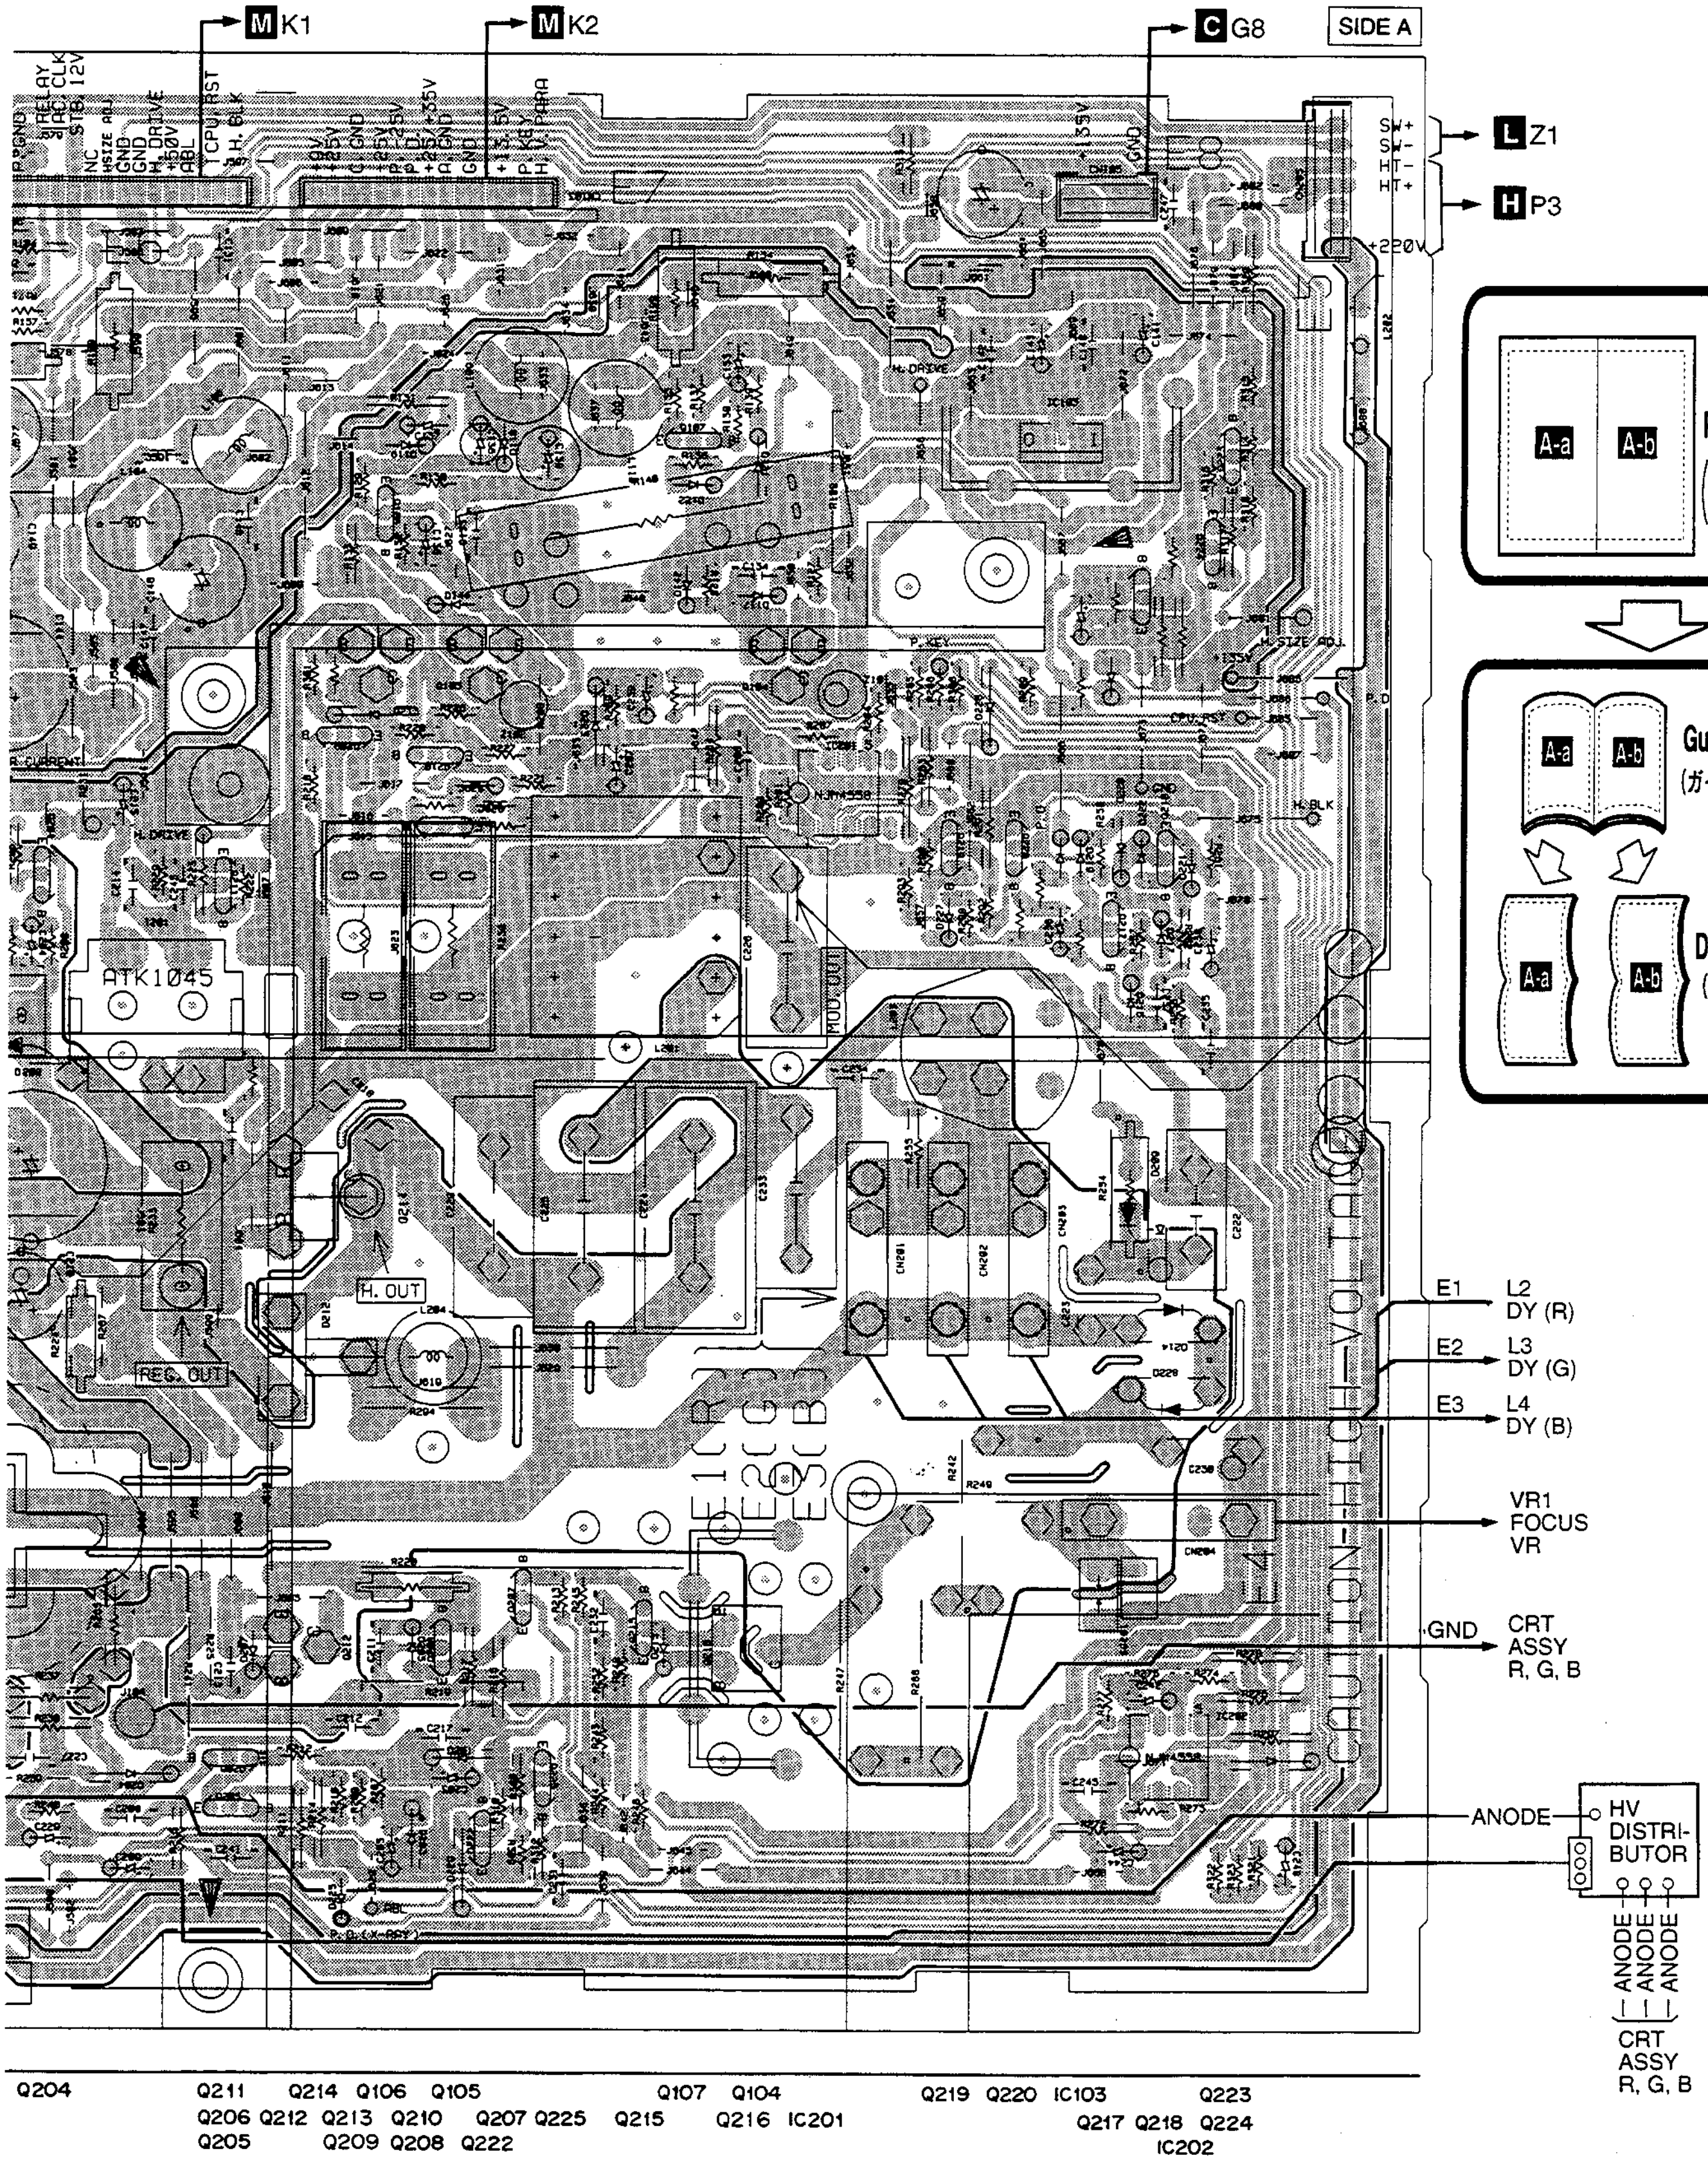
M K1
M K2
C G8
SIDE A
P.GND
RELAY
AC.CLK
STB.12V
NC
HSIZE ADJ
GND
GND
H.DRIVE
+50V
ABL
CPU RST
H.BLK
+9V
+35V
G.GND
+25V
P.D(-25V)
+A.GND
GND
+3.5V
P.KEY
H.V.PARA
+135V
GND
SW+
SW-
HT-
HT+
L Z1
H P3
+220V
H.DRIVE
P.KEY
H.SIZE ADJ
CPU RST
H.BLK
P.D
ATK1045
MOD. OUT
H. OUT
REG. OUT
P.D.(X-RAY)
ABL
E1
L2
DY (R)
E2
L3
DY (G)
E3
L4
DY (B)
VR1
FOCUS
VR
GND
CRT
ASSY
R, G, B
ANODE
HV
DISTRI-
BUTOR
ANODE
ANODE
ANODE
CRT
ASSY
R, G, B
Q204
Q211 Q214 Q106 Q105
Q206 Q212 Q213 Q210
Q205 Q209 Q208 Q222
Q207 Q225 Q215
Q107 Q104
Q216 IC201
Q219 Q220 IC103
Q217 Q218 Q224
IC202
Q223

Large size PCB diagram
(大きなサイズのPCB図)

A-a A-b

Guide page
(ガイドページ)

Detailed page
(詳細ページ)

□ : HIGH VOLTAGE GENERATION POINT
(EXCEPTIG THE CHARGED SECTION)

I POWER SUPPLY SERVICE ASSY

▣ : CHARGED SECTION

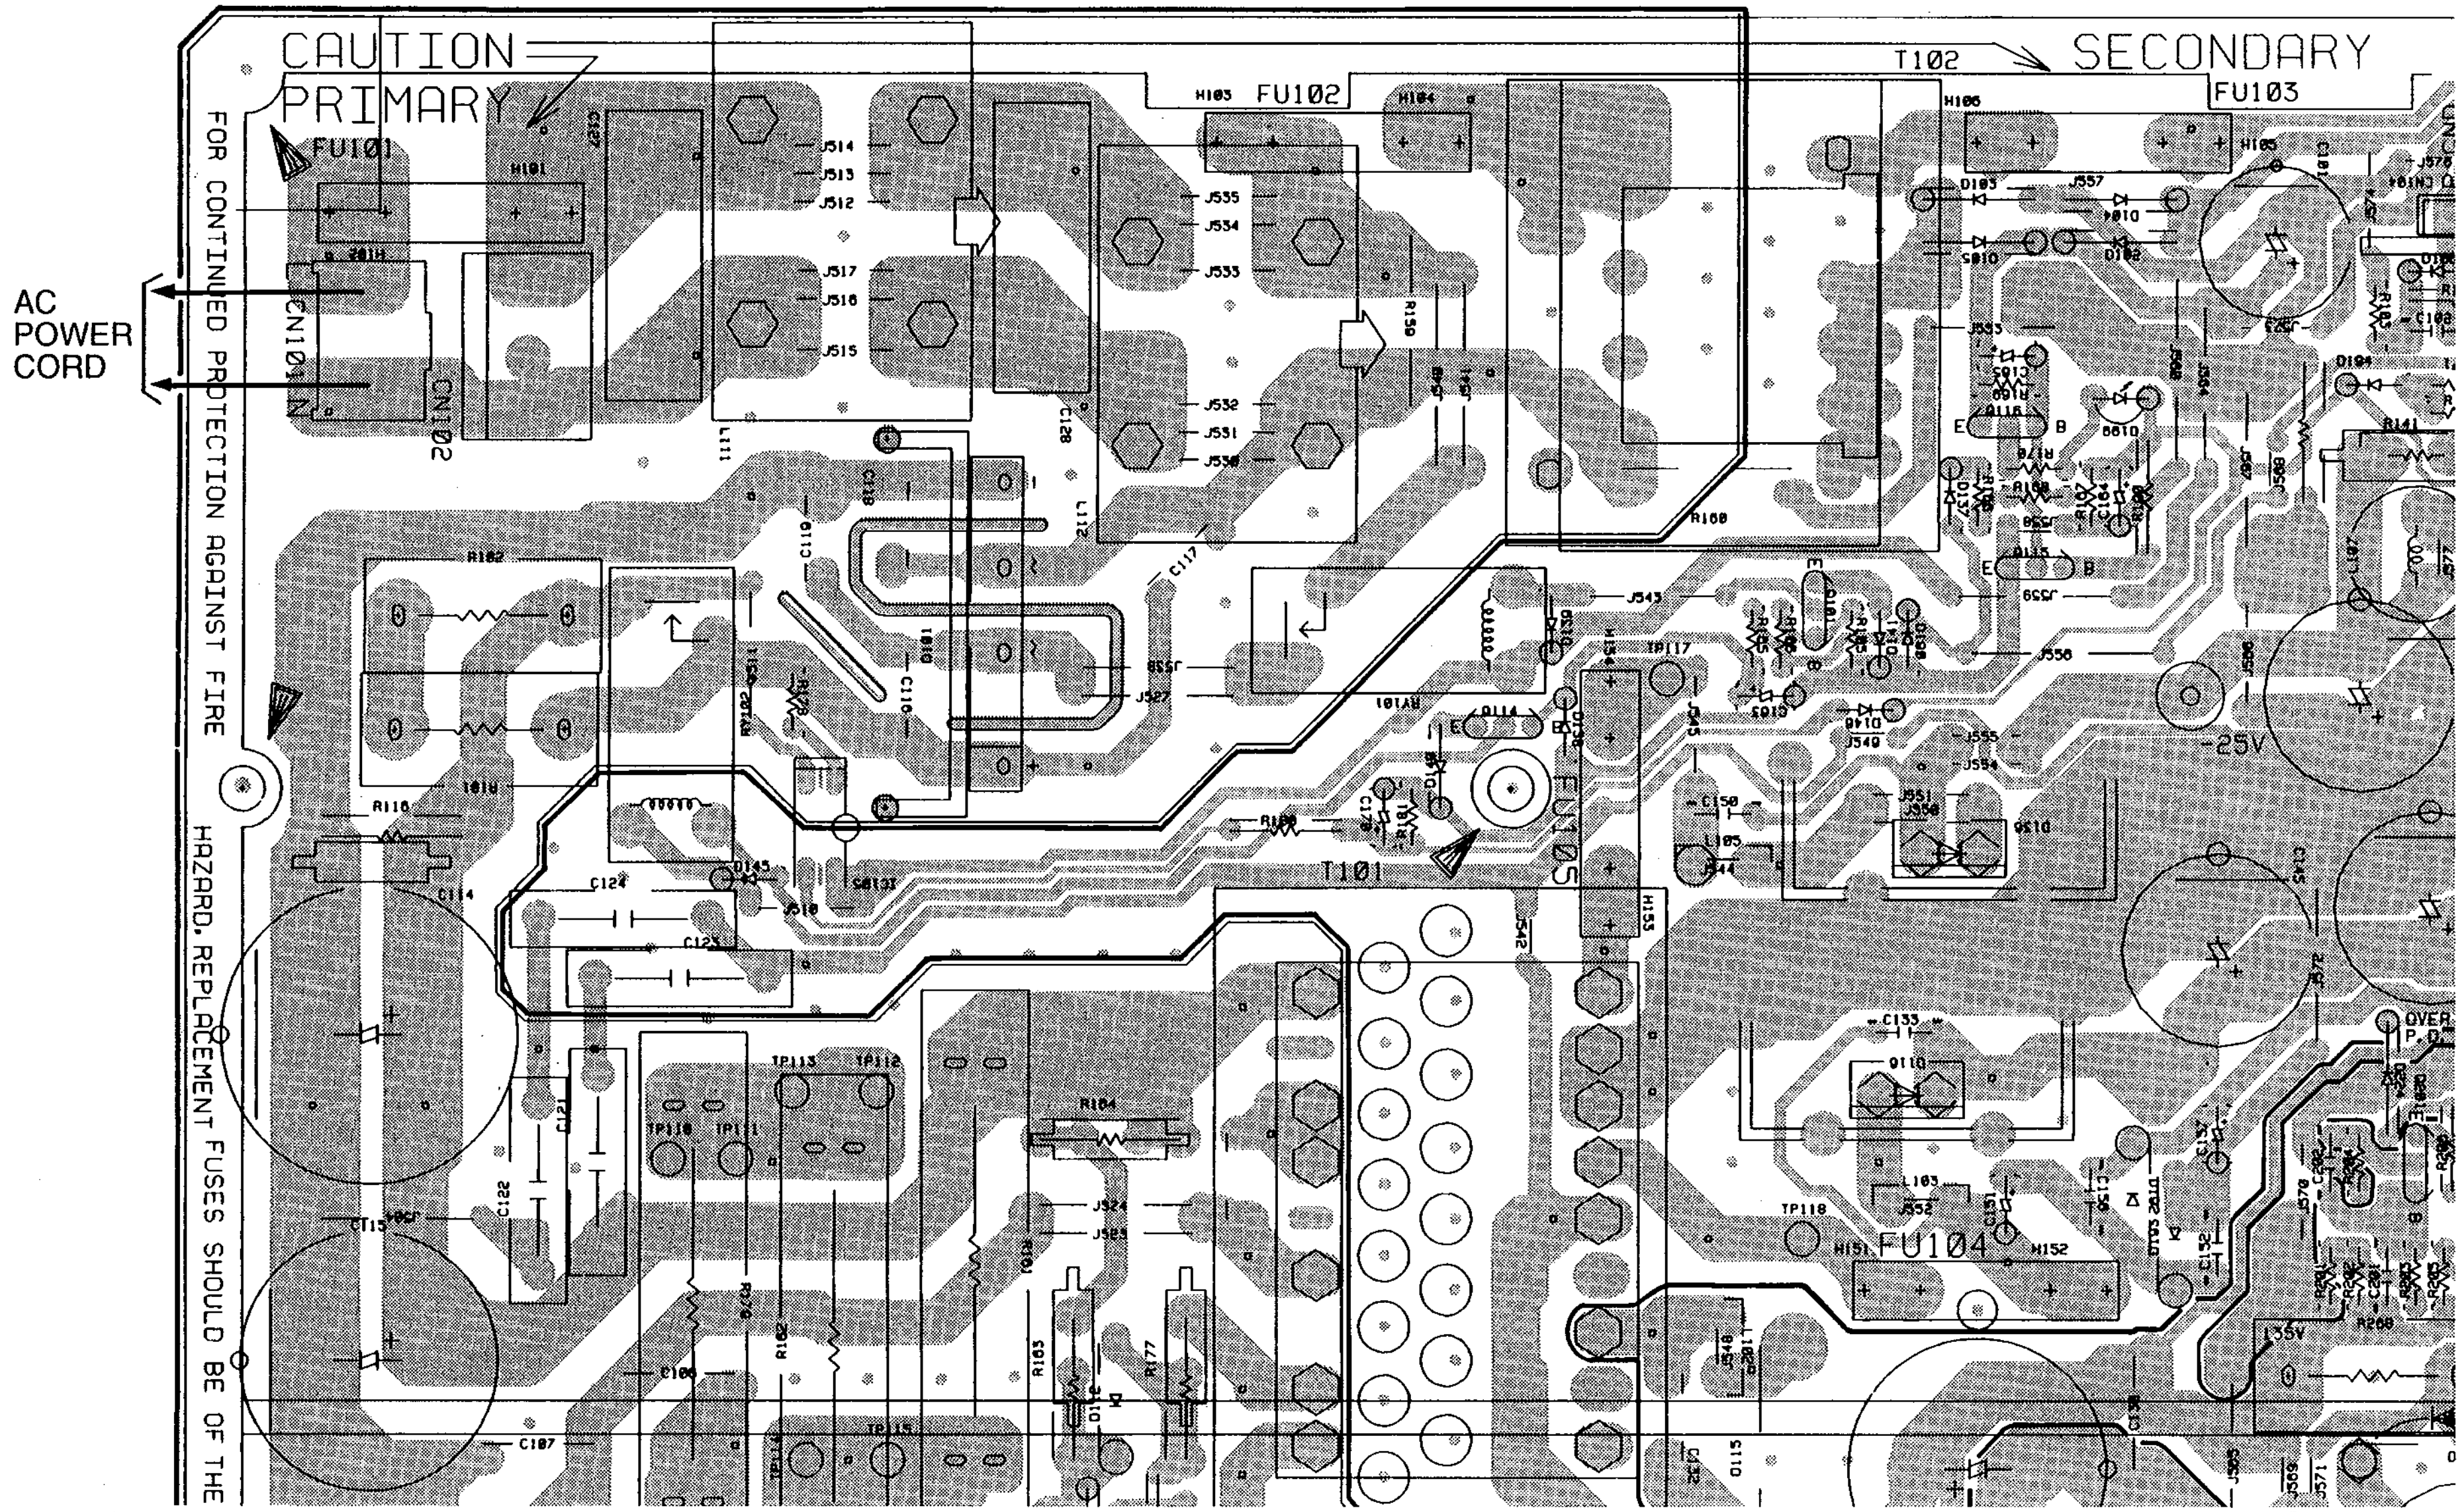
CAUTION
PRIMARY
SECONDARY
T102
T101
FU101
FU102
FU103
FU104
FU105
CN101
CN102
AC POWER CORD
H101
H103
H104
H105
H106
H151
H152
H153
H154
L111
L112
C114
C122
C124
C125
C127
C128
C133
C145
R159
R160
R102
R104
R110
J514
J513
J512
J517
J516
J515
J535
J534
J533
J532
J531
J530
J543
J556
J558
J527
J524
J523
TP110
TP111
TP112
TP113
TP117
TP118
-25V
OVER P.D.
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACEMENT FUSES SHOULD BE OF THE

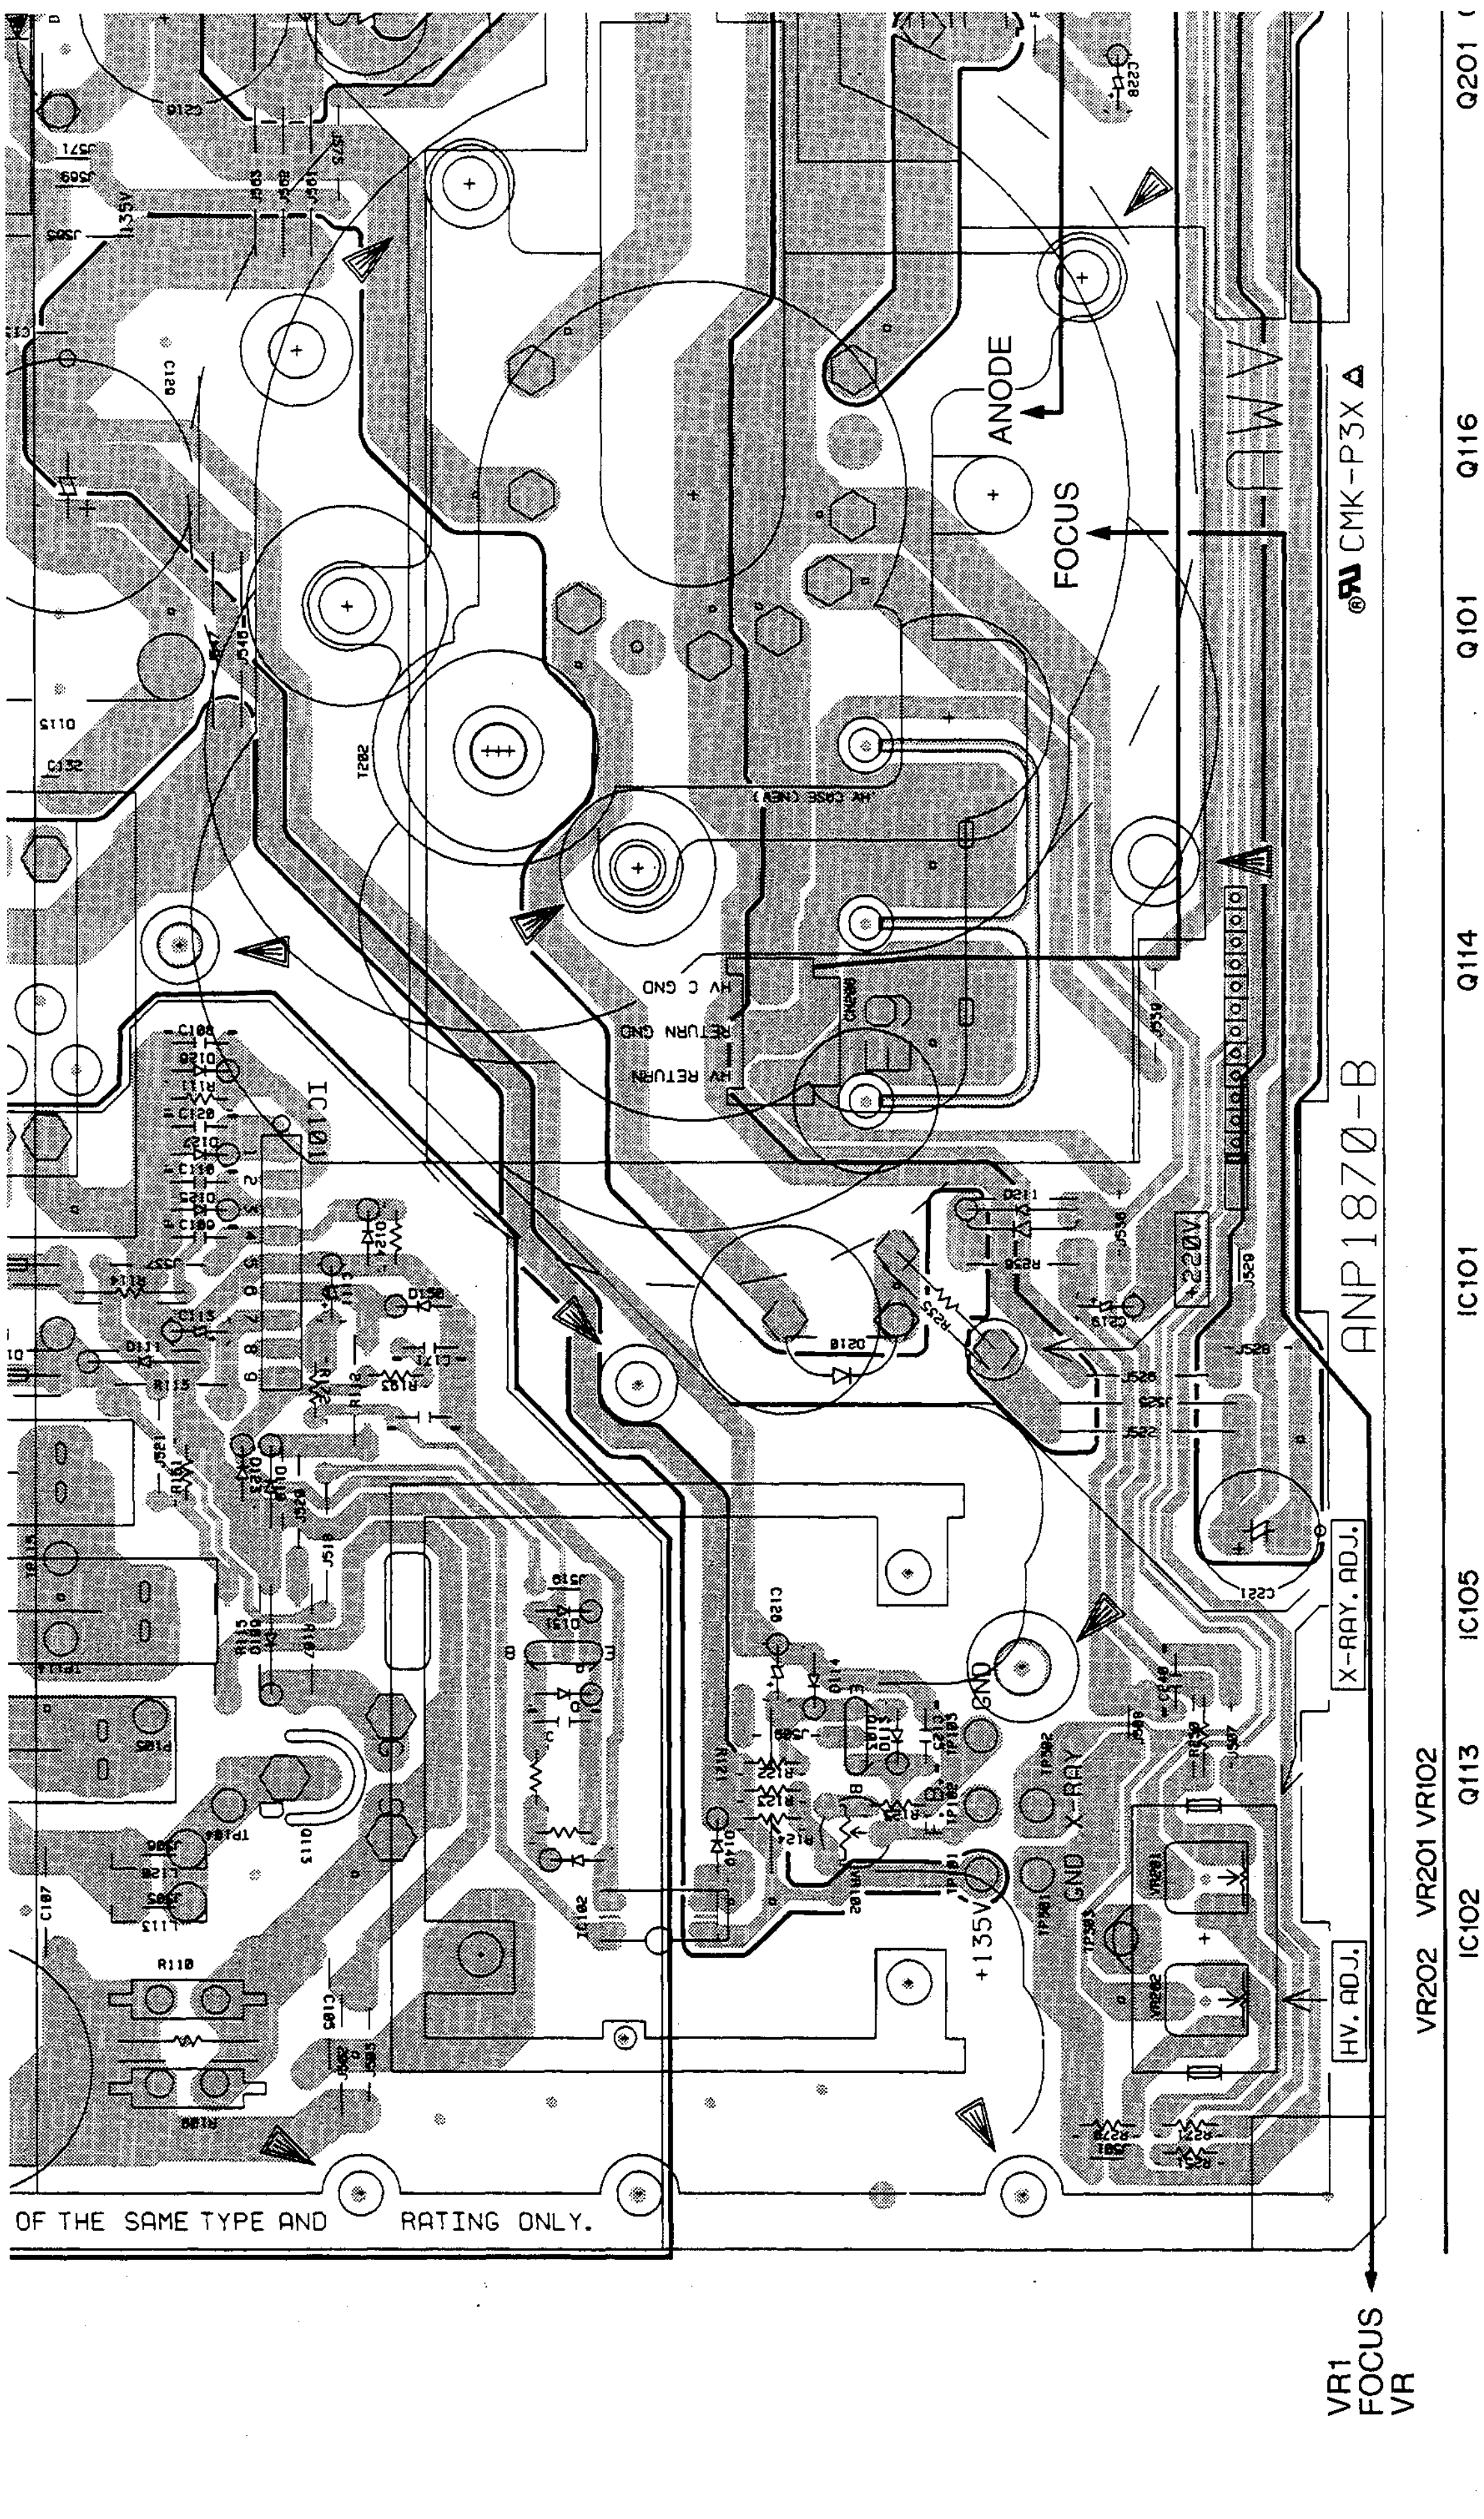
ANODE
FOCUS
CMK-P3X
ANP1870-B
HV CASE (NEW)
HV C GND
RETURN GND
HV RETURN
+220V
X-RAY. ADJ.
HV. ADJ.
+135V
GND
X-RAY
GND
T202
IC101
OF THE SAME TYPE AND RATING ONLY.
Q201
Q116
Q115
Q101
Q114
IC101
IC105
Q113
Q103
IC102
VR202
VR201
VR102
VR1
FOCUS
VR

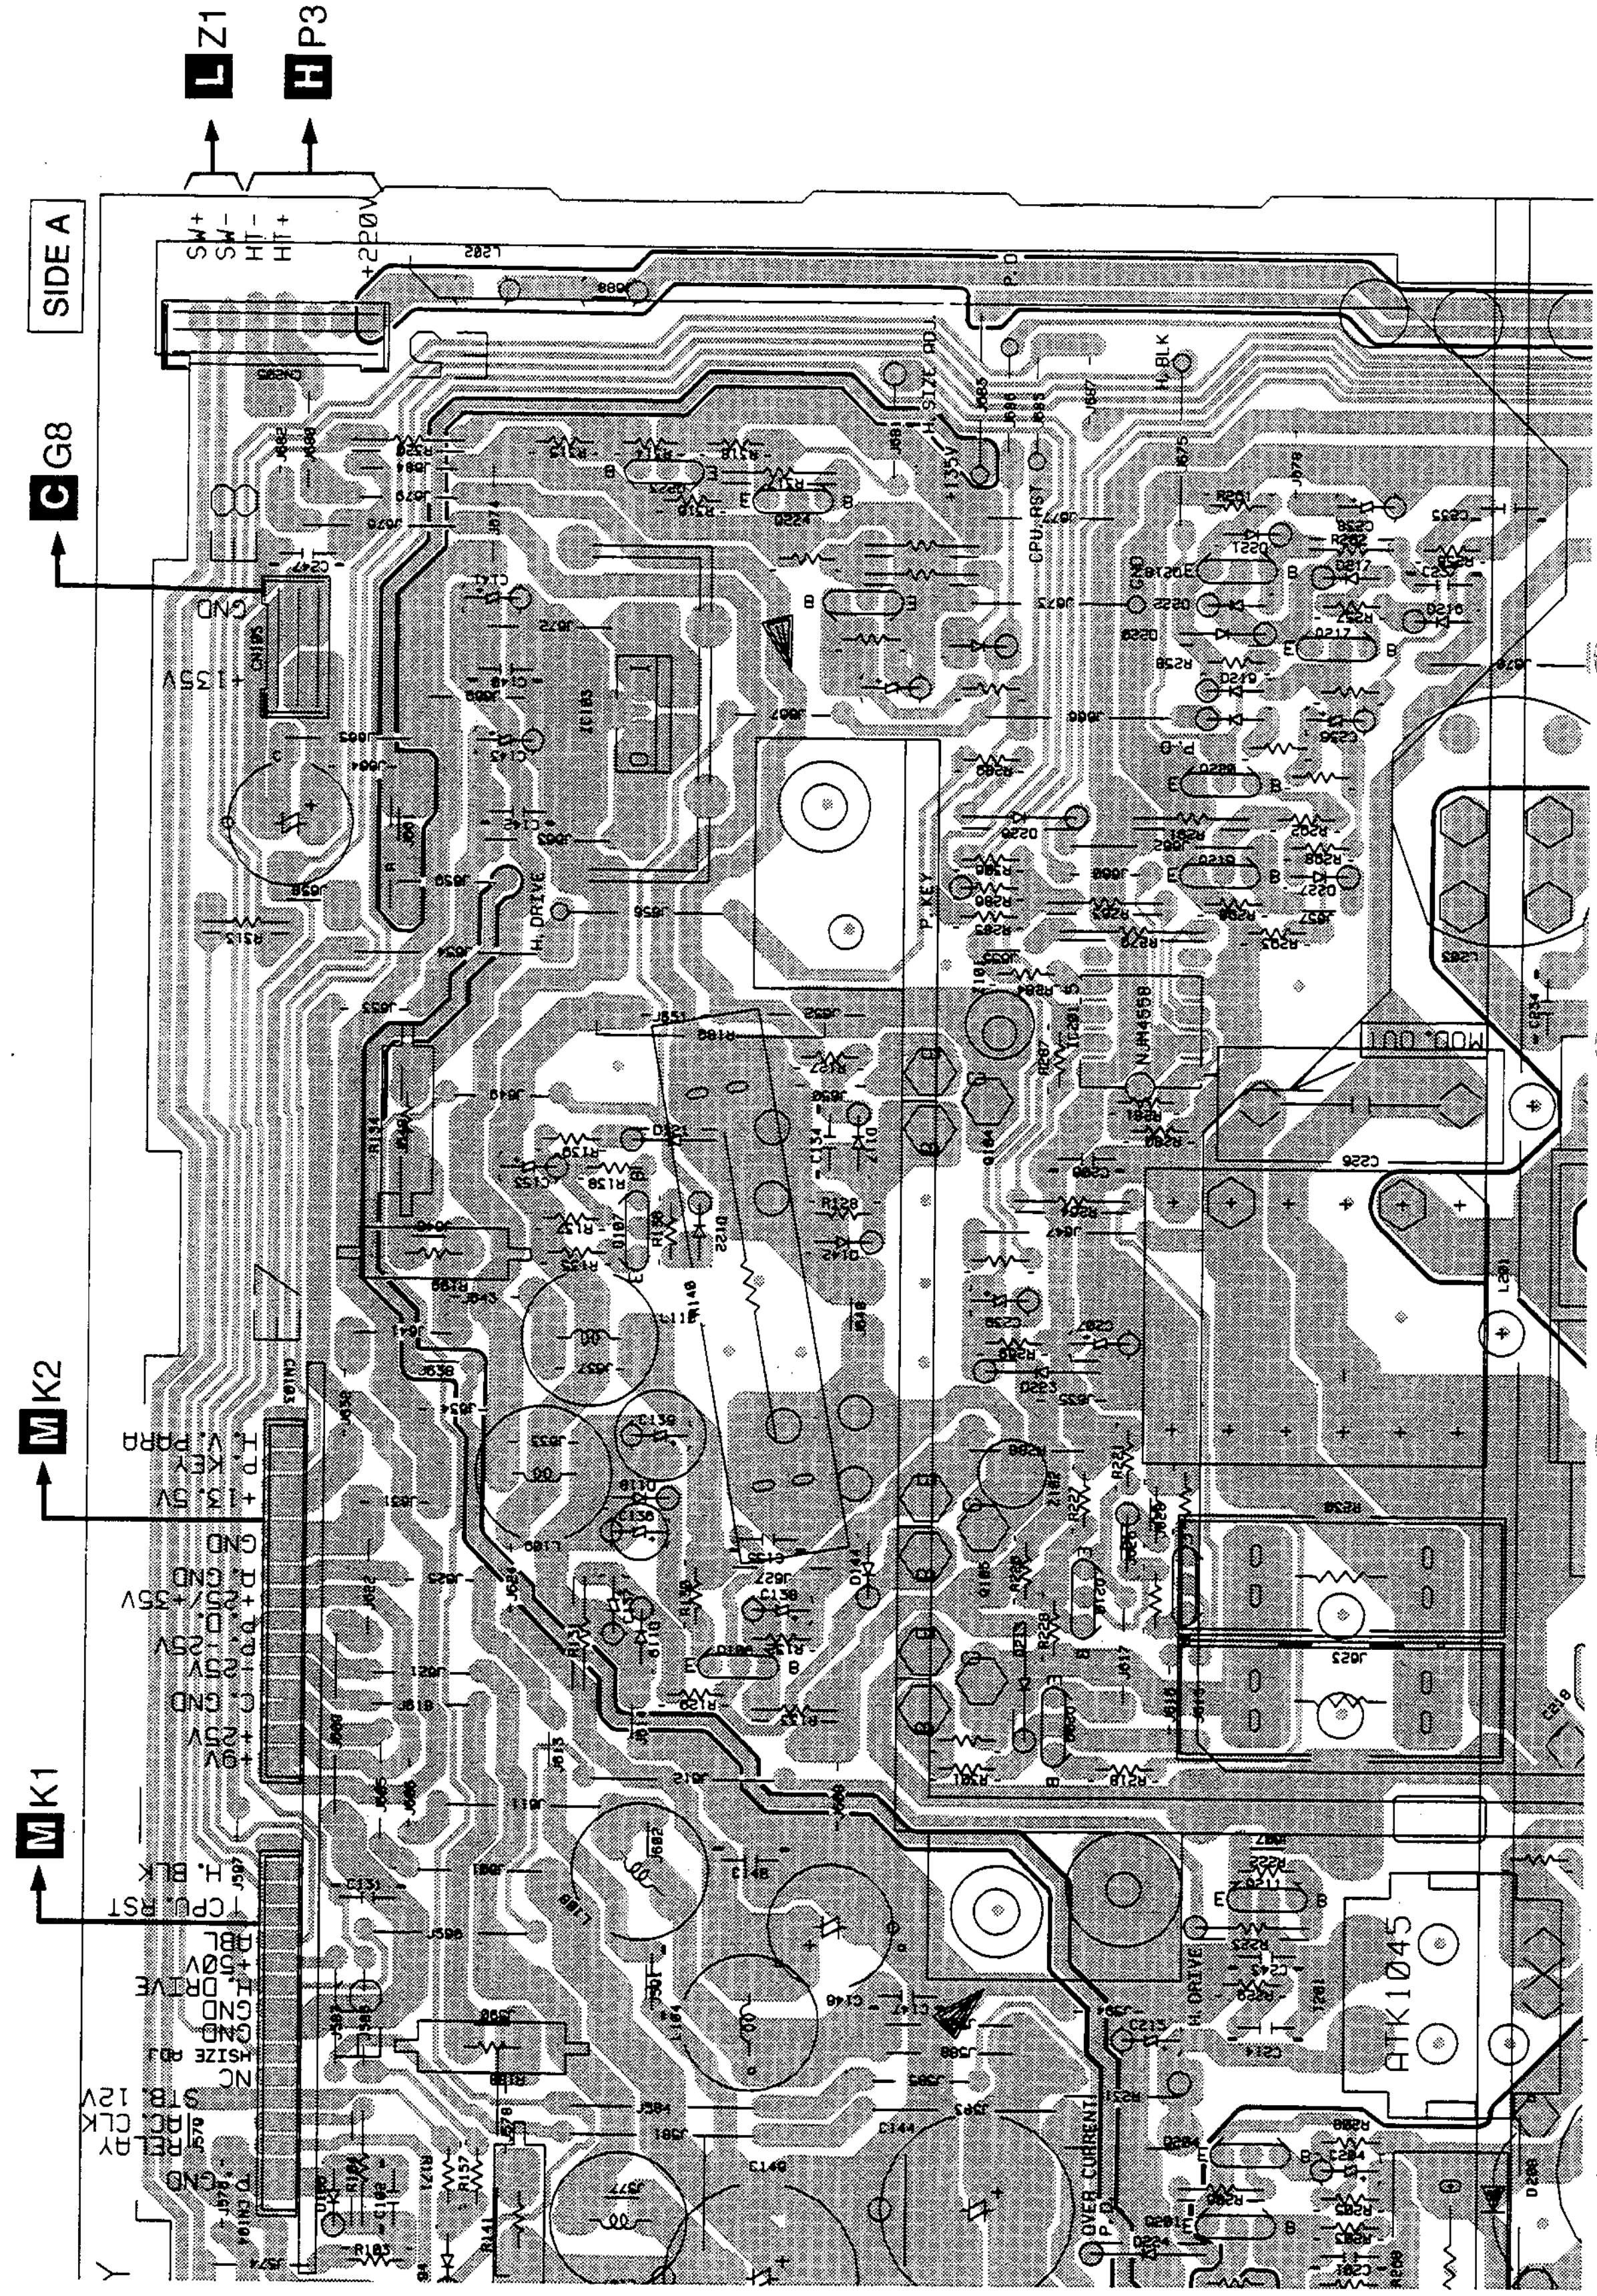
L Z1
H P3
C G8
M K2
M K1
SIDE A
SW+
SW-
HT-
HT+
+220V
GND
+135V
H.V.PARA
P.KEY
+13.5V
GND
P.GND
+25/+35V
P.D
P.-25V
-25V
C.GND
+25V
+9V
H.BLK
CPU.RST
ABL
+50V
H.DRIVE
GND
GND
HSIZE ADJ
NC
STB.12V
RC.CLK
RELAY
P.GND
P.KEY
H.DRIVE
CPU.RST
H.BLK
H.SIZE ADJ
OVER CURRENT
MOD.001
NJM4558
ATK1045

□ : HIGH VOLTAGE GENERATION POINT
(EXCEPTIG THE CHARGED SECTION)

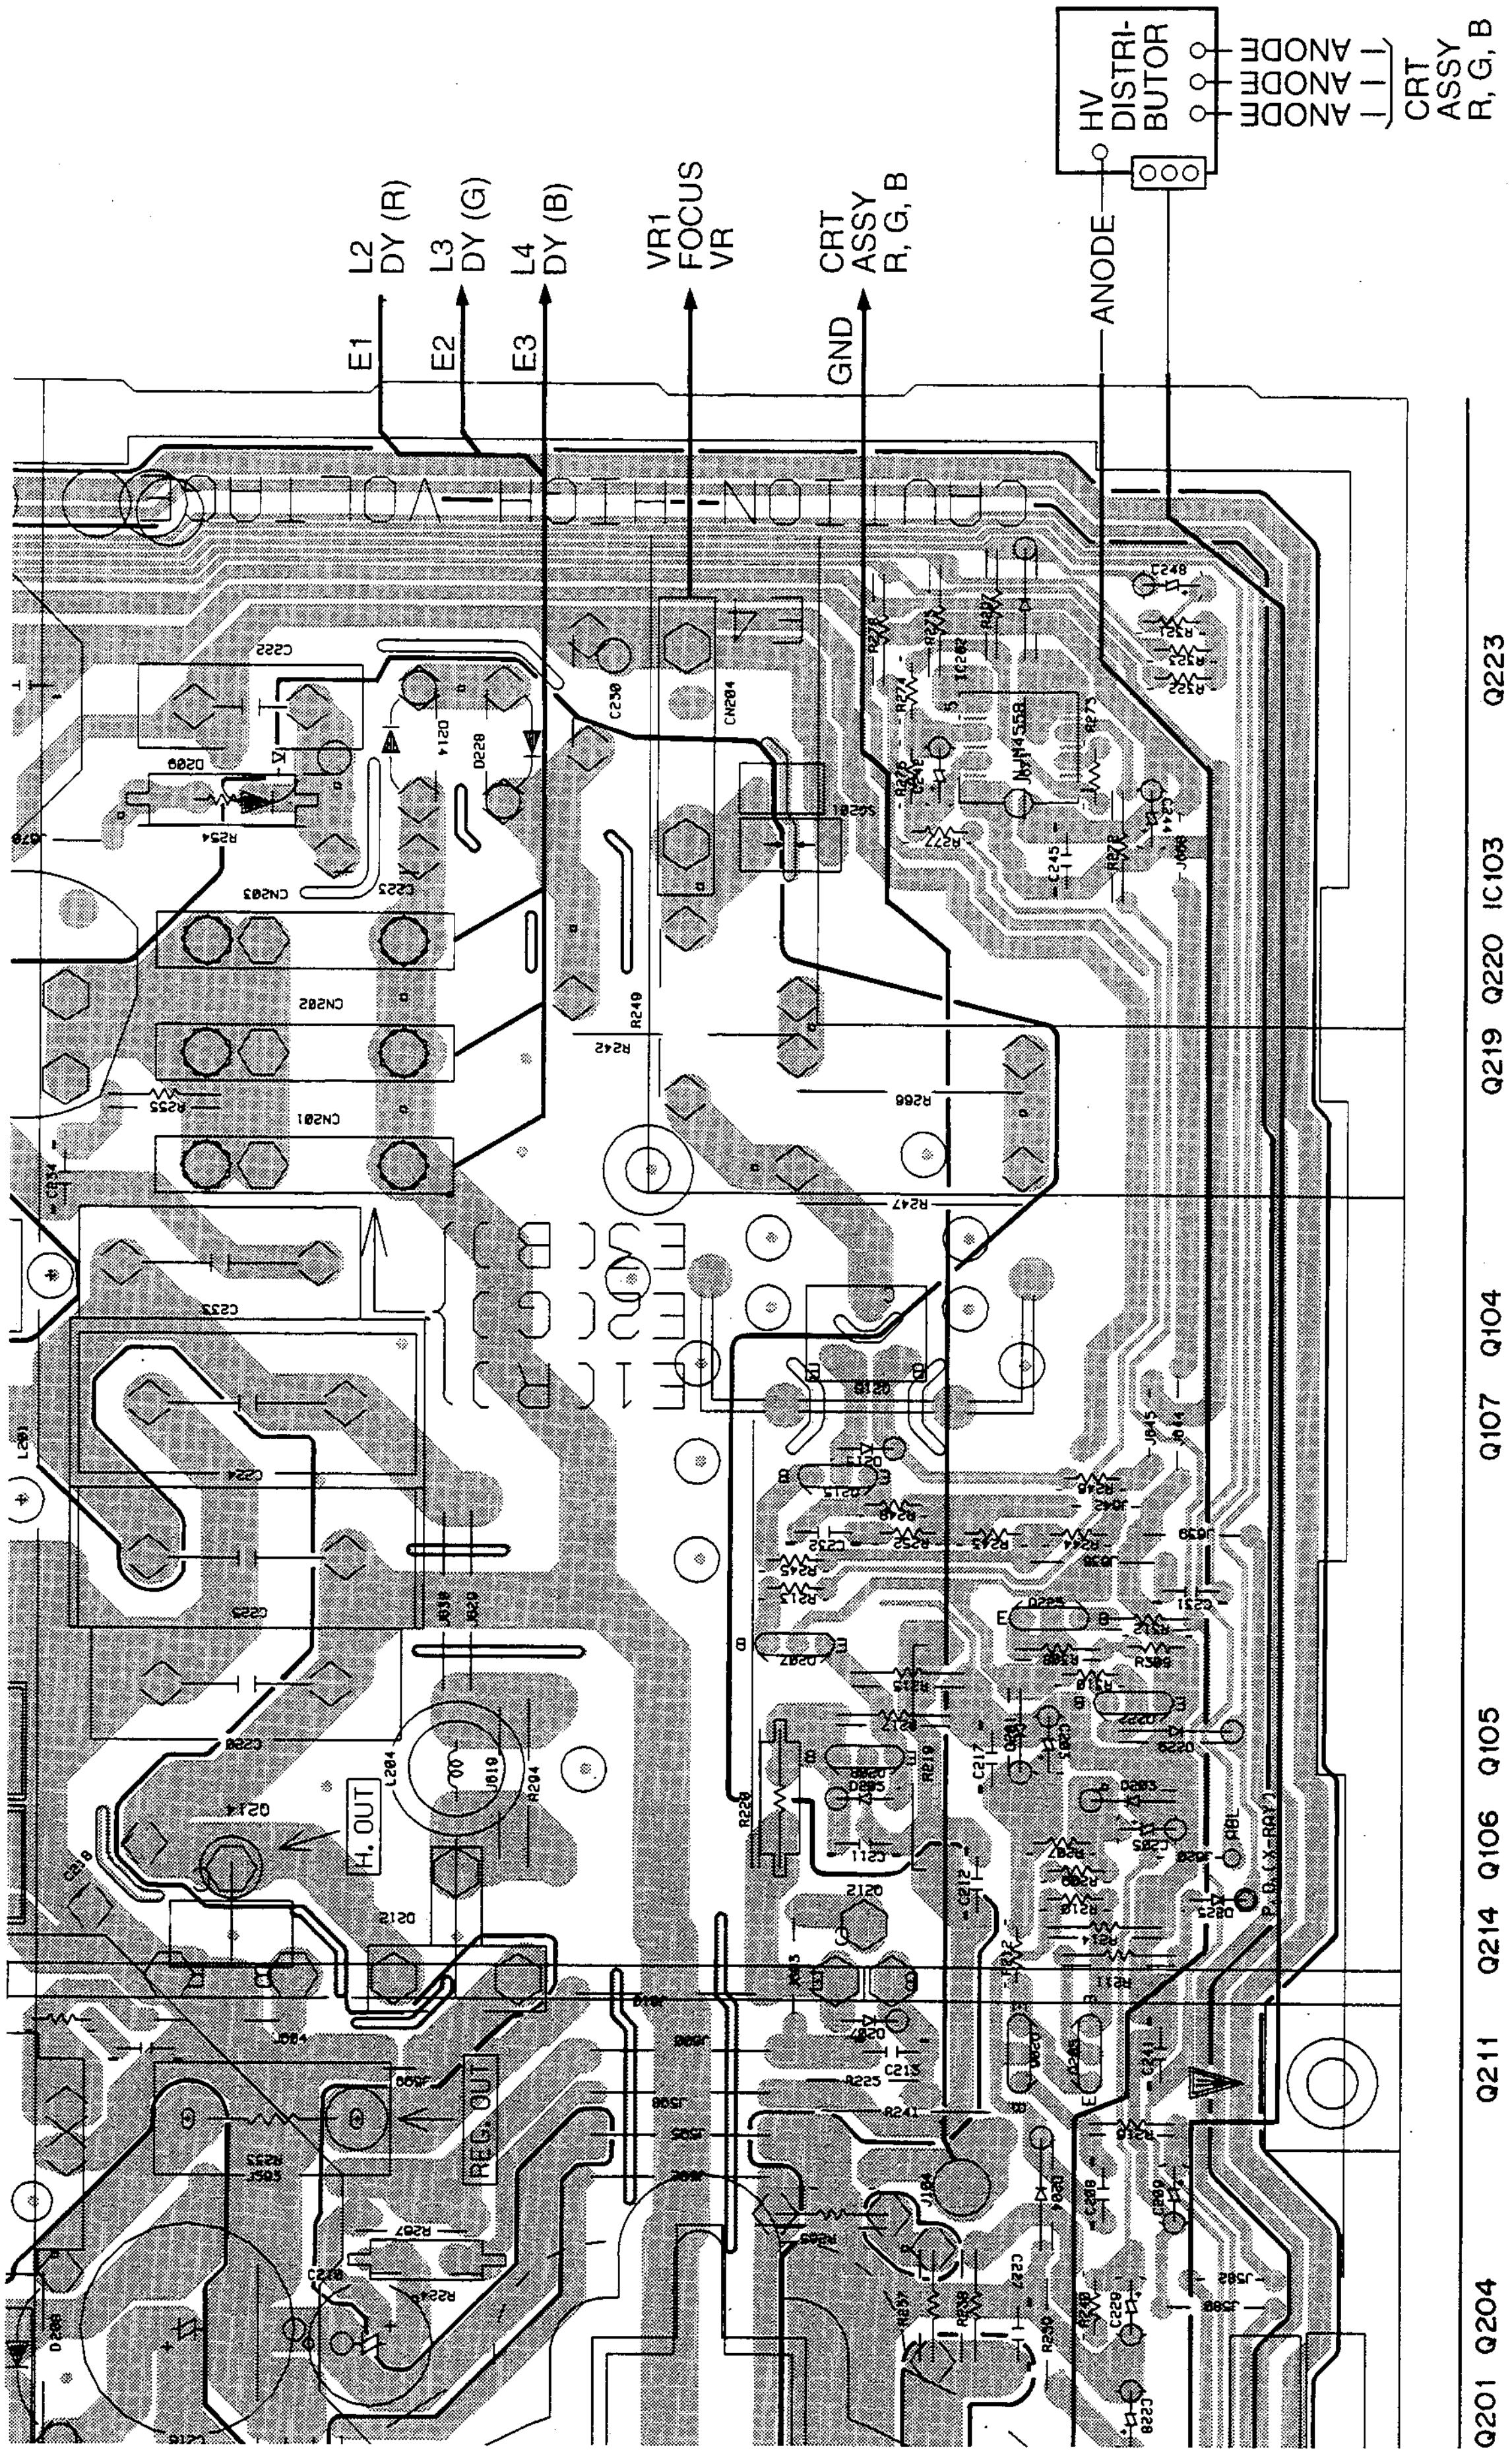
E1
L2
DY (R)
E2
L3
DY (G)
E3
L4
DY (B)
VR1
FOCUS
VR
GND
CRT
ASSY
R, G, B
ANODE
HV
DISTRI-
BUTOR
ANODE
ANODE
ANODE
CRT
ASSY
R, G, B
CAUTION HIGH VOLTAGE
H. OUT
REG. OUT
Q201 Q204
Q211
Q206
Q205
Q214
Q212
Q213
Q209
Q106
Q210
Q208
Q105
Q207
Q222
Q225
Q215
Q107
Q216
Q104
IC201
Q219
Q220
IC103
Q217
Q218
Q224
IC202
Q223

4.7 FRONT CONTROL, INDICATOR, POWER SW AND CONNECTOR A ASSEMBLIES

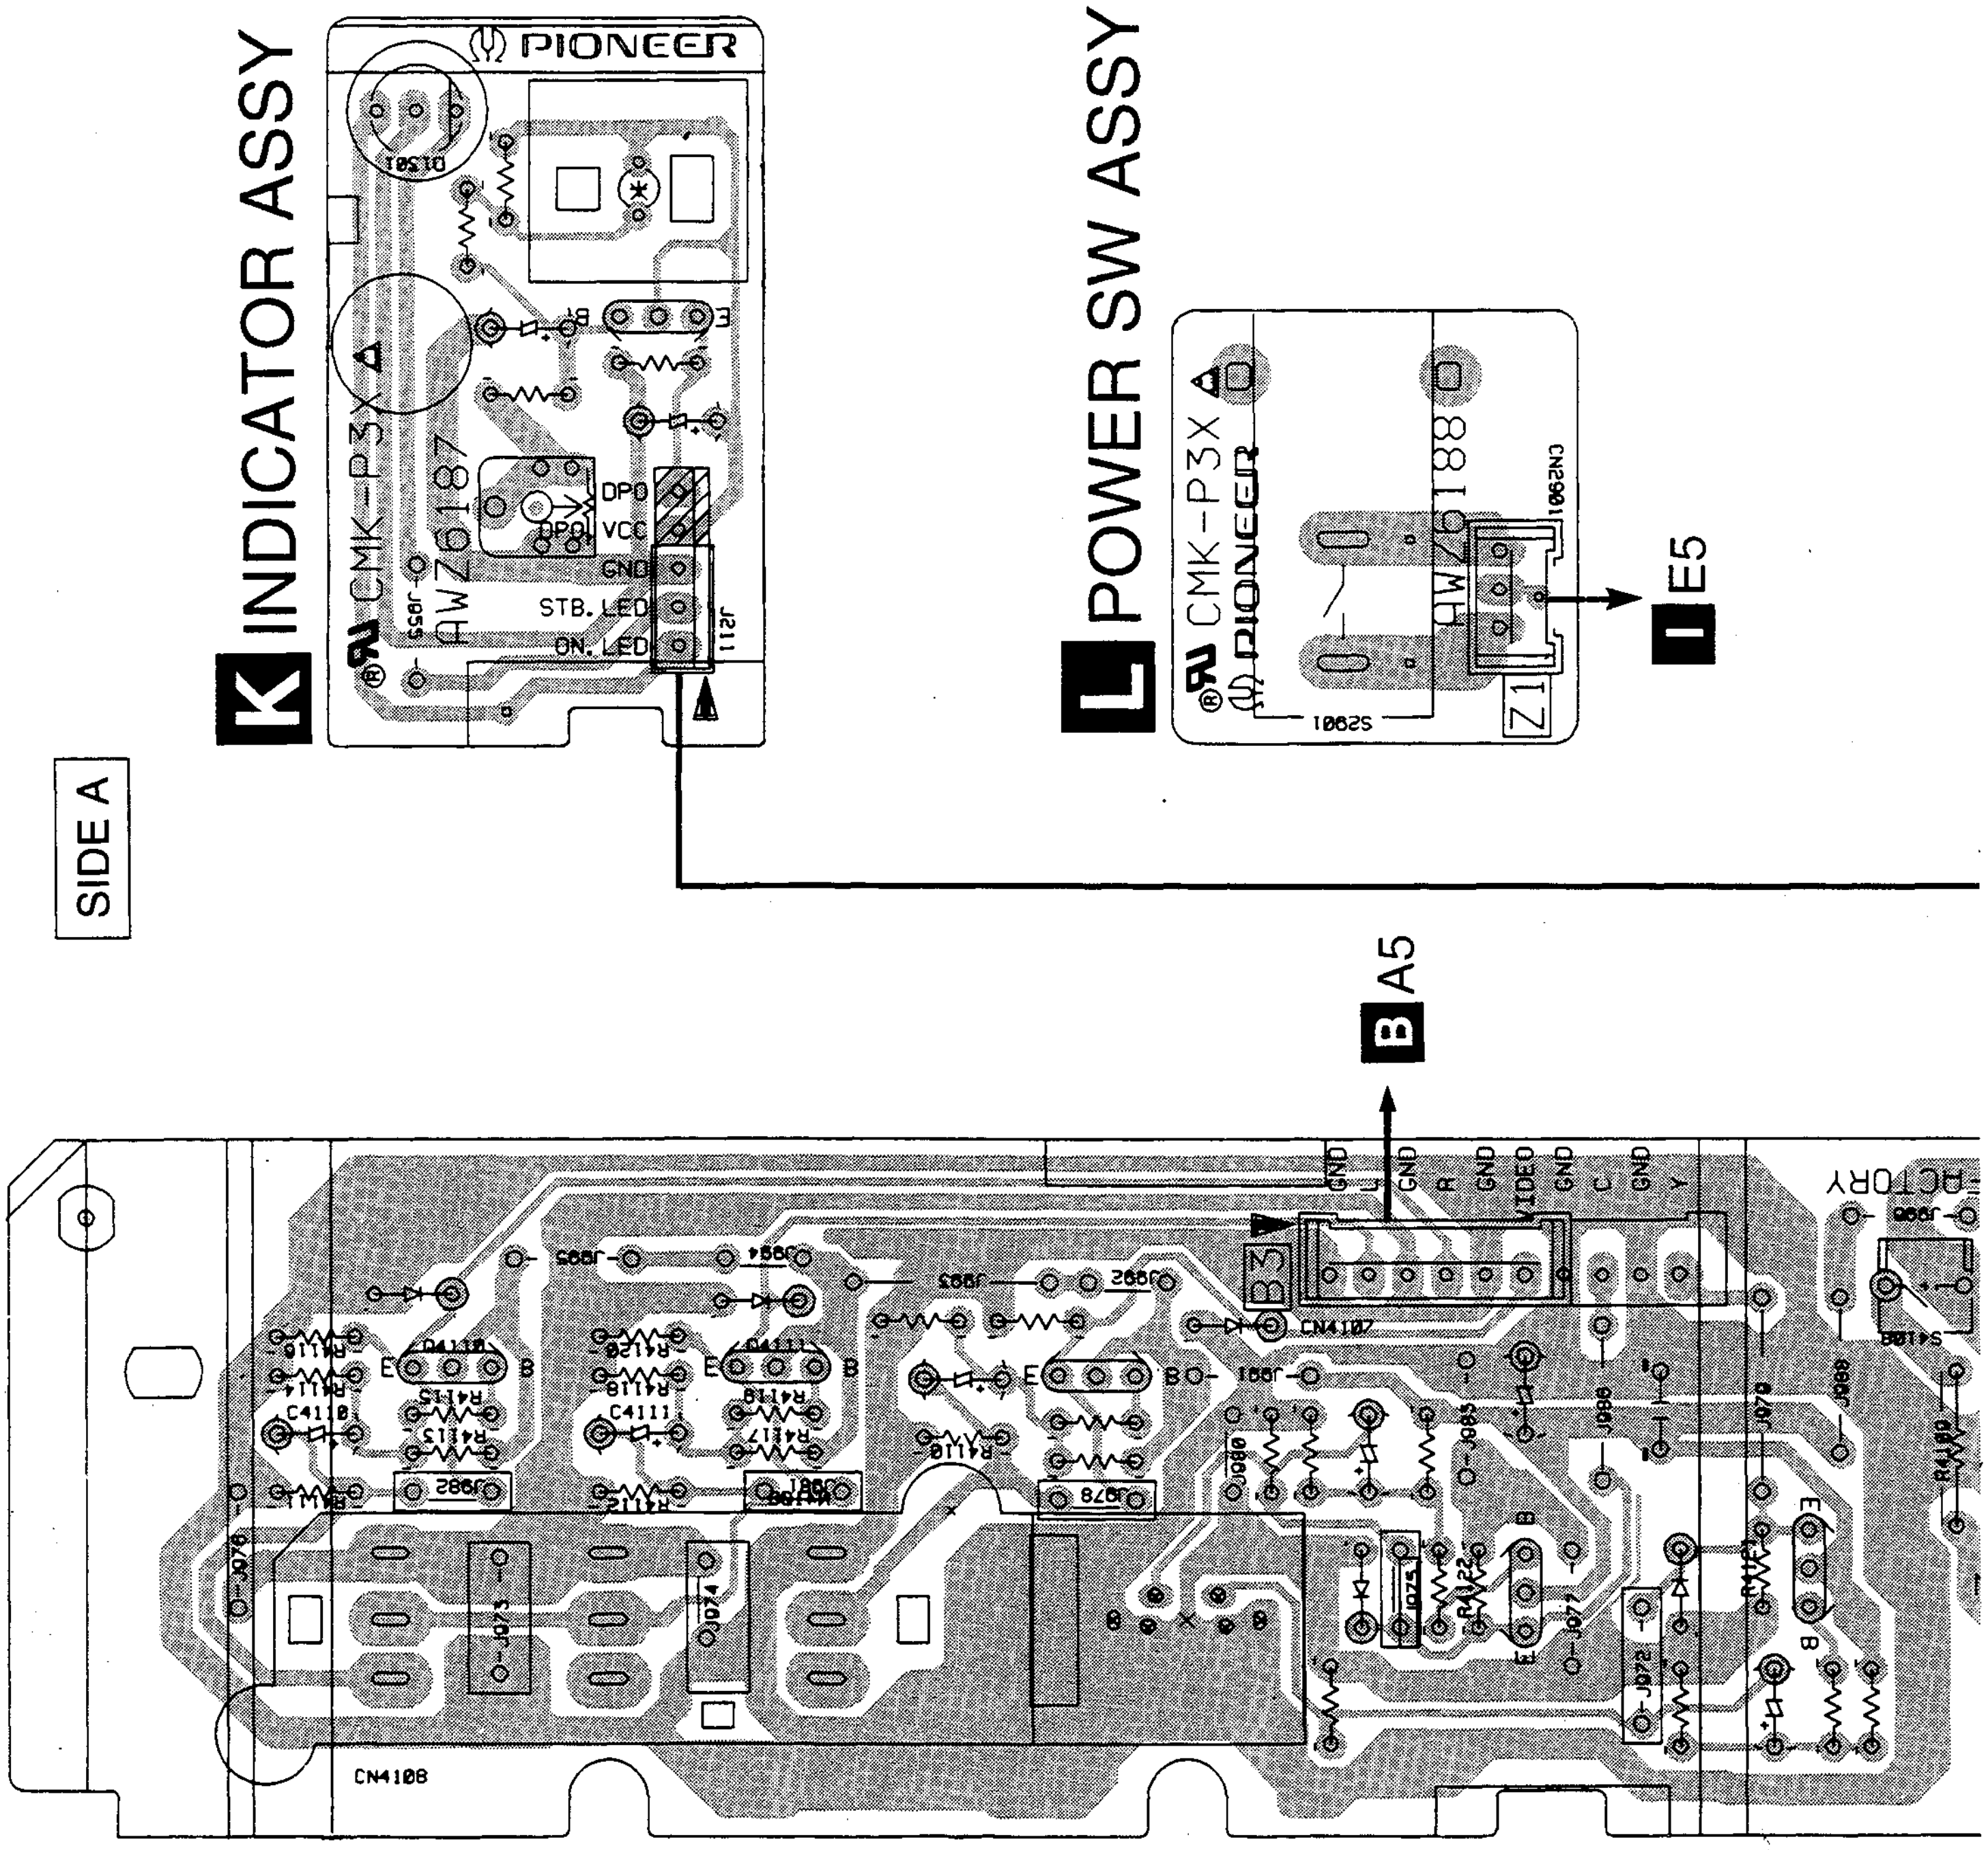
SIDE A
K INDICATOR ASSY
PIONEER
CMK-P3X
AWZ6187
D1501
DPO
VCC
GND
STB. LED
ON. LED
J211
J855
L POWER SW ASSY
CMK-P3X
AWZ6188
PIONEER
CN2901
S2901
Z1
I E5
B A5
GND
L
GND
R
GND
VIDEO
GND
C
GND
Y
B3
CN4107
CN4108
Q4110
Q4111
C4110
C4111
R4116
R4114
R4115
R4120
R4118
R4117
R4119
R4112
R4113
J982
J981
J978
J976
J973
J974
J975
J977
J972
J970
J988
J986
J985
J984
J983
J993
J992
J991
J980
J989
S4108
R4109
R4110
R4122
E
B

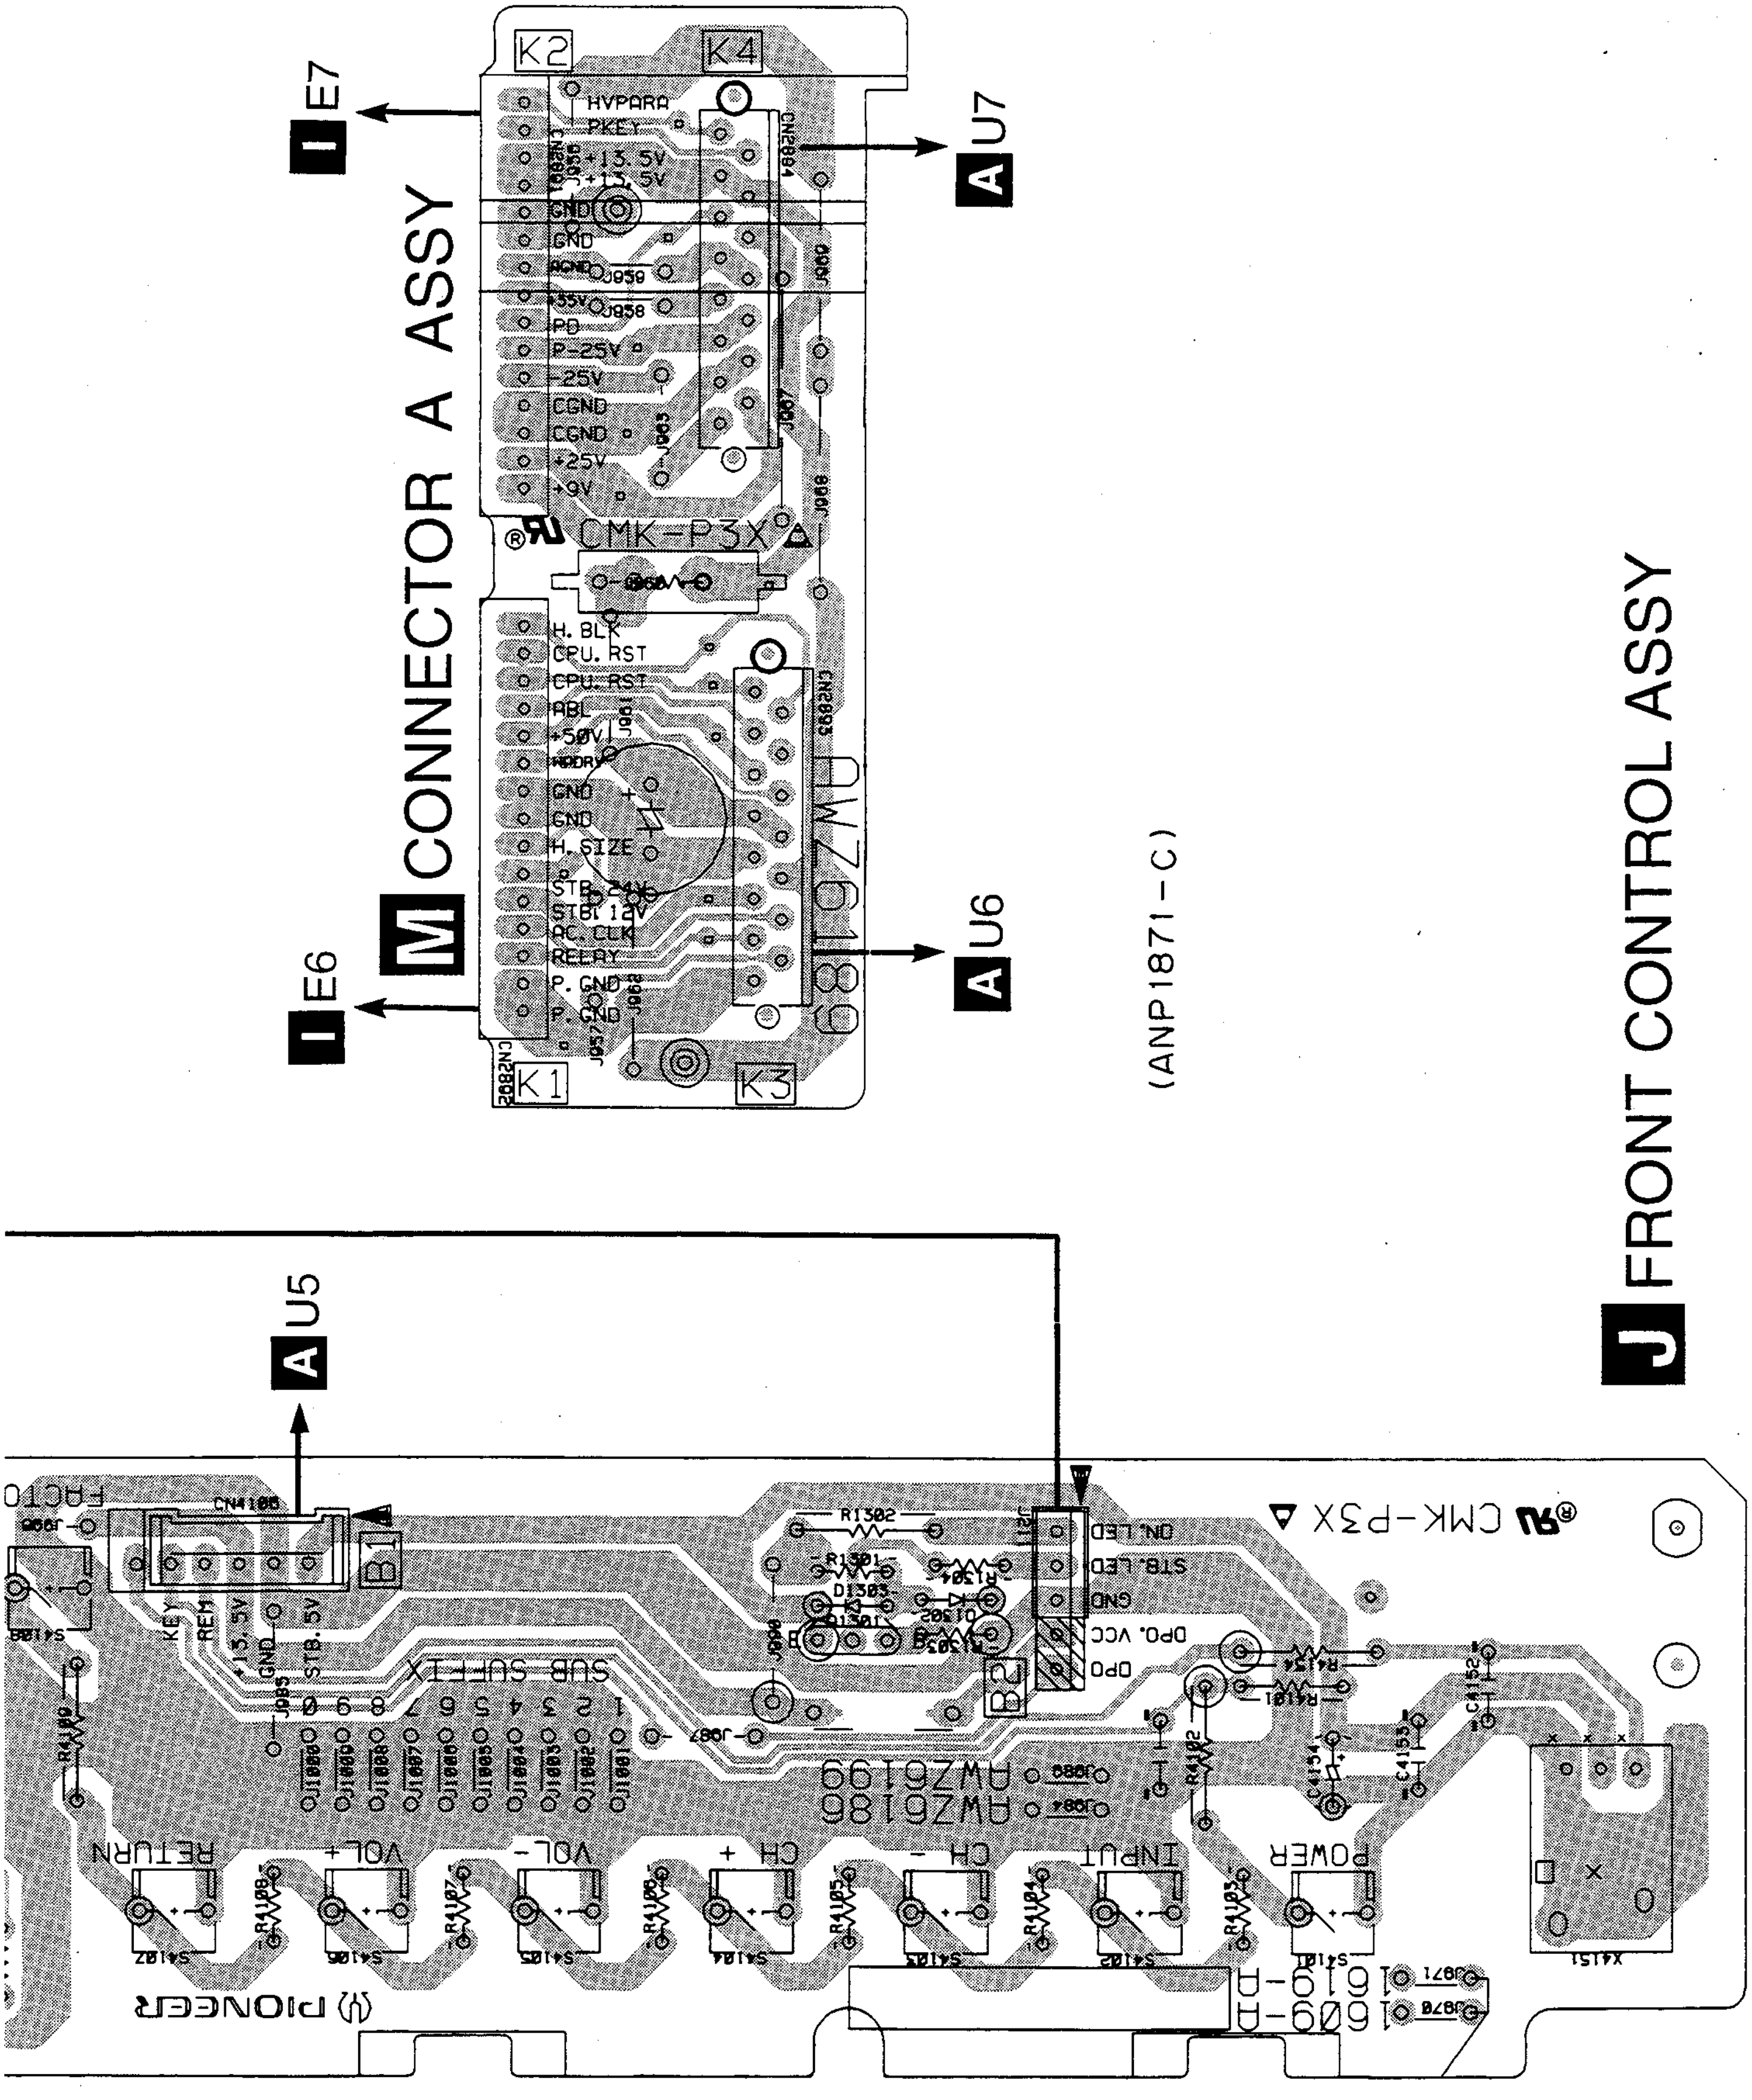
I E7
A U7
I E6
A U6
A U5
K1
K2
K3
K4
CN2804
CN2803
CN2802
CN2801
HVPARA
PKEY
+13.5V
+13.5V
GND
GND
AGND
+35V
PD
P-25V
-25V
CGND
CGND
+25V
+9V
CMK-P3X
H. BLK
CPU. RST
CPU. RST
ABL
+50V
ADDRV
GND
GND
H. SIZE
STB 24V
STB 12V
AC. CLK
RELAY
P. GND
P. GND
AWZ6118
CN4100
KEY
REM
+13.5V
GND
STB.5V
B1
B2
SUB SUFFIX
ON. LED
STB. LED
GND
DPO. VCC
DPO
R1302
R1301
D1303
D1301
R1303
R1304
R4154
R4101
R4102
C4152
C4153
C4154
AWZ6199
AWZ6186
RETURN
VOL+
VOL-
CH+
CH-
INPUT
POWER
S4101
S4102
S4103
S4104
S4105
S4106
S4107
S4108
R4103
R4104
R4105
R4106
R4107
R4108
R4109
X4151
1609-A
1619-A
PIONEER

M CONNECTOR A ASSY

(ANP1871-C)

J FRONT CONTROL ASSY

5. PCB PARTS LIST

NOTES: • *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

  Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

  560 Ω → 56×10^1 → 561 .... RD1/4PU $\boxed{5}\boxed{6}\boxed{1}$ J
  47k Ω → 47×10^3 → 473 .... RD1/4PU $\boxed{4}\boxed{7}\boxed{3}$ J
  0.5 Ω → R50 .... RN2H $\boxed{R}\boxed{5}\boxed{0}$ K
  1 Ω → 1R0 .... RS1P $\boxed{1}\boxed{R}\boxed{0}$ K

  Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

  5.62k Ω → 562×10^1 → 5621 .... RN1/4PC $\boxed{5}\boxed{6}\boxed{2}\boxed{1}$ F
- *Parts marked by ☆ are important parts which relate in X-rays radiation.*
  If any of these parts need to be replaced, always replace with specified parts.
- *Parts marked by × are important parts which relate in X-rays radiation. If a failure occurs in any of these parts, replace the printed circuit board assembly where the relevant part has already been adjusted as a working component. Do not replace the actual part itself. If any part marked by × is replaced, there is danger of being exposed to X-rays.*

LIST OF ASSEMBLIES

Mark	No. Description	Part No.
NSP	TUNER·VIDEO ASSY	AWV1609
	├ TUNER·VIDEO ASSY	AWZ6185
	├ FRONT CONTROL ASSY	AWZ6186
	├ INDICATOR ASSY	AWZ6187
	├ POWER SW ASSY	AWZ6188
	└ CONNECTOR A ASSY	AWZ6189
NSP	AMP ASSY	AWV1611
	├ AMP ASSY	AWZ6190
	├ R CRT AMP ASSY	AWZ6191
	├ G CRT AMP ASSY	AWZ6192
	└ B CRTAMP ASSY	AWZ6193
NSP	AV I/O·CNVR. ASSY	AWV1613
	├ CONVER CONTROL ASSY	AWZ6195
	├ CONNECTOR B ASSY	AWZ6196
	└ AV I/O ASSY	AWZ6197
☆	POWER SUPPLY SERVICE ASSY	AWV1615

A TUNER•VIDEO ASSY

SEMICONDUCTORS

Mark	No. Description	Part No.
	IC902	AT24C04-10PC
	IC4501	CXA1734S
	IC901	PD5395A
	IC903	PST9146
	IC501	TA8845BN
	Q4501, Q4506, Q4513, Q503, Q504	2SA933S
	Q506, Q509-Q511, Q515-Q517	2SA933S
	Q522, Q523, Q534, Q536, Q702	2SA933S
	Q912, Q913, Q920, Q921	2SA933S
	Q4502-Q4505, Q4507, Q4509, Q4512	2SC1740S
	Q501, Q502, Q505, Q507, Q508	2SC1740S
	Q512-Q514, Q518-Q520	2SC1740S
	Q524-Q533, Q535, Q701, Q703	2SC1740S
	Q902-Q910, Q914-Q919, Q924	2SC1740S
	Q931, Q932	2SC1740S
	Q4510, Q521	2SC2235
	Q911	2SD880
	D4501-D4504, D502-D504	HSS104-02
	D511, D512, D529-D535	HSS104-02
	D539, D540, D543-D545	HSS104-02
	D547, D548, D562, D563, D570	HSS104-02
	D572-D579, D901, D902, D916	HSS104-02
	D922, D923, D926-D930	HSS104-02
	D932-D934, D936, D939, D943	HSS104-02
	D947-D954, D957-D960	HSS104-02
	D962, D963, D973, D985, D996	HSS104-02
	D4508, D4509, D509, D510	MTZJ15
	D513-D519, D523-D527	MTZJ15
	D541, D542, D546, D549-D561	MTZJ15
	D564-D569, D571, D909, D921	MTZJ15
	D972, D981	MTZJ15
	D903-D908, D910-D914	MTZJ6.8
	D917-D920, D924, D925	MTZJ6.8
	D937, D938, D940-D942	MTZJ6.8
	D945, D946, D956, D971	MTZJ6.8
	D976, D977, D979, D984	MTZJ6.8
	D992, D993, D995	MTZJ6.8
	D508	RD10ESB2
	D501	RD2.2ESB1
	D4505	RD33ESB3
	D931	RD5.1ESB2
	D4510	RD5.6ESB2
	D505-D507, D520-D522, D528	S5688G
	D536, D537	S5688G

COILS

Mark	No. Description	Part No.
	L501-L503, L704	LAU100J
	L701	LAU101J
	L702	LAU150J
	L4501-L4505, L902-L905	LAU2R2J
	L703	LAU3R9J
	L901	LAU8R2J

CAPACITORS

Mark	No. Description	Part No.
	C4510 (3.3μF, 50V)	ACH1128
	C4504 (10μF, 50V)	ACH1129
	TC901	ACM-020
	C503	CCCCH100D50
	C905	CCCCH270J50
	C4537, C546, C565-C567	CCCSL101J50
	C527, C702, C704	CCCSL121J50
	C949, C950	CCCSL221J50
	C4529, C933, C939, C940, C952	CCCSL470J50
	C544, C703, C933, C939	CCCSL680J50

Mark	No.	Description	Part No.
	C913		CCDSL221J50
	C4502, C4503, C4524, C4527		CEAS100M50
	C4531, C4532, C4538, C4542-C4544		CEAS100M50
	C514, C533, C547, C555, C926		CEAS100M50
	C931, C932		CEAS100M50
	C705, C915, C918, C930		CEAS101M10
	C4517		CEAS101M25
	C524		CEAS102M16
	C4505, C4509, C511, C517, C518		CEAS1R0M50
	C903, C914, C919, C921, C938		CEAS1R0M50
	C557		CEAS221M16
	C506, C512, C548, C551, C552		CEAS2R2M50
	C4520, C4540, C951		CEAS331M16
	C922		CEAS3R3M50
	C508, C515, C519, C522, C531		CEAS470M25
	C537, C550, C559, C562, C568		CEAS470M25
	C927		CEAS470M25
	C523		CEAS471M10
	C4521, C4525		CEAS471M16
	C929		CEAS471M25
	C4501, C4506, C4507, C4514-C4516		CEAS4R7M50
	C4518, C516		CEAS4R7M50
	C910, C911		CEASR10M50
	C4511, C507, C536		CEASR47M50
	C902, C936		CFTXA105J50
	C4508		CFTXA224J50
	C4530, C529, C535, C542, C906		CKCYB102K50
	C545, C701		CKCYB103K50
	C530		CKCYB152K50
	C908. C955		CKCYB222K50
	C526, C528, C543, C956		CKCYB331K50
	C4535, C4536		CKCYB332K50
	C505		CKCYB472K50
	C901		CKCYB561K50
	C4519, C4522, C4523, C4526, C4528		CKCYF103Z50
	C4533, C4539, C4541, C538-C541		CKCYF103Z50
	C570, C907, C909, C916, C917		CKCYF103Z50
	C920, C924, C928		CKCYF103Z50
	C509, C520, C525, C534, C549		CKCYF473Z50
	C556, C560, C569, C904, C925		CKCYF473Z50
	C934		CKCYF473Z50
	C912		CQMA102J50
	C502, C532		CQMA103J50
	C501, C521, C558		CQMA104J50
	C510		CQMA123J50
	C504		CQMA183J50
	C4513		CQMA272J50
	C513		CQMA392J50
	C4512		CQMA473J50
	C553, C554		CQMA683J50

RESISTORS

Mark	No.	Description	Part No.
	R565, R566, R571-R573		RD1/2PM100J
	R567		RD1/2PM150J
	R607		RD1/2PM221J
	R569, R570, R575		RD1/2PM271J
	R4546		RD1/2PM331J
	R657		RD1/2PM6R8J
	R4525		RD1/4LMF122J
	R558		RD1/4LMF220J
	R4514		RN1/4PC4302F
	R4515		RN1/4PC6202F
	R1011, R955		RS1MMF3R9J
	R4545		RS2MMF150J
	R4524		RS2MMF272J
	R559		RS2MMF5R6J
	VR4501	(1kΩ)	ACP1040
		Other Resistors	RD1/4PU☐☐☐J

OTHERS

Mark	No.	Description	Part No.
	DL701	DELAY LINE	ATN1012
		PLUG CORD	ADE-082
	J4501	3P HOUSING WIRE	ADX2240
		SHIELD PLATE	ANK1500
	X901	CERAMIC RESONATOR	ASS1015
	X502	CERAMIC RESONATOR	ASS1019
	X501	CRYSTAL RESONATOR (3.579545MHz)	ASS1091
	CN905	PLUG 5-P	KM250MA5
	CN505	PLUG 9-P	KM250MA9
	CN901	11P SOCKET	KP250NA11
	CN501, CN904	12P SOCKET	KP250NA12
	CN902	13P SOCKET	KP250NA13
	CN506, CN903	15P SOCKET	KP250NA15
		TV FRONT END SYSTEM UNIT	AXF1084
		RF SWITCH	AXF1088

B AV I/O ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC1602, IC1603		BA7644AN
	IC3003		HA11579
	IC3002		HD49420FS
	IC3001		HM53461ZP-12
	IC3004		M5233P
	IC3301		MC14011BF
	IC3201		MC14066BF
	IC3005		NJM7805FA
	IC1601		TC4052BF
	IC3006		TC4538BF
	Q1602-Q1604, Q1610, Q1701, Q1702		2SA1162
	Q1704, Q1710, Q3003, Q3202, Q3208		2SA1162
	Q3211, Q3212, Q3301, Q3307, Q3313		2SA1162
	Q4704, Q4705		2SA1162
	Q1614		2SC2458
	Q1601, Q1605-Q1609, Q1611-Q1613		2SC2712
	Q1615-Q1617, Q1703, Q1706-Q1708		2SC2712
	Q1711, Q1804, Q3001, Q3002		2SC2712
	Q3004-Q3013, Q3201, Q3203-Q3207		2SC2712
	Q3209, Q3210, Q3213, Q3214		2SC2712
	Q3302-Q3305, Q3311, Q3312, Q3314		2SC2712
	Q4701-Q4703, Q4706		2SC2712
	Q3310		2SK208
	D1601-D1610, D1619-D1622		1SS226
	D3001-D3003, D3007, D3201-D3207		1SS226
	D4701, D4702		1SS226
	D1611-D1618, D3004, D3301, D3302		1SS352
	D3005, D3100		RD6.8MB

COILS AND FILTERS

Mark	No.	Description	Part No.
	F3001		ATF1166
	L3008		ATH1046
	L1801		ATX1008
	F3002		CTJ1002
	L3201		LAU100J

Mark	No.	Description	Part No.
	L3004,L3005		LAU101J
	L3302		LAU120J
	L4701-L4704		LAU2R2J
	L3003		LAU680J
	L3301		LAU6R8J
	L3001,L3002,L3006,L3007		LAU8R2J
	F3201		VTF1064

CAPACITORS

Mark	No.	Description	Part No.
	C3020,C3053		CCSQCH101J50
	C3047,C3306		CCSQCH121J50
	C3015,C3016,C3055,C3312,C3315		CCSQCH151J50
	C3069		CCSQCH220J50
	C3307		CCSQCH221J50
	C3037		CCSQCH270J50
	C3067,C3068		CCSQCH271J50
	C3048,C3052		CCSQCH330J50
	C3054		CCSQCH470J50
	C3314		CCSQCH680J50
	C3313		CCSQCH681J50
	C3305		CCSQCH821J50
	C3308		CCSQSL122J50
	C3208		CCSQSL151J50
	C4711		CCSQSL470J50
	C3044		CEANP100M35
	C1601-C1604,C1606-C1609,C3027		CEAS100M50
	C3039,C3051,C3056,C3060,C3066		CEAS100M50
	C3310,C4702-C4704,C4714,C4717		CEAS100M50
	C3012,C3028,C3034,C3040,C3070		CEAS101M10
	C3072,C3074		CEAS101M10
	C1810,C3201,C3203,C3205,C3302		CEAS101M25
	C3304		CEAS101M25
	C1611,C1612,C1614-C1618,C1636		CEAS1R0M50
	C1704		CEAS1R0M50
	C3013,C3014,C3023,C3050		CEAS220M50
	C1619,C1621,C1623,C1629,C1630		CEAS221M16
	C1637,C1641,C3071		CEAS221M16
	C3017		CEAS2R2M50
	C3319		CEAS330M35
	C4710,C4716		CEAS331M16
	C1632,C1634,C1707,C3022,C3206		CEAS470M25
	C3311,C3316,C3318		CEAS470M25
	C1627,C4701,C4708		CEAS471M16
	C3036		CEAS4R7M50
	C3025,C3026		CEASR22M50
	C3018,C3019		CEASR47M50
	C3078		CEHAQ101M10
	C3077		CEHAQ101M25
	C3038,C3041		CEJA1R0M50
	C3064,C3065		CFTXA334J50
	C3309		CKSQYB392K50
	C1703,C3024,C3059,C4707		CKSQYF102Z50
	C1701,C1702,C3006,C3035,C3045		CKSQYF103Z50
	C3083,C3202,C3204,C3303		CKSQYF103Z50
	C1605,C1610,C1620,C1622		CKSQYF104Z50
	C1625,C1626,C1628,C1631,C1640		CKSQYF104Z50
	C1705,C1808,C1809,C3005,C3007		CKSQYF104Z50
	C3009-C3011,C3021,C3029,C3030		CKSQYF104Z50
	C3032,C3033,C3043,C3057,C3058		CKSQYF104Z50
	C3063,C3073,C3075,C3076		CKSQYF104Z50
	C3080-C3082,C3207,C3301,C3317		CKSQYF104Z50
	C4705,C4706,C4709,C4712,C4713		CKSQYF104Z50
	C4715		CKSQYF104Z50
	C3001-C3004,C3042,C3046		CKSQYF223Z50
	C3049		CKSQYF333Z50
	C3061,C3062		CQMA153J50
	C3031		CQMA681J50

RESISTORS

Mark	No.	Description	Part No.
	R1674		RD1/4LMF220J
	R1668		RS1/2S221J
	R3213		RS1MMF560J
	R3068,R3069,R3100		RS2MMF3R9J
	R1699		RS2MMF5R6J
	VR3002	(470Ω)	ACP1039
	VR3001,VR4701	(1kΩ)	ACP1040
	VR3003		VRTS6VS222
	Other Resistors		RS1/10S□□□J

OTHERS

Mark	No.	Description	Part No.
	CN1602	PIN JACK(9P)	AKB1251
	CN1771	PIN JACK 1-P	AKB7042
		HEAT SINK M	ANH-697
	X3001	CRYSTAL RESONATOR (3.579545MHz)	ASS1091
	CN1603	PLUG 6-P	KM250MA6
	CN3002	12P PLUG	KM250NA12L
	CN3003	13P PLUG	KM250NA13L
	CN3001	PLUG 15-P	KM250NA15L
	TV FRONT END SYSTEM UNIT		AXF1084
	SCREW		PBZ30P080FMC

C AMP ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC1402		LA4280-P
	IC1401		M5222L
	IC1403		NJM4558DXP
	IC2604		NJM78M05FA
	IC2603		NJM79M05FA
	IC2601,IC2602		STK392-110
	Q3407		2SA1837
	Q1405,Q1409,Q1429,Q2608-Q2610		2SA933S
	Q3408		2SA933S
	Q2607		2SB950A
	Q1401-Q1404,Q1406,Q1408		2SC1740S
	Q1410,Q1411,Q1428,Q2601-Q2604		2SC1740S
	Q2606,Q2611,Q2612,Q3401-Q3403		2SC1740S
	Q3405,Q3409-Q3411		2SC1740S
	Q3404		2SC2235
	Q3406		2SC4793
	Q2605		2SD1276A
	Q1407		2SK373
	D2614		BR3371XJ30A
	D1405,D1407,D1408,D1411-D1421		HSS104-02
	D1423-D1427,D2613,D2616-D2619		HSS104-02
	D3403,D3404,D3407,D3410		HSS104-02
	D1401-D1404		MTZJ15
	D3408,D3409		MTZJ39
	D1406,D1422		MTZJ5.1
	D1409,D1410		MTZJ6.8
	D2601-D2612,D3405,D3406		S5688G

COILS

Mark	No.	Description	Part No.
	L3401		LAU330J
	L3402		LAU4R7J

CAPACITORS

Mark	No.	Description	Part No.
	C1436		CCCCH100D50
	C2607-C2609, C2618-C2620		CCCCH151J50
	C3417		CCCCH180J50
	C2623-C2628		CCCCH221J50
	C3416		CCCCH390J50
	C1432, C1437		CCCCH470J50
	C1407, C1408		CCCSL101J50
	C1412, C1418, C2639, C2640, C2648		CCCSL151J50
	C3423, C3425		CCCSL221K2H
	C2642		CEANP100M35
	C1401, C1402, C1430, C1441, C3405		CEAS100M50
	C1431, C1443		CEAS101M10
	C2629, C2633, C3412, C3413		CEAS101M25
	C1424		CEAS102M35
	C1440, C1442, C3426, C3427		CEAS1R0M50
	C1406		CEAS221M16
	C3419		CEAS221M25
	C2601, C2602, C2610-C2613		CEAS221M35
	C2621, C2622, C2644, C2645		CEAS221M35
	C1415, C1416		CEAS2R2M50
	C1413, C1417		CEAS330M35
	C1419, C1428		CEAS331M25
	C2630, C2635		CEAS331M6R3
	C1403, C1404, C1409, C1438, C2643		CEAS470M25
	C3401, C3428		CEAS470M25
	C1414		CEAS470M50
	C1420, C1425		CEASR10M50
	C1410, C1411		CEASR47M50
	C3403, C3422		CEHAQ220M2C
	C3409		CEHAQ2R2M2C
	C1434, C2637, C2638, C2641		CKCYB102K50
	C3420, C3421		CKCYB102K50
	C1444, C1445		CKCYB332K50
	C1433, C1435		CKCYB331K50
	C2603-C2606, C2614-C2617		CKCYF103Z50
	C2631, C2632, C2634, C2636		CKCYF103Z50
	C2646, C2647, C2649-C2651, C3402		CKCYF103Z50
	C3410, C3411		CKCYF103Z50
	C1405, C1421, C1423, C1427, C1429		CKCYF473Z50
	C1439		CKCYF473Z50
	C3404, C3418		CKDYE103P2H
	C3406		CQMA103J50
	C3415		CQMA104J50
	C3414		CQMA104K2E
	C3407, C3408		CQMA472K2E

RESISTORS

Mark	No.	Description	Part No.
	R3402		RD1/2LMF331J
	R2654, R2656, R2657, R2659, R2660		RD1/2PM151J
	R2662		RD1/2PM151J
	R1431, R1432		RD1/2PM152J
	R3418, R3419		RD1/2PM183J
	R3424, R3425		RD1/2PM2R2J
	R1406		RD1/4LMF150J
	R1423, R1425		RD1/4LMF2R2J
	R3422, R3423		RD1/4LMF390J
	R3401		RD1/4LMF4R7J
	R3421		RS1MMF102J
	R3411		RS1MMF121J
	R2601, R2602, R2611, R2612		RS1MMF220J
	R2605-R2607, R2615-R2617		RS1MMF2R2J
	R2655, R2658, R2661		RS1MMF470J
	R2637		RS1MMF562J
	R2603, R2604, R2613, R2614		RS1MMFR47J
	R3408, R3431		RS2MMF102J
	R2636, R2652		RS2MMF2R2J
	R1424, R1463, R1464		RS2MMF2R7J
	R2638, R2653		RS2MMF4R7J
	R2634, R2635, R2668-R2670, R2687		RS3LMF120J
	R2651		RS3LMF1R8J
	R2667		RS3LMF2R2J
	R3426		RS3LMF561J
		Other Resistors	RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
		SCREW	ABA1227
		PLATE SPRING	ANG1569
		HEAT SINK M	ANH-697
		AUDIO HEAT SINK	ANH1533
		SCREW	BBZ30P080FCU
	CN2604, CN2605	13P PLUG	KM200IA13
	CN3402	PLUG 3-P	KM250MA3L
	CN3401	PLUG 3-P	KM250MA3LR
	CN1401, CN3403	PLUG 4-P	KM250MA4L
	CN2602	PLUG 6-P	KM250MA6L
	CN2601	PLUG 6-P	KM250MA6LR
	CN2606	L-PLUG(8P)	KM250MA8L
	CN1402	11P PLUG	KM250NA11L
	CN2608	12P PLUG	KM250NA12L
	CN2607	PLUG 15-P	KM250NA15L
		SCREW	PBZ30P080FMC

D CONVER CONTROL ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC2309		CA0005AM
	IC2304-IC2306		NJM4558MD
	IC2307, IC2308		PA0053B
	IC2301-IC2303		PM0011AS
	Q2301, Q2303, Q2305, Q2307, Q2311		2SA1162
	Q2302, Q2304, Q2306, Q2308, Q2312		2SC2712
	D2301, D2303-D2311, D2315		1SS226
	D2318-D2320		1SS226
	D2312		RD15MB
	D2302		RD5.1MB
	D2313, D2316, D2317		RD6.8MB

CAPACITORS

Mark	No.	Description	Part No.
	C2332-C2337, C2345-C2350		CCSQSL101J50
	C2356-C2361		CCSQSL101J50
	C2364		CCSQSL120J50
	C2372, C2373		CCSQSL221J50
	C2366		CCSQSL680J50
	C2324, C2325, C2363, C2370, C2371		CEAS100M50
	C2375		CEAS101M25
	C2301, C2303, C2313, C2376		CEAS1R0M50
	C2316		CEAS1R5M50
	C2378		CEAS220M50
	C2339		CEAS221M16
	C2314, C2380		CEAS330M35
	C2308, C2310, C2319, C2321		CEAS331M6R3
	C2329, C2330, C2341, C2343, C2352		CEAS331M6R3
	C2354, C2382, C2384		CEAS331M6R3
	C2379		CEAS470M25
	C2377		CEASR47M50
	C2338		CFTXA104J50
	C2315		CFTYA184J50

Mark	No.	Description	Part No.
	C2317, C2323		CFTYA224J50
	C2306, C2307, C2309, C2318, C2320		CKSQYF104Z50
	C2322, C2326-C2328, C2331, C2340		CKSQYF104Z50
	C2342, C2344, C2351, C2353, C2355		CKSQYF104Z50
	C2362, C2365, C2367-C2369, C2374		CKSQYF104Z50
	C2381, C2383, C2385-C2388		CKSQYF104Z50
	C2305, C2312		CQMA102J50
	C2302, C2304		CQMA471J50
	C2311		CQPA152J2A

RESISTORS

Mark	No.	Description	Part No.
	All Resistors		RS1/10S□□□J

OTHERS

Mark	No.	Description	Part No.
	CN2301, CN2302	CABLE HOLDER	AKT1011

E CONNECTOR B ASSY

OTHERS

Mark	No.	Description	Part No.
	CN2303, CN2304	CABLE HOLDER	AKT1011
	CN2305, CN2306	13P SOCKET	KP200IA13L

F R CRT AMP ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	Q2701		2SC3271F
	D2701		HSS104-02

COILS

Mark	No.	Description	Part No.
	L2703		LAU101J
	L2701, L2702		LAU470J

CAPACITORS

Mark	No.	Description	Part No.
	C2704	(1000pF, 2kV)	ACG1001
	C2701		CEAS101M25
	C2702		CKCYB681K50

RESISTORS

Mark	No.	Description	Part No.
	R2705	(47Ω, 1/2W)	ACN-225
	R2702	(1kΩ, 1/2W)	ACN1006
⚠	R2703, R2704		RS3LMF392J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	SG2702	SPARK GAP	AEX-019
	SG2701	SPARK GAP	AEX1024
	CN2701	CRT SOCKET	AKG1005
	HEAT SINK M		ANH1541
	CN2702	PLUG 3-P	KM250MA3R
	SCREW		PMB30P100FMC

G G CRT AMP ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	Q2731		2SC3271F
	D2731		HSS104-02

COILS

Mark	No.	Description	Part No.
	L2733		LAU101J
	L2731, L2732		LAU470J

CAPACITORS

Mark	No.	Description	Part No.
	C2734	(1000pF, 2kV)	ACG1001
	C2733	(4.7μF, 250V)	ACH1283
	C2731		CEAS101M25
	C2732		CKCYB681K50

RESISTORS

Mark	No.	Description	Part No.
	R2735	(47Ω, 1/2W)	ACN-225
	R2732	(1kΩ, 1/2W)	ACN1006
⚠	R2733, R2734		RS3LMF392J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	SG2732	SPARK GAP	AEX-019
	SG2731	SPARK GAP	AEX1024
	J2, J3	LEAD WITH 4P HOUSING	ADX2271
	CN2731	CRT SOCKET	AKG1005
	HEAT SINK M		ANH1541
	CN2732	PLUG 3-P	KM250MA3
	SCREW		PMB30P100FMC

H B CRT AMP ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	Q2761		2SC3271F
	D2761		HSS104-02

COILS

Mark	No.	Description	Part No.
	L2763		LAU101J
	L2761, L2762		LAU470J

CAPACITORS

Mark	No.	Description	Part No.
	C2764	(1000pF, 2kV)	ACG1001
	C2761		CEAS101M25
	C2762		CKCYB681K50

RESISTORS

Mark	No.	Description	Part No.
	R2765	(47Ω, 1/2W)	ACN-225
	R2762	(1kΩ, 1/2W)	ACN1006
⚠	R2763, R2764		RS3LMF392J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	SG2762	SPARK GAP	AEX-019
	SG2761	SPARK GAP	AEX1024
	CN2761	CRT SOCKET	AKG1005
	HEAT SINK M		ANH1541
	CN2762	PLUG 3-P	KM250MA3B
	CN2763	PLUG 5-P	KM250MA5
	SCREW		PMB30P100FMC

I POWER SUPPLY SERVICE ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
⚠	IC101		AN8029
×	IC201, IC202		NJM4558DXP
	IC103		NJM7809FA
	IC102, IC105		PC817CD
	Q201, Q204		2SA1145
×	Q205, Q206		
	Q107, Q116		2SA933S
	Q209, Q210, Q217, Q224		2SA933S
×	Q101, Q106, Q114, Q115, Q207		2SC1740S
	Q215, Q218-Q220, Q223		2SC1740S
×	Q103, Q208		2SC2705
	Q211		2SC3332
	Q216		2SC4686A
⚠	Q214		2SC5299
	Q212		2SD1276A
	Q104, Q105, Q213		2SD2399

Mark	No.	Description	Part No.
⚠	Q113		2SK1938
	D112, D192, D193		10DF2
	D199		BR3371XJ30A
×	D211		ERA22-02
⚠	D209		ERB06-15
	D210, D214, D228		ERB06-15
	D208		ERB93-02L3
	D116, D136		ERC90M-02
	D115		ERD29-06J
⚠	D212		ESC021M-15
	D113, D122, D137-D142		HSS104-02
	D144-D146, D149, D194, D201		HSS104-02
	D205, D207, D215-D217		HSS104-02
	D219-D222, D224-D227		HSS104-02
	D119		HZS18-1L
	D106, D118, D121		HZS6B1L
	D114		HZS6C2L
	D101		LN6SB60-4000
	D150		MA723
	D123		MTZJ12
×	D204		
	D109, D110, D131		MTZJ20
	D111		MTZJ24
	D124-D127, D190		MTZJ5.1
	D117		RD5.1ESB1
⚠×	D203		
	D223		RD5.1ESB1
	D102-D105		S5688G

COILS

Mark	No.	Description	Part No.
	L111, L112		ATF1183
	L104, L107-L110, L204		ATH-059
⚠	L201		ATL1131
⚠	L203		ATL1132
	L113, L120		ATX1021
	L202		LTA272J

TRANSFORMERS

Mark	No.	Description	Part No.
⚠	T101		ATK1107
	T102		ATT1272
⚠	T201		ATK1045
⚠×	T202		

RELAYS

Mark	No.	Description	Part No.
	RY102		ASR1036
⚠	RY101		BSR1009

CAPACITORS

Mark	No.	Description	Part No.
	C121-C124	(4700pF, 250V)	ACE1105
⚠	C127, C128	(0.22µF, 250V)	ACE1107
	C132	(100pF, 2kV)	ACG-032
	C118, C119	(0.01µF, 250V)	ACG-501
	C222	(1500pF, 2kV)	ACG1007
	C106	(3300pF, 2kV)	ACG1008
	C223	(270pF, 2kV)	ACG1010
	C218	(680pF, 2kV)	ACG1024
	C230	(4700pF, 2kV)	ACG1028
	C105, C107	(2200pF, 2kV)	ACG1046
	C216	(10µF, 160V)	ACH1117
	C115, C129	(470µF, 200V)	ACH1147
	C114	(820µF, 200V)	ACH1148
	C152, C156, C202, C211, C213		CCCSL101K2H
	C133, C150		CCCSL221K2H
	C243		CCCSL271K2H
	C219, C238, C239, C242		CEAS100M50
	C246		CEAS1R0M50

Mark	No.	Description	Part No.
	C229		CEAS4R7M50
	C248		CEASR10M50
	C210		CEHAQ100M2C
	C137, C138, C151, C153, C165		CEHAQ100M50
	C207		CEHAQ100M50
	C141, C143, C204		CEHAQ101M16
	C113		CEHAQ101M50
	C101		CEHAQ102M25
	C111, C126, C136		CEHAQ1R0M50
	C221		CEHAQ220M2C
	C228		CEHAQ220M50
	C205, C209		CEHAQ221M10
	C139, C203		CEHAQ221M16
	C144, C145, C149		CEHAQ222M35
	C215		CEHAQ2R2M50
	C146		CEHAQ331M35
	C163, C164, C170		CEHAQ470M25
	C157		CEHAQ4R7M2A
	C225		CFPA103J3C
	C224		CFPA153J3C
	C220		CFPA562J3C
	C233		CFPMA564J2E
	C226		CFPMA824J2E
	C231		CFTYA105J50
	C240		CKCYB102K50
	C201, C208, C217		CKCYB103K50
	C212, C214, C234		CKCYB222K2H
	C241, C247		CKCYB222K50
	C120		CKCYB471K50
	C135		CKCYB681K50
	C102		CKCYF103Z50
	C134, C140, C142, C147, C148		CKCYF473Z50
	C206, C227		CKCYF473Z50
	C130		CKDYE103P2H
	C131		CKDYF103Z50
	C125, C237		CQMA103J50
	C108, C110		CQMA182J50
	C235		CQMA223J50
	C171		CQMA333J50
	C109		CQMA473J50
	C232		CQMA683J50

RESISTORS

Mark	No.	Description	Part No.
	R241	(47Ω, 1/2W)	ACN-225
	R159	(1MΩ, 1/2W)	ACN1008
	R249	(33kΩ, 1/2W)	ACN1011
	R101, R102, R233	(1Ω, 5W)	ACN1032
⚠	R268	(1Ω, 5W)	ACN1032
	R160	(2.2MΩ, 1/2W)	BCN1022
	R113		RD1/2LMF100J
	R107, R112		RD1/2LMF220J
	R224		RD1/2LMF222J
	R239		RD1/2LMF562J
	R238		RD1/2PM122J
×	R215		RD1/2PM361J
	R255		RD1/2PM561J
⚠	R231		RD1/4LMF221J
	R236		RD1/4LMF2R2J
⚠	R288		RD1/4LMF3R9J
⚠	R267		RD1/4LMF470J
	R225		RD1/4LMF471J
	R115		RD1/4LMF681J
	R237, R265		RN1/2PC3902F

Mark	No.	Description	Part No.
	R123,R124		RN1/4PC1603F
	R133		RN1/4PC2101F
	R132		RN1/4PC2431F
	R125		RN1/4PC3601F
	R270		RN1/4PC7502F
	R235		RS1LMF220J
	R163,R164		RS1MMF333J
	R116		RS1MMF473J
×	R220		
	R177		RS1MMF820J
	R109,R110		RS1MMFR22J
	R294		RS2LMF100J
	R121		RS2LMF223J
	R141,R188		RS2MMF100J
	R254		RS2MMF153J
	R134,R199		RS2MMF1R2J
	R242,R247,R266		RS3LMF104J
	R219		RS3LMF682J
	R189		RS3LMFR68J
	R161,R162,R179		RT10PZ120K
	R140		RT10PZ1R5K
	R230		RT5PZ470K
×	R207		
×	R209		
×	R214		
×	R215		
×	R212		
×	R213		
×	R210		
×	R236		
×	R272		
×	R273		
×	R274		
×	R275		
×	R276		
×	R277		
×	R297		
×	R216		
×	R217		
×	R218		
×	R250		
×	R251		
×	R270		
×	R271		
×	VR201	(1kΩ)	
×	VR202	(22kΩ)	
	VR102		VRTS6VS102
		Other Resistors	RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	SG201	SPARK GAP	AEX1024
	J27	HV RETURN WIRE	ADX2338
	J26	HV CABLE	ADY1032
		NYLON BINDER	AEC-093
	CN201-CN204	PLUG 3-P	AKM1055
	CN101	PLUG 2-P	AKM1130
	H101-H104,H151-H154		AKR1003
		HEAT SINK M	ANH-697
		HEAT SINK	ANH-880
		HEAT SINK B	ANH1021
		HEAT SINK	ANH1371
		SW HEAT SINK	ANH1505
⚠ NSP		HV DISTRIBUTOR	AXW1046

Mark	No.	Description	Part No.
		SCREW	BBZ30P080FCU
		SCREW	BBZ30P100FZK
	CN103,CN104	15P PLUG	KM200IA15
	CN105	PLUG 4-P	KM250MA4
	CN205	PLUG 7-P	KM250MA7
		SCREW	PBH30P120FNI
		SCREW	PBZ30P080FMC
		SCREW	VPZ40P100FMC
⚠	FU102	FUSE (500mA/125V)	AEK1010
⚠	FU105	FUSE (4A/125V)	REK1082
⚠	FU104	FUSE (6.3A/125V)	REK1085
⚠	FU101	FUSE (8A/125V)	REK1086

J FRONT CONTROL ASSY

SEMICONDUCTORS

No.	Description	Part No.
Q1301		2SA933S
Q4110,Q4111		2SC1740S
D1302,D1303		HSS104-02

SWITCHES

No.	Description	Part No.
S4101-S4108		VSG1009

CAPACITORS

No.	Description	Part No.
C4152		CCCSL121J50
C4154		CEAS101M10
C4110,C4111		CEJA1R0M50
C4153		CKCYF103Z50

RESISTORS

No.	Description	Part No.
R1302		RD1/2PMF561J
	Other Resistors	RD1/4PU□□□J

OTHERS

No.	Description	Part No.
CN4108	PIN JACK(3P)	AKB1250
CN4106	PLUG 5-P	KM250MA5
CN4107	PLUG 6-P	KM250MA6

K INDICATOR ASSY

SEMICONDUCTOR

No.	Description	Part No.
D1301		AEL1152

L POWER SW ASSY

SWITCH

No.	Description	Part No.
S2901		ASG1083

OTHERS

No.	Description	Part No.
CN2901	PLUG 3-P	KM250MA3

M CONNECTOR A ASSY

OTHERS

No.	Description	Part No.
CN2891,CN2892	15P SOCKET	KP200IA15L

6. ADJUSTMENT

■ Key Indication of the Remote Control Unit

← CH –   CH + →

GV (Green, Vertical) ↔ GH (Green, Horizontal) ↔ BV (Blue, Vertical)

RH (Red, Horizontal) ↔ RV (Red, Vertical) ↔ BH (Blue, Horizontal)

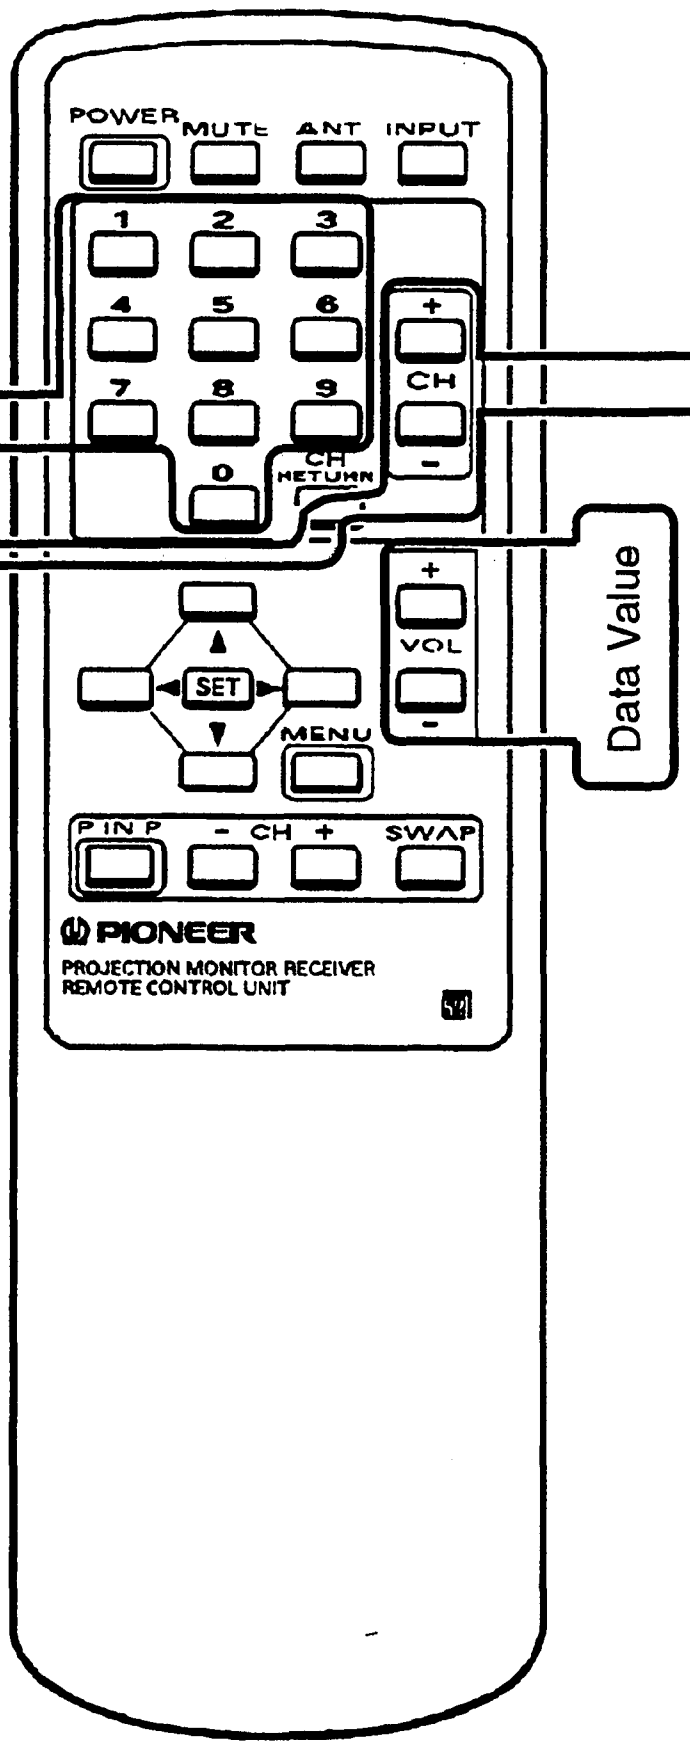
POWER
MUTE
ANT
INPUT
1
2
3
4
5
6
7
8
9
0
CH RETURN
+
CH
–
+
VOL
–
SET
MENU
PinP
– CH +
SWAP
PIONEER
PROJECTION MONITOR RECEIVER
REMOTE CONTROL UNIT
Data Value

• Adjustment Items

Adjustment RANGE	Adjustment OFFSET	Adjustment Name	Numeric Keys	Adjustment Items	GH	GV	RH	RV	BH	BV
/	○	CUT-R	0	STATIC	○	○	○	○	○	○
○	/	VOL0								
○	/	Color	1	SKEW	○	○	○	○	○	○
○	/	Tint	2	BOW	○	○	○	○	○	○
				4TH BOW	○	/	○	/	○	/
○	○	Contrast	3	SUB KEY	○	○	○	○	○	○
○	○	Bright	4	KEY	○	○	○	○	○	○
				MID KEY	/	○	/	○	/	○
○	○	Sharpness	5	MS PIN	○	○	○	○	○	○
				SUB PIN	○	/	○	/	○	/
				4S PIN	○	/	○	/	○	/
				SC PIN	/	○	/	○	/	○
/	/	/	6	PIN	○	○	○	○	○	○
				MID PIN	○	○	○	○	○	○
				4TH PIN	○	○	○	○	○	○
○	/	VOL20	7	LIN	○	○	○	○	○	○
/	/	/		4TH LIN	○	/	○	/	○	/
○	/	VOL30	8	SIZE	○	○	○	○	○	○
/	○	DRV-G								
○	/	STEREO WIDE ON / OFF	9	SUB LIN	○	○	○	○	○	○
/	○	DRV-B								

VR : Adjust GH, GV with semifixed VR

OFFSET → CH + : CUT-G
CONVER → CH – : CUT-B

(To output Red, Green and Blue separately)

TV : To output Red ON/OFF
LD : To output Green ON/OFF
VIDEO1 : To output Blue ON/OFF

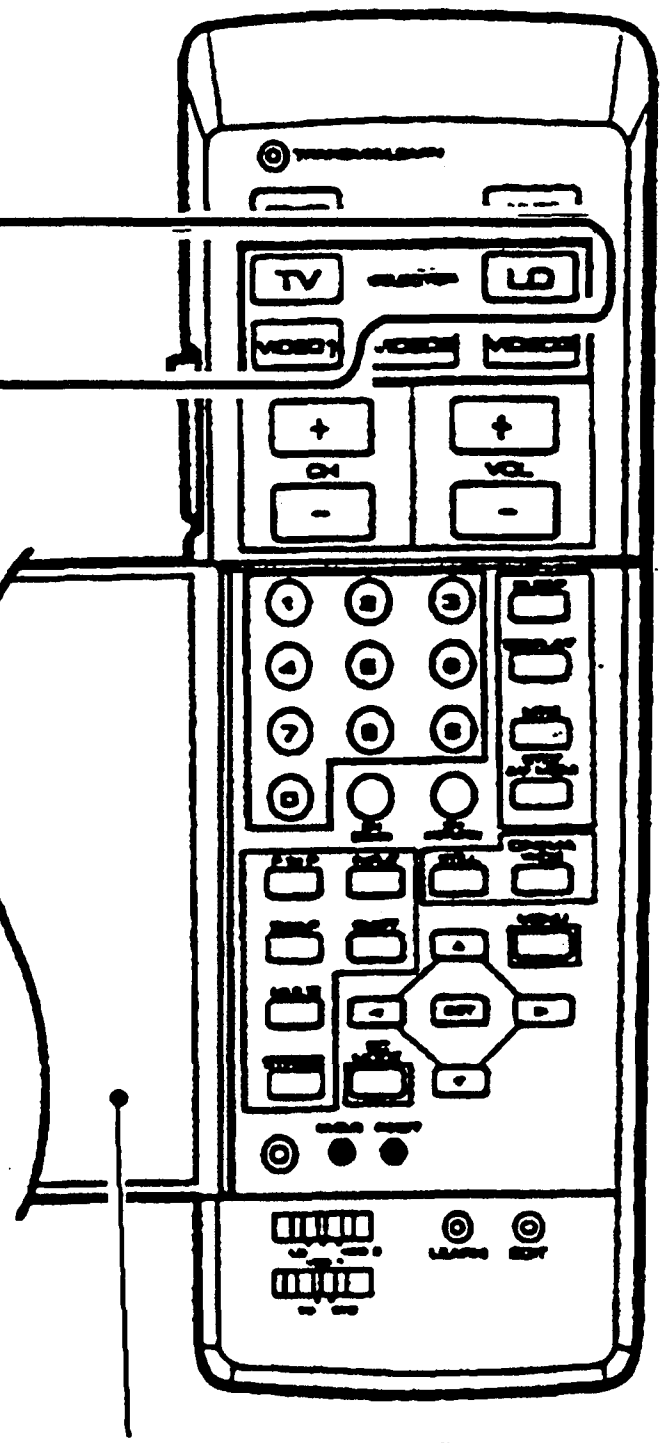
TV
LD
VIDEO1
+
CH
–
+
VOL
–

(The upper cover is opened)

■ Jigs and Measuring Instruments

 Remote control unit AXD1429 (CU-SD103)	 Remote control unit for servicing AXD1352 (CU-SD076)	 ⊖ Screwdriver	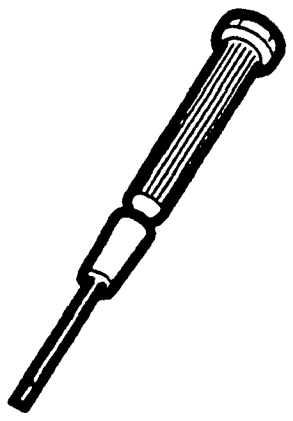 ⊖ Adjustment screwdriver
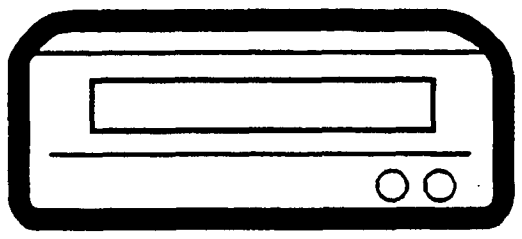 Color bar generator	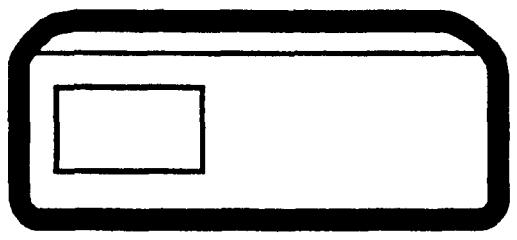 D. DC Voltmeter	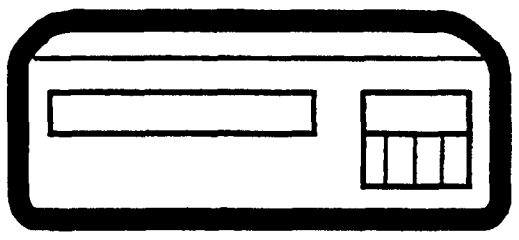 LD Player	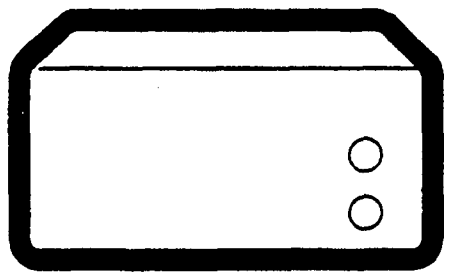 Monoscope
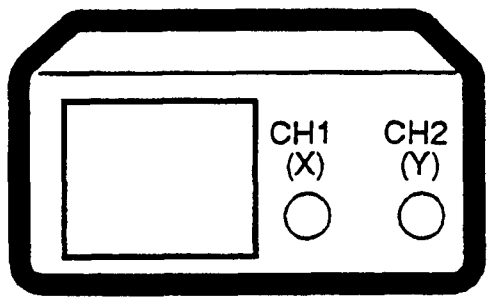 Dual-trace oscilloscope	 Frequency counter		

■ Assembly Adjustment Location and Items

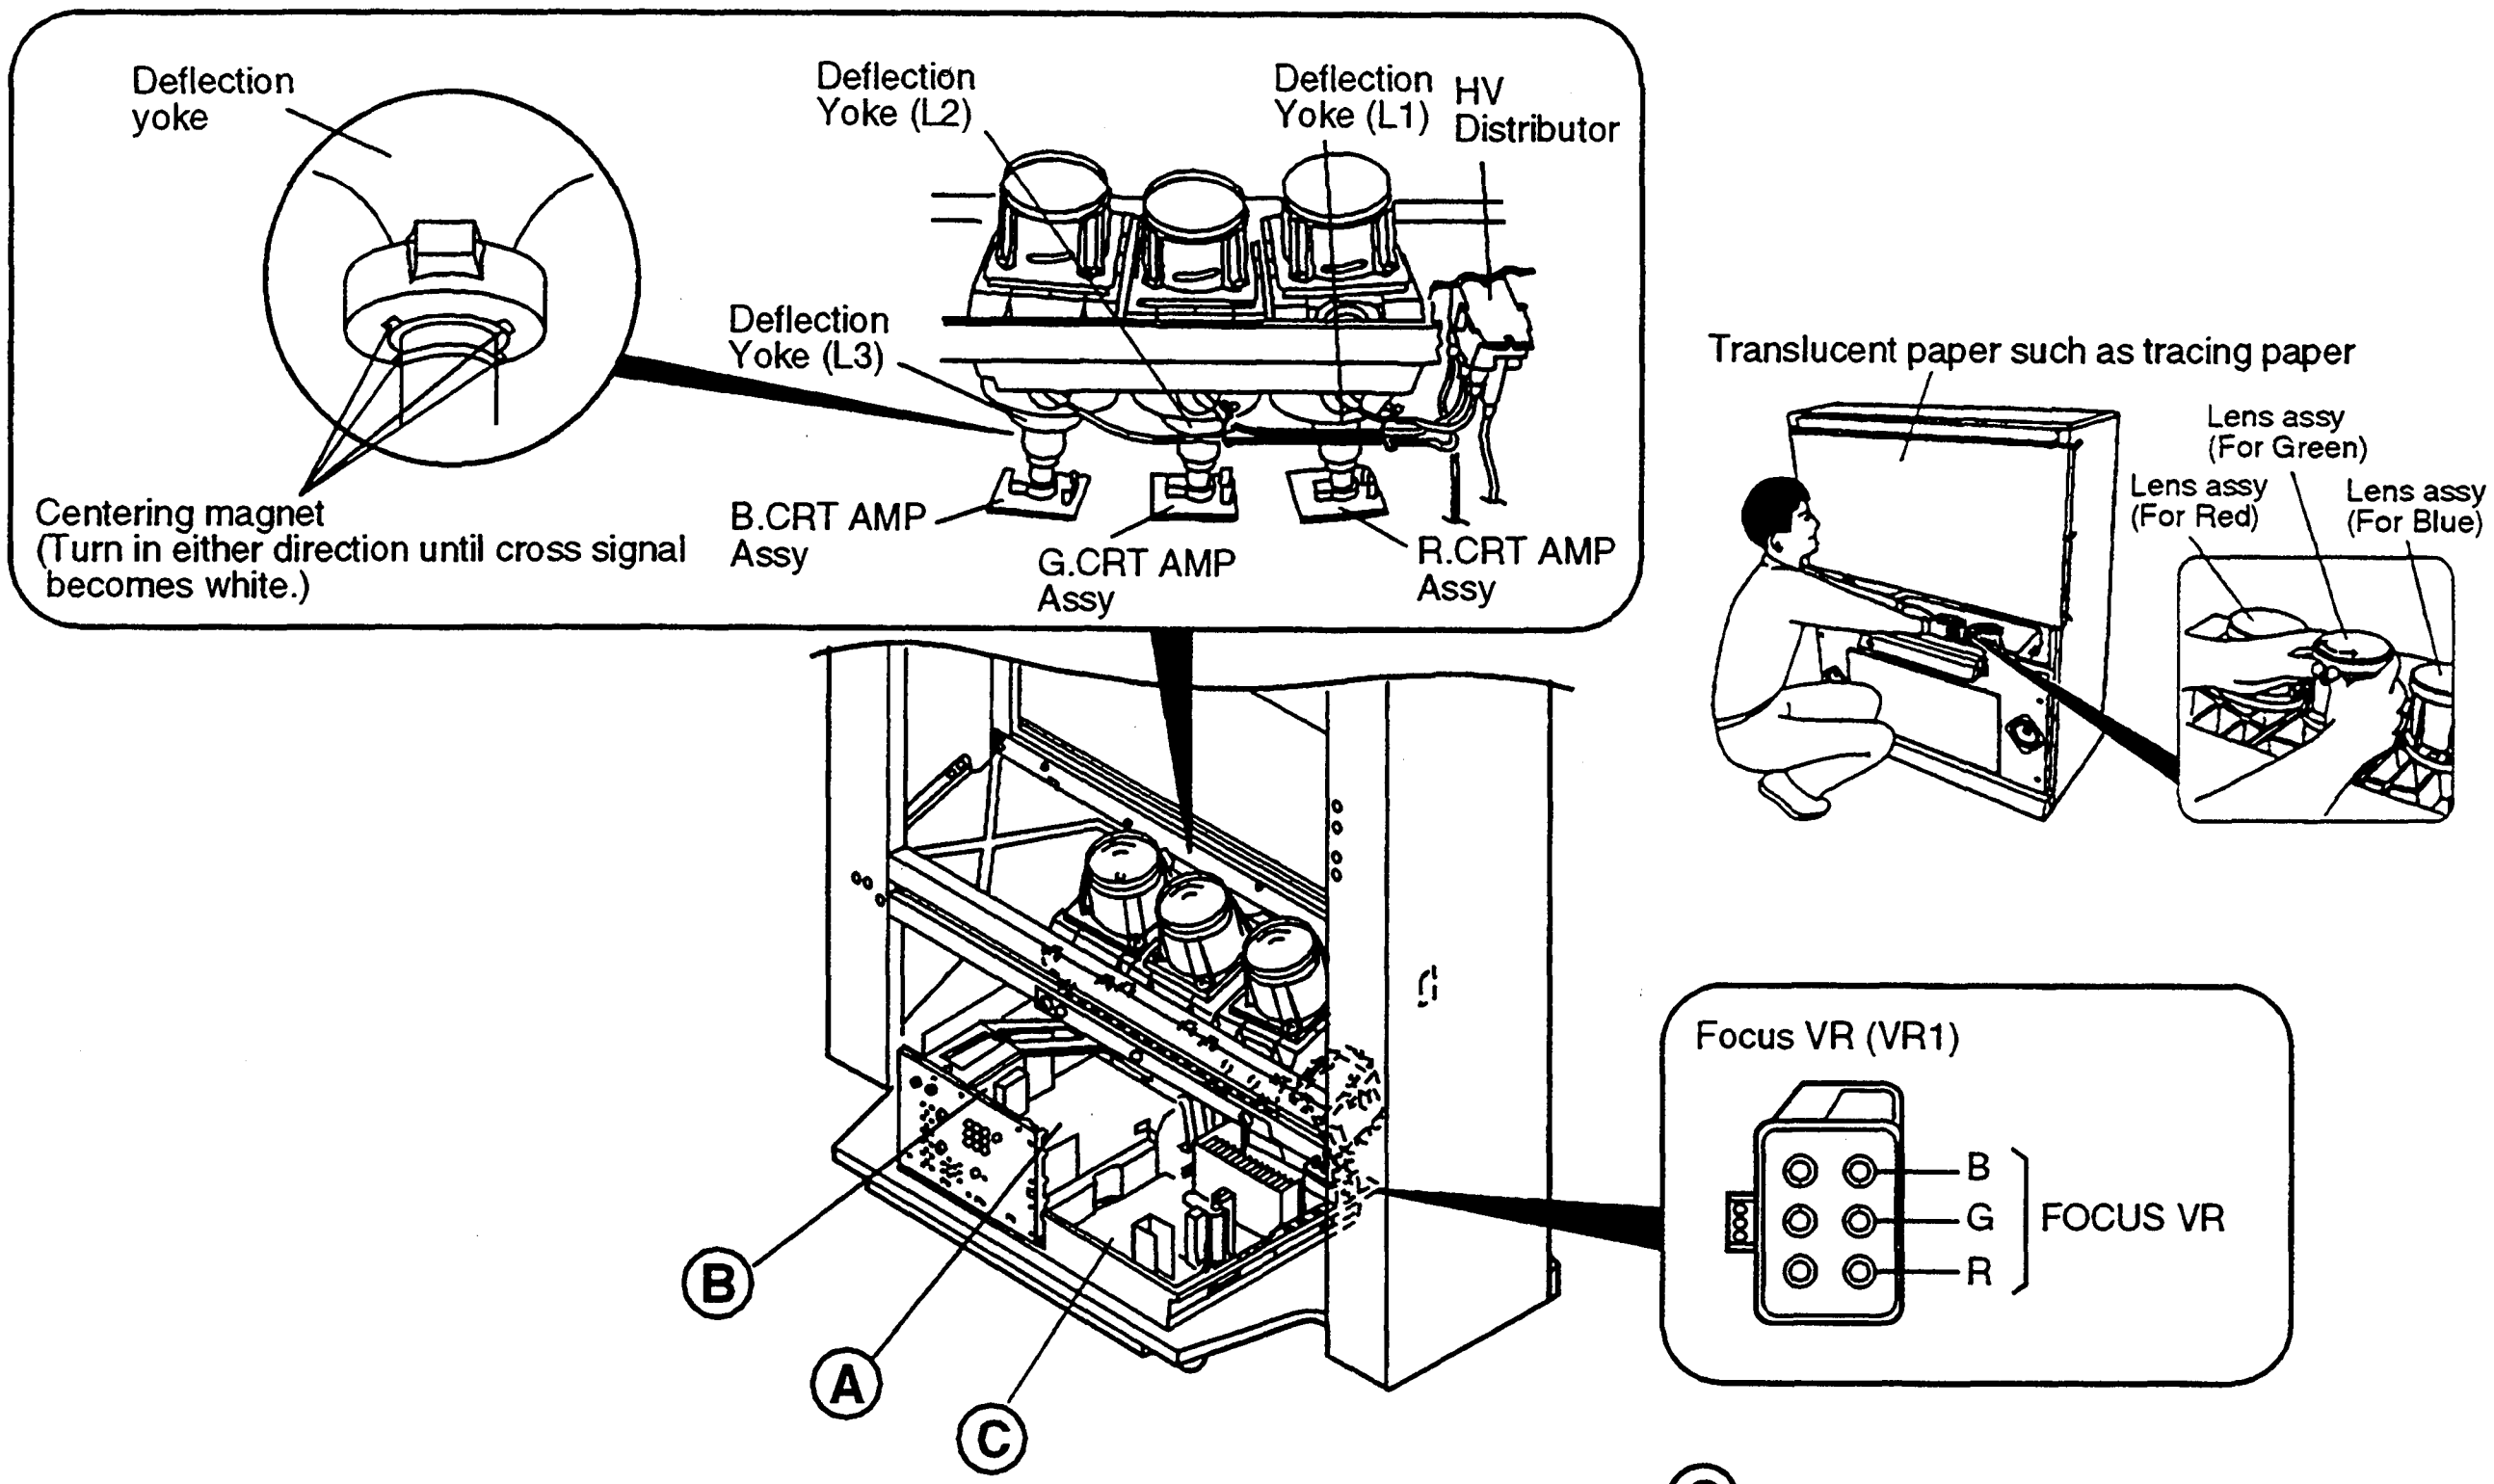
Deflection yoke
Centering magnet
(Turn in either direction until cross signal becomes white.)
Deflection Yoke (L2)
Deflection Yoke (L1)
HV Distributor
Deflection Yoke (L3)
B.CRT AMP Assy
G.CRT AMP Assy
R.CRT AMP Assy
Translucent paper such as tracing paper
Lens assy (For Green)
Lens assy (For Red)
Lens assy (For Blue)
Focus VR (VR1)
B
G
R
FOCUS VR
Ⓑ
Ⓐ
Ⓒ

Ⓐ TUNER•VIDEO ASSY

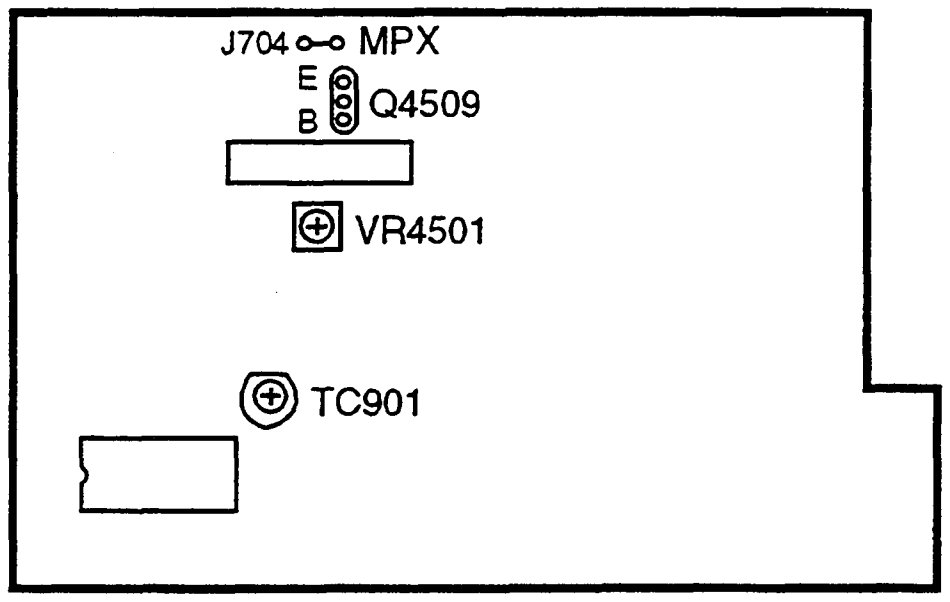
J704 MPX
E
B
Q4509
VR4501
TC901

Ⓑ AV I/O ASSY

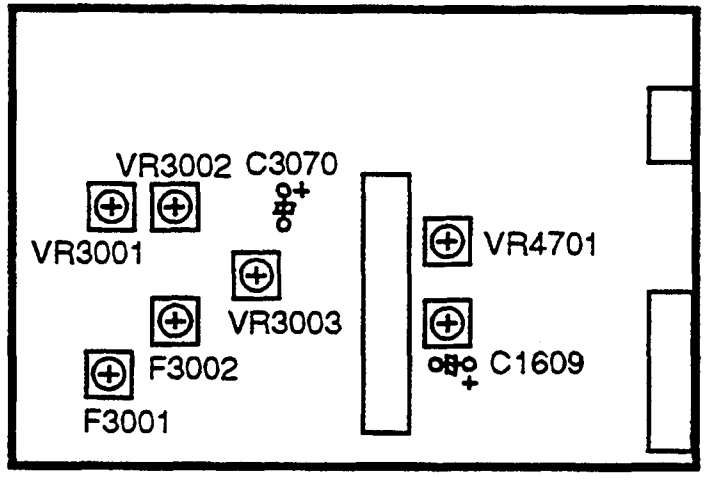
VR3002
C3070
VR3001
VR4701
VR3003
F3002
F3001
C1609

Ⓒ POWER SUPPLY SERVICE ASSY

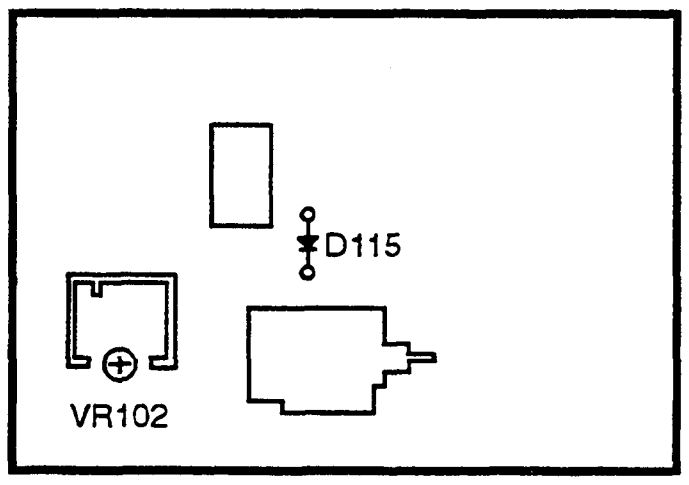

❶ 135V Power Supply Adjustment
❷ Contrast Coarse Adjustment
❸ Brightness Adjustment (PIONEER's Standard Settings)
❹ Deflection Yoke Lean Adjustment
❺ Screen Center Adjustment
❻ Focus Adjustment of Lens Assy
❼ Focus VR Adjustment
❽ Horizontal Size Adjustment
❾ Vertical Size Adjustment
❿ Convergence Adjustment
⓫ Test Cross H-Center Position Adjustment
⓬ Tuner Block Adjustment
⓭ White Balance Adjustment
⓮ PIONEER's Standard Settings
⓯ Y-signal Level Adjustment of Sub-picture (Adjustment for P IN P)
⓰ TINT Adjustment of Sub-picture (Adjustment for P IN P)
⓱ Chroma Level Adjustment of Sub-picture (Adjustment for P IN P)
⓲ Write Clock Adjustment of Sub-picture (Adjustment for P IN P)
⓳ Read Clock Adjustment of Sub-picture (Adjustment for P IN P)

Assembly Adjustment Location Guide

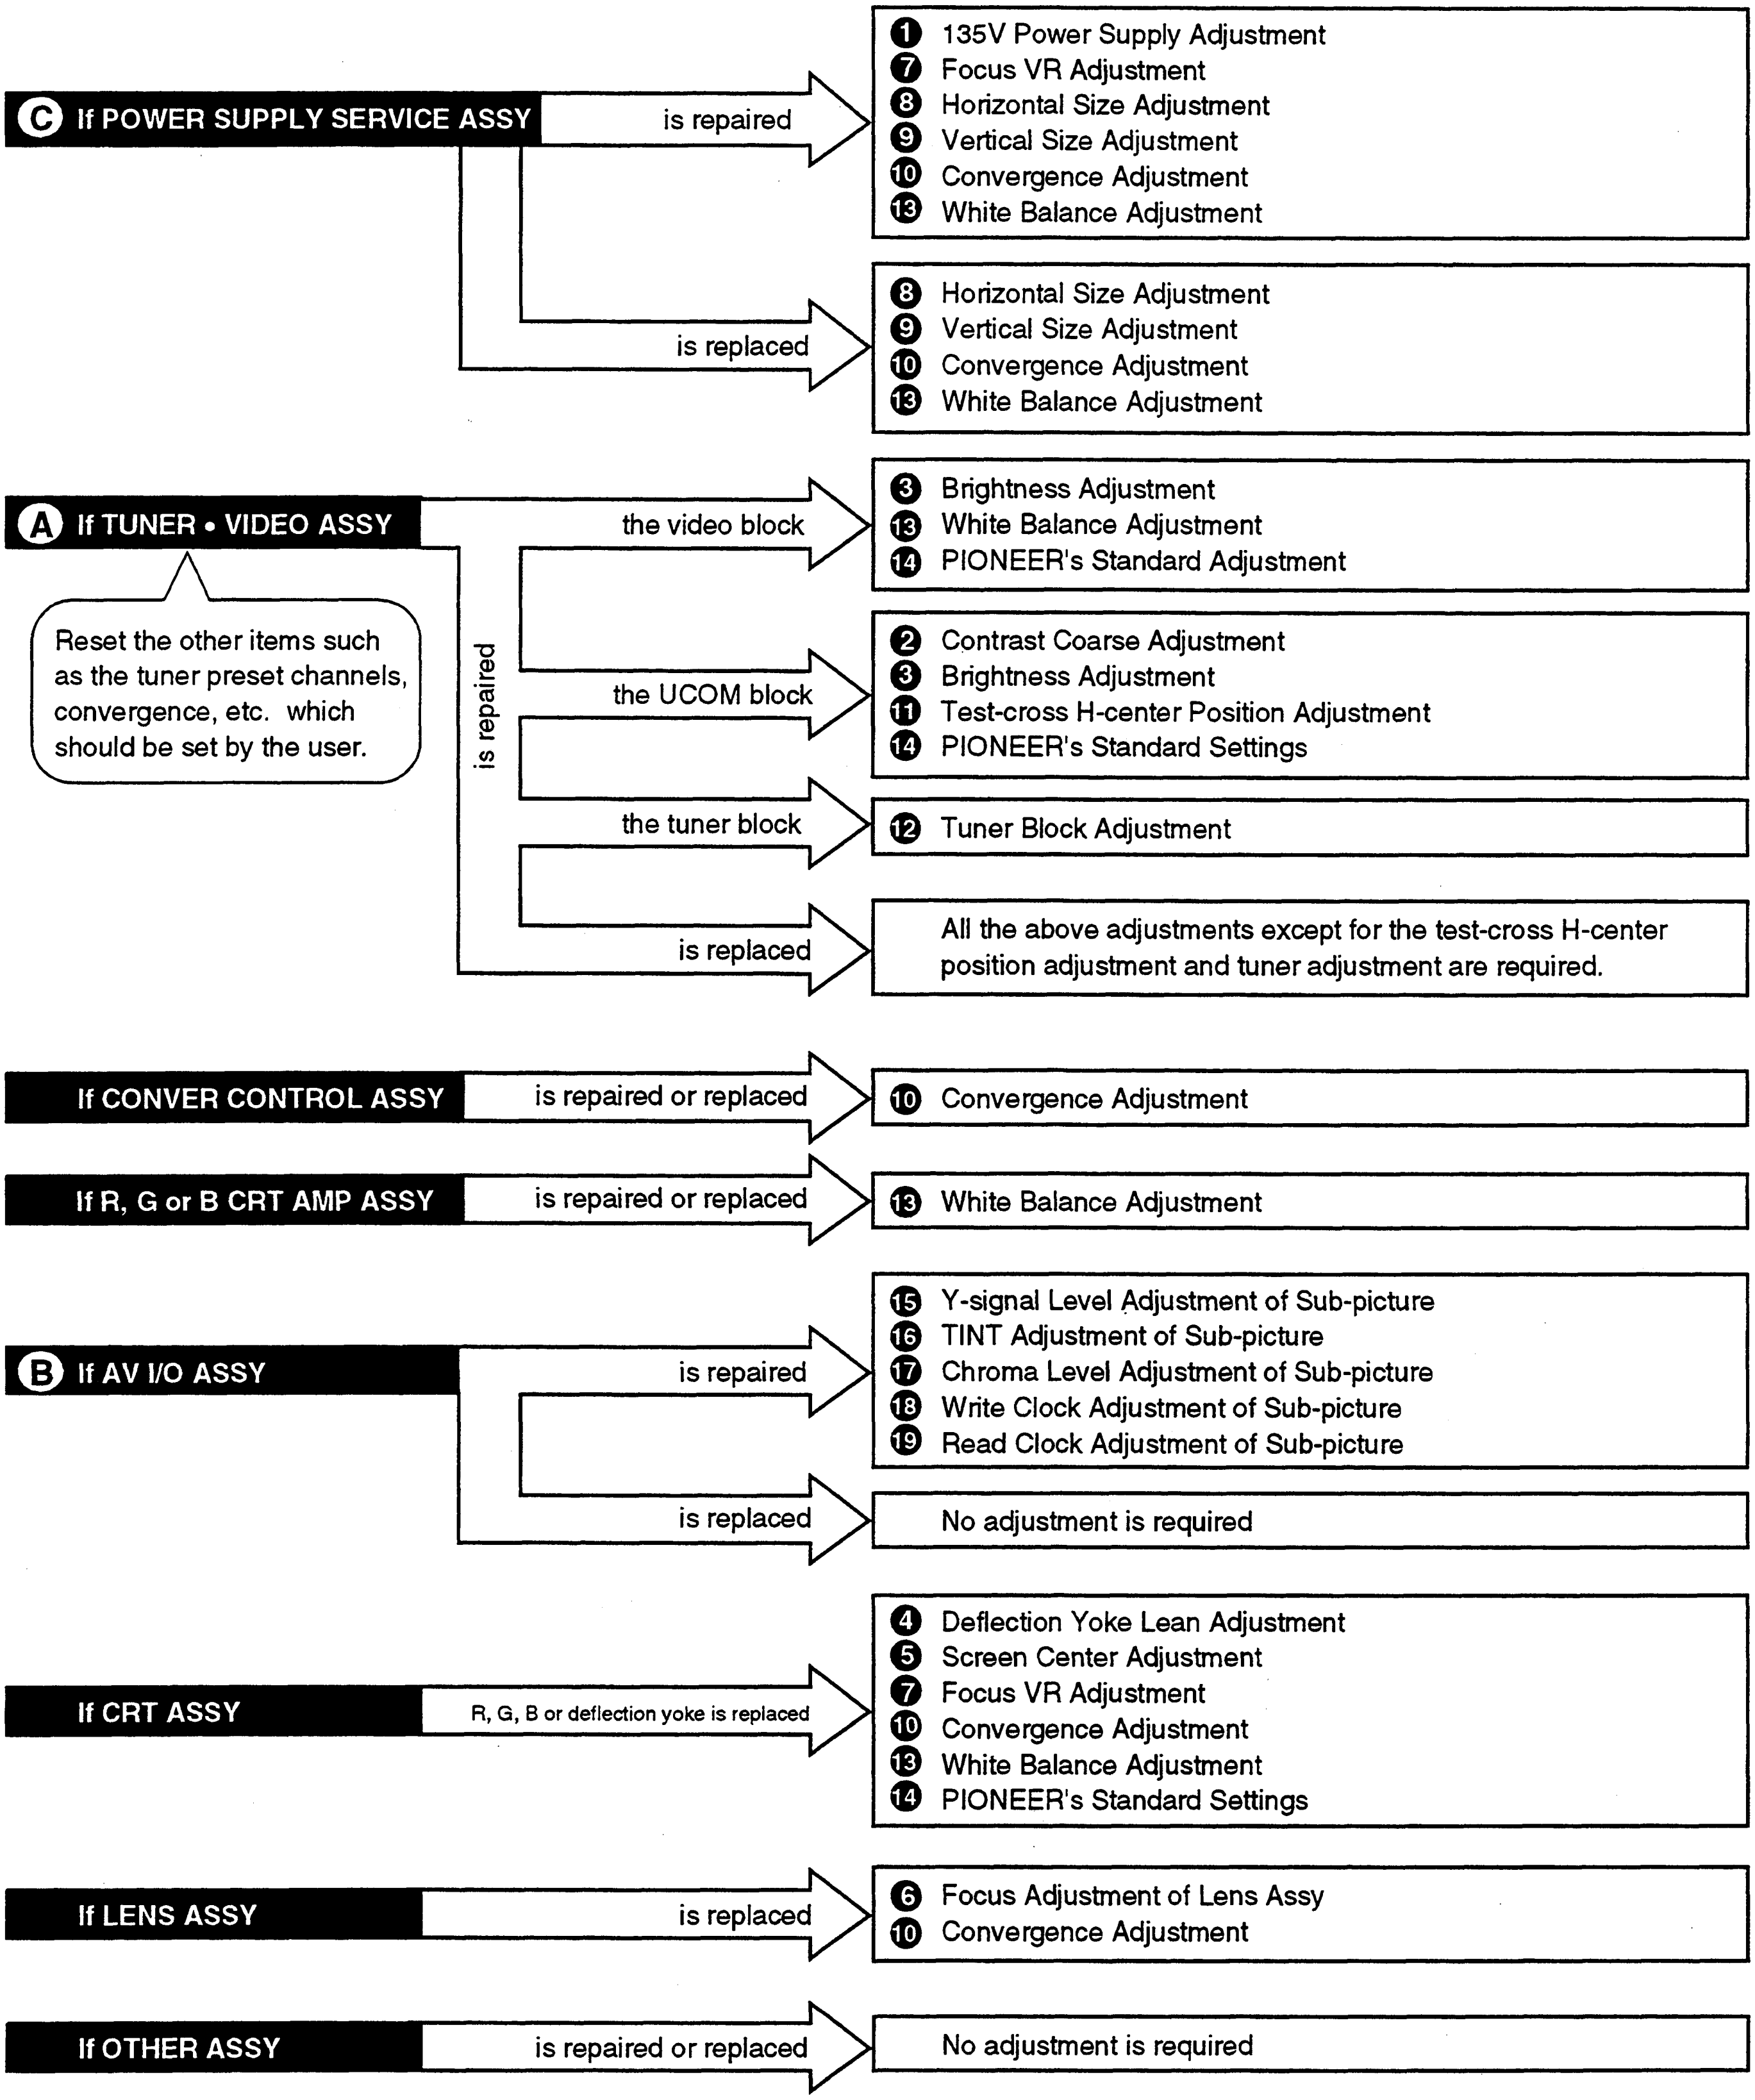

Ⓒ If POWER SUPPLY SERVICE ASSY is repaired
- ① 135V Power Supply Adjustment
- ⑦ Focus VR Adjustment
- ⑧ Horizontal Size Adjustment
- ⑨ Vertical Size Adjustment
- ⑩ Convergence Adjustment
- ⑬ White Balance Adjustment

Ⓒ If POWER SUPPLY SERVICE ASSY is replaced
- ⑧ Horizontal Size Adjustment
- ⑨ Vertical Size Adjustment
- ⑩ Convergence Adjustment
- ⑬ White Balance Adjustment

Ⓐ If TUNER • VIDEO ASSY is repaired, the video block
- ③ Brightness Adjustment
- ⑬ White Balance Adjustment
- ⑭ PIONEER's Standard Adjustment

Ⓐ If TUNER • VIDEO ASSY is repaired, the UCOM block
- ② Contrast Coarse Adjustment
- ③ Brightness Adjustment
- ⑪ Test-cross H-center Position Adjustment
- ⑭ PIONEER's Standard Settings

Ⓐ If TUNER • VIDEO ASSY is repaired, the tuner block
- ⑫ Tuner Block Adjustment

Ⓐ If TUNER • VIDEO ASSY is replaced
- All the above adjustments except for the test-cross H-center position adjustment and tuner adjustment are required.

Reset the other items such as the tuner preset channels, convergence, etc. which should be set by the user.

If CONVER CONTROL ASSY is repaired or replaced
- ⑩ Convergence Adjustment

If R, G or B CRT AMP ASSY is repaired or replaced
- ⑬ White Balance Adjustment

Ⓑ If AV I/O ASSY is repaired
- ⑮ Y-signal Level Adjustment of Sub-picture
- ⑯ TINT Adjustment of Sub-picture
- ⑰ Chroma Level Adjustment of Sub-picture
- ⑱ Write Clock Adjustment of Sub-picture
- ⑲ Read Clock Adjustment of Sub-picture

Ⓑ If AV I/O ASSY is replaced
- No adjustment is required

If CRT ASSY R, G, B or deflection yoke is replaced
- ④ Deflection Yoke Lean Adjustment
- ⑤ Screen Center Adjustment
- ⑦ Focus VR Adjustment
- ⑩ Convergence Adjustment
- ⑬ White Balance Adjustment
- ⑭ PIONEER's Standard Settings

If LENS ASSY is replaced
- ⑥ Focus Adjustment of Lens Assy
- ⑩ Convergence Adjustment

If OTHER ASSY is repaired or replaced
- No adjustment is required

Factory Adjustment Mode

Start .... Start adjusting

1st FAC ...... Select 1st FACTORY ADJ mode, then adjust.

Select 1st FACTORY ADJ Mode

Selecting the mode for adjustment operations.

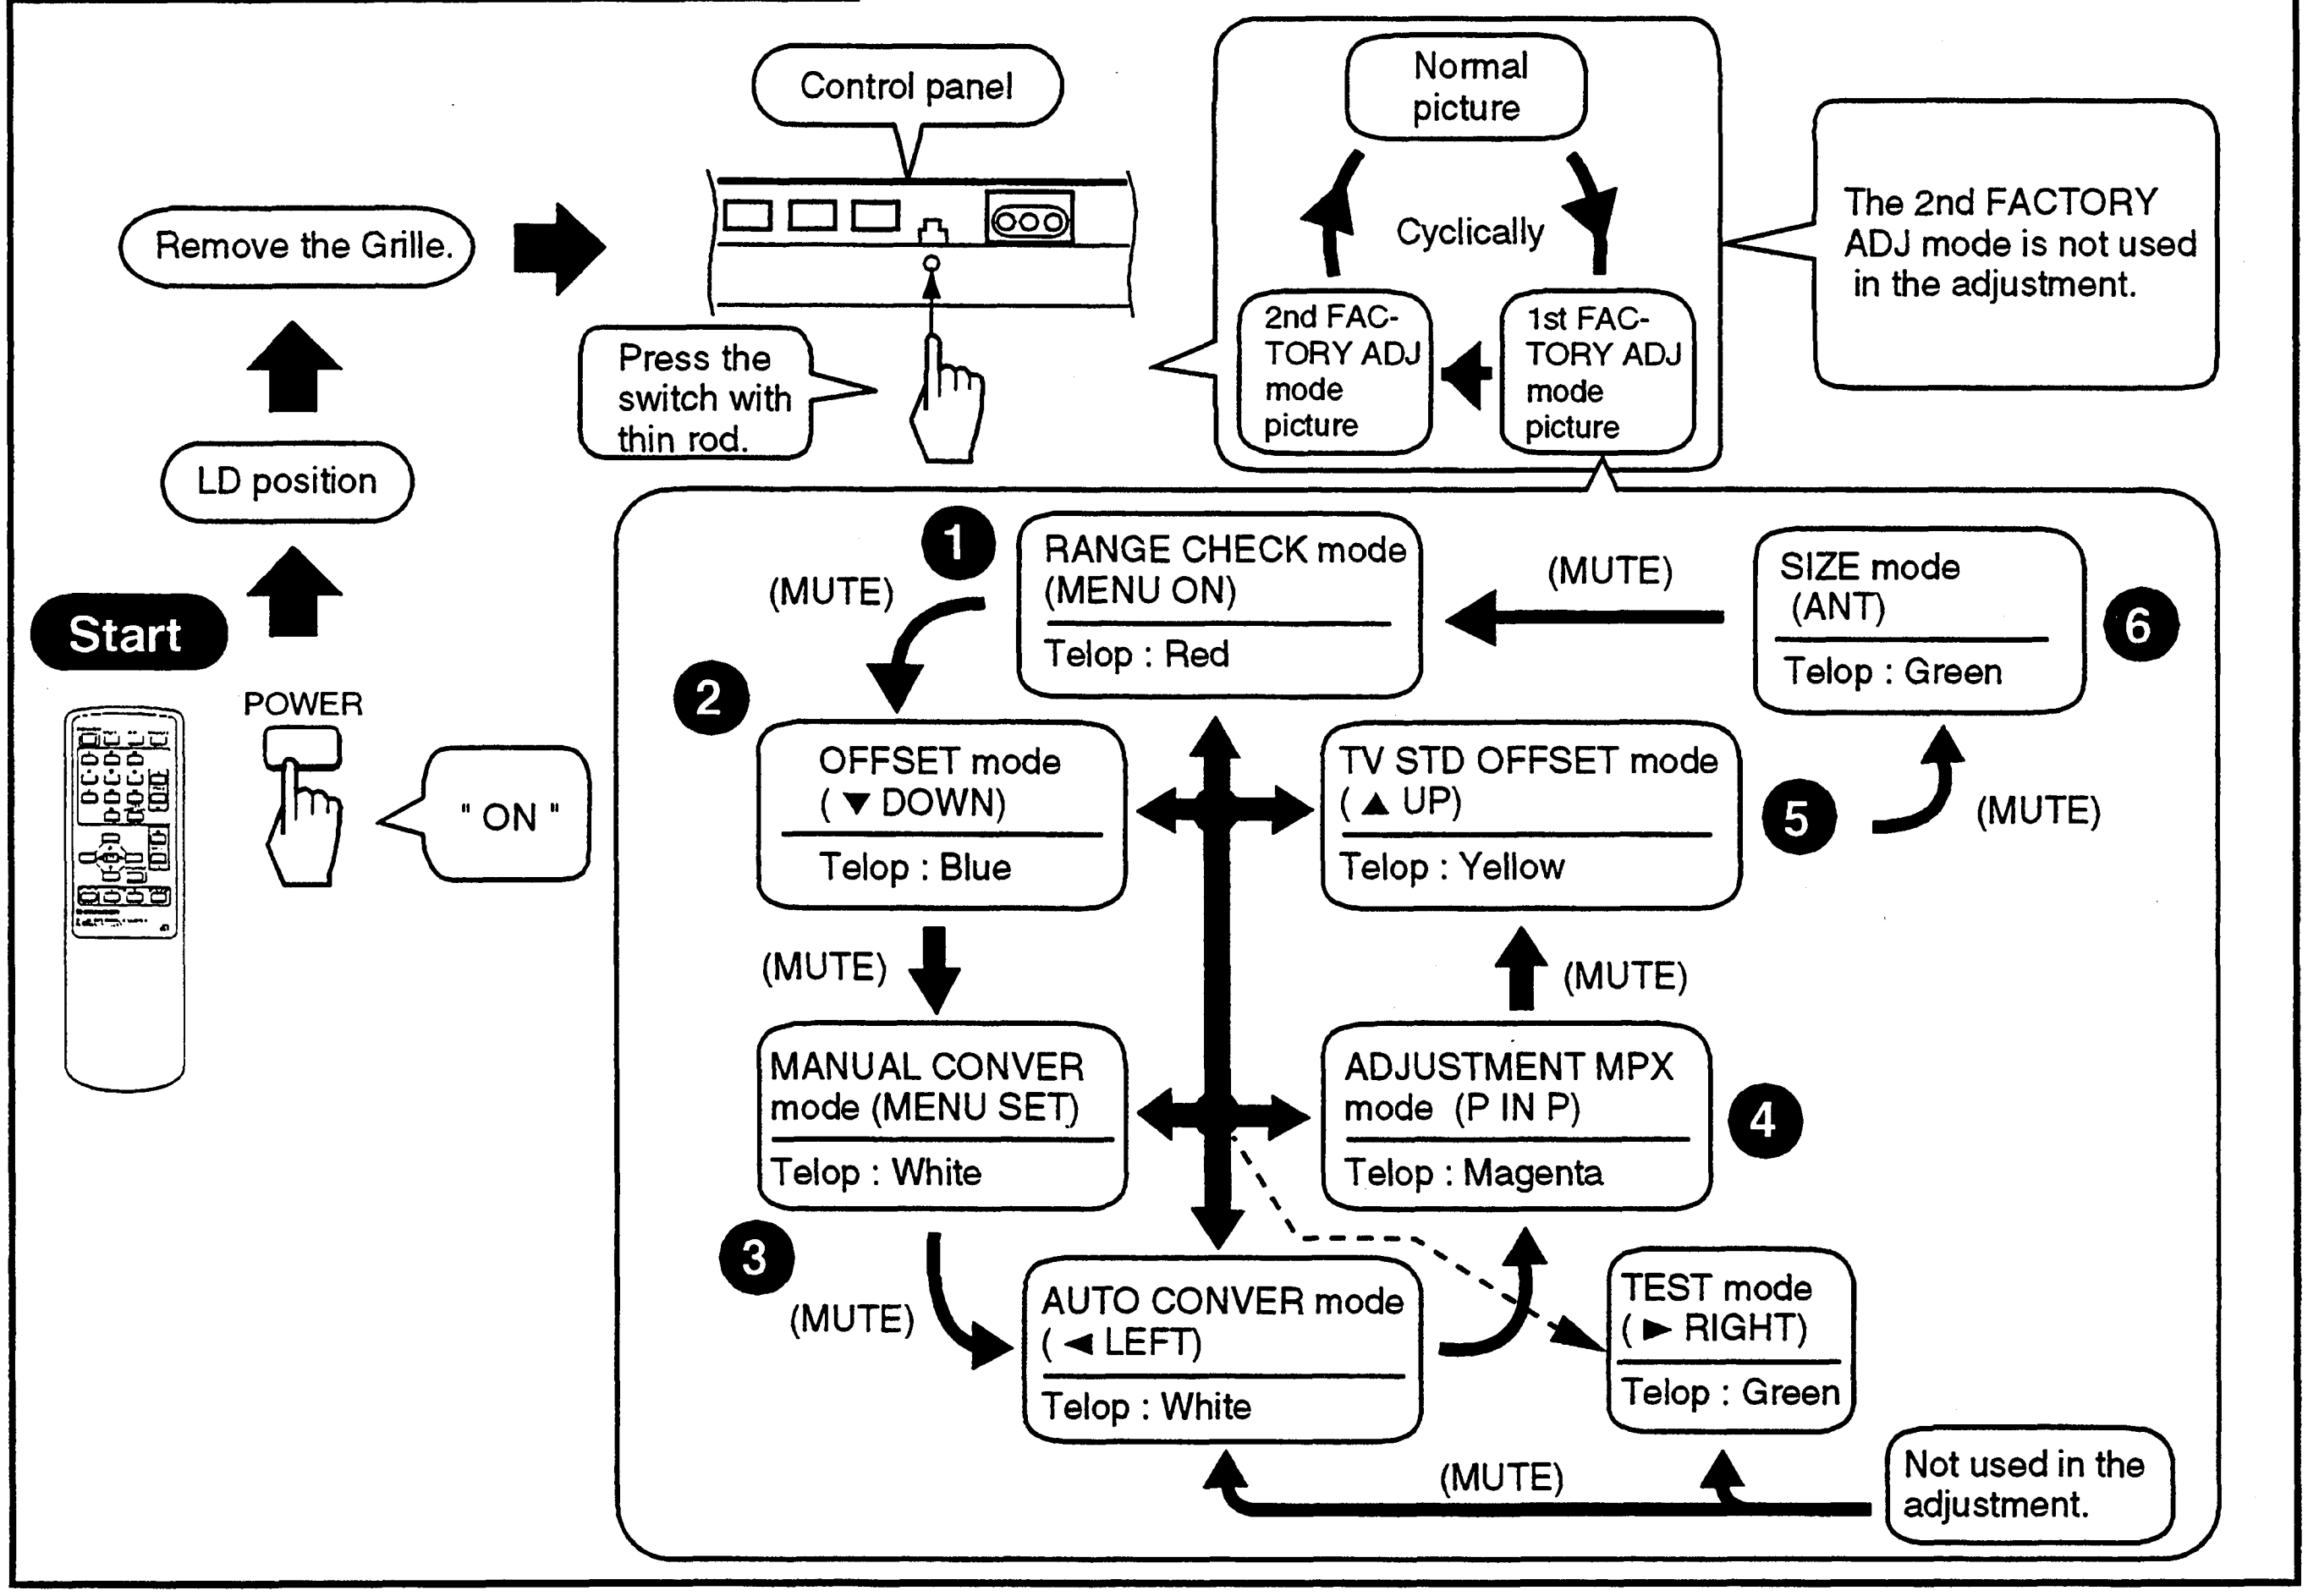
Control panel
Remove the Grille.
Press the switch with thin rod.
LD position
Start
POWER
" ON "
Normal picture
Cyclically
2nd FACTORY ADJ mode picture
1st FACTORY ADJ mode picture
The 2nd FACTORY ADJ mode is not used in the adjustment.
1
RANGE CHECK mode (MENU ON)
Telop : Red
(MUTE)
2
OFFSET mode (▼ DOWN)
Telop : Blue
(MUTE)
MANUAL CONVER mode (MENU SET)
Telop : White
3
(MUTE)
AUTO CONVER mode (◄ LEFT)
Telop : White
ADJUSTMENT MPX mode (P IN P)
Telop : Magenta
4
(MUTE)
TV STD OFFSET mode (▲ UP)
Telop : Yellow
5
(MUTE)
SIZE mode (ANT)
Telop : Green
6
(MUTE)
TEST mode (► RIGHT)
Telop : Green
(MUTE)
Not used in the adjustment.

① Adjustment Range Mode

Picture quality, etc.. Change amount check made operating.

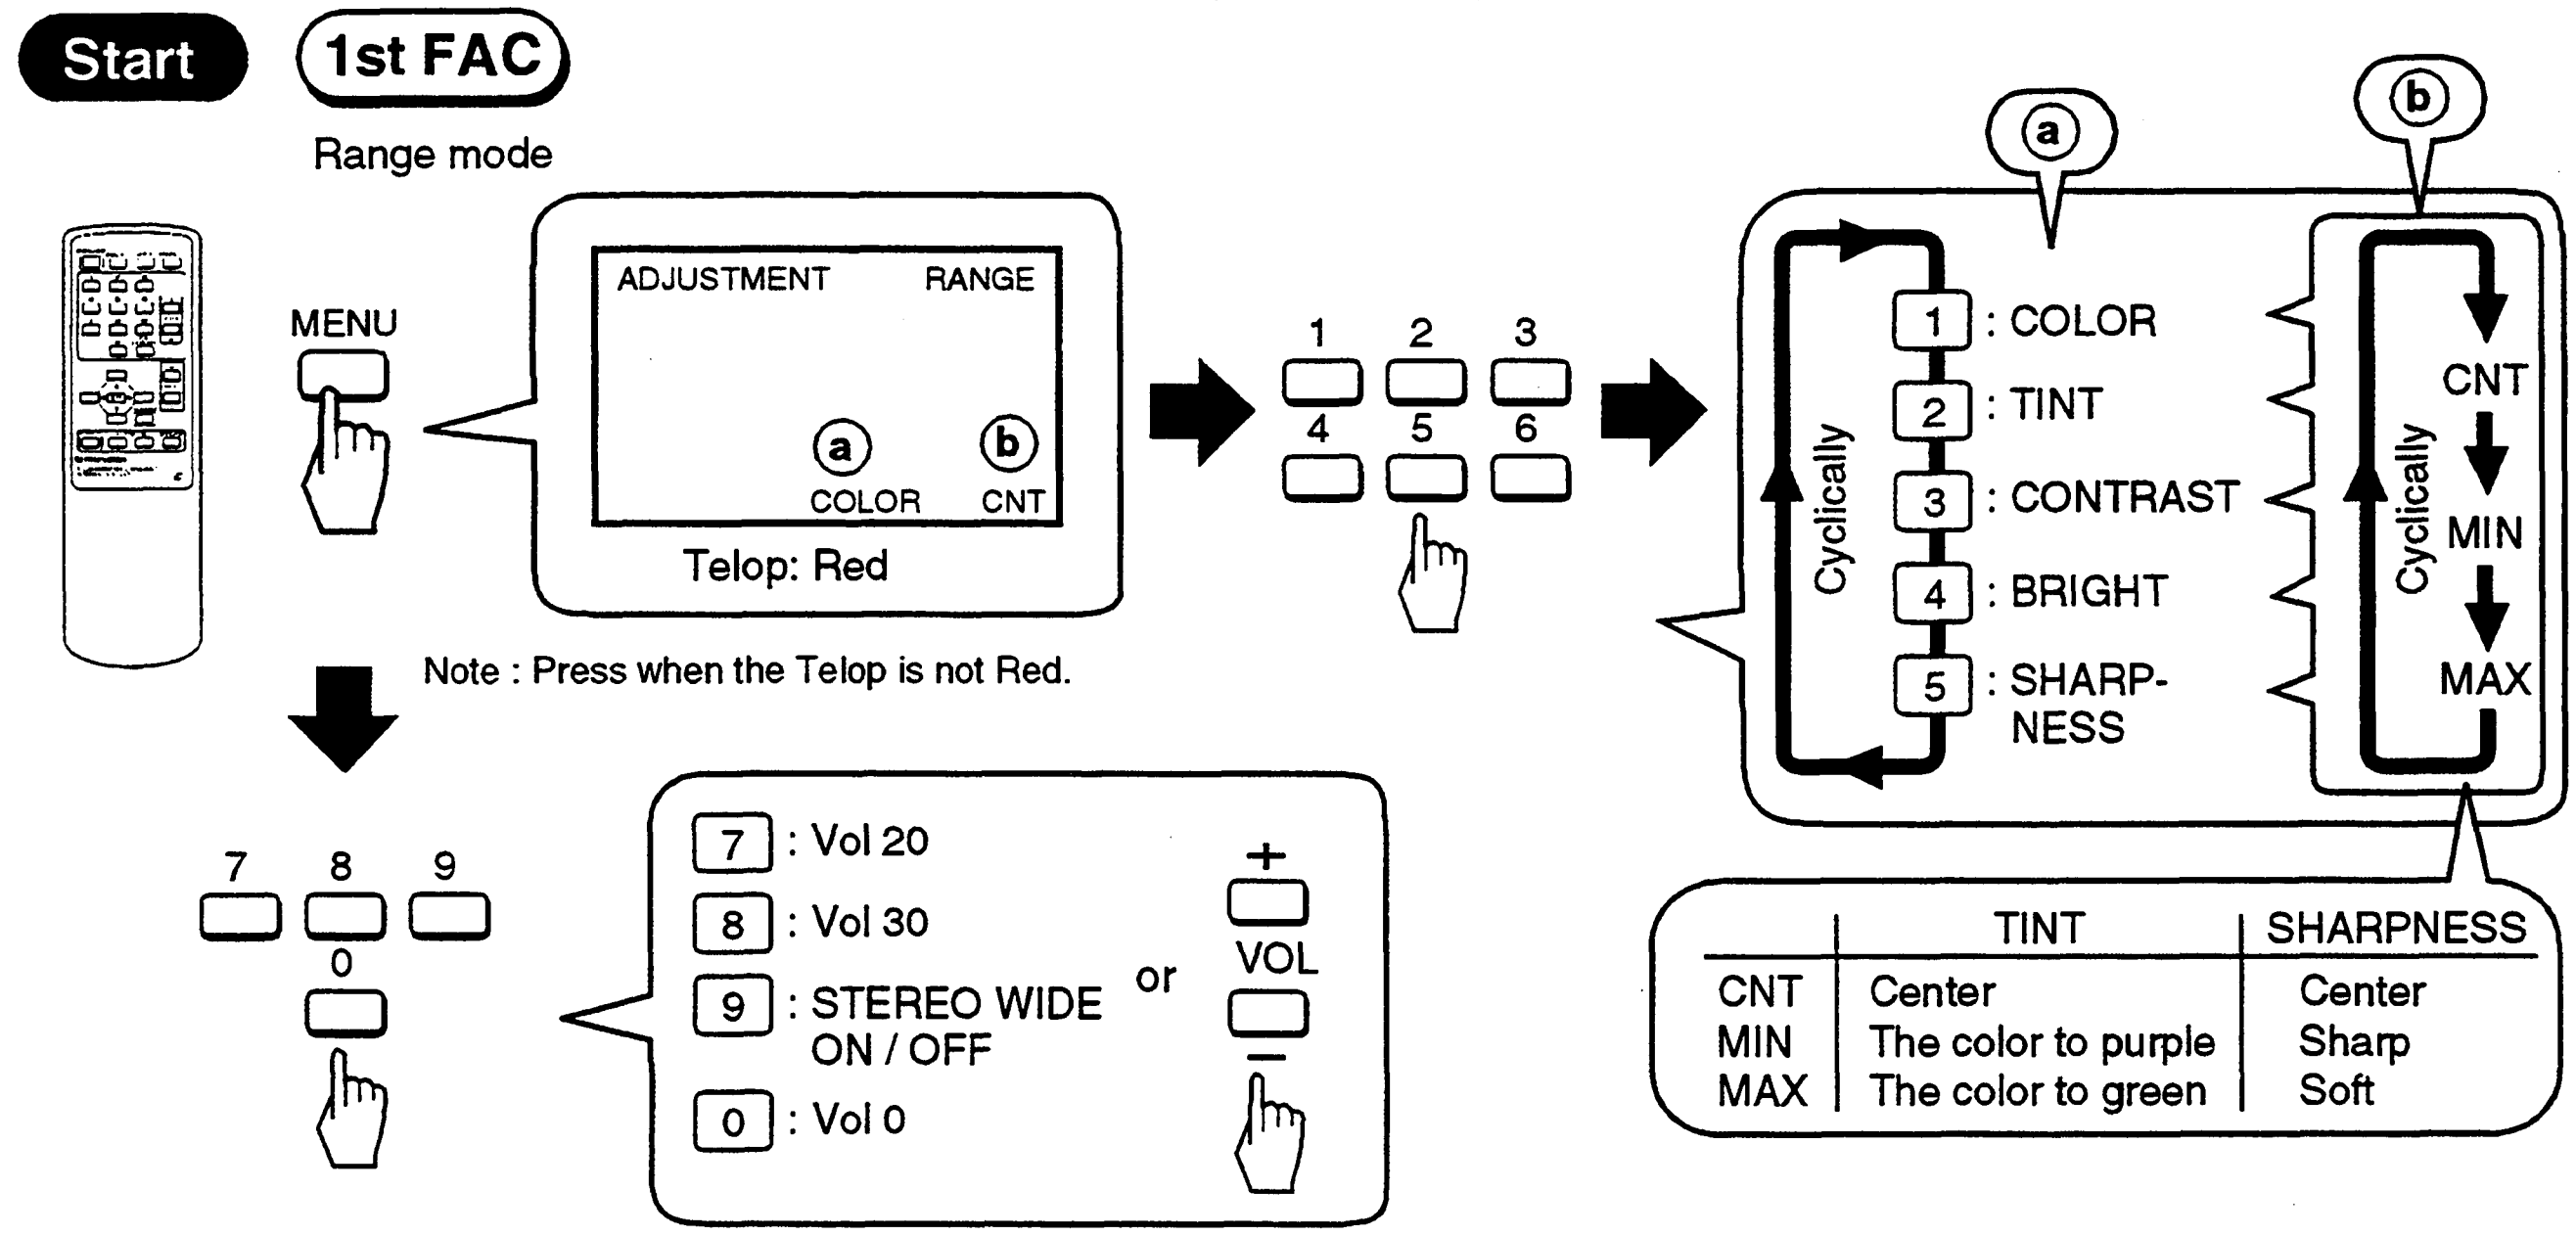
Start
1st FAC
Range mode
MENU
ADJUSTMENT
RANGE
ⓐ
ⓑ
COLOR
CNT
Telop: Red
Note : Press when the Telop is not Red.
1 2 3
4 5 6
ⓐ
ⓑ
Cyclically
1 : COLOR
2 : TINT
3 : CONTRAST
4 : BRIGHT
5 : SHARPNESS
Cyclically
CNT
MIN
MAX
7 8 9
0
7 : Vol 20
8 : Vol 30
9 : STEREO WIDE ON / OFF
0 : Vol 0
or
+
VOL
−

	TINT	SHARPNESS
CNT	Center	Center
MIN	The color to purple	Sharp
MAX	The color to green	Soft

❷ Adjustment OFFSET Mode

This mode is to set the standard picture quality for a normal picture.

Start **1st FAC**

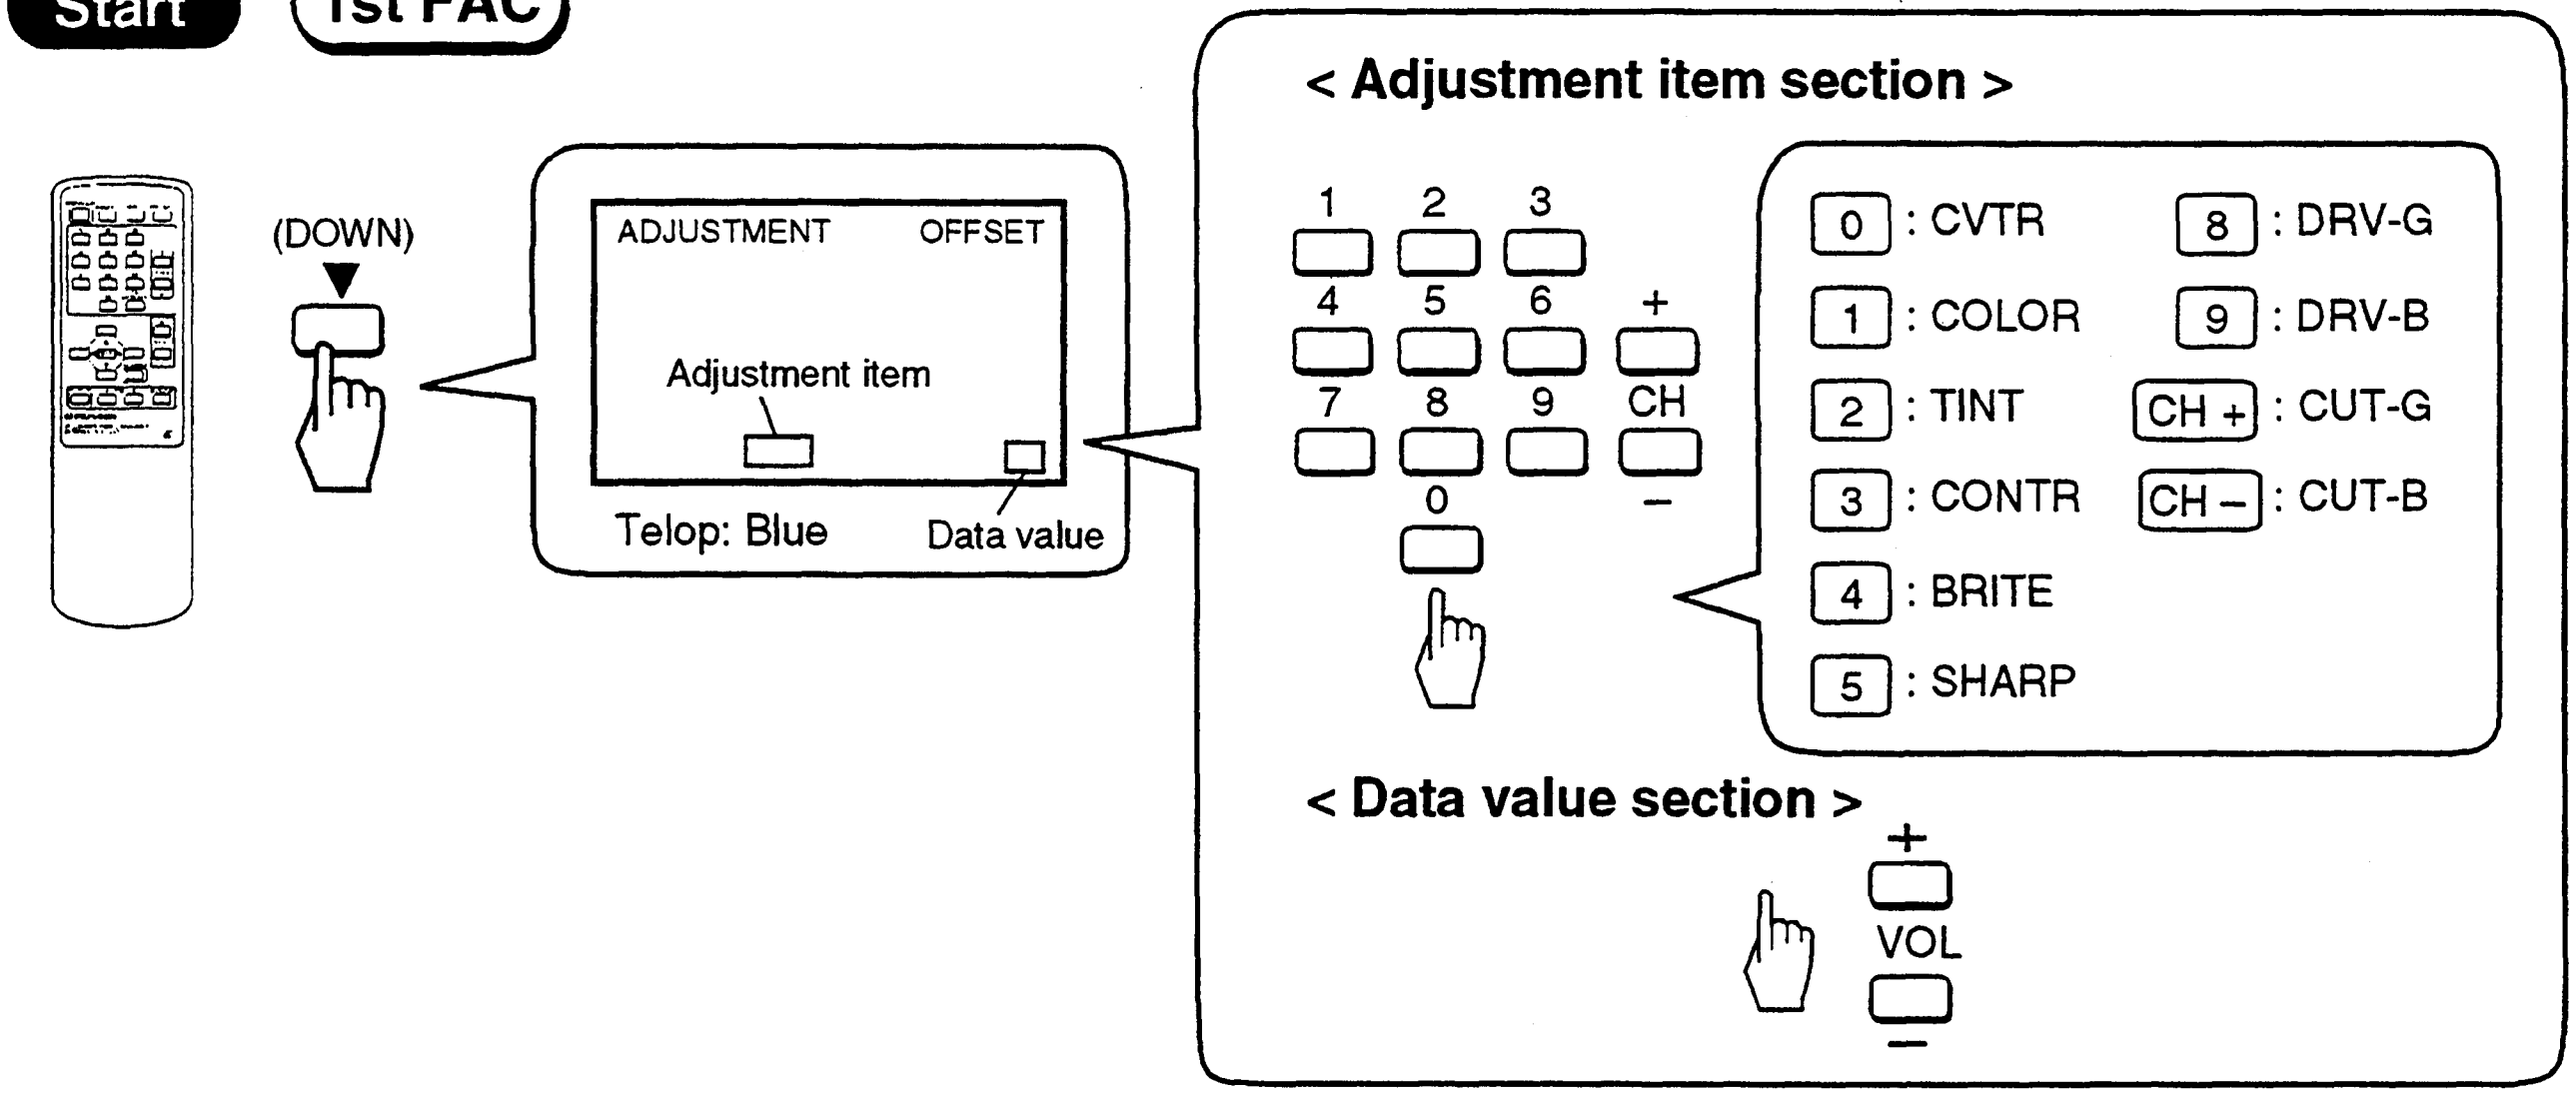
(DOWN)
ADJUSTMENT
OFFSET
Adjustment item
Telop: Blue
Data value
< Adjustment item section >
1
2
3
4
5
6
+
7
8
9
CH
0
−
< Data value section >
+
VOL
−

0 : CVTR
1 : COLOR
2 : TINT
3 : CONTR
4 : BRITE
5 : SHARP
8 : DRV-G
9 : DRV-B
CH + : CUT-G
CH − : CUT-B

❸ Convergence Setting Mode

Start **1st FAC**

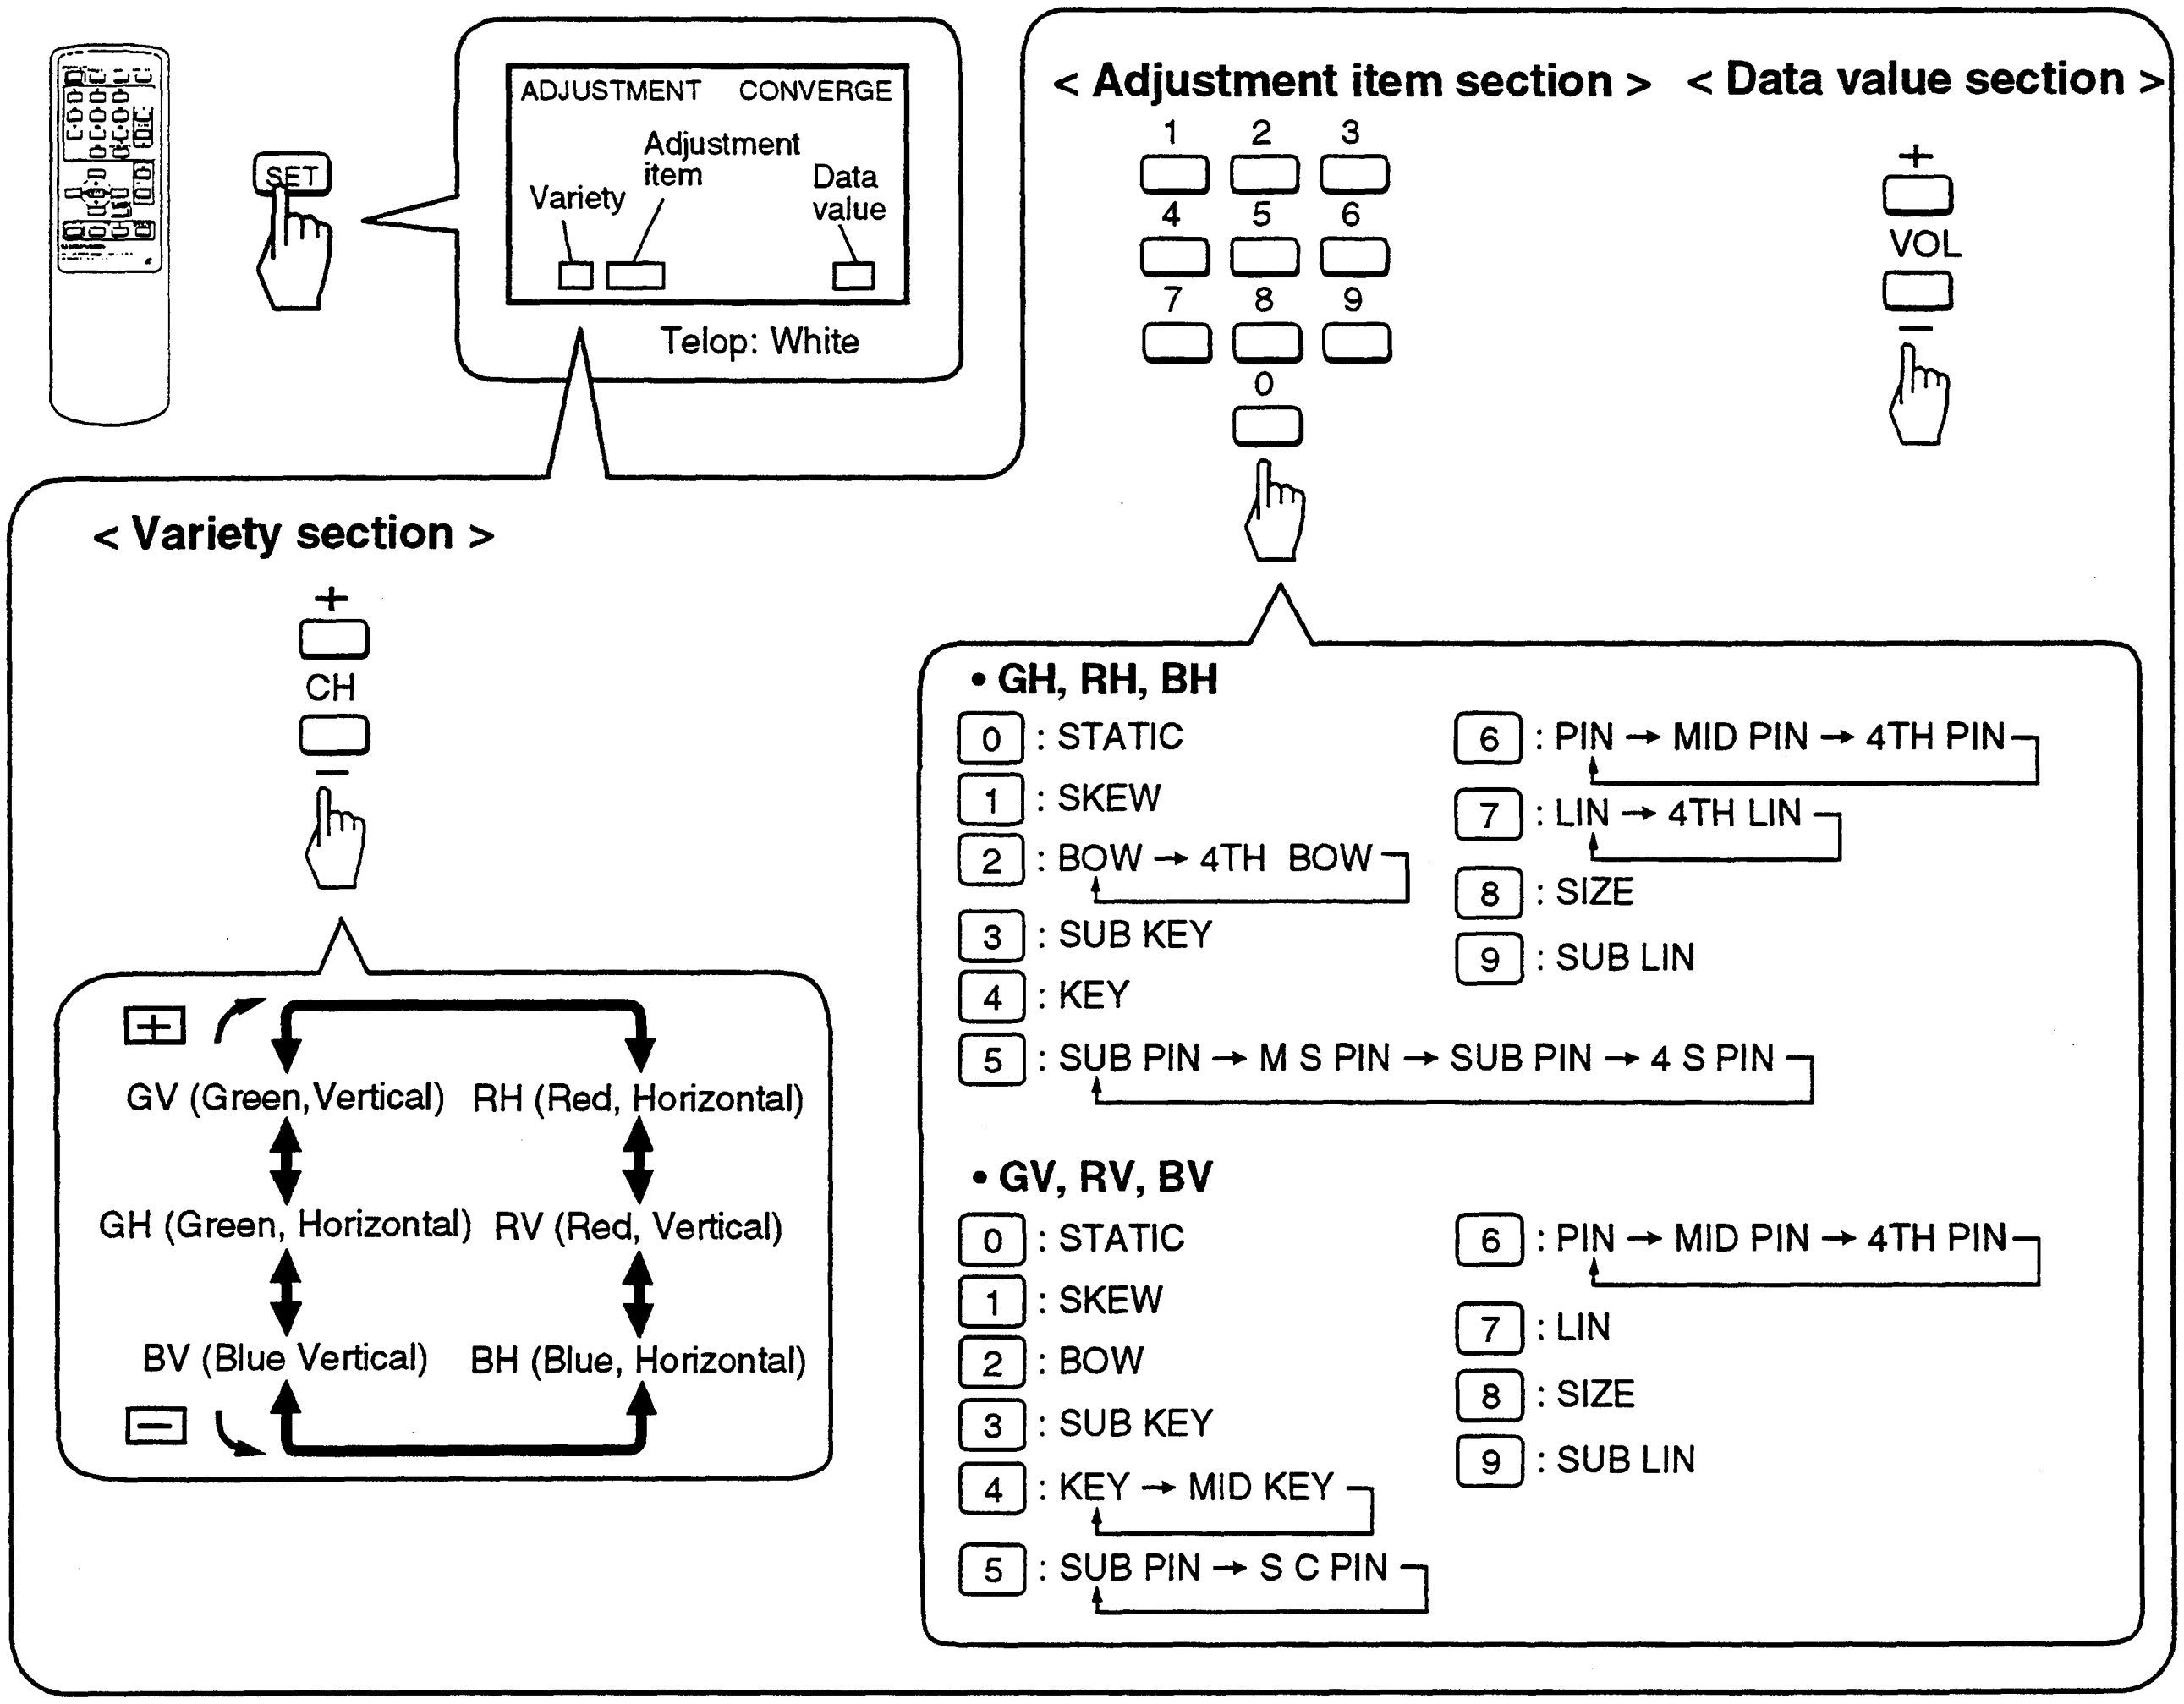
ADJUSTMENT
CONVERGE
SET
Variety
Adjustment item
Data value
Telop: White
< Adjustment item section >
< Data value section >
1
2
3
4
5
6
7
8
9
0
+
VOL
−
< Variety section >
+
CH
−
+
GV (Green,Vertical)
GH (Green, Horizontal)
BV (Blue Vertical)
RH (Red, Horizontal)
RV (Red, Vertical)
BH (Blue, Horizontal)
−

• GH, RH, BH

0 : STATIC
1 : SKEW
2 : BOW → 4TH BOW
3 : SUB KEY
4 : KEY
5 : SUB PIN → M S PIN → SUB PIN → 4 S PIN
6 : PIN → MID PIN → 4TH PIN
7 : LIN → 4TH LIN
8 : SIZE
9 : SUB LIN

• GV, RV, BV

0 : STATIC
1 : SKEW
2 : BOW
3 : SUB KEY
4 : KEY → MID KEY
5 : SUB PIN → S C PIN
6 : PIN → MID PIN → 4TH PIN
7 : LIN
8 : SIZE
9 : SUB LIN

④ Adjustment MPX Mode

For adjusting the TV tuner MPX decoder section

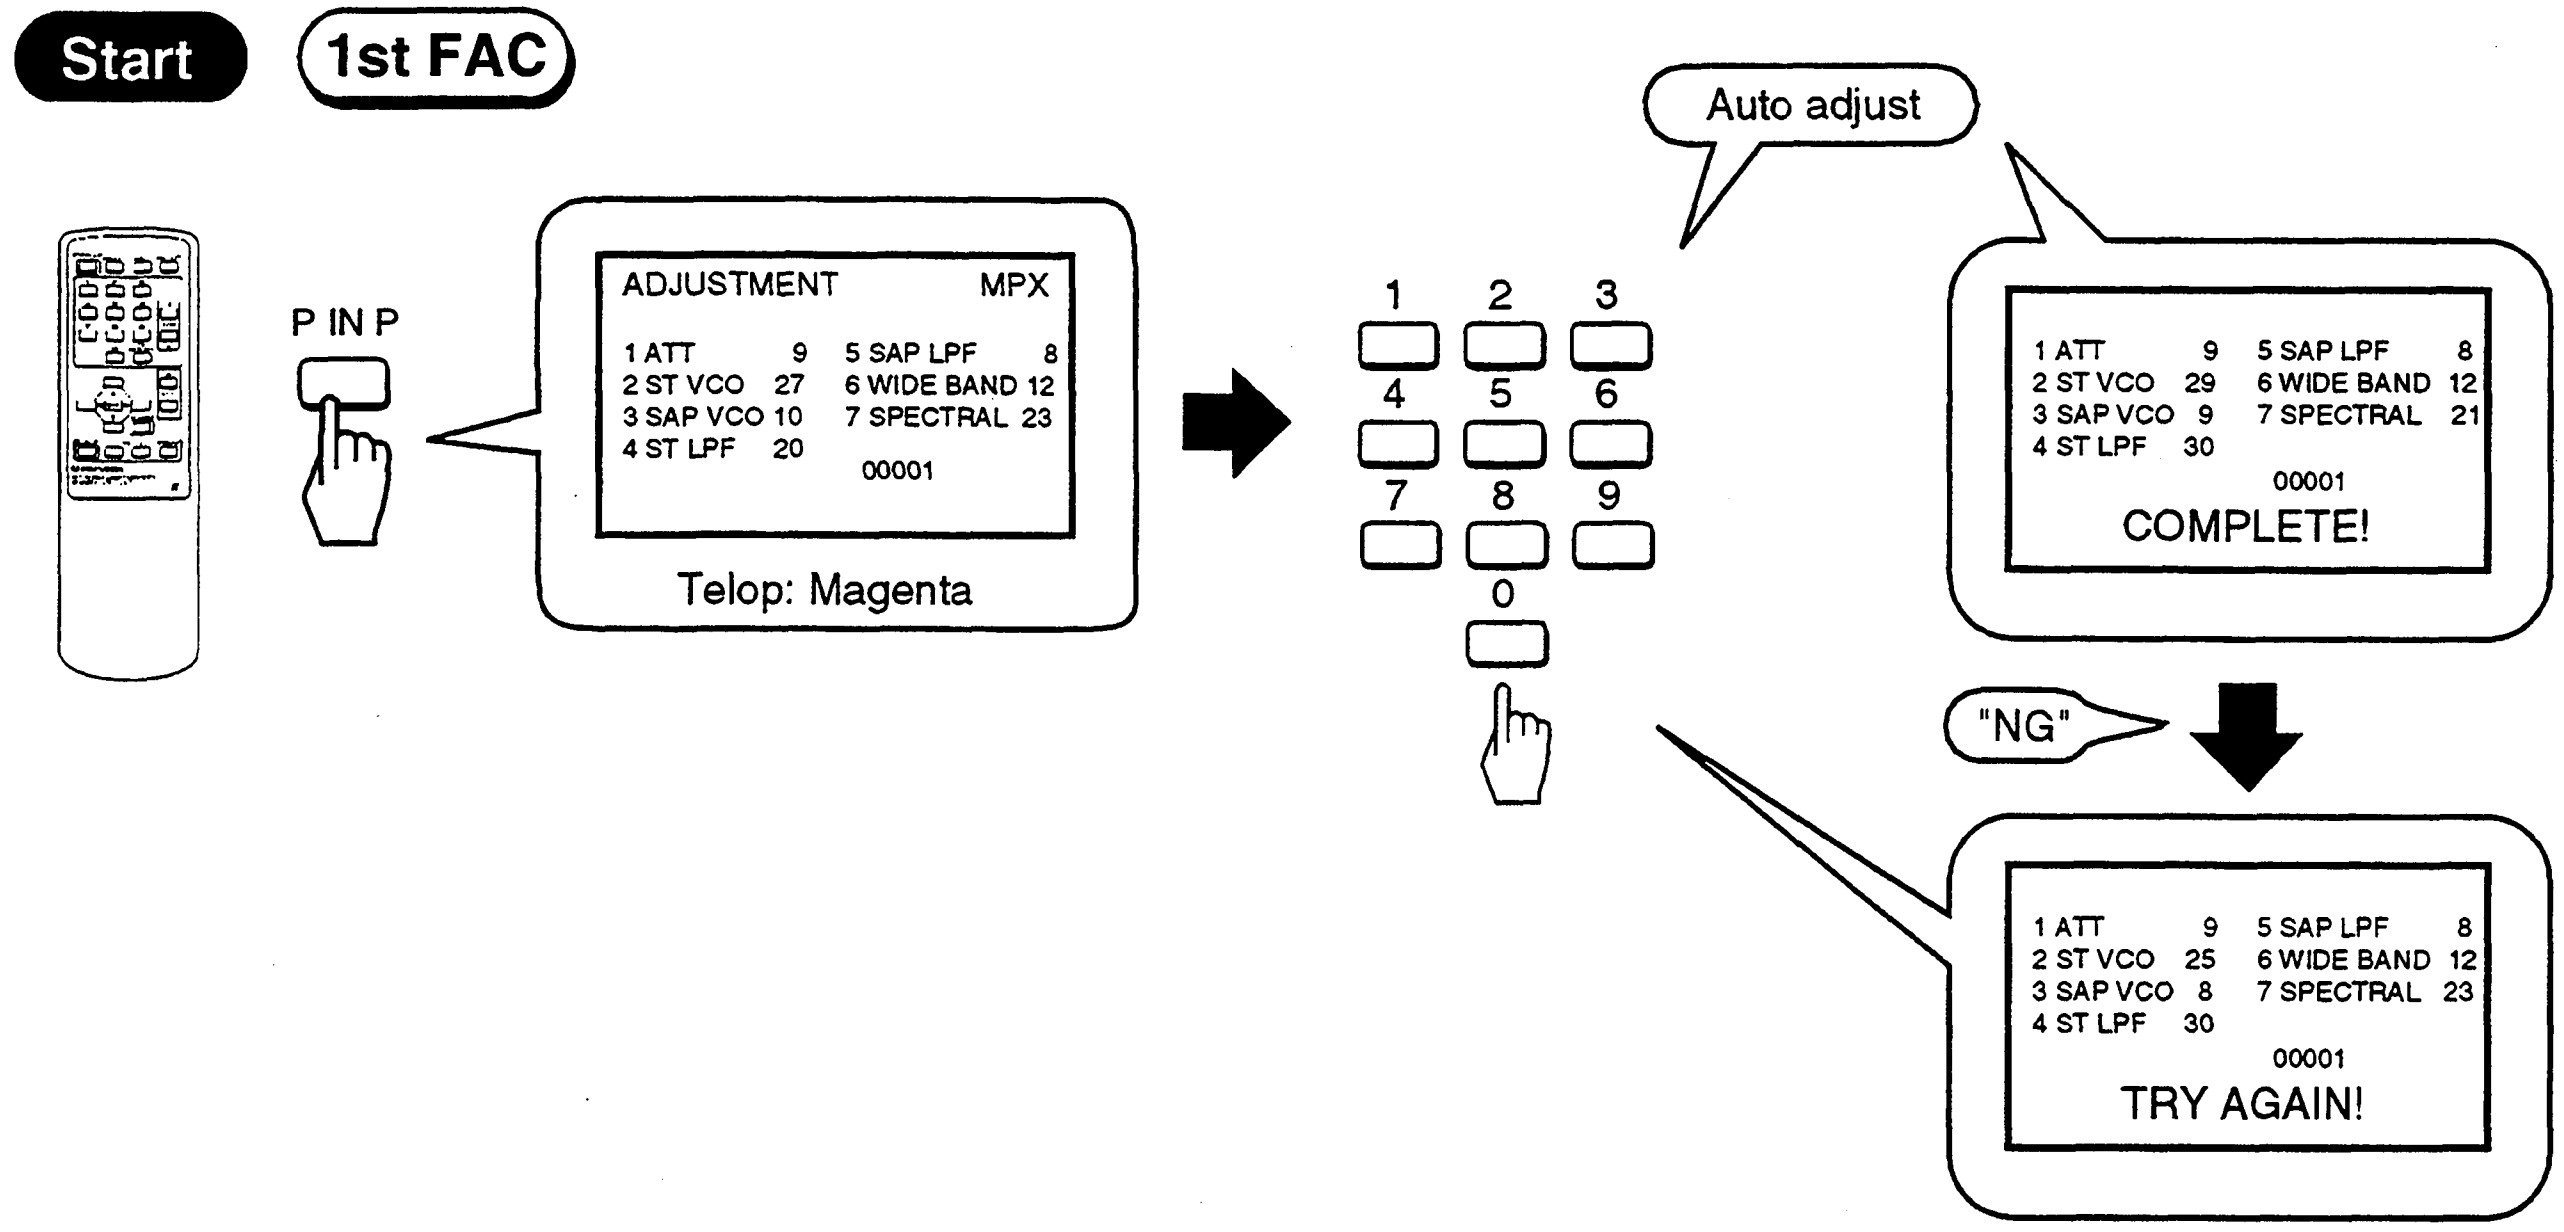
Start
1st FAC
P IN P
ADJUSTMENT MPX
1 ATT 9
2 ST VCO 27
3 SAP VCO 10
4 ST LPF 20
5 SAP LPF 8
6 WIDE BAND 12
7 SPECTRAL 23
00001
Telop: Magenta
1 2 3 4 5 6 7 8 9 0
Auto adjust
1 ATT 9
2 ST VCO 29
3 SAP VCO 9
4 ST LPF 30
5 SAP LPF 8
6 WIDE BAND 12
7 SPECTRAL 21
00001
COMPLETE!
"NG"
1 ATT 9
2 ST VCO 25
3 SAP VCO 8
4 ST LPF 30
5 SAP LPF 8
6 WIDE BAND 12
7 SPECTRAL 23
00001
TRY AGAIN!

⑤ TV Standard Mode

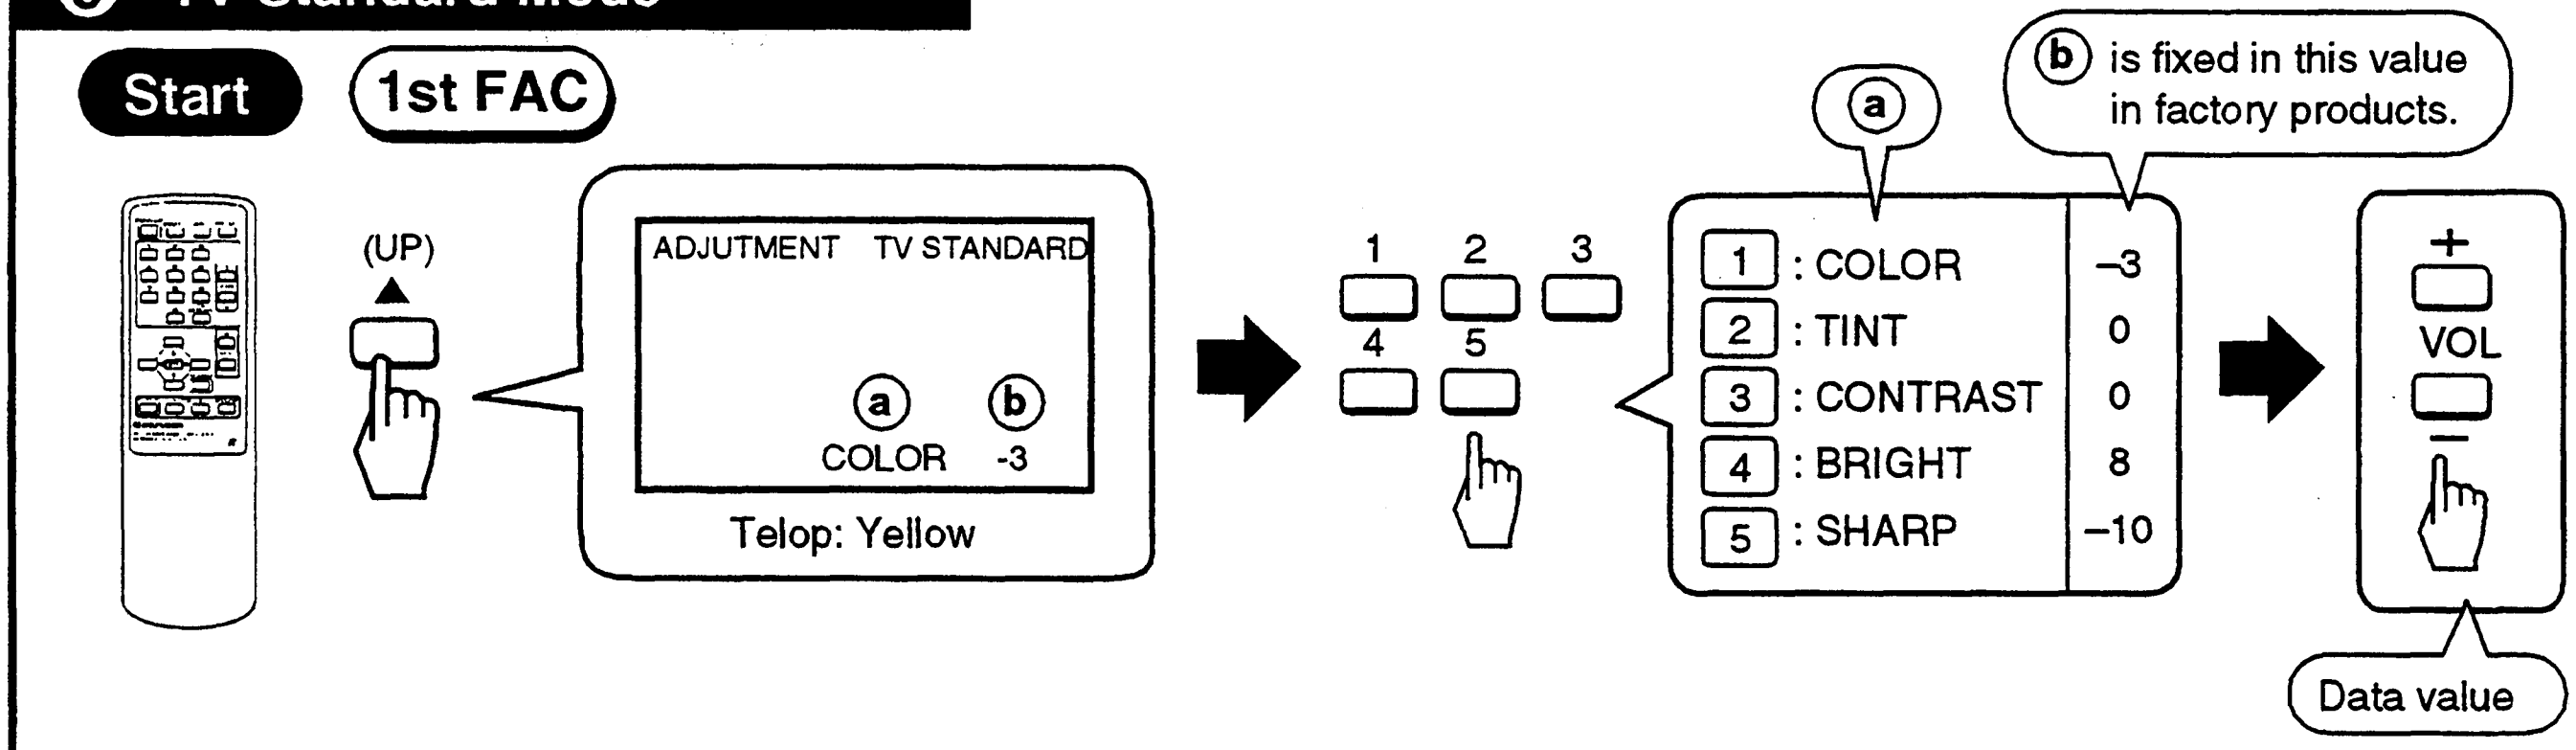
Start
1st FAC
(UP)
▲
ADJUTMENT TV STANDARD
ⓐ ⓑ
COLOR -3
Telop: Yellow
1 2 3 4 5
ⓐ
ⓑ is fixed in this value in factory products.
1 : COLOR –3
2 : TINT 0
3 : CONTRAST 0
4 : BRIGHT 8
5 : SHARP –10
+
VOL
–
Data value

⑥ Adjustment SIZE Mode

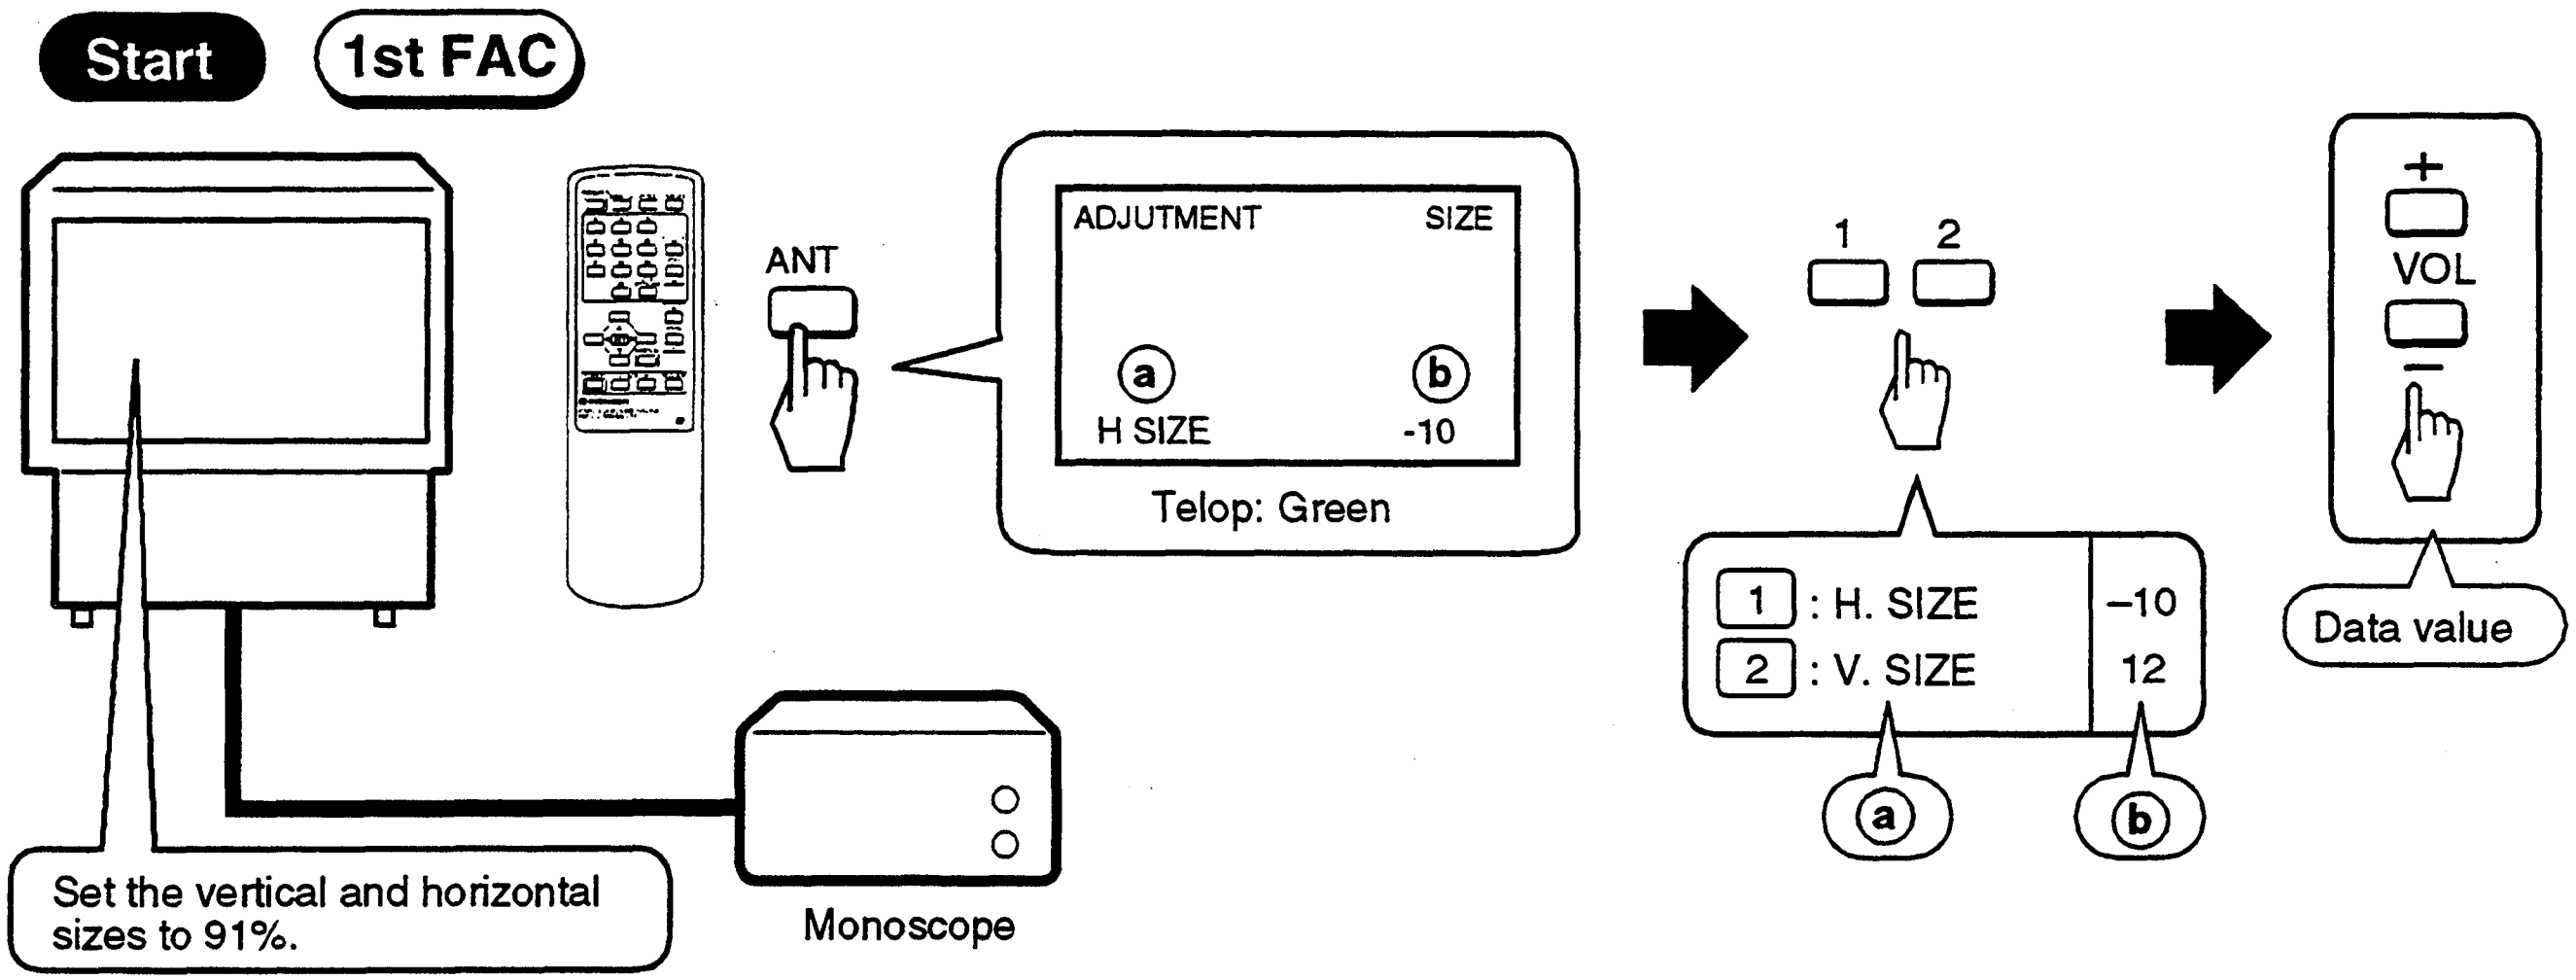
Start
1st FAC
ANT
ADJUTMENT SIZE
ⓐ ⓑ
H SIZE -10
Telop: Green
1 2
1 : H. SIZE –10
2 : V. SIZE 12
ⓐ ⓑ
+
VOL
–
Data value
Set the vertical and horizontal sizes to 91%.
Monoscope

Assembly Adjustment

❶ 135V Power Supply Adjustment

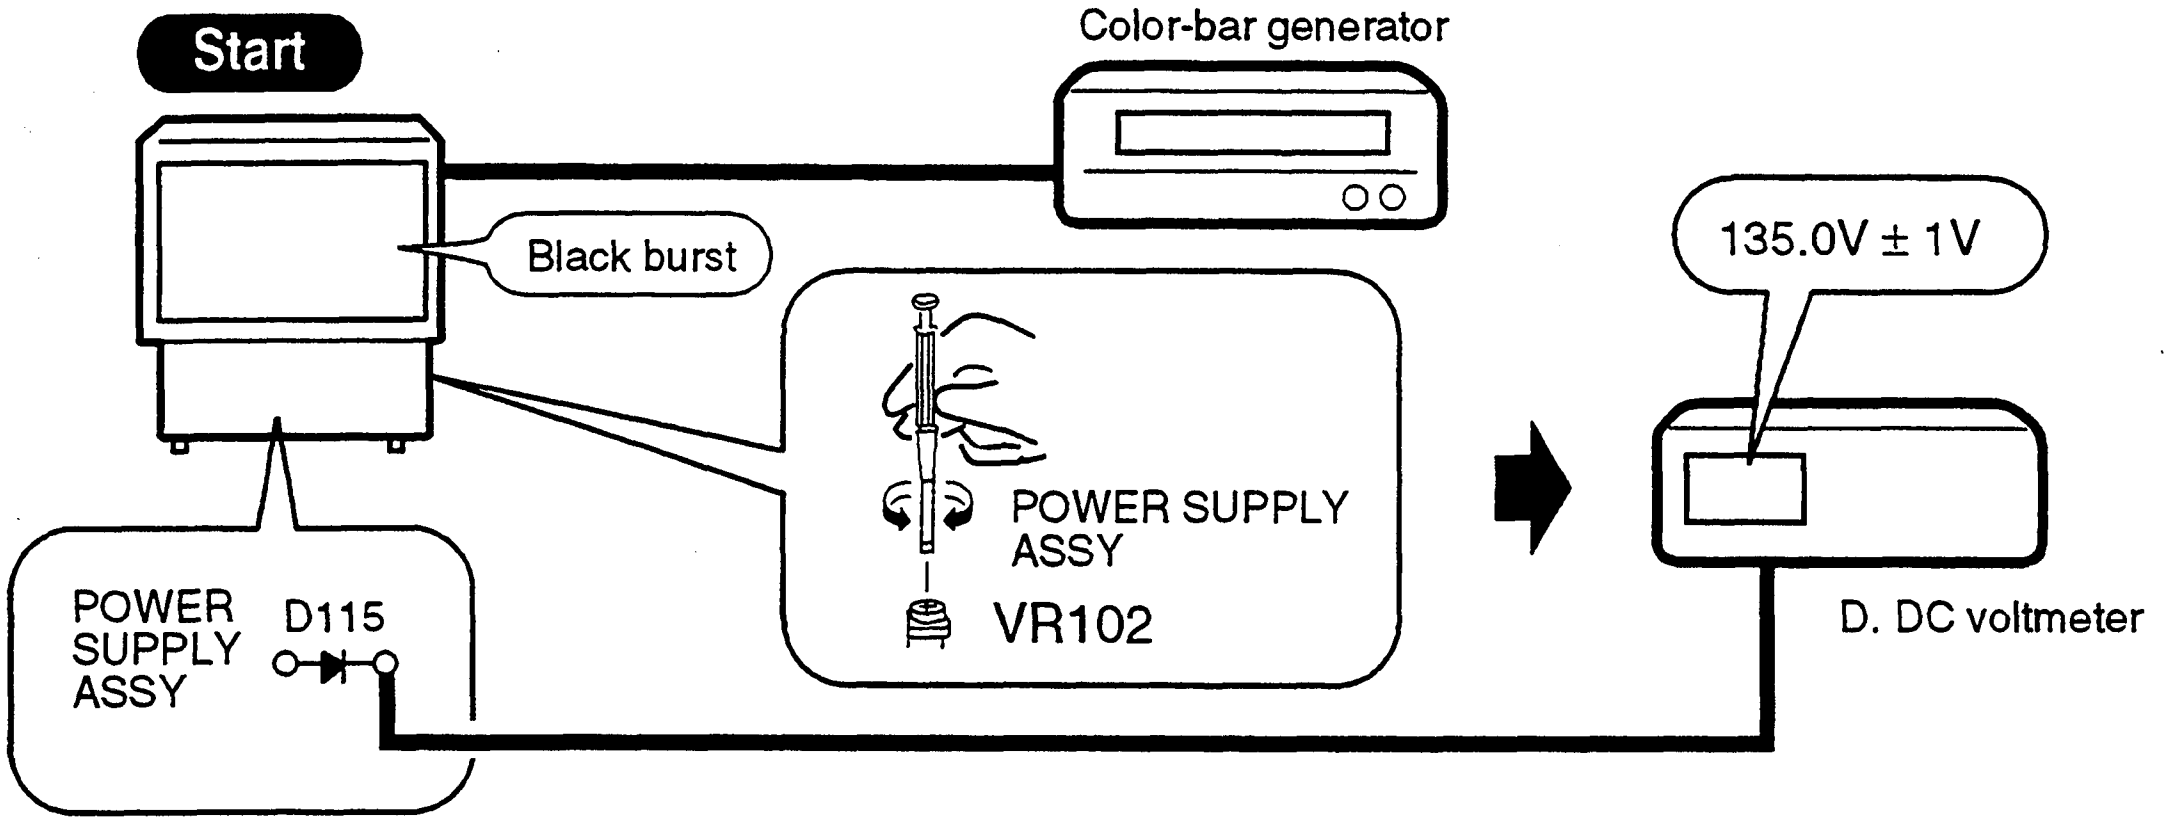
Start
Color-bar generator
Black burst
135.0V ± 1V
POWER SUPPLY ASSY
VR102
D. DC voltmeter
POWER SUPPLY ASSY
D115

❷ Contrast Coarse Adjustment

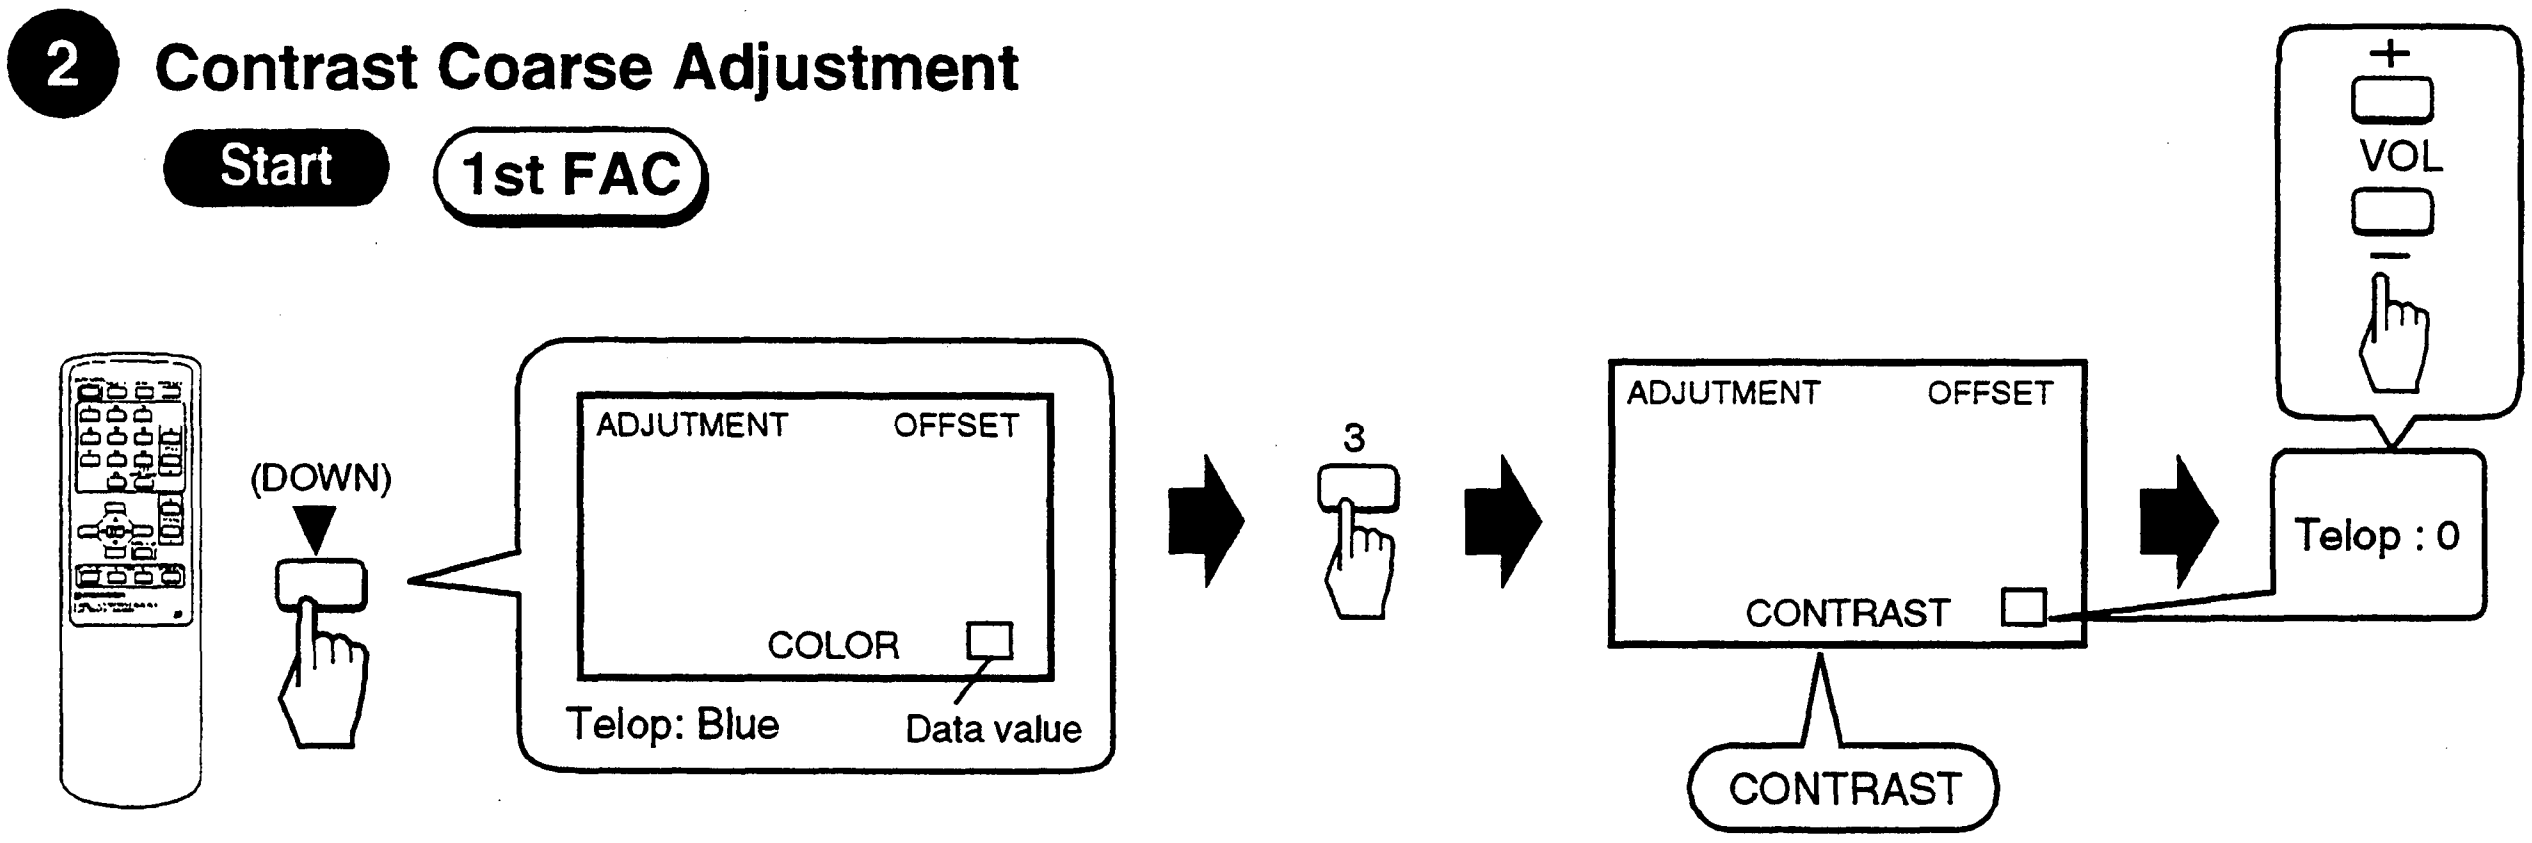
Start
1st FAC
(DOWN)
ADJUTMENT
OFFSET
COLOR
Telop: Blue
Data value
3
ADJUTMENT
OFFSET
CONTRAST
CONTRAST
+
VOL
–
Telop : 0

❸ Brightness Adjustment (PIONEER's Standard Setting)

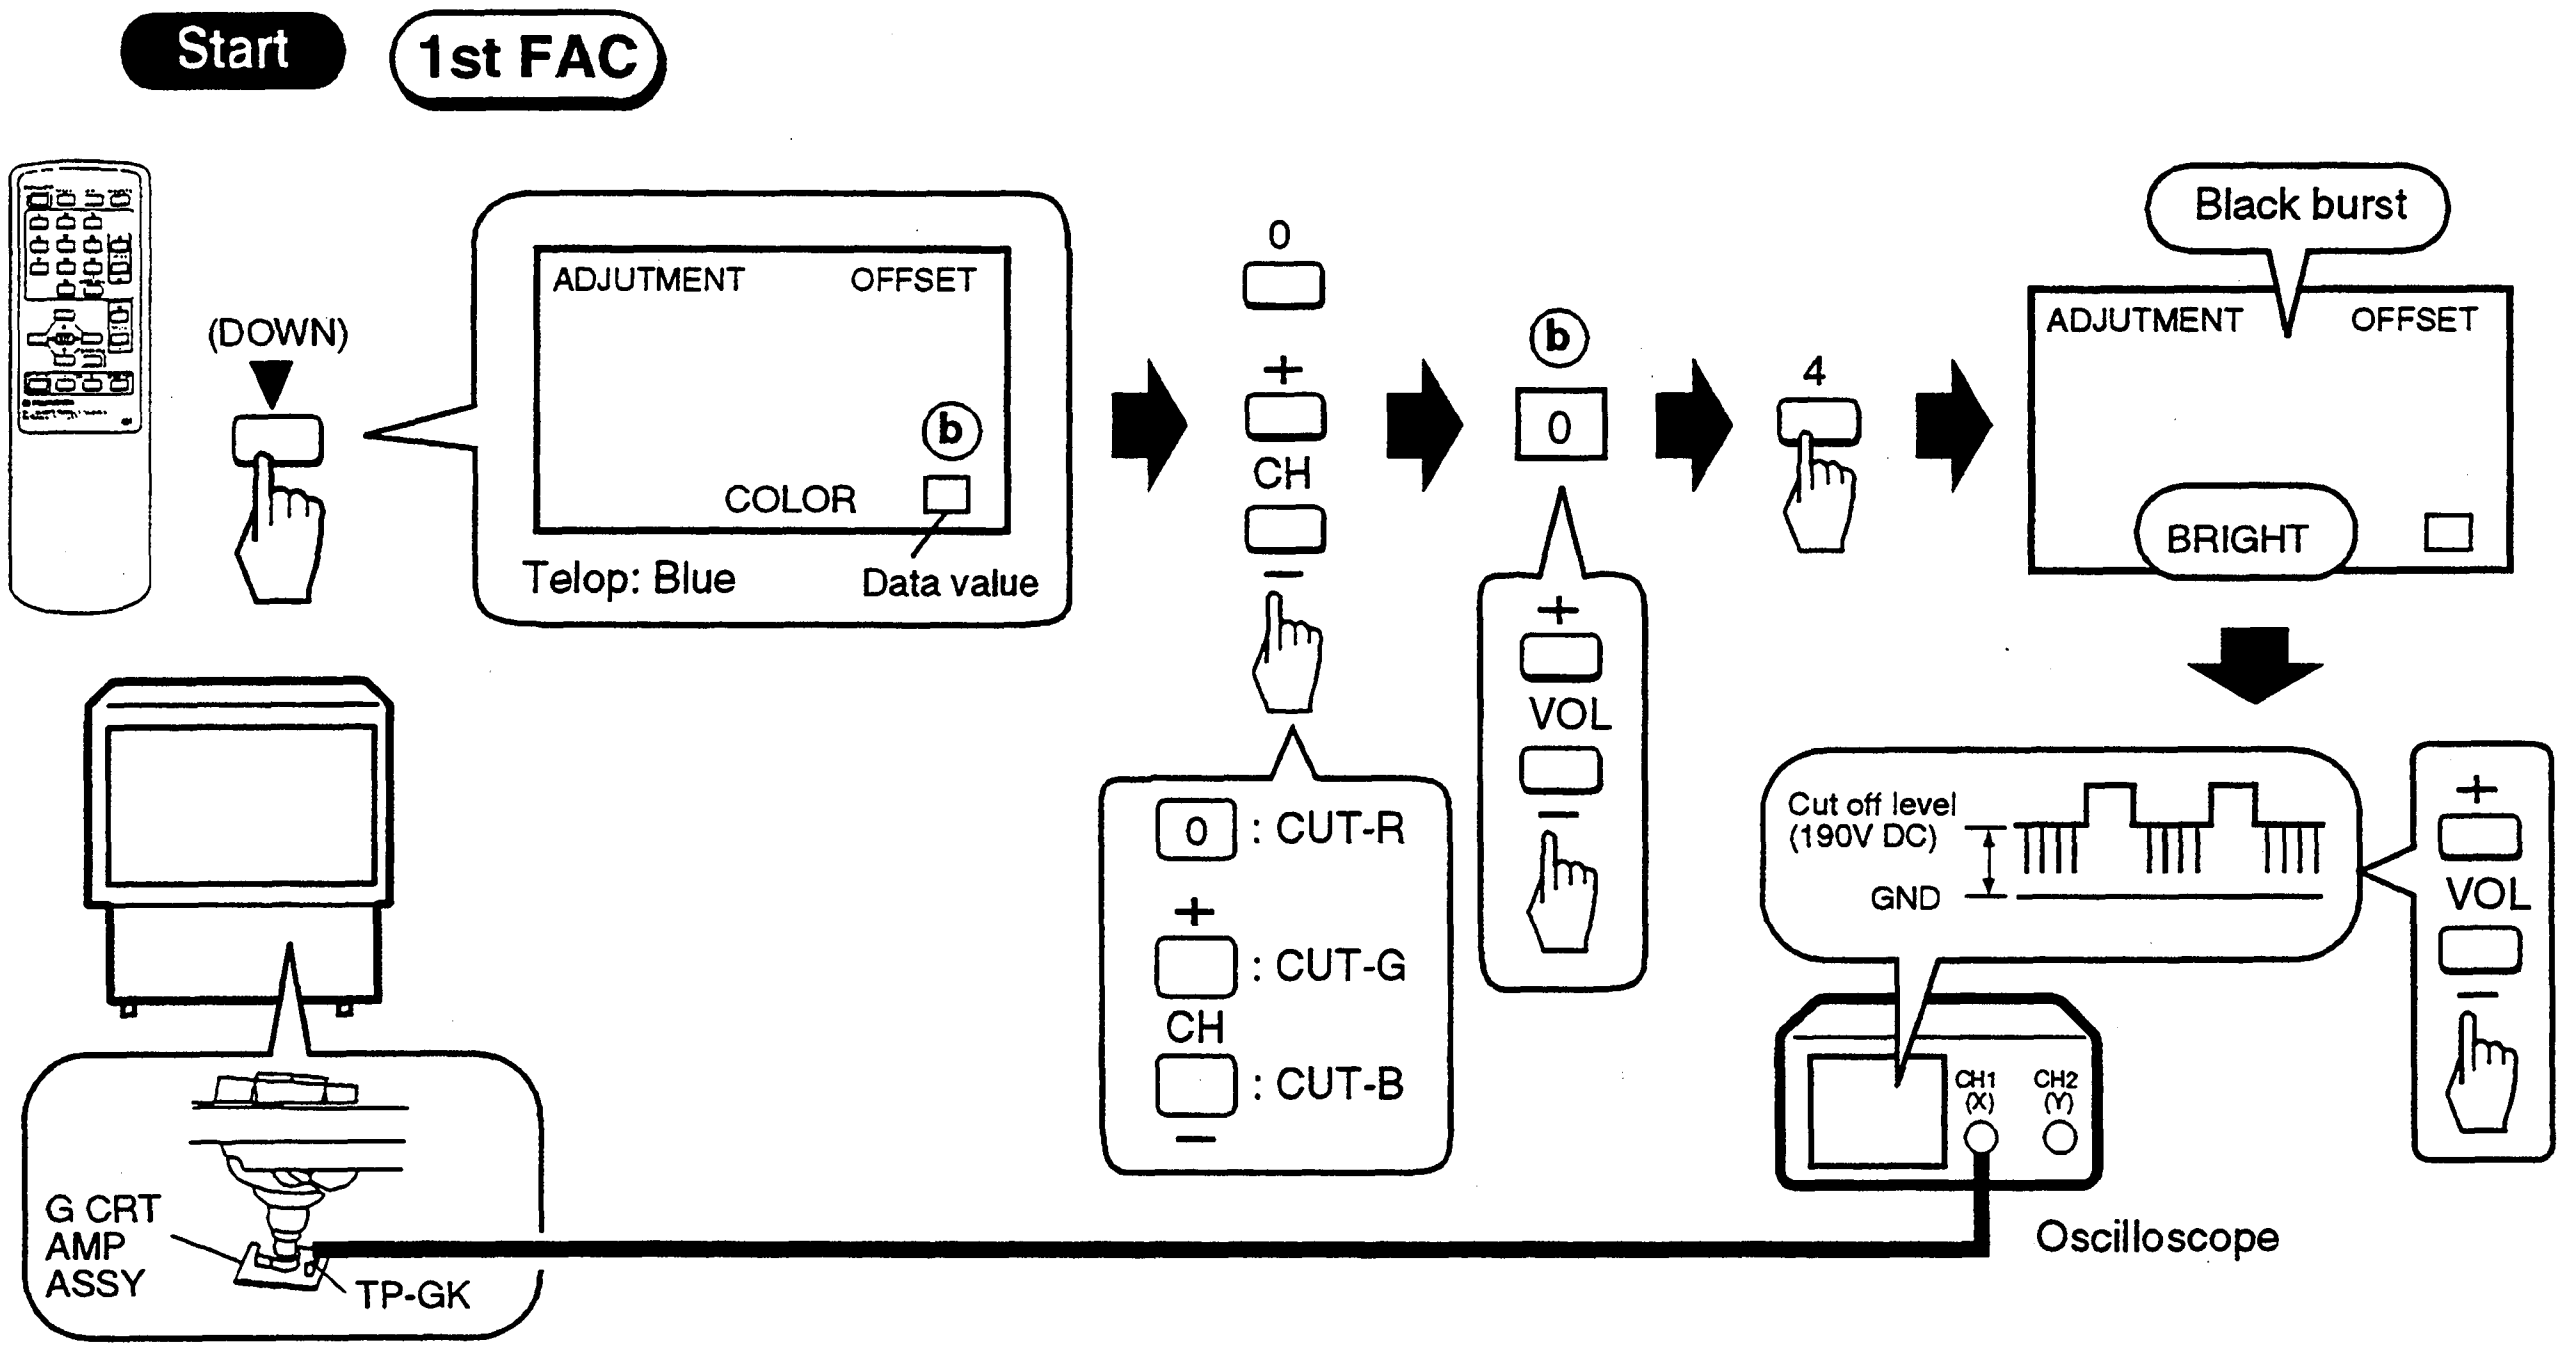
Start
1st FAC
(DOWN)
ADJUTMENT
OFFSET
ⓑ
COLOR
Telop: Blue
Data value
0
+
CH
–
0 : CUT-R
+
: CUT-G
CH
: CUT-B
–
ⓑ
0
+
VOL
–
4
Black burst
ADJUTMENT
OFFSET
BRIGHT
Cut off level
(190V DC)
GND
+
VOL
–
CH1 (X)
CH2 (Y)
Oscilloscope
G CRT AMP ASSY
TP-GK

④ Deflection Yoke Lean Adjustment

Start

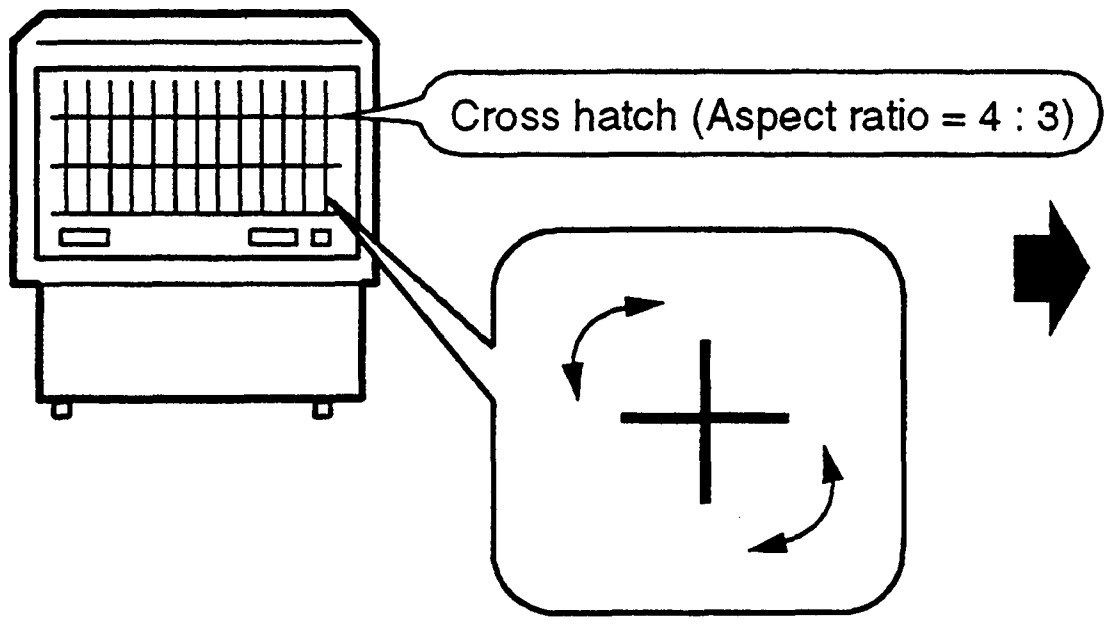
Cross hatch (Aspect ratio = 4 : 3)

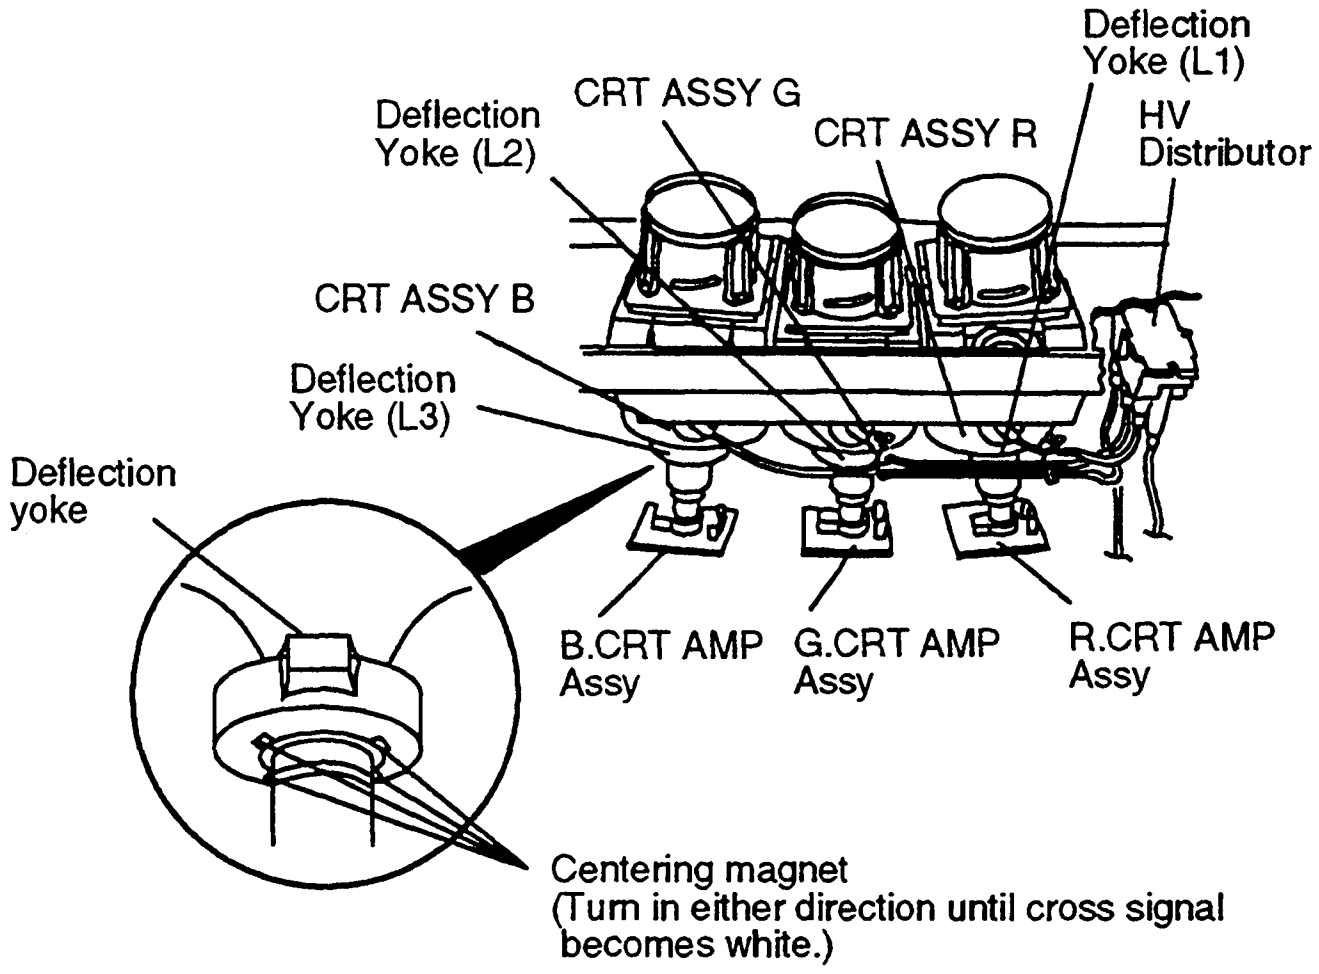
Deflection Yoke (L1)
HV Distributor
CRT ASSY G
CRT ASSY R
Deflection Yoke (L2)
CRT ASSY B
Deflection Yoke (L3)
Deflection yoke
B.CRT AMP Assy
G.CRT AMP Assy
R.CRT AMP Assy
Centering magnet
(Turn in either direction until cross signal becomes white.)

⑤ Screen Center Adjustment

Start

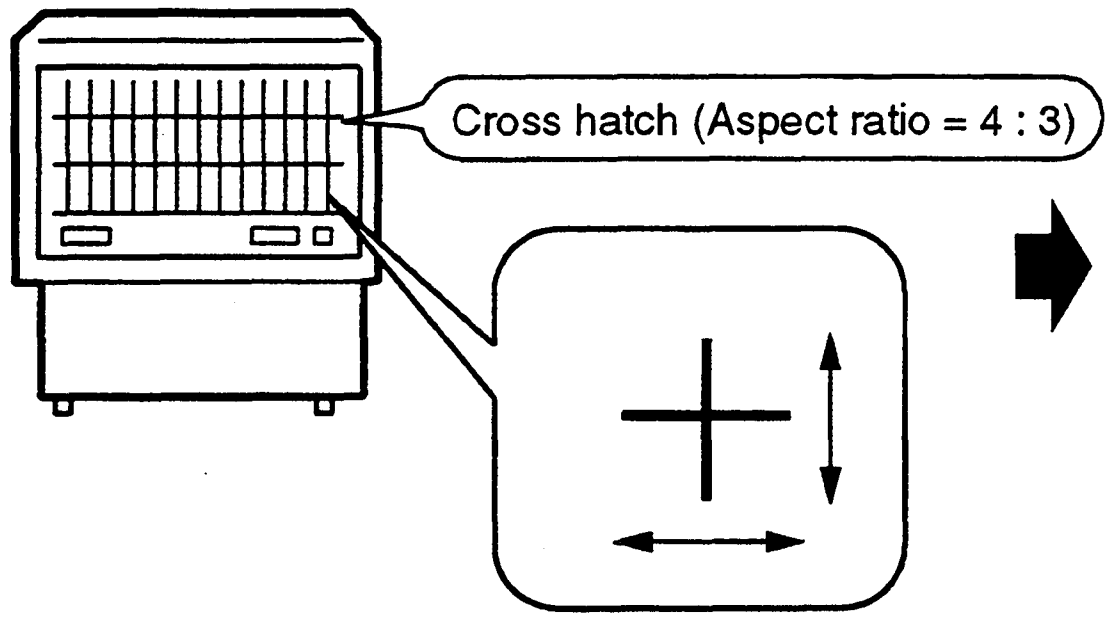
Cross hatch (Aspect ratio = 4 : 3)

- For red or blue adjustment, turn 1st FACTORY ADJ mode ON and then OFF to place the convergence POSITION at the center of the adjustable range.
- Move the centering magnet of the deflection yoke for the replaced color so that the horizontal and vertical lines at the center of the screen align with the lines for a color not replaced.

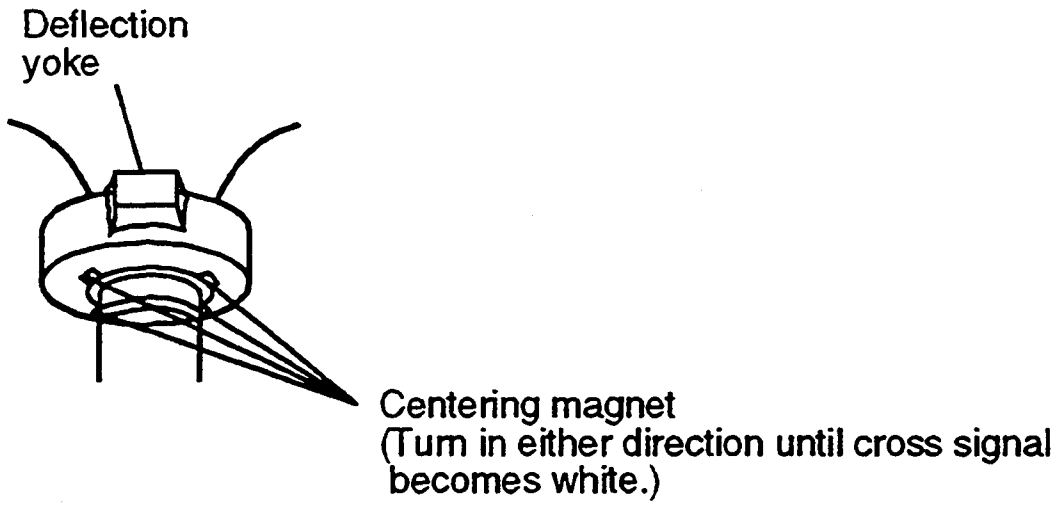
Deflection yoke
Centering magnet
(Turn in either direction until cross signal becomes white.)

⑥ Focus Adjustment of Lens Assy

Start

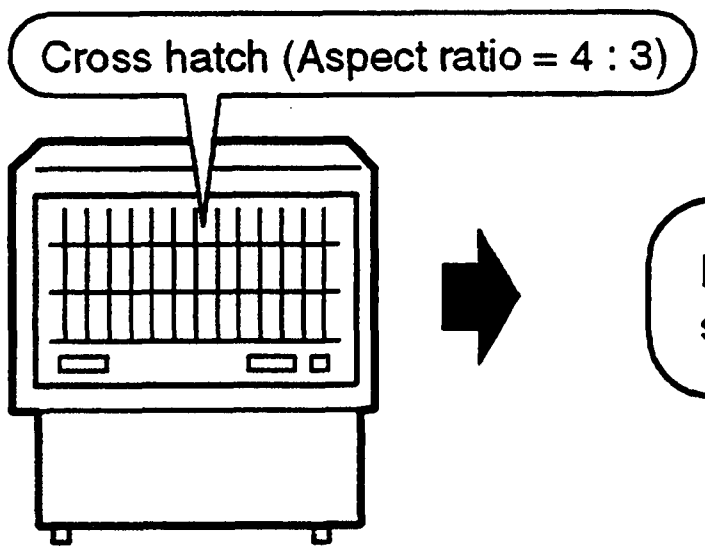
Cross hatch (Aspect ratio = 4 : 3)

Remove the screen frame.

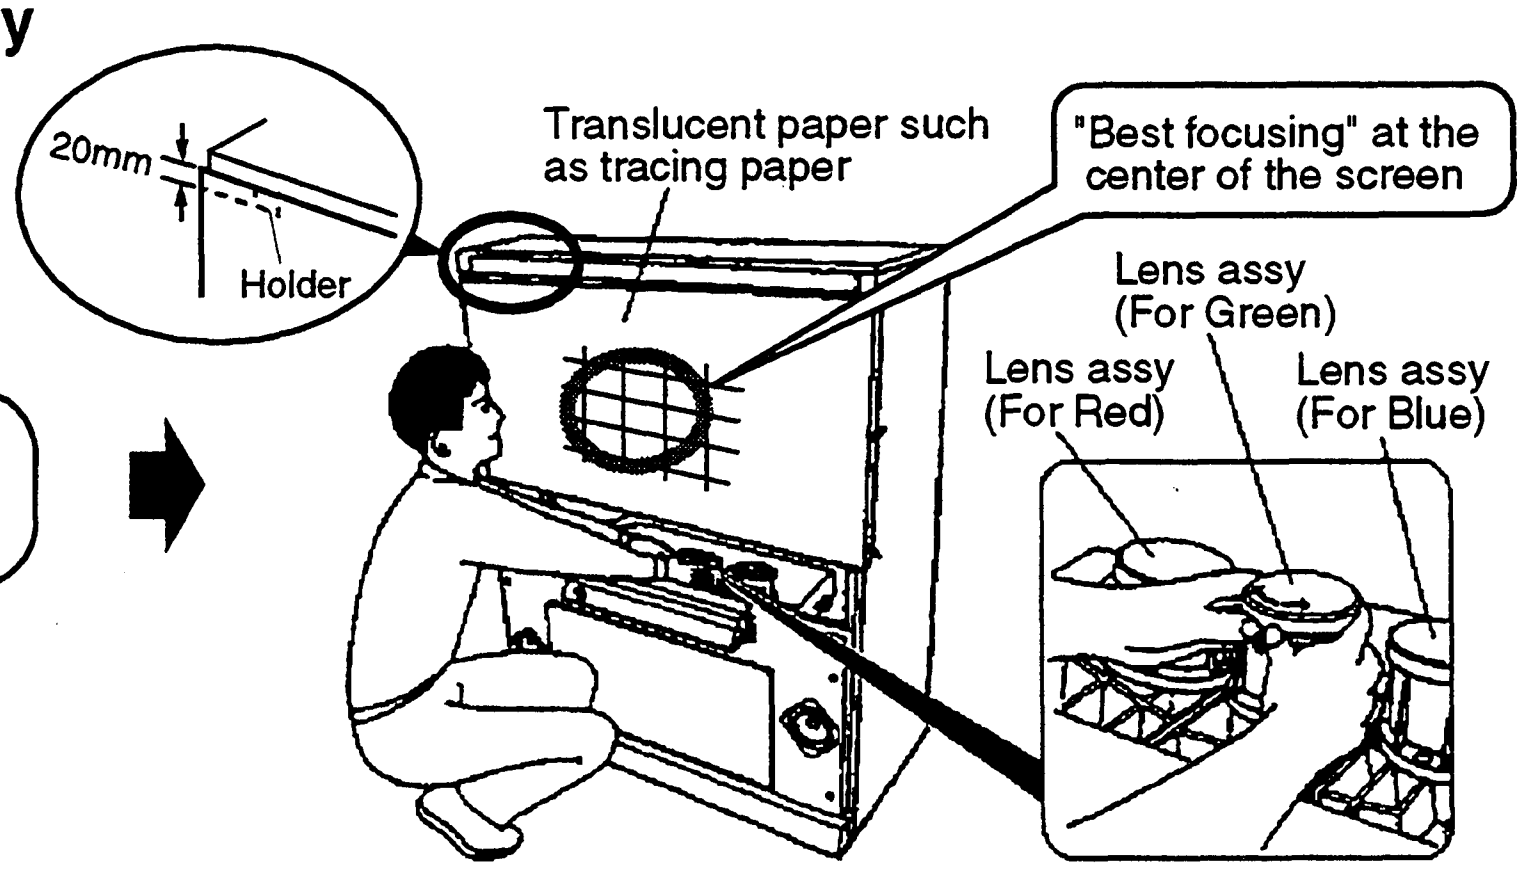
20mm
Holder
Translucent paper such as tracing paper
"Best focusing" at the center of the screen
Lens assy (For Green)
Lens assy (For Red)
Lens assy (For Blue)

7 Focus VR Adjustment

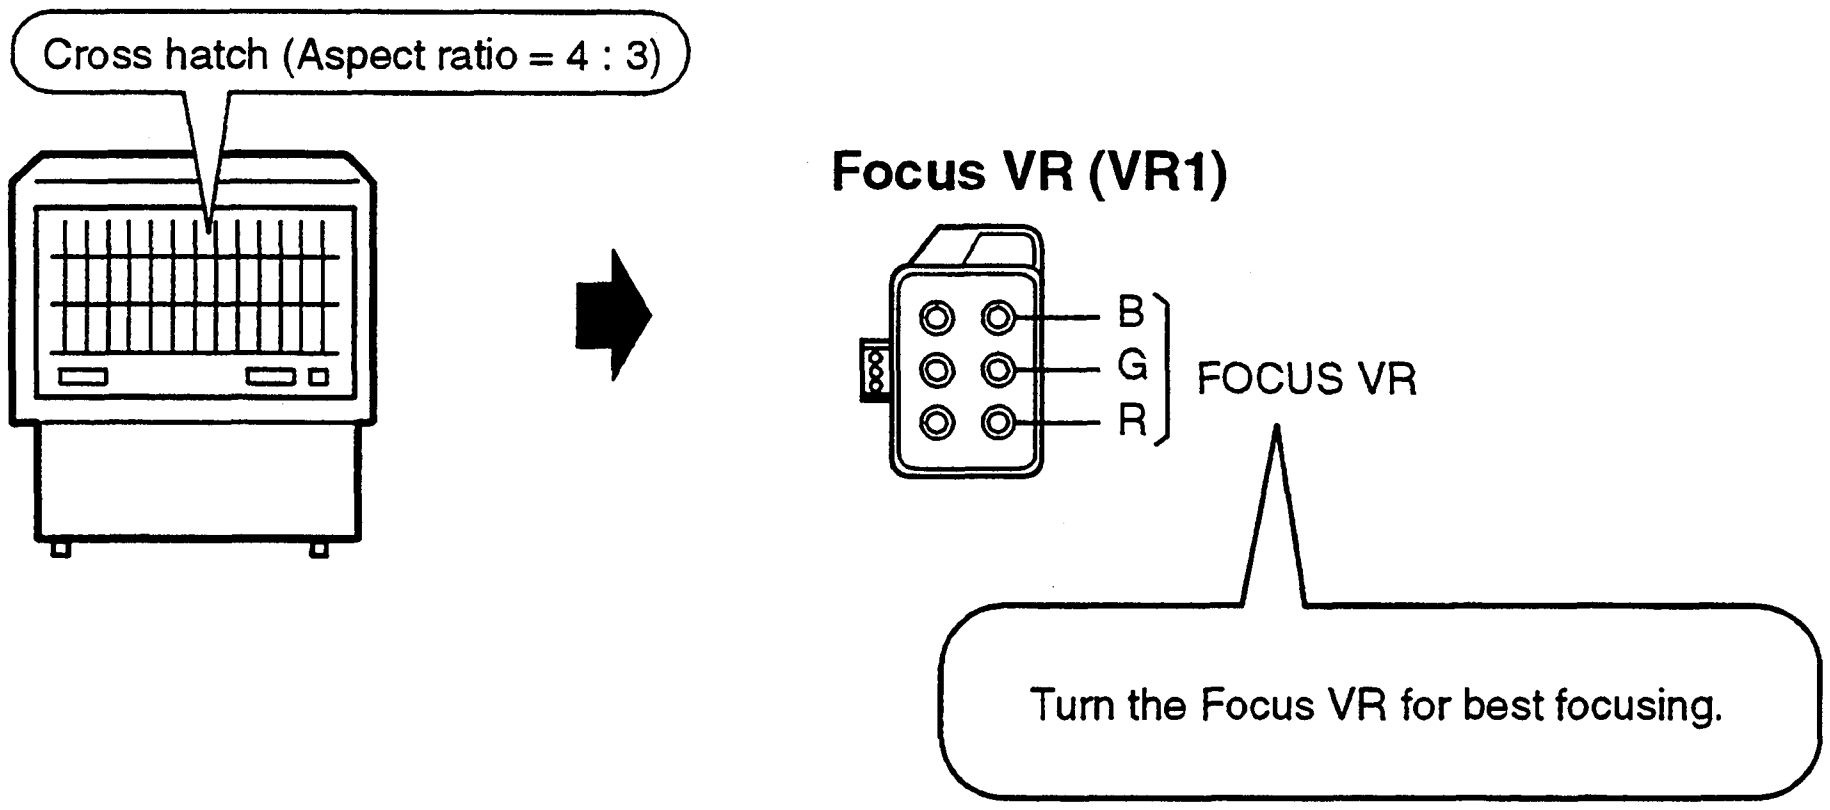
Cross hatch (Aspect ratio = 4 : 3)
Focus VR (VR1)
B
G
R
FOCUS VR

Turn the Focus VR for best focusing.

8 Horizontal Size Adjustment

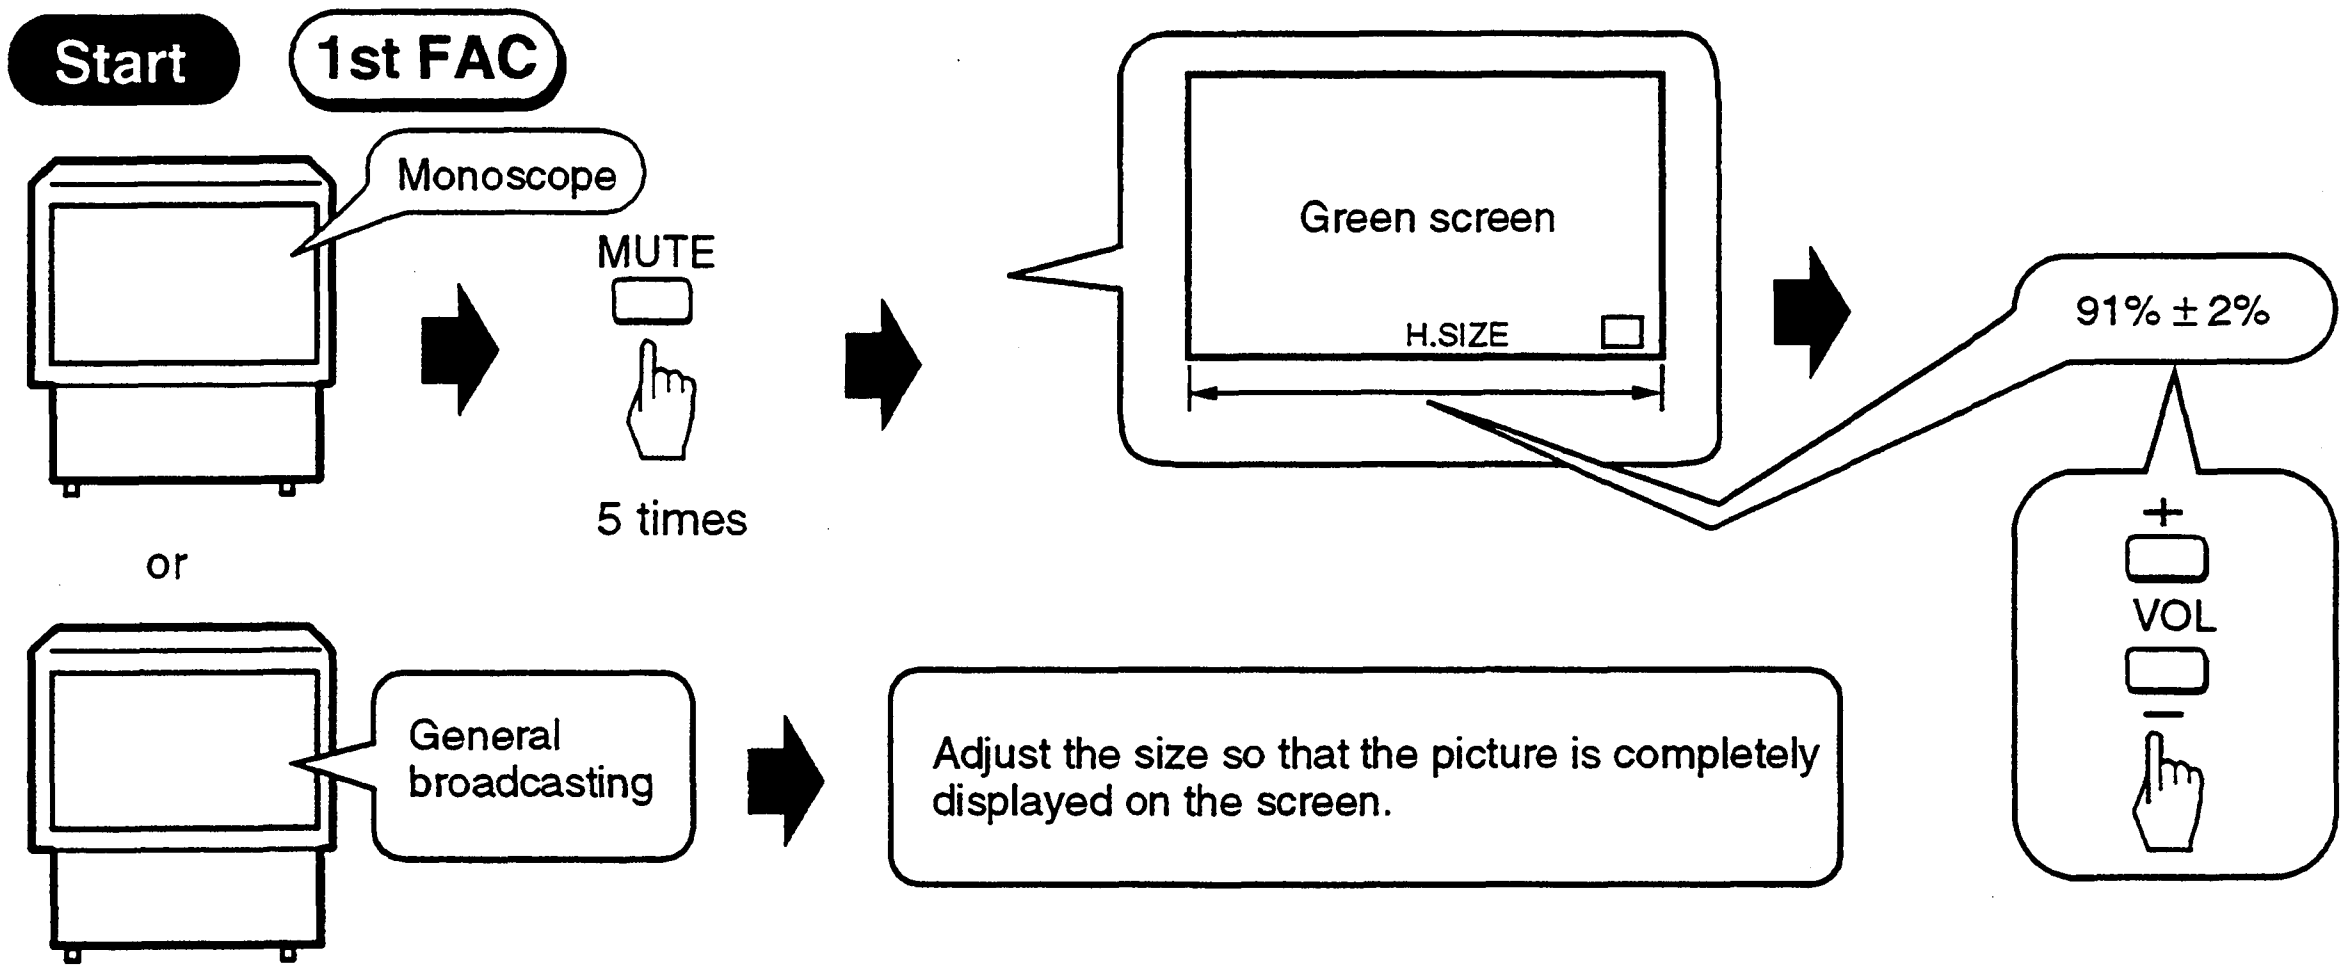
Start
1st FAC
Monoscope
MUTE
5 times
or
General broadcasting
Green screen
H.SIZE
91% ± 2%
+
VOL
−

Adjust the size so that the picture is completely displayed on the screen.

9 Vertical Size Adjustment

Note :
After the V. SIZE adjustment, enter the H. SIZE adjustment by pressing "1" key and readjust.

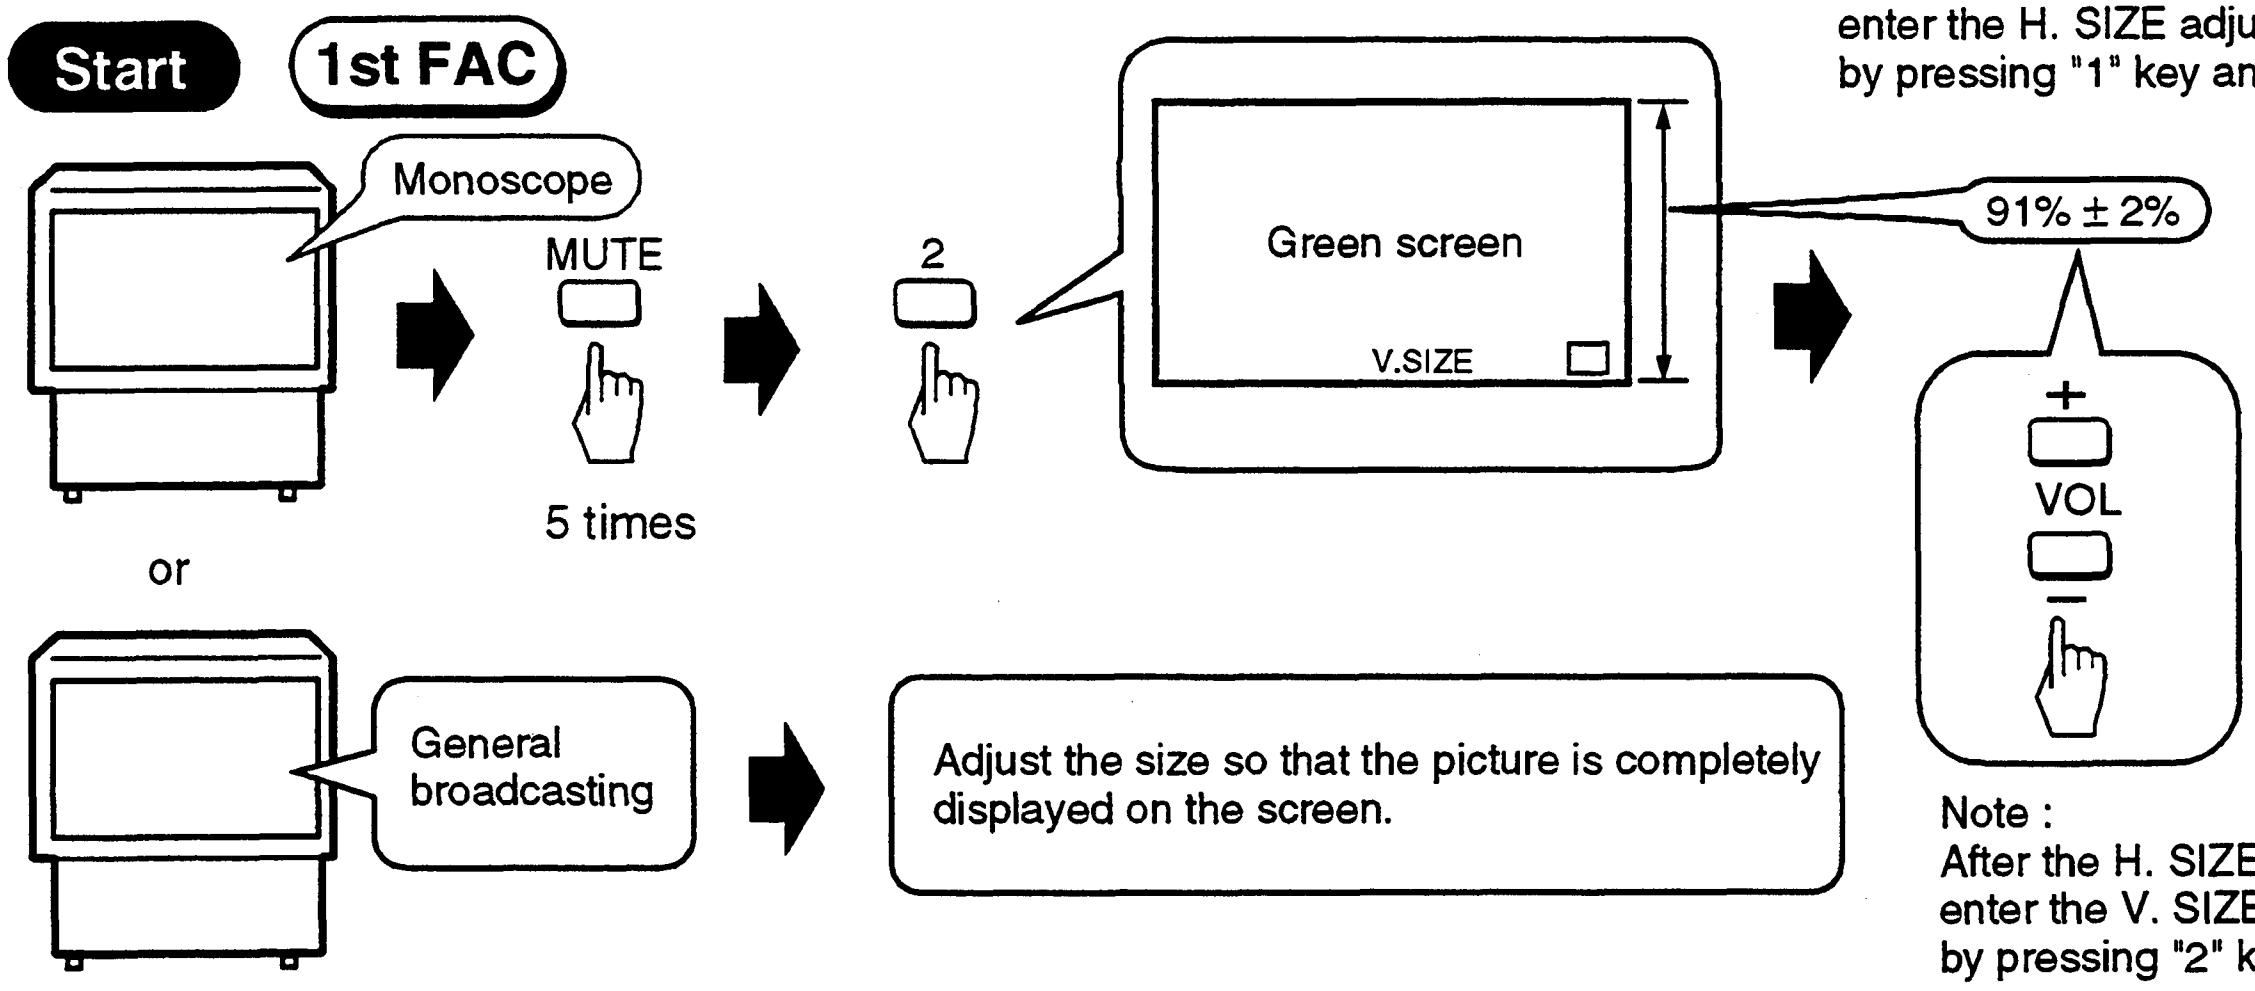
Start
1st FAC
Monoscope
MUTE
5 times
2
or
General broadcasting
Green screen
V.SIZE
91% ± 2%
+
VOL
−

Adjust the size so that the picture is completely displayed on the screen.

Note :
After the H. SIZE adjustment, enter the V. SIZE adjustment by pressing "2" key.

⑩ Convergence adjustment

⑩-1 Green line adjustment (1st FAC)

- Adjustment in the horizontal direction

Note :
The convergence for this device must be adjusted for each screen size normal cinema and full cinema.

Start

- See ③ Convergence Setting Mode in the Factory Adjustment mode.
- Input cross-hatch signals to this device's video input terminal.

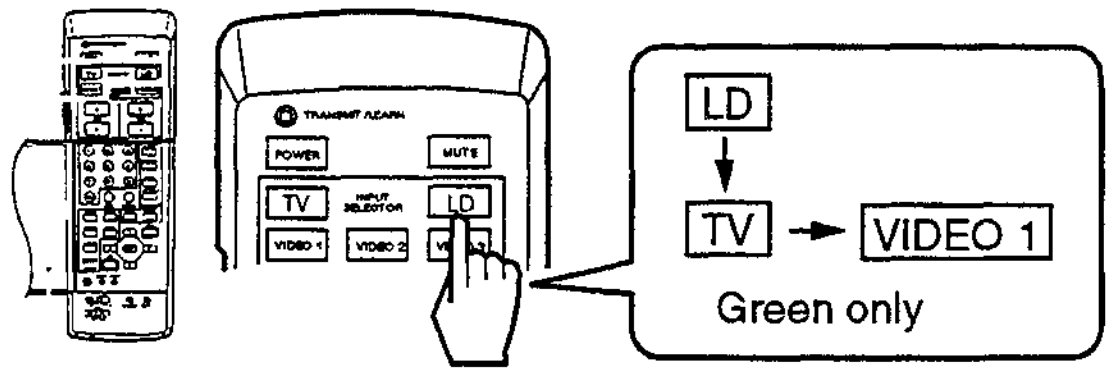

POWER
MUTE
TV
LD
VIDEO 1
VIDEO 2
LD
TV → VIDEO 1
Green only

- Use the remote control unit CU-SD076 for servicing.

• Select the Adjustment item
GH - STATIC

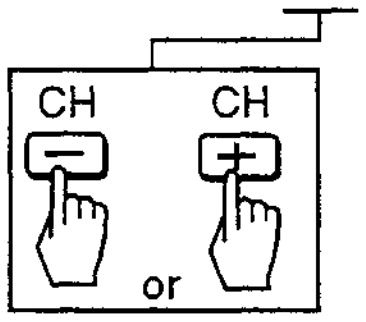

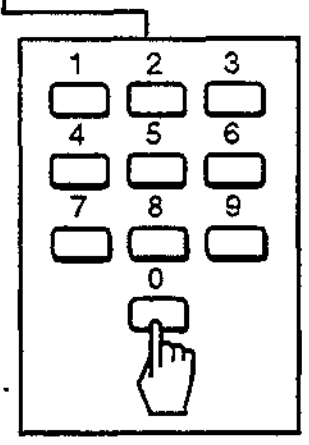

1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

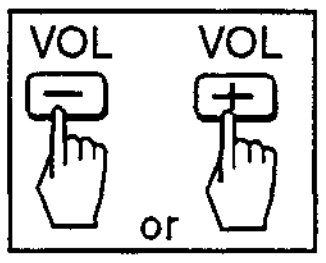

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust H-STATIC.

	Adjustment Item	Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Center-line Adjustment	GH - STATIC		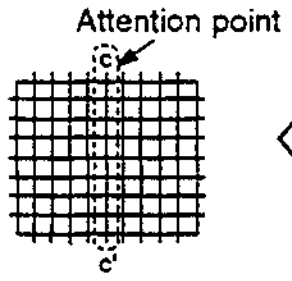 Attention point c c'		Move the center vertical line at the center of the screen.
	GH - SKEW		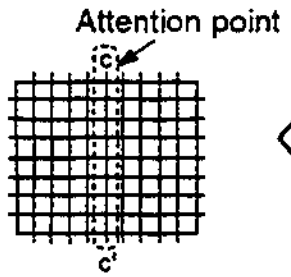 Attention point c c'		Adjust so that the center vertical line is not leaned.
	GH - BOW		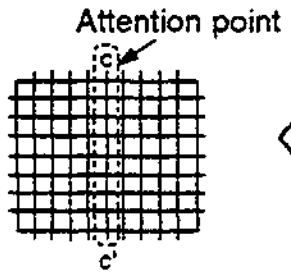 Attention point c c'		Adjust so that the bowed center vertical line at the center of the screen to a straight line.
	GH - 4TH BOW		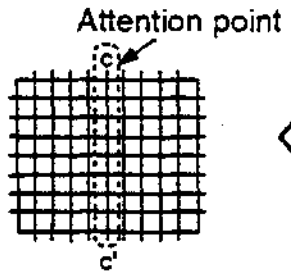 Attention point c c'		Adjust so that the wavy center vertical line at the center of the screen to a straight line.
Line-interval Adjustment	GH - LIN		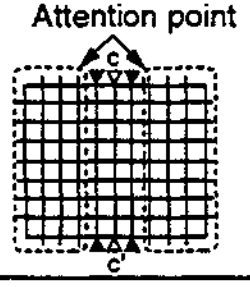 Attention point c c'		Adjust so that the intervals of the vertical lines in the right and left sections of the screen are symmetrically and correct the size.
	GH - 4TH LIN		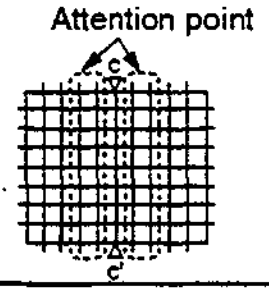 Attention point c c'		
	GH - SIZE		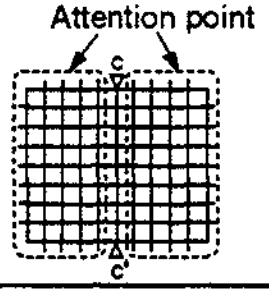 Attention point c c'		
	GH - SUB LIN		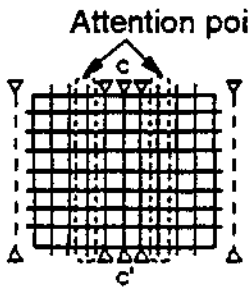 Attention point c c'		

Note : ▻——◅ : Line which does not move at all   c▻——◅c' : Center vertical line   ►——◄ : Line which hardly moves
▻----◅ : Line which does not move out of the screen

• Select the Adjustment item

GH - SUB KEY

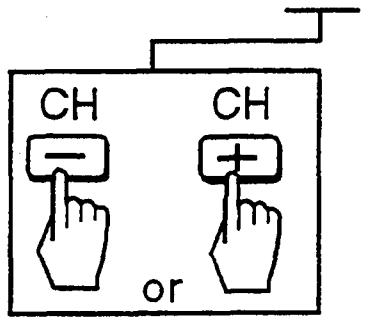

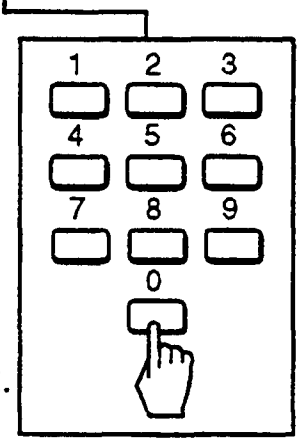
1 2 3
4 5 6
7 8 9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

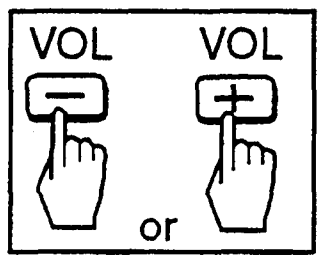

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust H-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Lean Adjustment	**GH - SUB KEY**		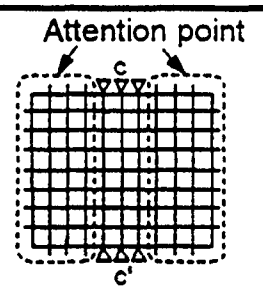 Attention point c c'		Adjust so that the vertical lines in the right and left sections of the screen are not leaned.
	GH - KEY		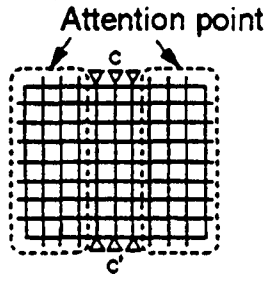 Attention point c c'		
Distortion Adjustment	**GH - SUB PIN**		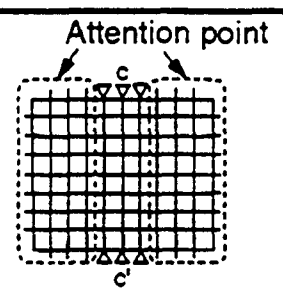 Attention point c c'		Adjust so that the vertical lines in the right and left sections of the screen are not distorted and are straight.
	GH - M S PIN		 Attention point c c'		
	GH - 4S PIN		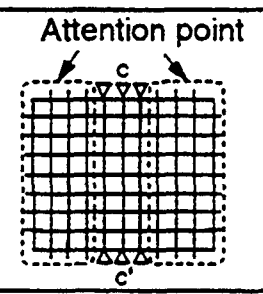 Attention point c c'		
	GH - PIN		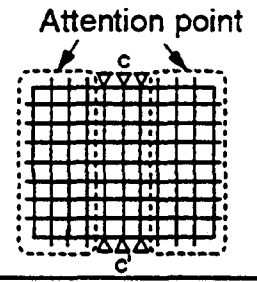 Attention point c c'		
	GH - MID PIN		 Attention point c c'		
	GH - 4TH PIN		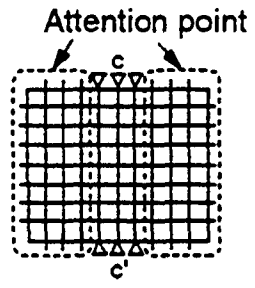 Attention point c c'		

Note : ▷——◁ : Line which does not move c▷——◁c' : Center vertical line

⑩-2 Green line adjustment (1st FAC)

- Adjustment in the vertical direction

Start

• Select the Adjustment item

GV - STATIC

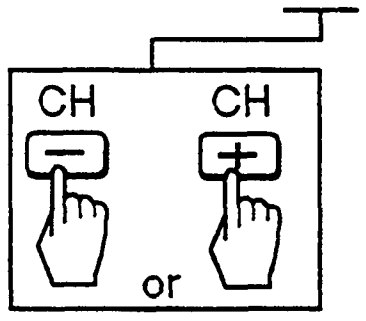

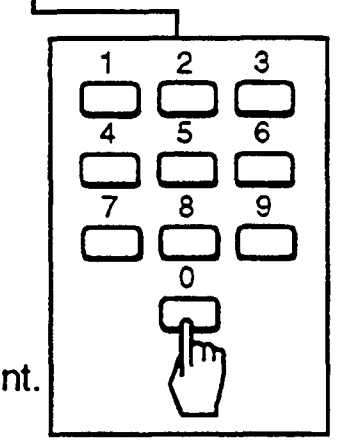
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

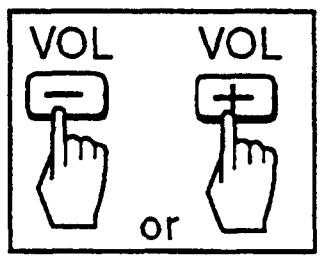

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust V-STATIC.

	Adjustment Item	Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Center-line Adjustment	GV - STATIC		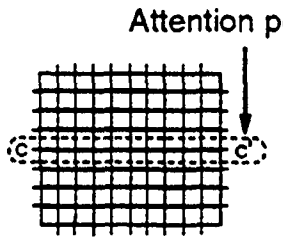 Attention point c c'		Move the center horizontal line at the center of the screen.
	GV - SKEW		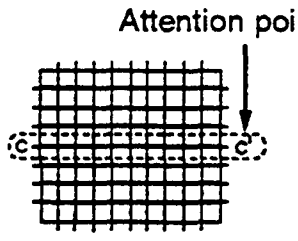 Attention point c c'		Adjust so that the center horizontal line is not leaned.
	GV - BOW		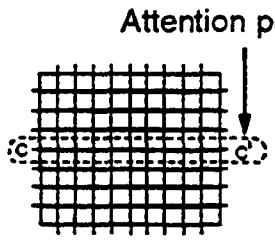 Attention point c c'		Adjust so that the bowed center horizontal line at the center of the screen to a straight line.
Line-interval Adjustment	GV - LIN		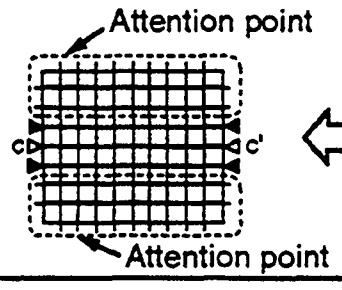 Attention point c c' Attention point		Adjust so that the intervals of the horizontal lines in the upper and lower sections of the screen are symmetrically and correct the size.
	GV - SIZE		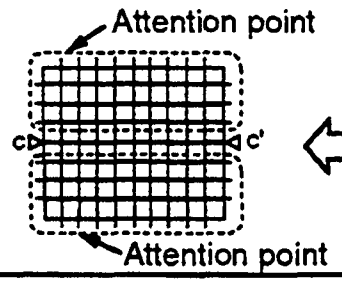 Attention point c c' Attention point		
	GV - SUB LIN		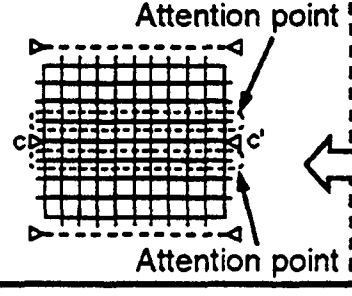 Attention point c c' Attention point		

Note : ▷——◁ : Line which does not move at all c▷——◁c' : Center horizontal line ▶——◀ : Line which hardly moves
▷- - - -◁ : Line which does not move out of the screen

• Select the Adjustment item
GV - SUB KEY

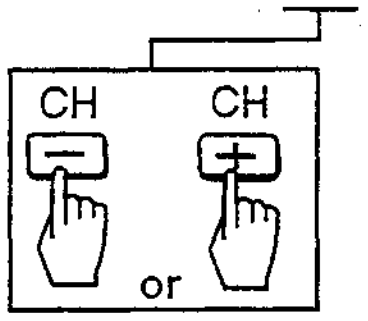

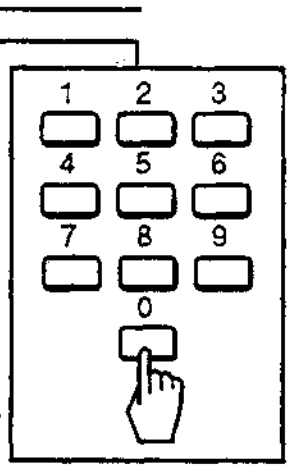
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

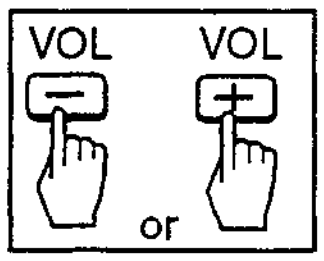

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust V-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Lean Adjustment	GV - SUB KEY		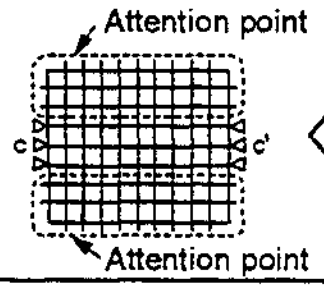 Attention point c c' Attention point		Adjust so that the horizontal lines in the upper and lower sections of the screen are not leaned.
	GV - KEY		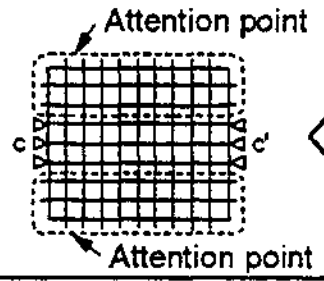 Attention point c c' Attention point		
	GV - MID KEY		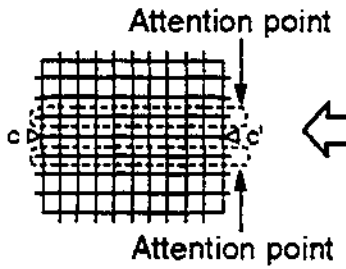 Attention point c c' Attention point		
Distortion Adjustment	GV - SUB PIN		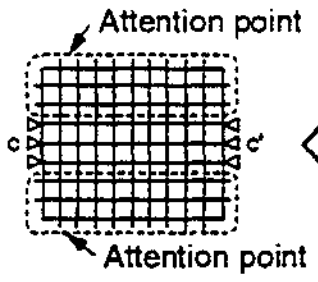 Attention point c c' Attention point		Adjust so that the horizontal lines in the upper and lower sections of the screen are not distorted and are straight.
	GV - SC PIN		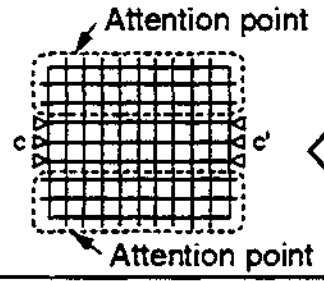 Attention point c c' Attention point		
	GV - PIN		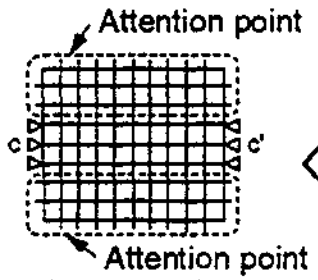 Attention point c c' Attention point		
	GV - MID PIN		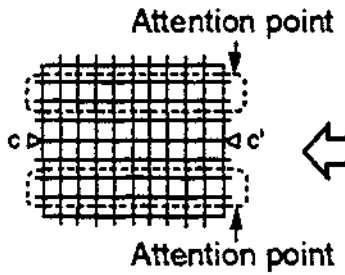 Attention point c c' Attention point		
	GV - 4TH PIN		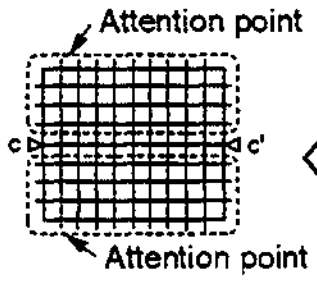 Attention point c c' Attention point		

Note : ▷——◁ : Line which does not move   c▷——◁c' : Center vertical line

⑩-3 Red line adjustment (1st FAC)

- Adjustment in the horizontal direction

Start

- See ③ Convergence Setting Mode in the Factory Adjustment mode.
- Input cross-hatch signals to this device's video input terminal.

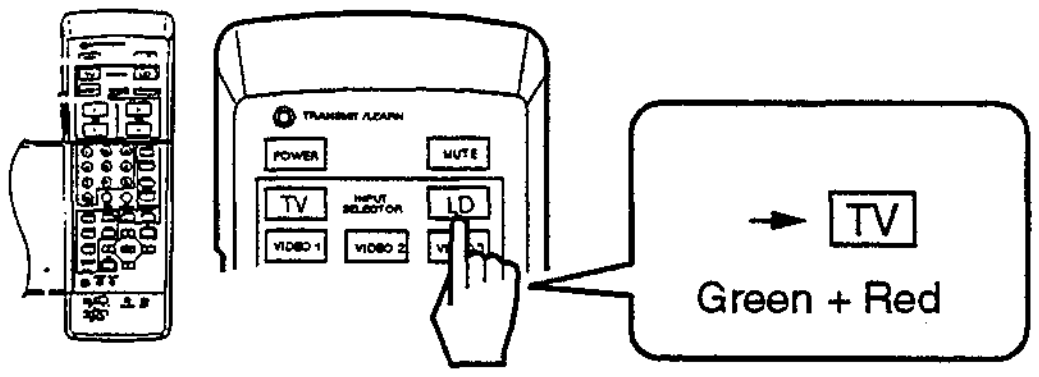
POWER
MUTE
TV
INPUT SELECTOR
LD
VIDEO 1
VIDEO 2
→ TV
Green + Red

- Use the remote control unit CU-SD076 for servicing.

• Select the Adjustment item

RH - STATIC

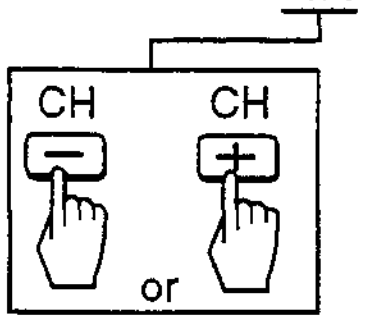

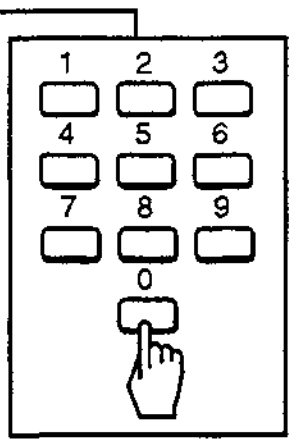
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

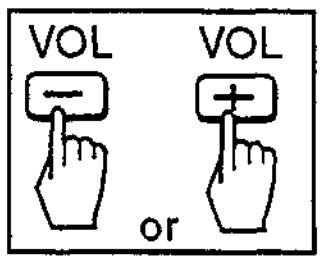

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust H-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	**Optimum**	**Deviated**	
Center-line Adjustment	**RH - STATIC**		 Attention point c c'		Converge the center vertical line in the green vertical line.
	RH - SKEW		 Attention point c c'		Adjust so that the center vertical line is not leaned.
	RH - BOW		 Attention point c c'		Adjust so that the bowed center vertical line at the center of the screen to a straight line.
	RH - 4TH BOW		 Attention point c c'		Adjust so that the wavy center vertical line at the center of the screen to a straight line.
Line-interval Adjustment	**RH - LIN**		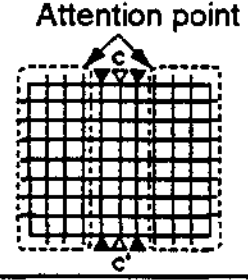 Attention point c c'		Adjust so that the intervals of the vertical lines in the right and left sections of the screen are symmetrically and converge them in the green vertical lines.
	RH - 4TH LIN		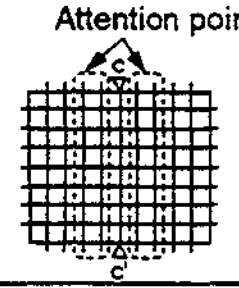 Attention point c c'		
	RH - SIZE		 Attention point c c'		
	RH - SUB LIN		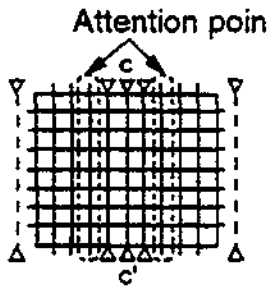 Attention point c c'		

Note : ▹———◃ : Line which does not move at all c▹———◃c' : Center vertical line ▸———◂ : Line which hardly moves
▹- - - -◃ : Line which does not move out of the screen

• Select the Adjustment item

RH - SUB KEY

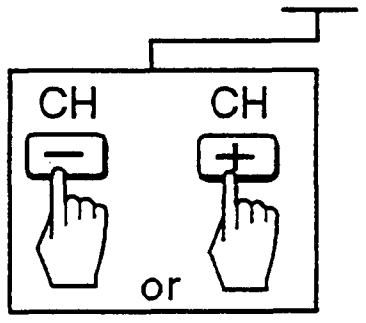

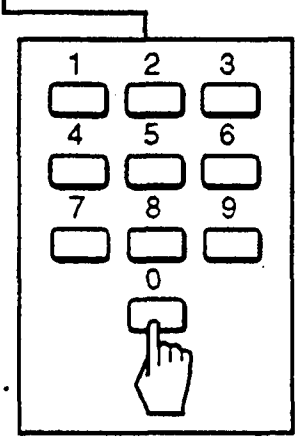
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

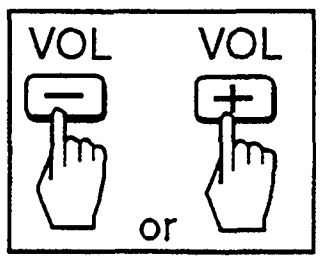

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust H-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Lean Adjustment	**RH - SUB KEY**		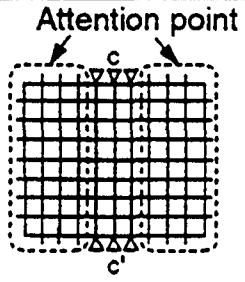 Attention point c c'		Adjust so that the vertical lines in the right and left sections of the screen are not leaned.
	RH - KEY		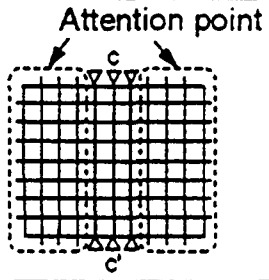 Attention point c c'		
Distortion Adjustment	**RH - SUB PIN**		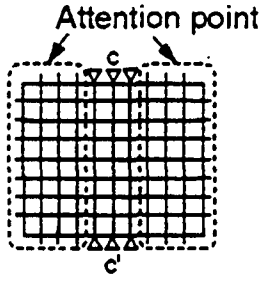 Attention point c c'		Adjust so that the vertical lines in the right and left sections of the screen are not distorted and are straight.
	RH - M S PIN		 Attention point c c'		
	RH - 4S PIN		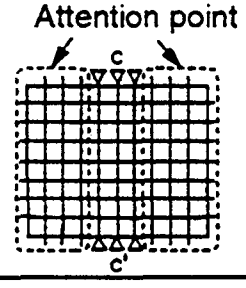 Attention point c c'		
	RH - PIN		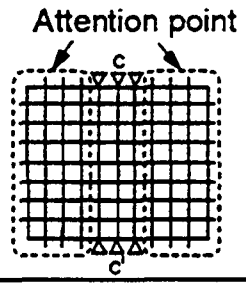 Attention point c c'		
	RH - MID PIN		 Attention point c c'		
	RH - 4TH PIN		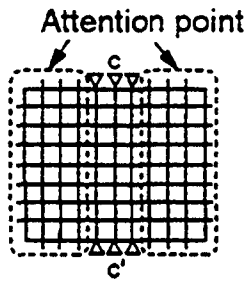 Attention point c c'		

Note : ▷——◁ : Line which does not move   c▷——◁c' : Center vertical line

⑩-4 Red line adjustment (1st FAC)

- Adjustment in the vertical direction

Start

• Select the Adjustment item

RV - STATIC

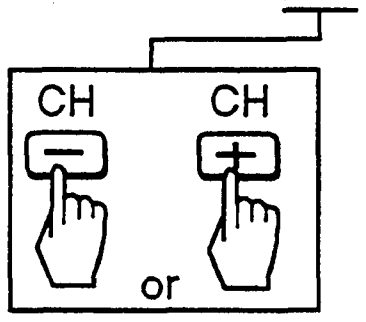

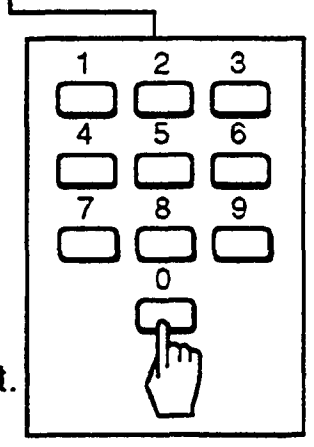
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

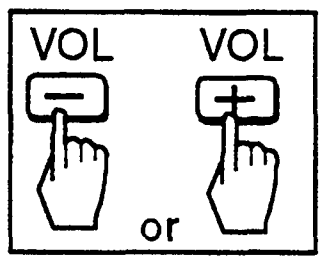

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust V-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Center-line Adjustment	RV - STATIC		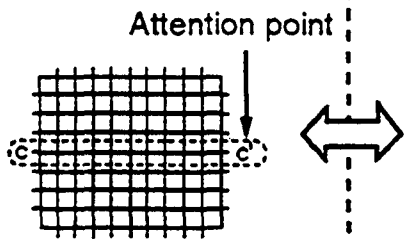 Attention point c c'		Converge the center horizontal line in the green horizontal line.
	RV - SKEW		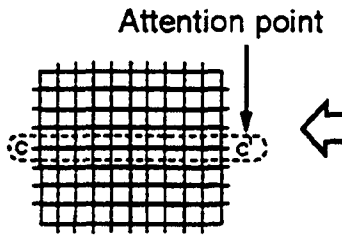 Attention point c c'		Adjust so that the center horizontal line is not leaned.
	RV - BOW		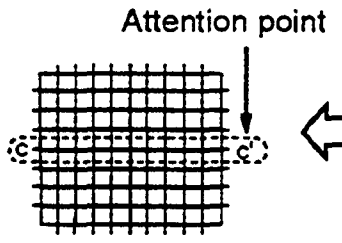 Attention point c c'		Adjust so that the bowed center horizontal line at the center of the screen to a straight line.
Line-interval Adjustment	RV - LIN		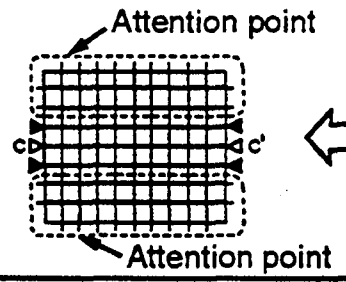 Attention point c c' Attention point		Adjust so that the intervals of the horizontal lines in the upper and lower sections of the screen are symmetrically and converge them in the green horizontal lines.
	RV - SIZE		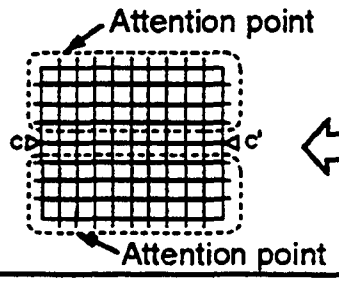 Attention point c c' Attention point		
	RV - SUB LIN		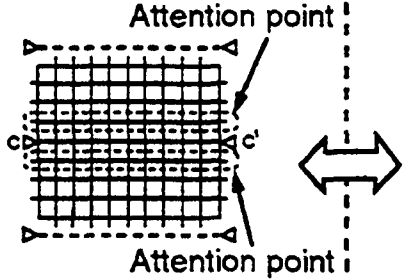 Attention point c c' Attention point		

Note : ▷——◁ : Line which does not move at all c▷——◁c' : Center horizontal line ▶——◀ : Line which hardly moves
▷-----◁ : Line which does not move out of the screen

- **Select the Adjustment item**

RV - SUB KEY

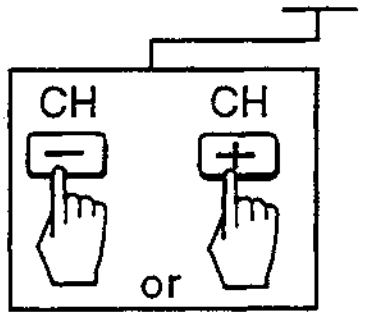

In particular, be aware of the setting before adjustment.

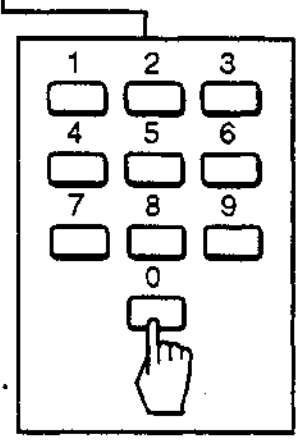
1
2
3
4
5
6
7
8
9
0

- **Adjust the Data value**

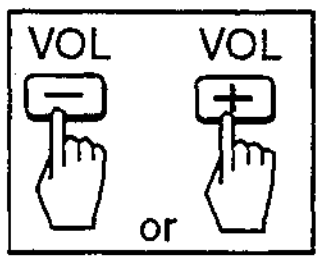

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust V-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Lean Adjustment	**RV - SUB KEY**		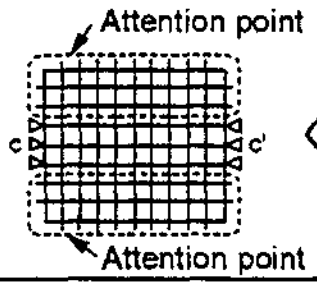 Attention point c c' Attention point		Adjust so that the horizontal lines in the upper and lower sections of the screen are not leaned.
	RV - KEY		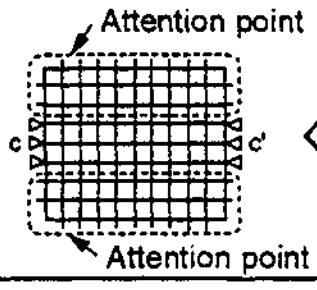 Attention point c c' Attention point		
	RV - MID KEY		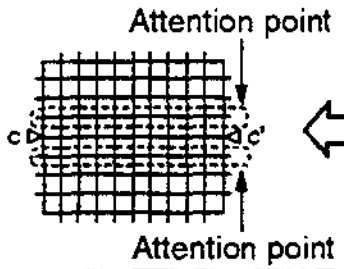 Attention point c c' Attention point		
Distortion Adjustment	**RV - SUB PIN**		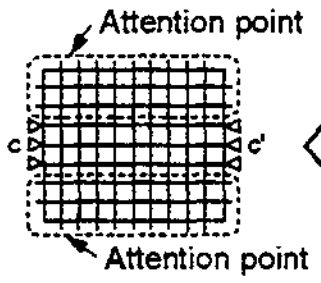 Attention point c c' Attention point		Adjust so that the horizontal lines in the upper and lower sections of the screen are not distorted and are straight.
	RV - SC PIN		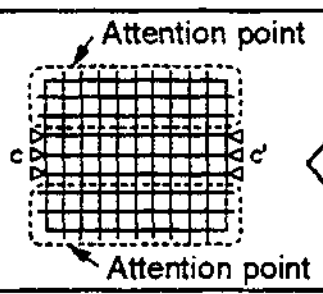 Attention point c c' Attention point		
	RV - PIN		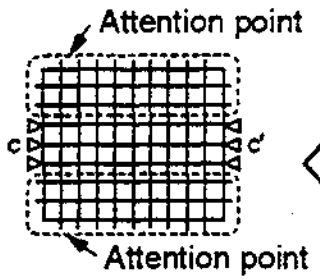 Attention point c c' Attention point		
	RV - MID PIN		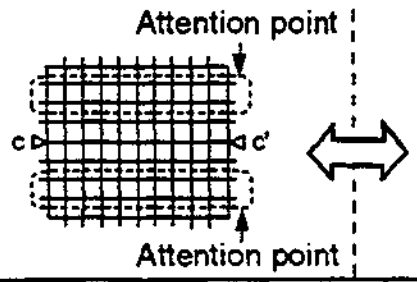 Attention point c c' Attention point		
	RV - 4TH PIN		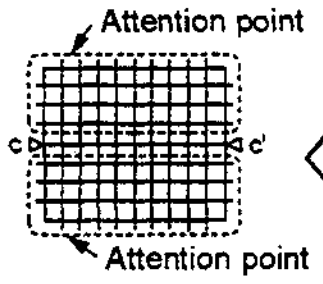 Attention point c c' Attention point		

Note : ▷——◁ : Line which does not move   c▷——◁c' : Center vertical line

⑩-5 Blue line adjustment (1st FAC)

- Adjustment in the horizontal direction

Start

- See ③ Convergence Setting Mode in the Factory Adjustment mode.
- Input cross-hatch signals to this device's video input terminal.

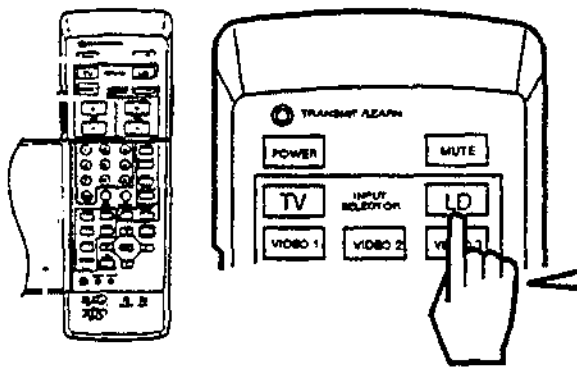
POWER
MUTE
TV
LD
VIDEO 1
VIDEO 2

To output Green + Red + Blue

- Use the remote control unit CU-SD076 for servicing.

• Select the Adjustment item

BH - STATIC

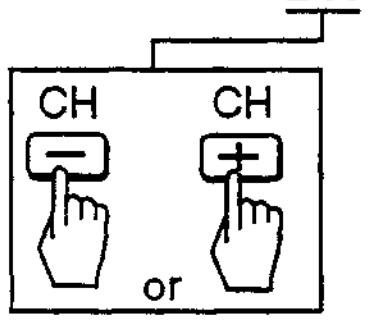

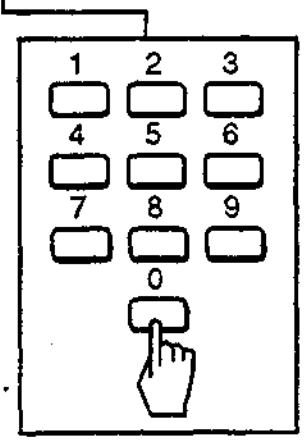
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

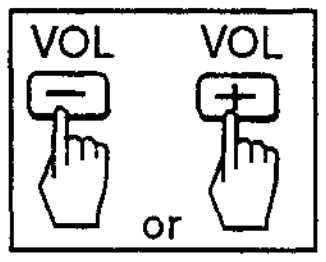

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust H-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Center-line Adjustment	BH - STATIC		 Attention point c c'		Converge the center vertical line in the green vertical line.
	BH - SKEW		 Attention point c c'		Adjust so that the center vertical line is not leaned.
	BH - BOW		 Attention point c c'		Adjust so that the bowed center vertical line at the center of the screen to a straight line.
	BH - 4TH BOW		 Attention point c c'		Adjust so that the wavy center vertical line at the center of the screen to a straight line.
Line-interval Adjustment	BH - LIN		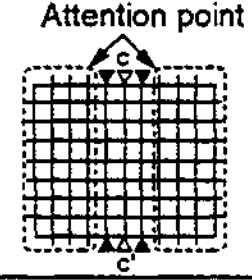 Attention point c c'		Adjust so that the intervals of the vertical lines in the right and left sections of the screen are symmetrically and converge them in the green vertical lines.
	BH - 4TH LIN		 Attention point c c'		
	BH - SIZE		 Attention point c c'		
	BH - SUB LIN		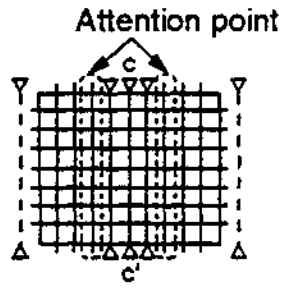 Attention point c c'		

Note : ▷——◁ : Line which does not move at all   c▷——◁c' : Center vertical line   ▶——◀ : Line which hardly moves
▷- - - -◁ : Line which does not move out of the screen

• Select the Adjustment item

BH - SUB KEY

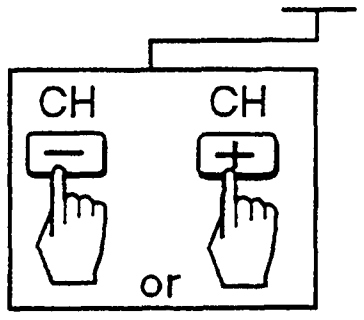

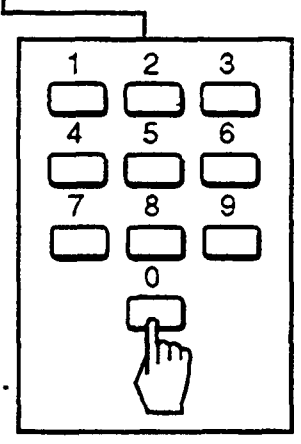
1 2 3
4 5 6
7 8 9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

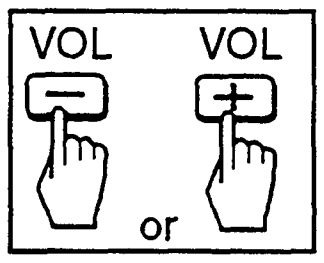

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust H-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Lean Adjustment	BH - SUB KEY		 Attention point c c'		Adjust so that the vertical lines in the right and left sections of the screen are not leaned.
	BH - KEY		 Attention point c c'		
Distortion Adjustment	BH - SUB PIN		 Attention point c c'		Adjust so that the vertical lines in the right and left sections of the screen are not distorted and are straight.
	BH - M S PIN		 Attention point c c'		
	BH - 4S PIN		 Attention point c c'		
	BH - PIN		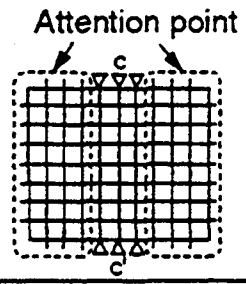 Attention point c c'		
	BH - MID PIN		 Attention point c c'		
	BH - 4TH PIN		 Attention point c c'		

Note : ▷——◁ : Line which does not move c▷——◁c' : Center vertical line

⑩-6 Blue line adjustment (1st FAC)

- Adjustment in the vertical direction

Start

• Select the Adjustment item

BV - STATIC

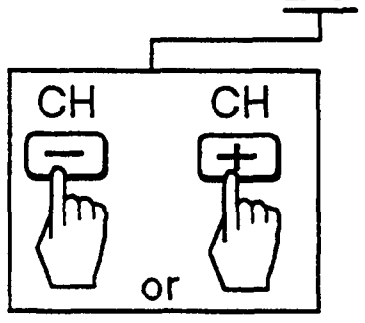

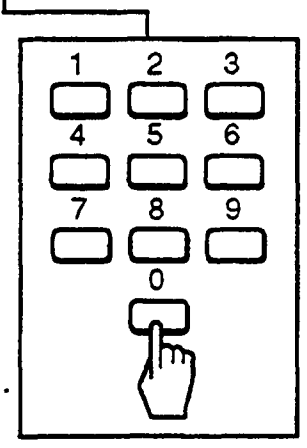

In particular, be aware of the setting before adjustment.

• Adjust the Data value

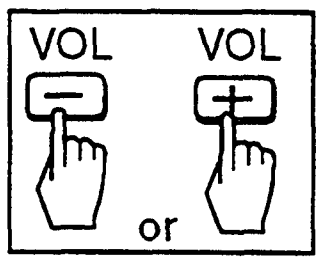

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust V-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Center-line Adjustment	BV - STATIC		Attention point 		Converge the center horizontal line in the green horizontal line.
	BV - SKEW		Attention point 		Adjust so that the center horizontal line is not leaned.
	BV - BOW		Attention point 		Adjust so that the bowed center horizontal line at the center of the screen to a straight line.
Line-interval Adjustment	BV - LIN		Attention point 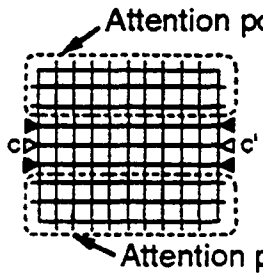 Attention point		Adjust so that the intervals of the horizontal lines in the upper and lower sections of the screen are symmetrically and converge them in the green horizontal lines.
	BV - SIZE		Attention point 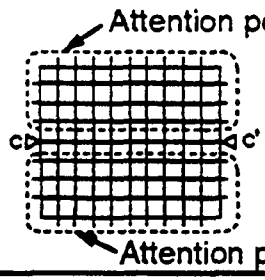 Attention point		
	BV - SUB LIN		Attention point  Attention point		

Note : ▷——◁ : Line which does not move at all c▷——◁c' : Center horizontal line ▶——◀ : Line which hardly moves
▷- - - - -◁ : Line which does not move out of the screen

• Select the Adjustment item

BV - SUB KEY

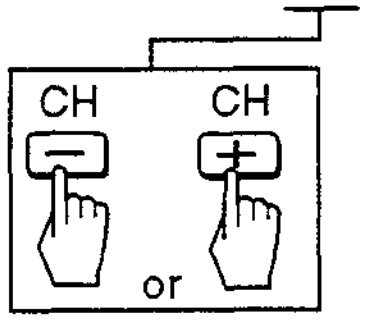

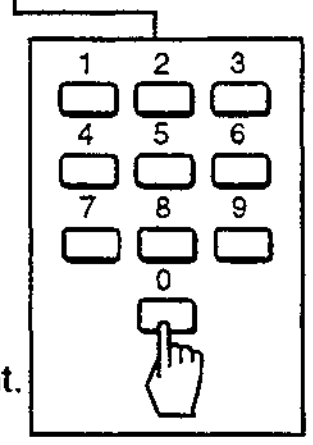
1
2
3
4
5
6
7
8
9
0

In particular, be aware of the setting before adjustment.

• Adjust the Data value

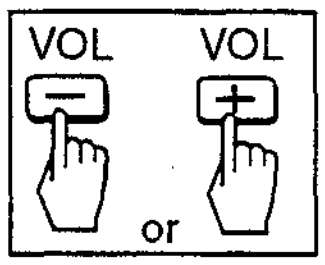

Note :
- Repeat the adjustments until you attain the optimum state.
- Fine-adjust over the entire picture to obtain the optimum picture.
- If the adjustment is not possible within the range of 010 to – 010, set the data value to 0, turn the centering magnet of the deflection yoke and fine-adjust V-STATIC.

Adjustment Item		Cross-hatch Picture			Adjustment Point
		Deviated	Optimum	Deviated	
Lean Adjustment	BV - SUB KEY		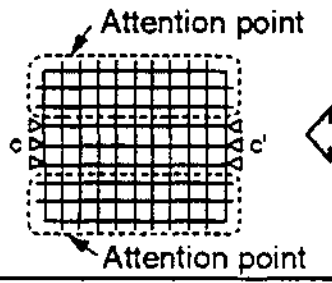 Attention point c c' Attention point		Adjust so that the horizontal lines in the upper and lower sections of the screen are not leaned.
	BV - KEY		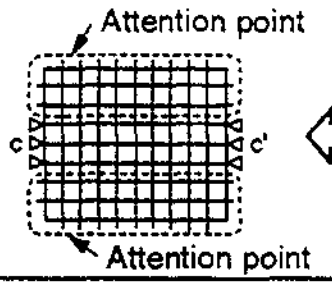 Attention point c c' Attention point		
	BV - MID KEY		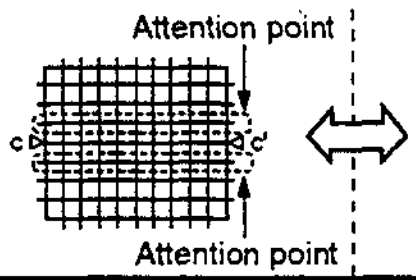 Attention point c c' Attention point		
Distortion Adjustment	BV - SUB PIN		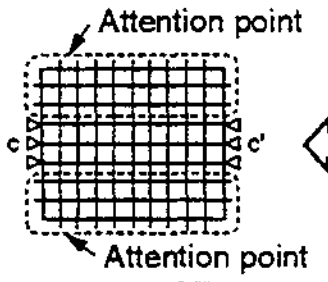 Attention point c c' Attention point		Adjust so that the horizontal lines in the upper and lower sections of the screen are not distorted and are straight.
	BV - SC PIN		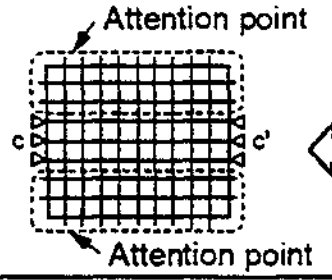 Attention point c c' Attention point		
	BV - PIN		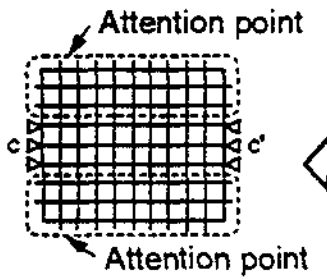 Attention point c c' Attention point		
	BV - MID PIN		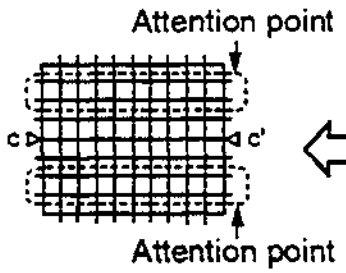 Attention point c c' Attention point		
	BV - 4TH PIN		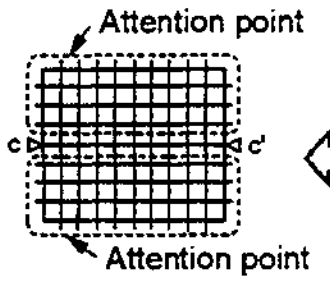 Attention point c c' Attention point		

Note : ▷——◁ : Line which does not move c▷——◁c' : Center vertical line

⑪ Test Cross H-center Position Adjustment

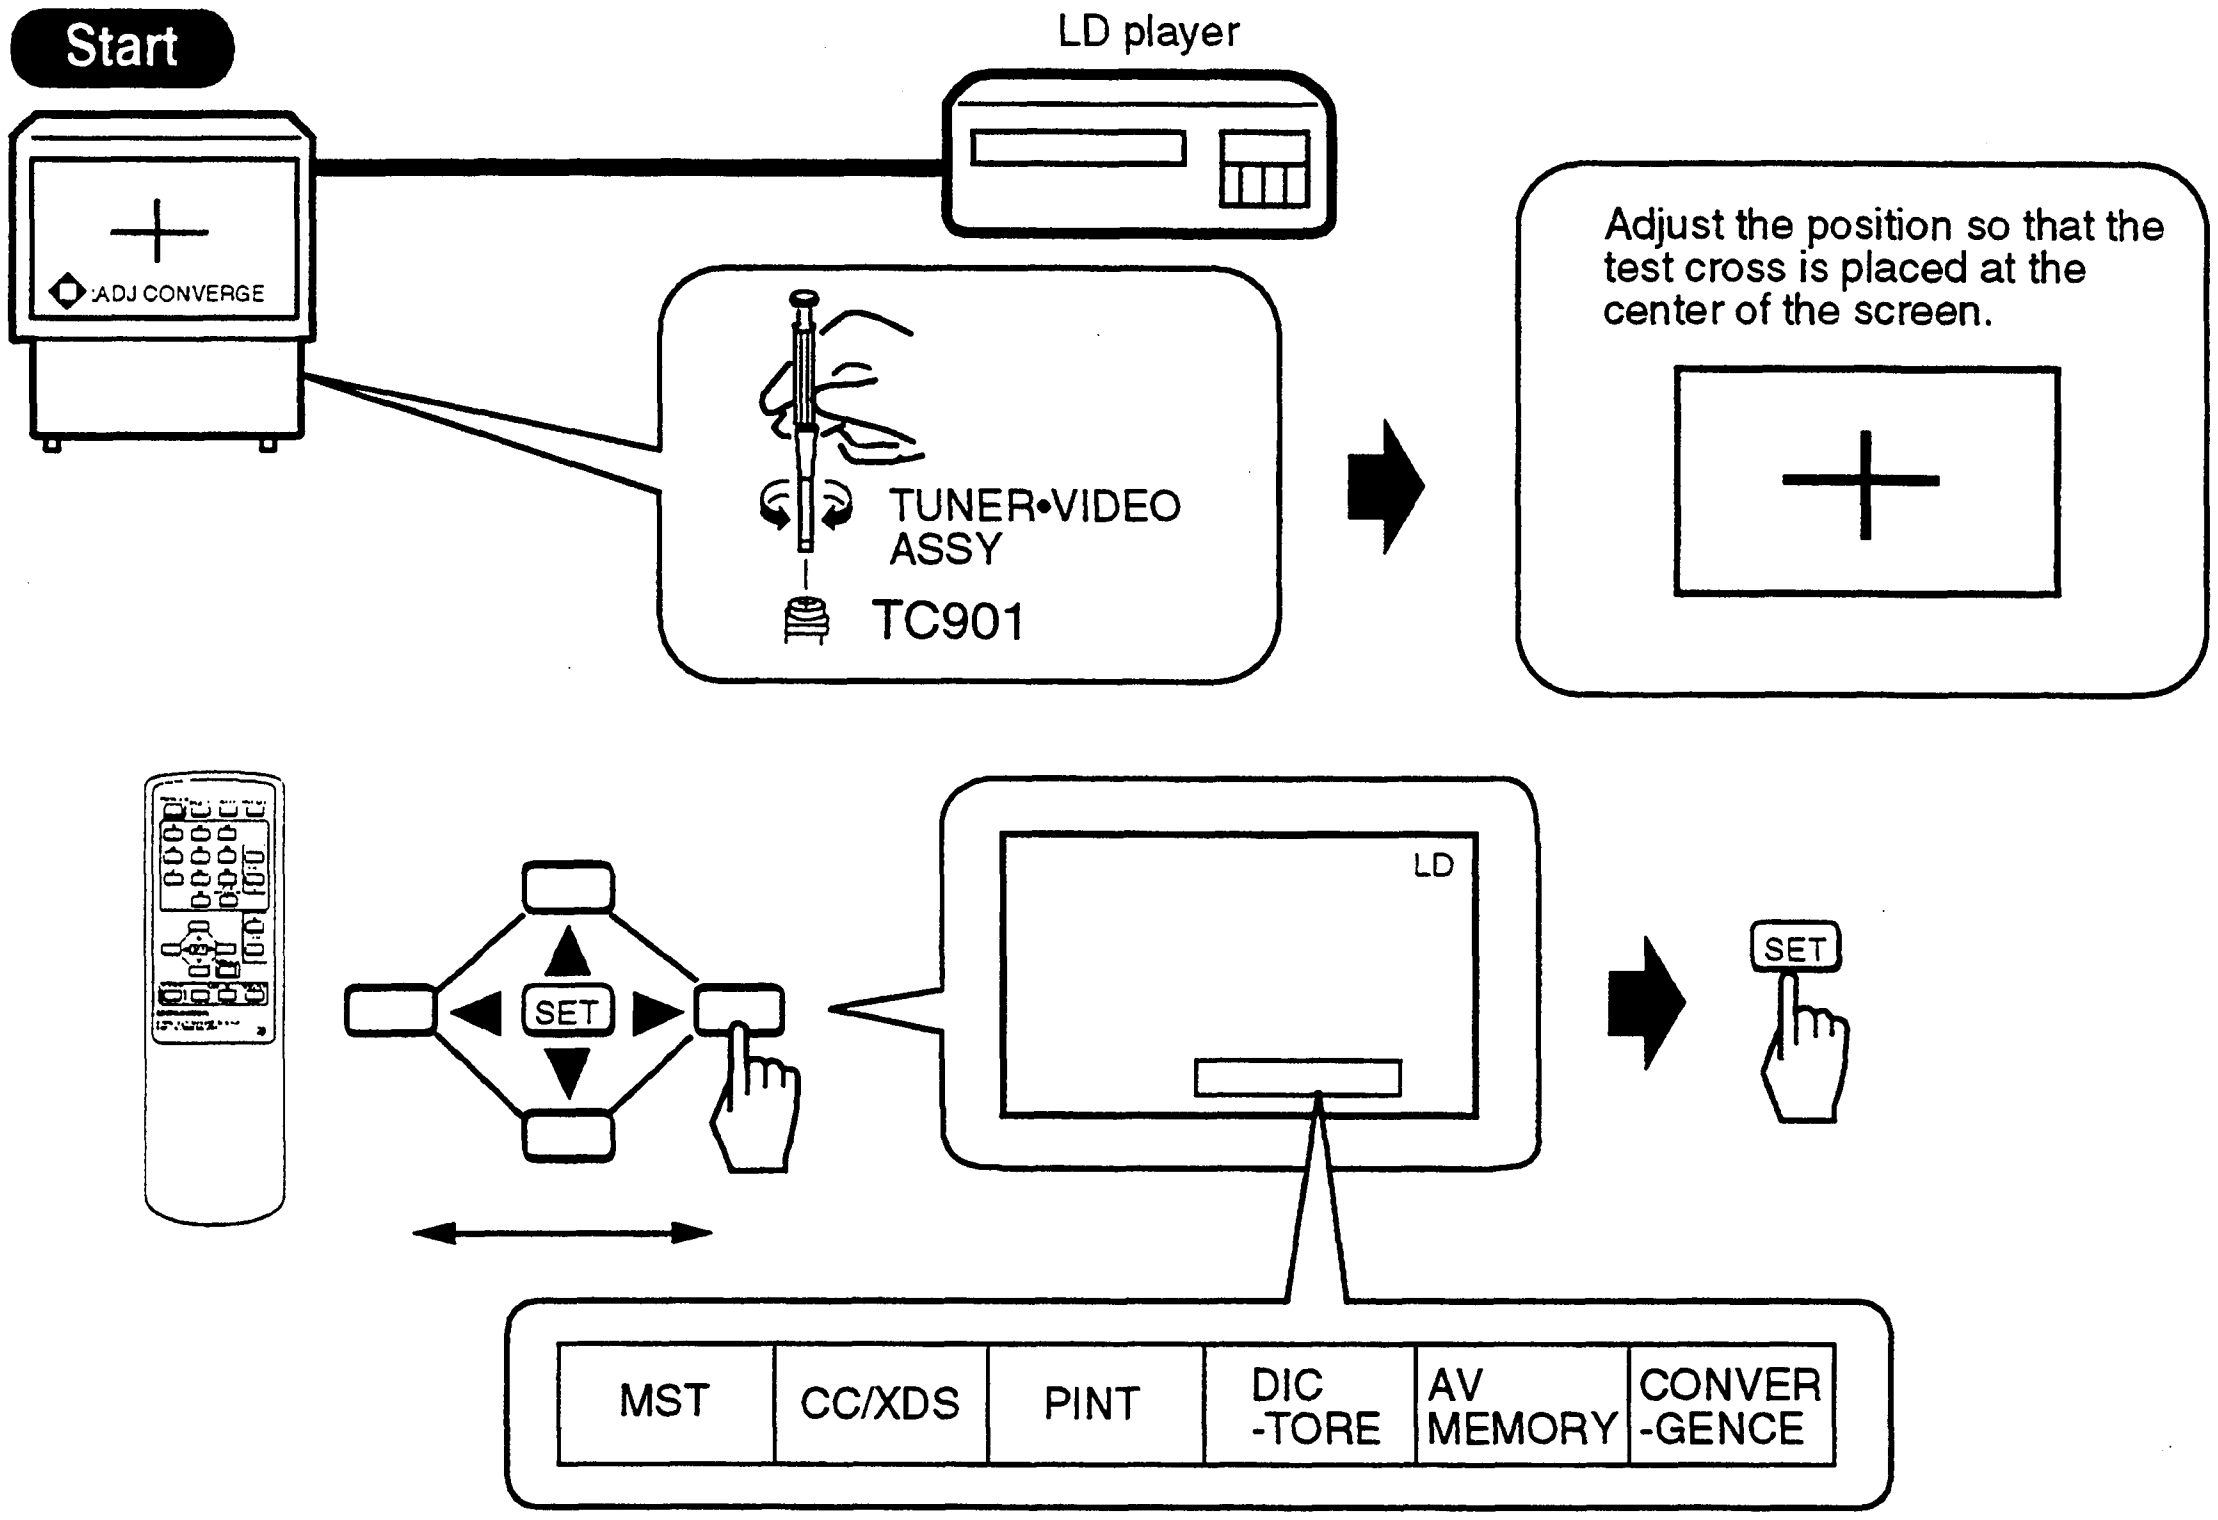
Start
LD player
:ADJ CONVERGE
TUNER•VIDEO
ASSY
TC901
LD
SET
SET
MST
CC/XDS
PINT
DIC
-TORE
AV
MEMORY
CONVER
-GENCE

Adjust the position so that the test cross is placed at the center of the screen.

⑫ Tuner Block Adjustment

⑫-1 Video Level Adjustment ①

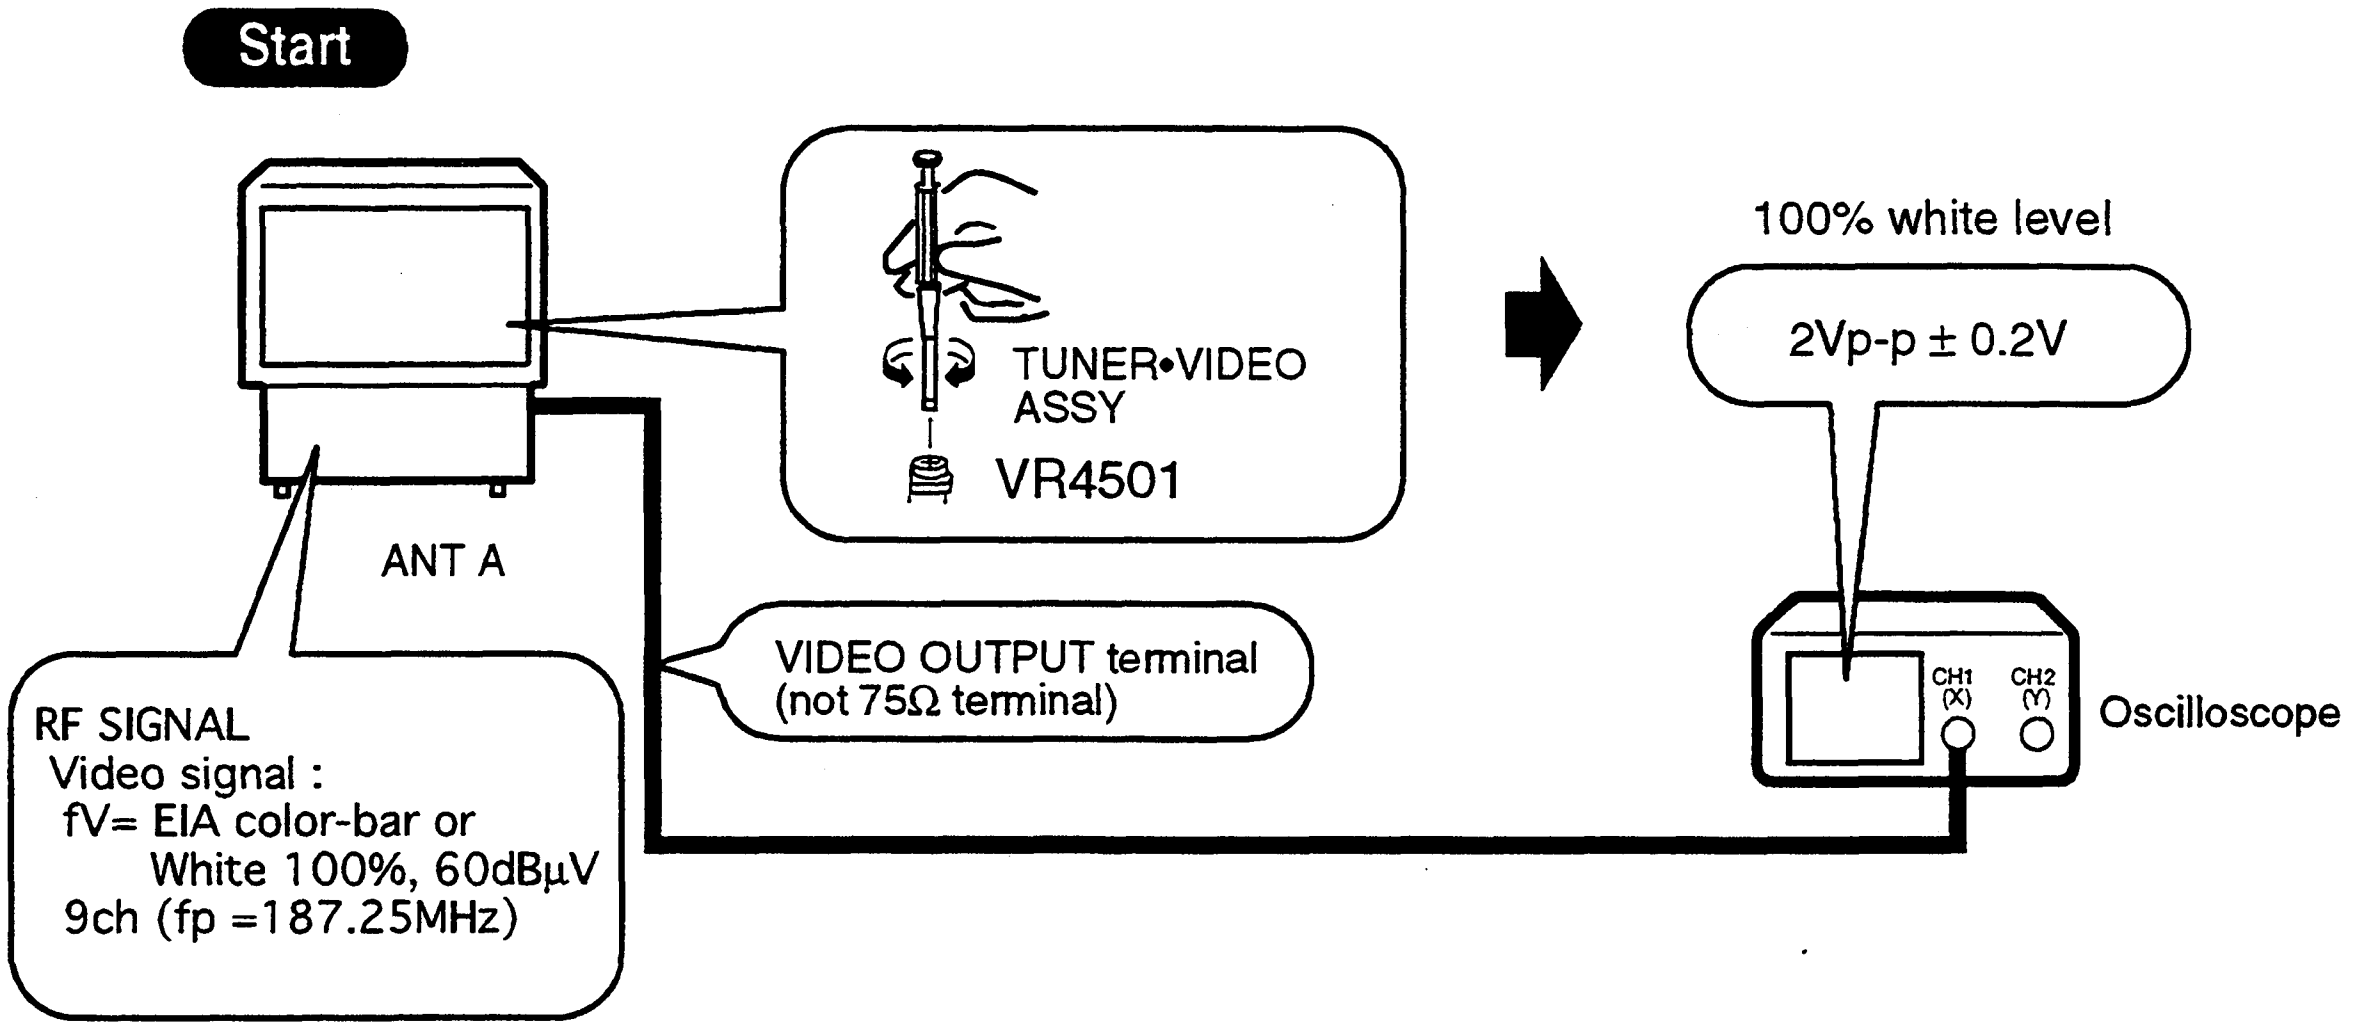
Start
TUNER•VIDEO
ASSY
VR4501
100% white level
2Vp-p ± 0.2V
ANT A
VIDEO OUTPUT terminal
(not 75Ω terminal)
CH1
(X)
CH2
(Y)
Oscilloscope

RF SIGNAL
Video signal :
fV= EIA color-bar or
White 100%, 60dBμV
9ch (fp =187.25MHz)

⑫-2 Video Level Adjustment ②

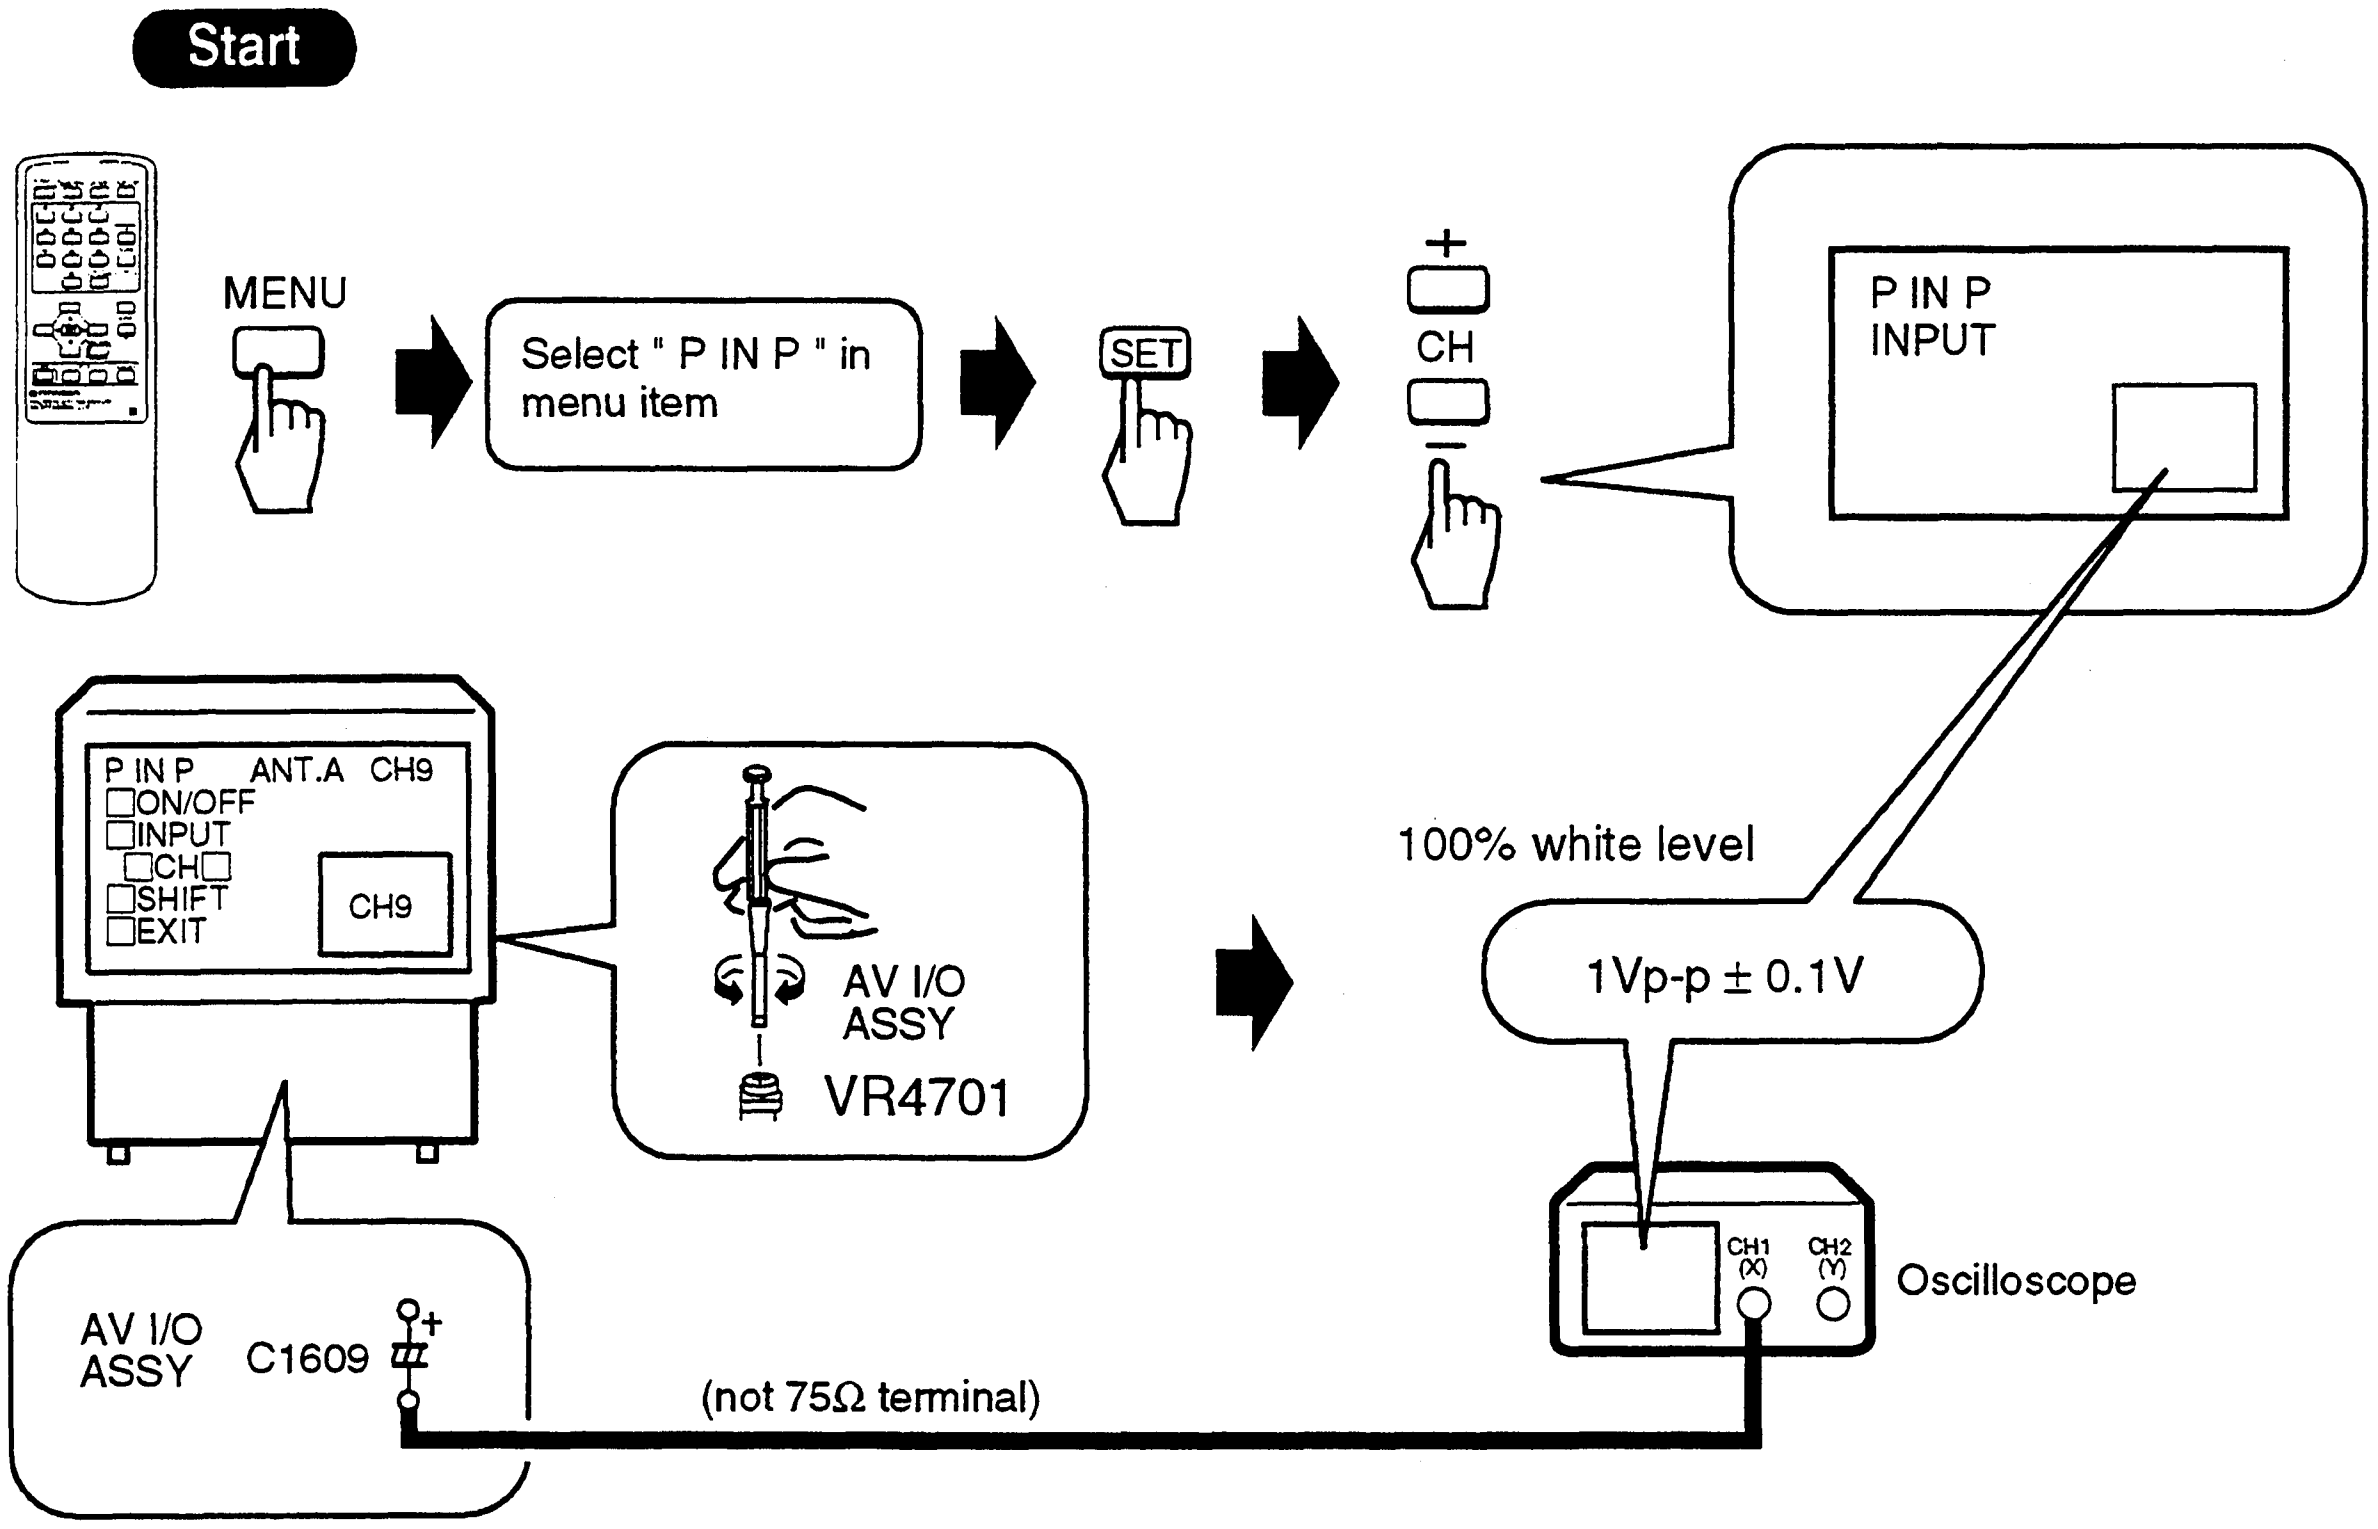
Start
MENU
Select " P IN P " in menu item
SET
+
CH
−
P IN P
INPUT
P IN P ANT.A CH9
ON/OFF
INPUT
CH
SHIFT
EXIT
CH9
AV I/O ASSY
VR4701
100% white level
1Vp-p ± 0.1V
CH1 (X)
CH2 (Y)
Oscilloscope
AV I/O ASSY
C1609
+
(not 75Ω terminal)

⑫-3 Stereo VCO Adjustment

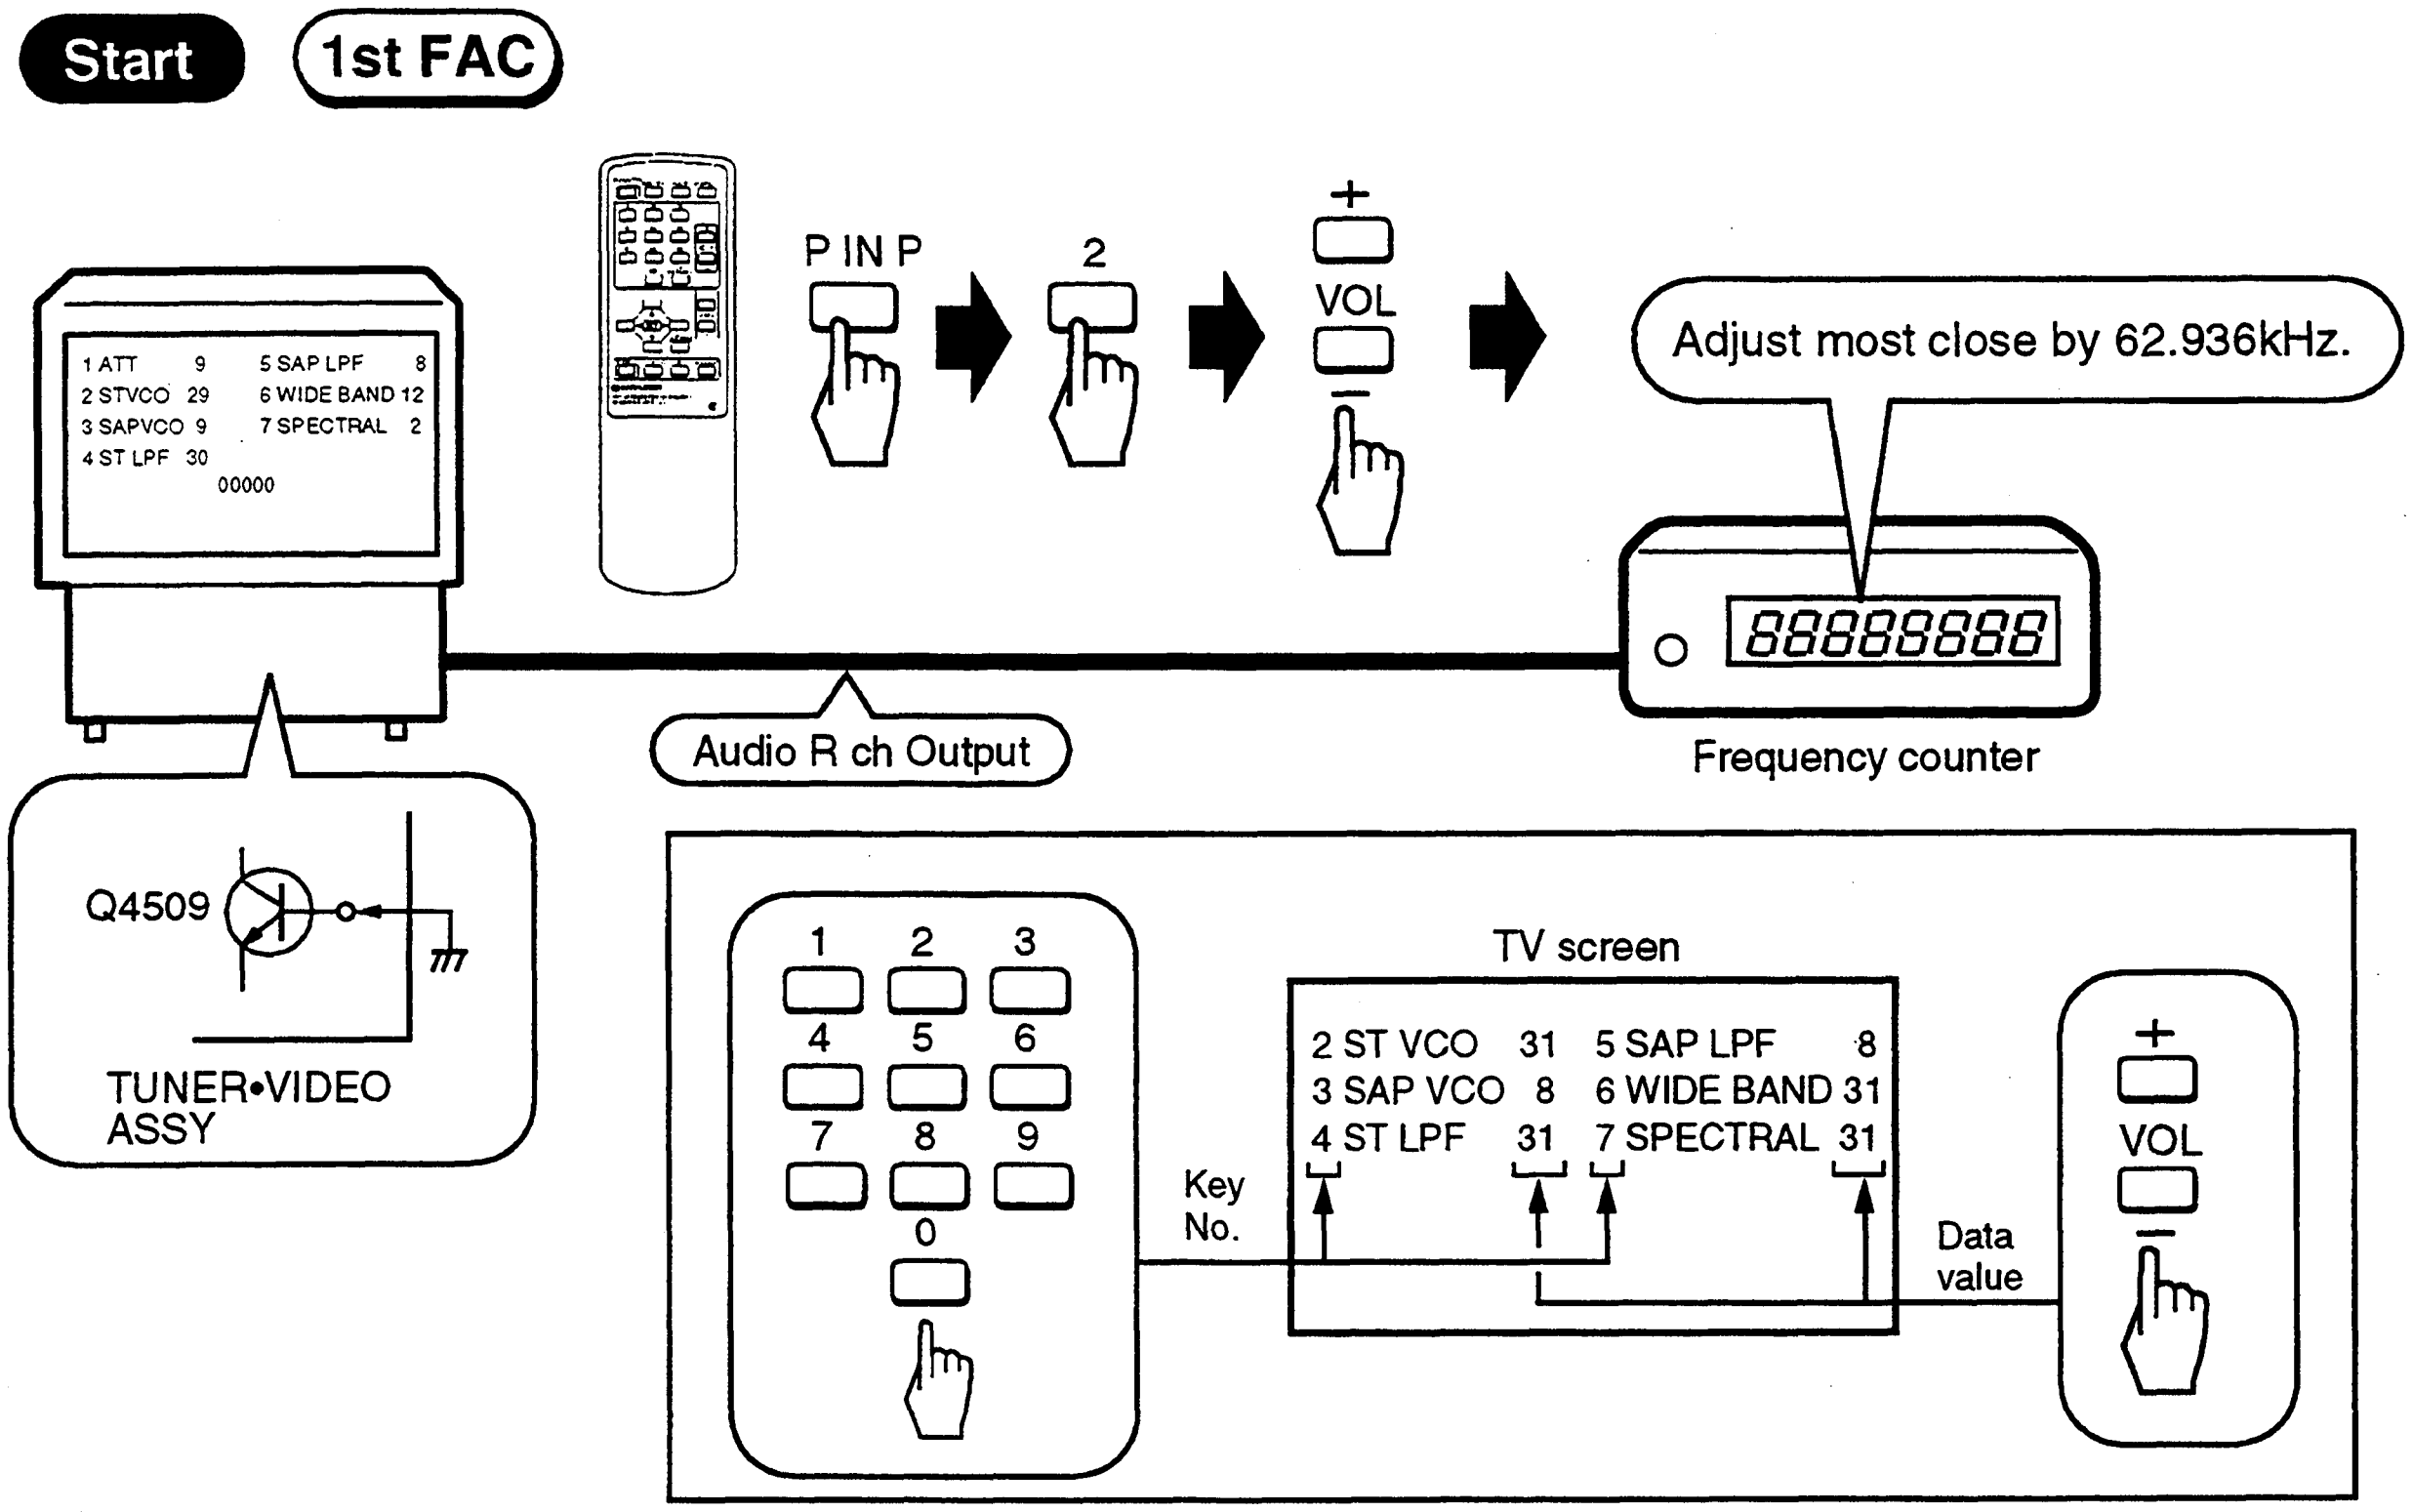
Start
1st FAC
1 ATT 9
2 STVCO 29
3 SAPVCO 9
4 ST LPF 30
5 SAP LPF 8
6 WIDE BAND 12
7 SPECTRAL 2
00000
P IN P
2
+
VOL
−
Adjust most close by 62.936kHz.
88888888
Frequency counter
Audio R ch Output
Q4509
TUNER•VIDEO ASSY
1 2 3
4 5 6
7 8 9
0
TV screen
2 ST VCO 31
3 SAP VCO 8
4 ST LPF 31
5 SAP LPF 8
6 WIDE BAND 31
7 SPECTRAL 31
Key No.
Data value
+
VOL
−

⑫-4 SAP VCO Adjustment

Note : • Perform this adjustment after the ⑫ -3 adjustment.

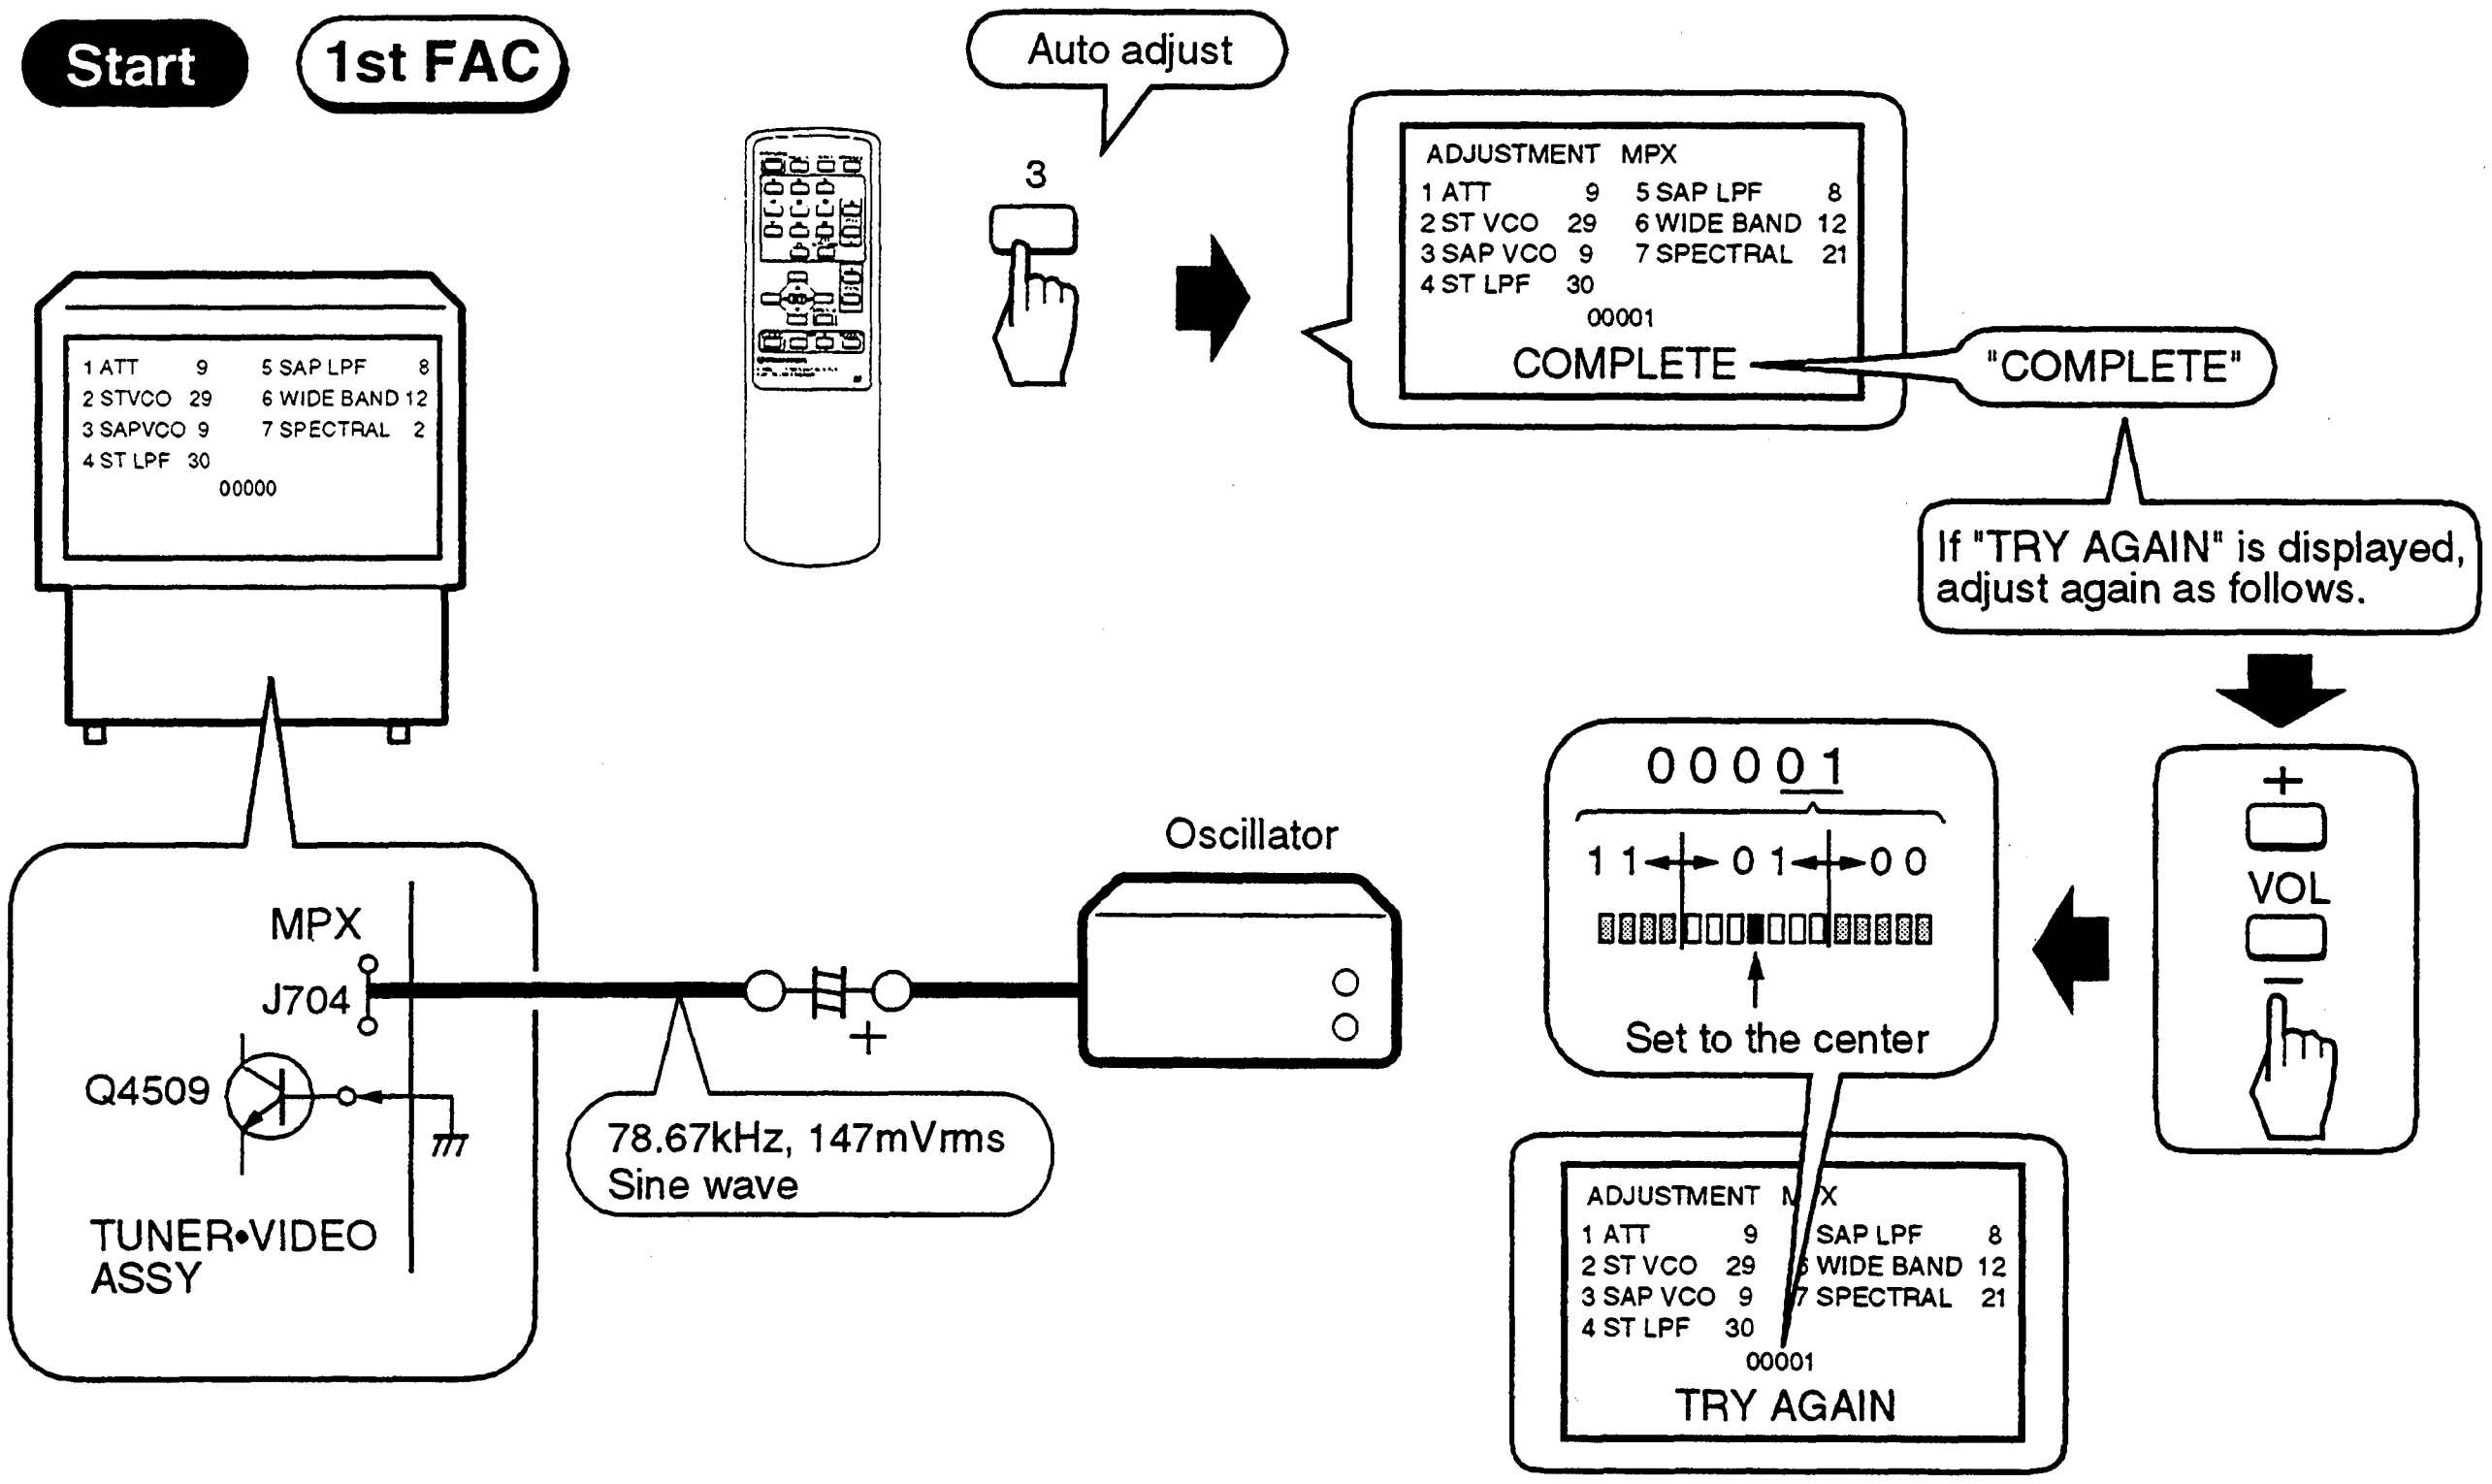
Start
1st FAC
Auto adjust
3
ADJUSTMENT MPX
1 ATT 9 5 SAP LPF 8
2 ST VCO 29 6 WIDE BAND 12
3 SAP VCO 9 7 SPECTRAL 21
4 ST LPF 30
00001
COMPLETE
"COMPLETE"
If "TRY AGAIN" is displayed, adjust again as follows.
1 ATT 9 5 SAP LPF 8
2 STVCO 29 6 WIDE BAND 12
3 SAPVCO 9 7 SPECTRAL 2
4 ST LPF 30
00000
MPX
J704
Q4509
TUNER•VIDEO ASSY
Oscillator
+
78.67kHz, 147mVrms
Sine wave
00001
1 1 0 1 0 0
Set to the center
+
VOL
−
ADJUSTMENT MPX
1 ATT 9 5 SAP LPF 8
2 ST VCO 29 6 WIDE BAND 12
3 SAP VCO 9 7 SPECTRAL 21
4 ST LPF 30
00001
TRY AGAIN

⑫-5 STEREO LPF Adjustment

Note : • Perform this adjustment after the ⑫ -4 adjustment.

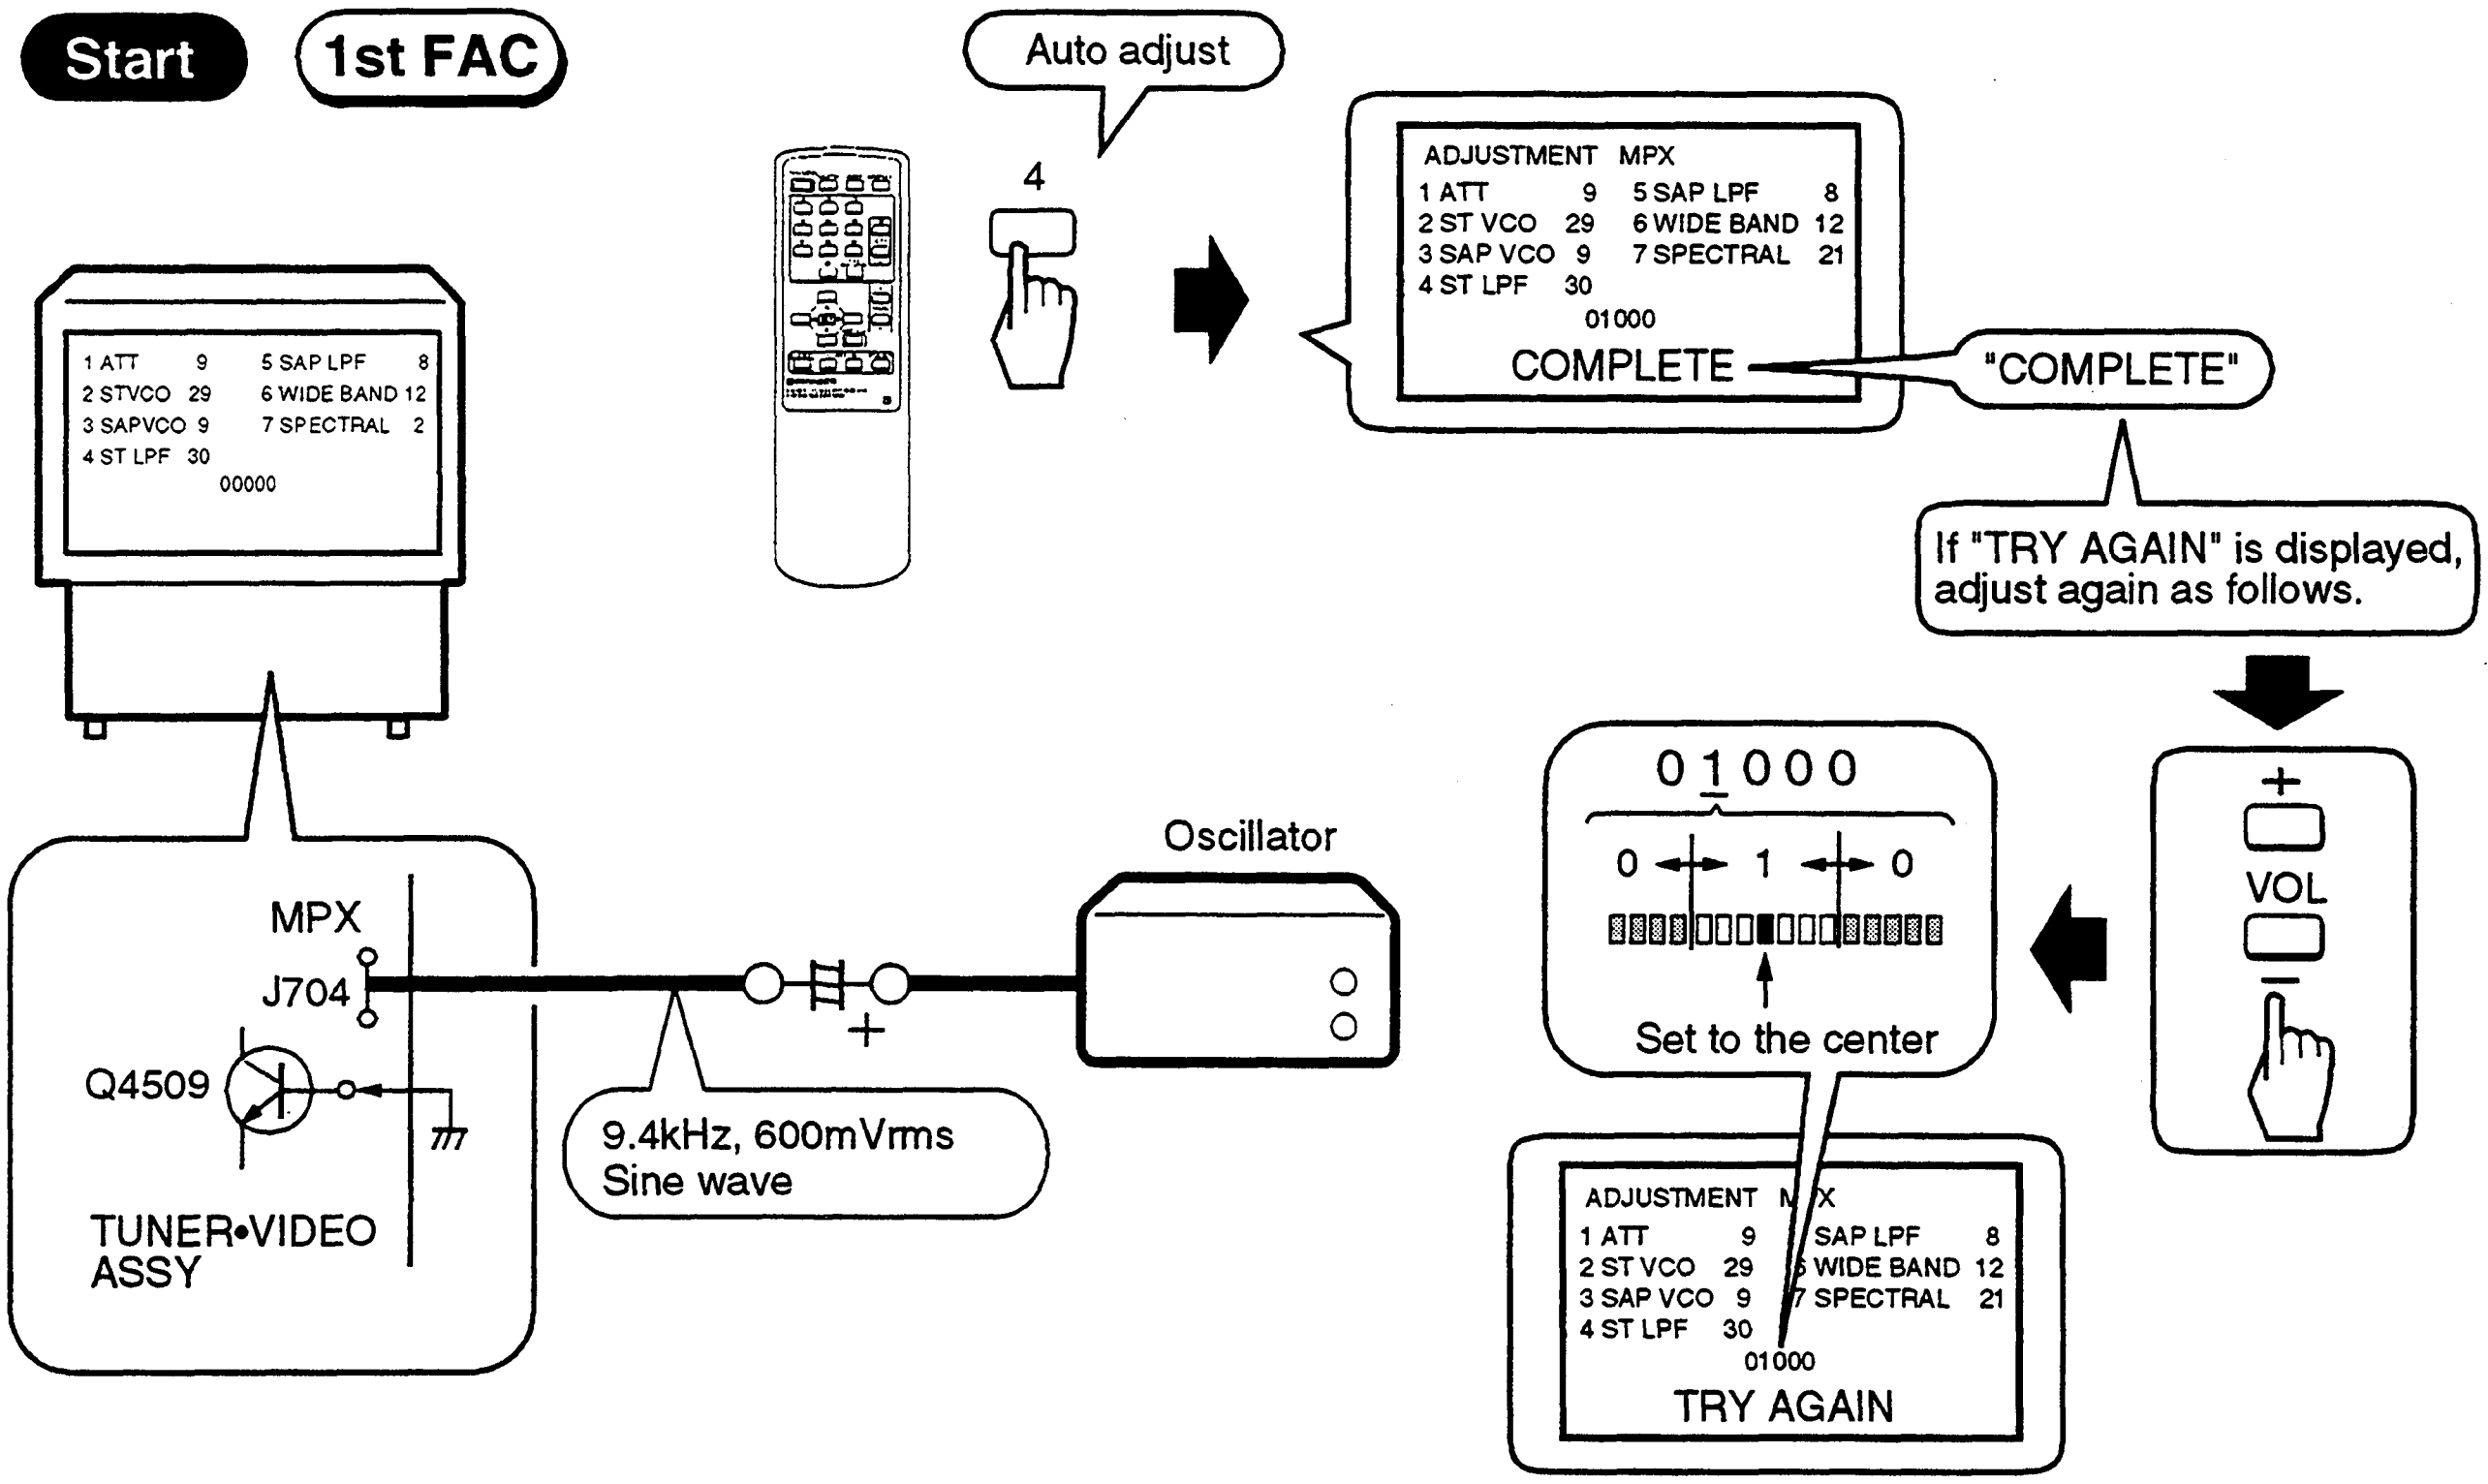
Start
1st FAC
Auto adjust
4
ADJUSTMENT MPX
1 ATT 9 5 SAP LPF 8
2 ST VCO 29 6 WIDE BAND 12
3 SAP VCO 9 7 SPECTRAL 21
4 ST LPF 30
01000
COMPLETE
"COMPLETE"
If "TRY AGAIN" is displayed, adjust again as follows.
1 ATT 9 5 SAP LPF 8
2 STVCO 29 6 WIDE BAND 12
3 SAPVCO 9 7 SPECTRAL 2
4 ST LPF 30
00000
MPX
J704
Q4509
TUNER•VIDEO ASSY
Oscillator
+
9.4kHz, 600mVrms
Sine wave
01000
0 1 0
Set to the center
+
VOL
−
ADJUSTMENT MPX
1 ATT 9 5 SAP LPF 8
2 ST VCO 29 6 WIDE BAND 12
3 SAP VCO 9 7 SPECTRAL 21
4 ST LPF 30
01000
TRY AGAIN

⑫-6 SAP LPF Adjustment

Note : • Perform this adjustment after the ⑫ -5 adjustment.

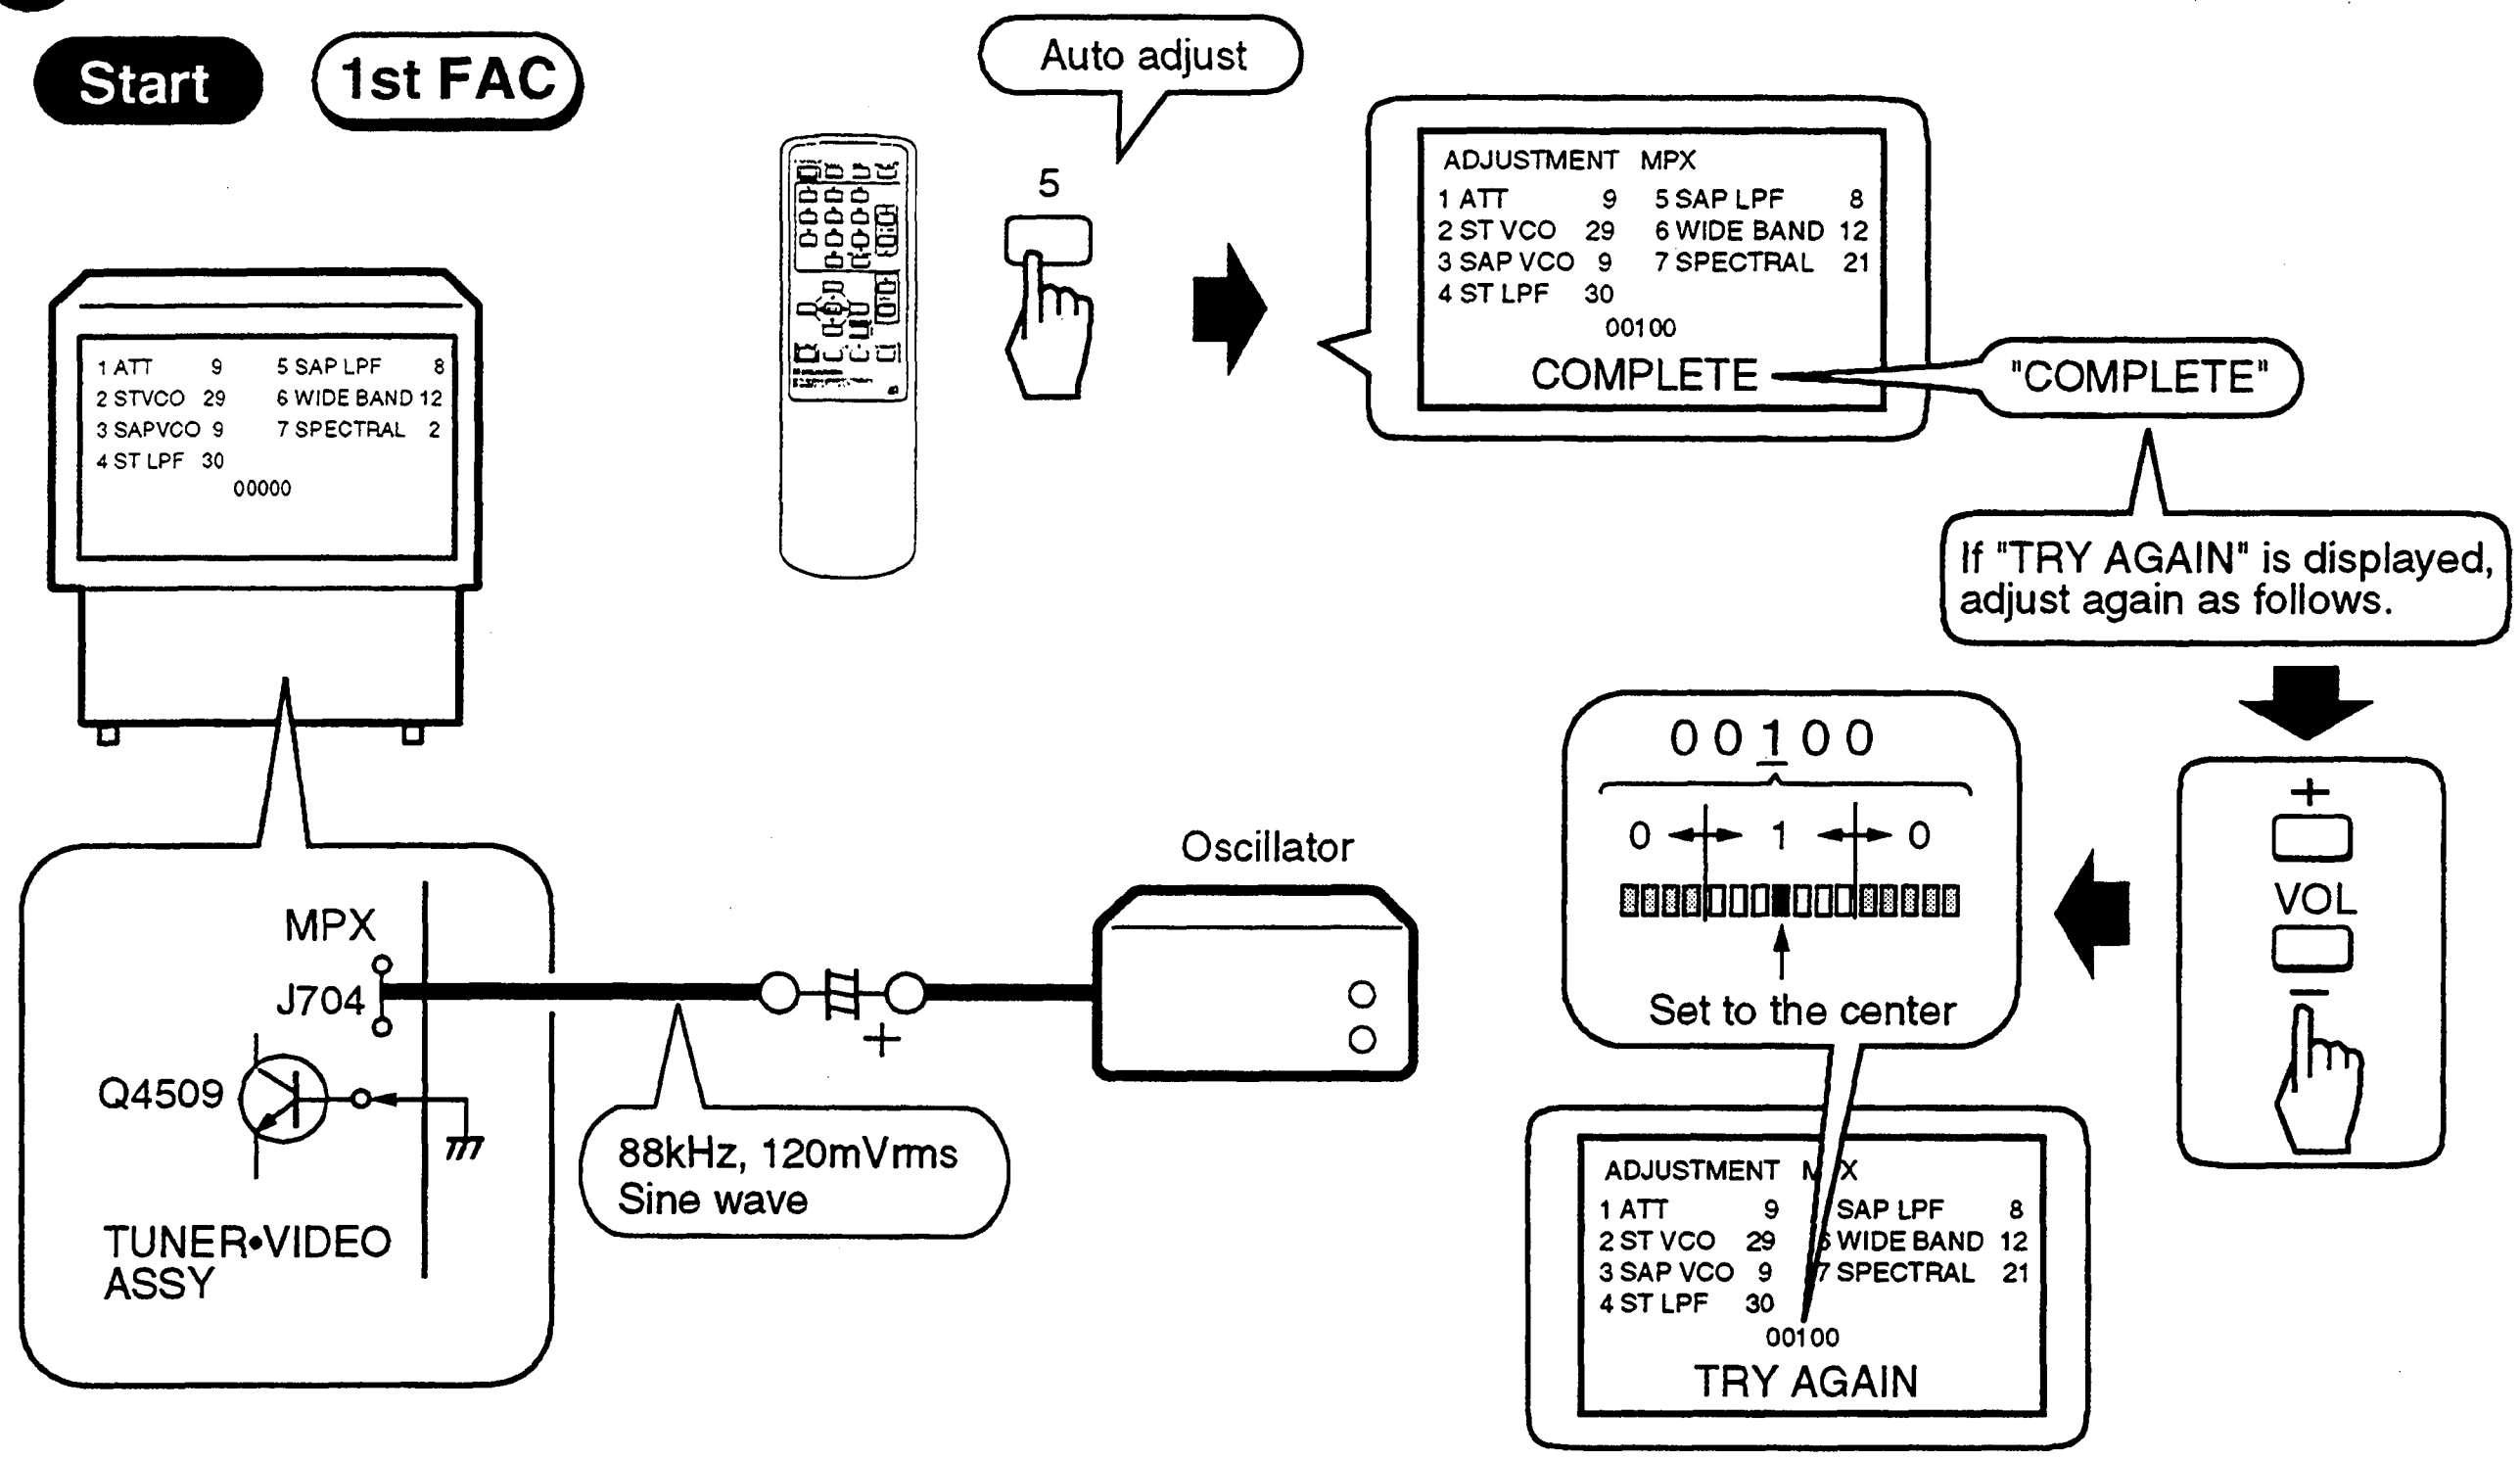
Start
1st FAC
Auto adjust
5
ADJUSTMENT MPX
1 ATT 9 5 SAP LPF 8
2 ST VCO 29 6 WIDE BAND 12
3 SAP VCO 9 7 SPECTRAL 21
4 ST LPF 30
00100
COMPLETE
"COMPLETE"
1 ATT 9 5 SAP LPF 8
2 STVCO 29 6 WIDE BAND 12
3 SAPVCO 9 7 SPECTRAL 2
4 ST LPF 30
00000
00100
0 1 0
Set to the center
VOL
MPX
J704
Q4509
TUNER•VIDEO ASSY
Oscillator
ADJUSTMENT MPX
1 ATT 9 5 SAP LPF 8
2 ST VCO 29 6 WIDE BAND 12
3 SAP VCO 9 7 SPECTRAL 21
4 ST LPF 30
00100
TRY AGAIN

If "TRY AGAIN" is displayed, adjust again as follows.

88kHz, 120mVrms
Sine wave

⑫-7 Separation Adjustment (WIDE BAND)

Note :
- Perform this adjustment after the ⑫ -6 adjustment.
- After this adjustment, be sure to perform the ⑫ -8 adjustment.

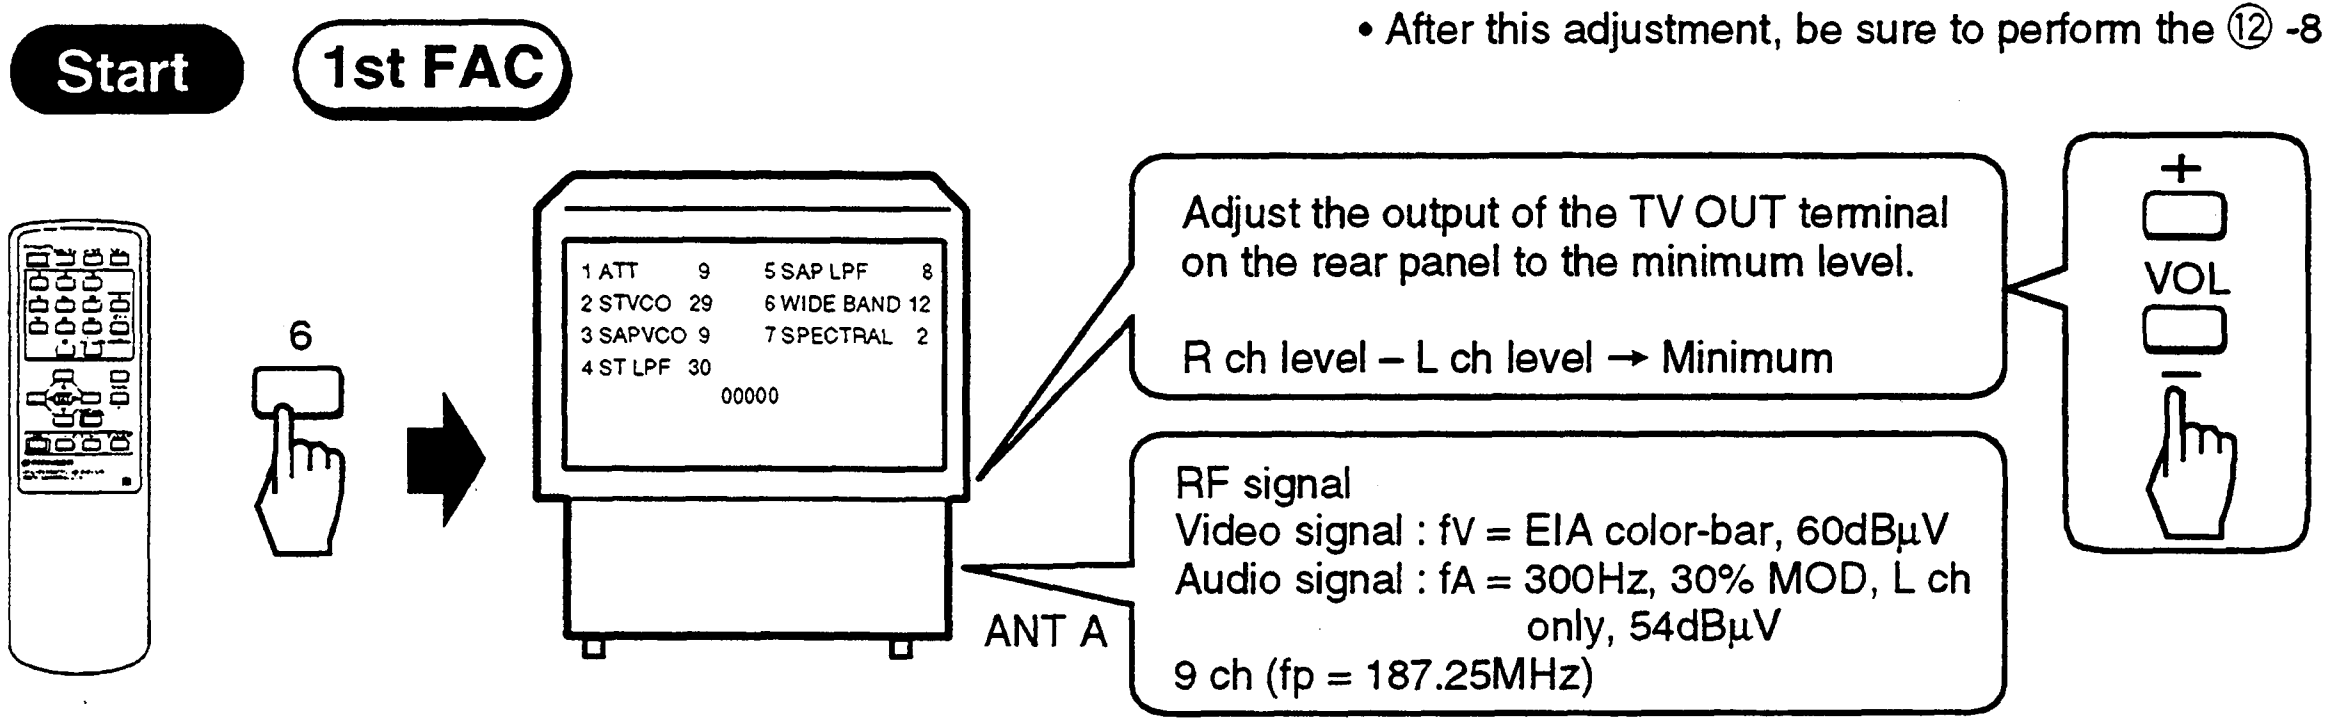
Start
1st FAC
6
1 ATT 9 5 SAP LPF 8
2 STVCO 29 6 WIDE BAND 12
3 SAPVCO 9 7 SPECTRAL 2
4 ST LPF 30
00000
ANT A
VOL

Adjust the output of the TV OUT terminal on the rear panel to the minimum level.

R ch level – L ch level → Minimum

RF signal
Video signal : fV = EIA color-bar, 60dBμV
Audio signal : fA = 300Hz, 30% MOD, L ch only, 54dBμV
9 ch (fp = 187.25MHz)

⑫-8 Separation Adjustment (SPECTRAL)

Note :
- Repeat step ⑫ -7 and ⑫ -8 till the best separation.
- When performing the separation adjustment, be sure to perform WIDE BAND adjustment first.
- If performing the WIDE BAND adjustment, be sure to perform SPECTRAL adjustment.

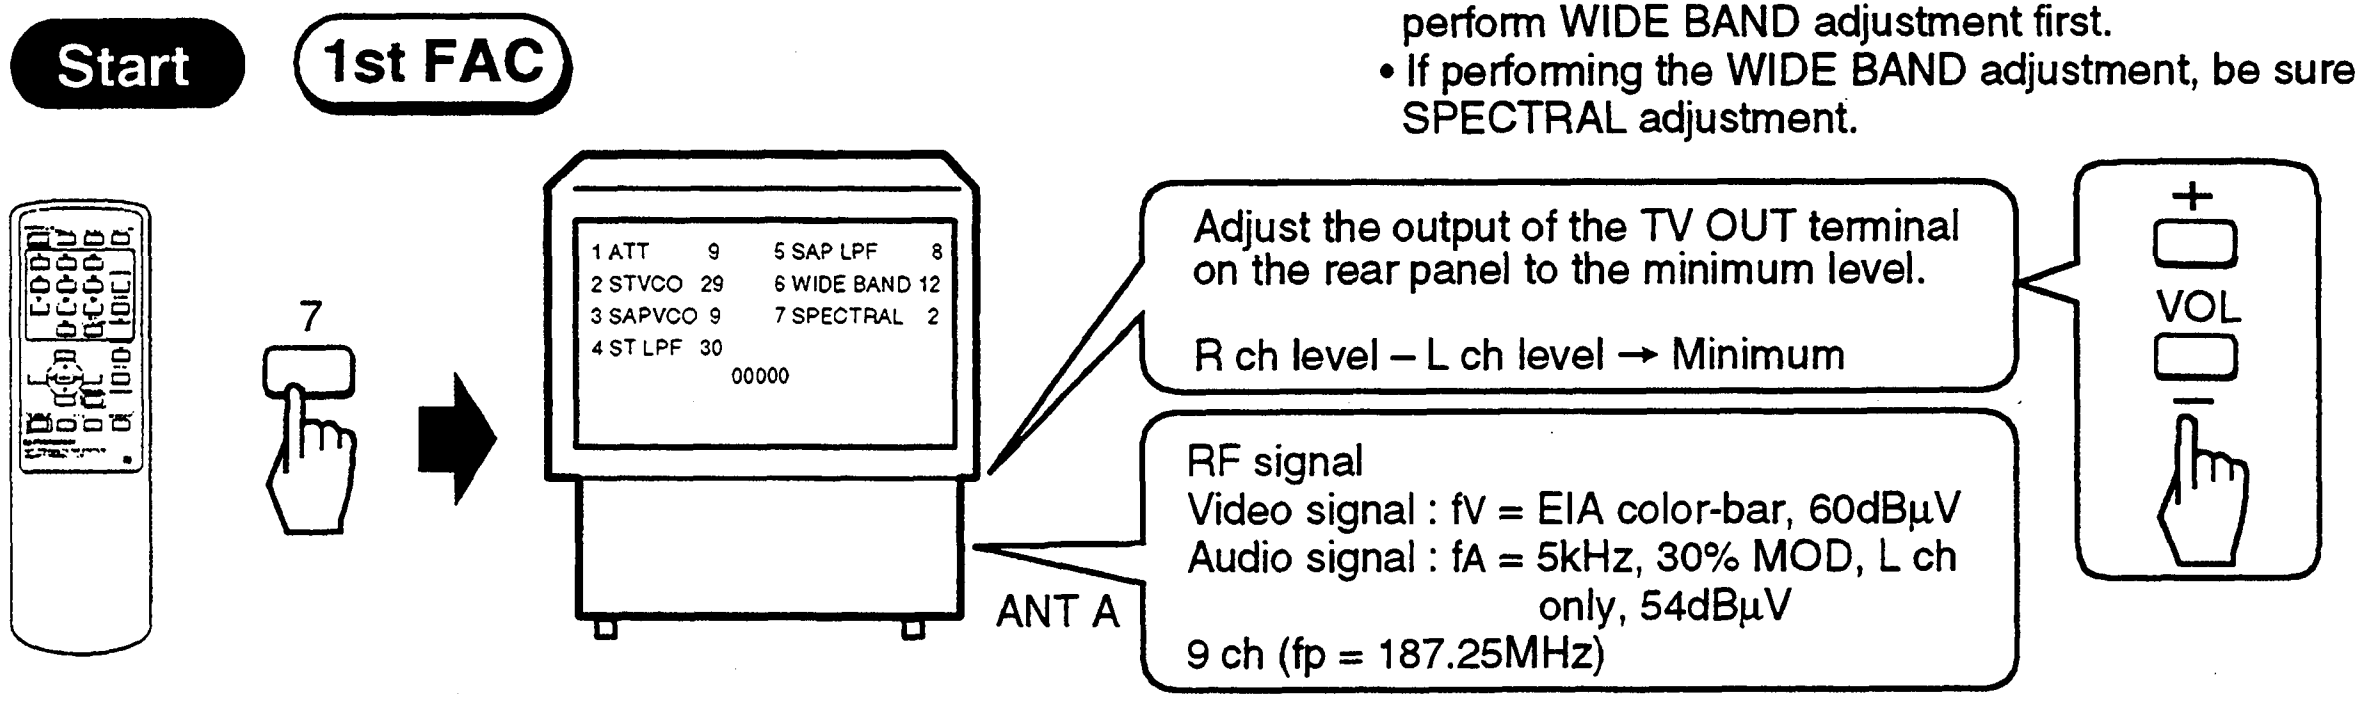
Start
1st FAC
7
1 ATT 9 5 SAP LPF 8
2 STVCO 29 6 WIDE BAND 12
3 SAPVCO 9 7 SPECTRAL 2
4 ST LPF 30
00000
ANT A
VOL

Adjust the output of the TV OUT terminal on the rear panel to the minimum level.

R ch level – L ch level → Minimum

RF signal
Video signal : fV = EIA color-bar, 60dBμV
Audio signal : fA = 5kHz, 30% MOD, L ch only, 54dBμV
9 ch (fp = 187.25MHz)

● Connection diagram for adjusting the tuner section :

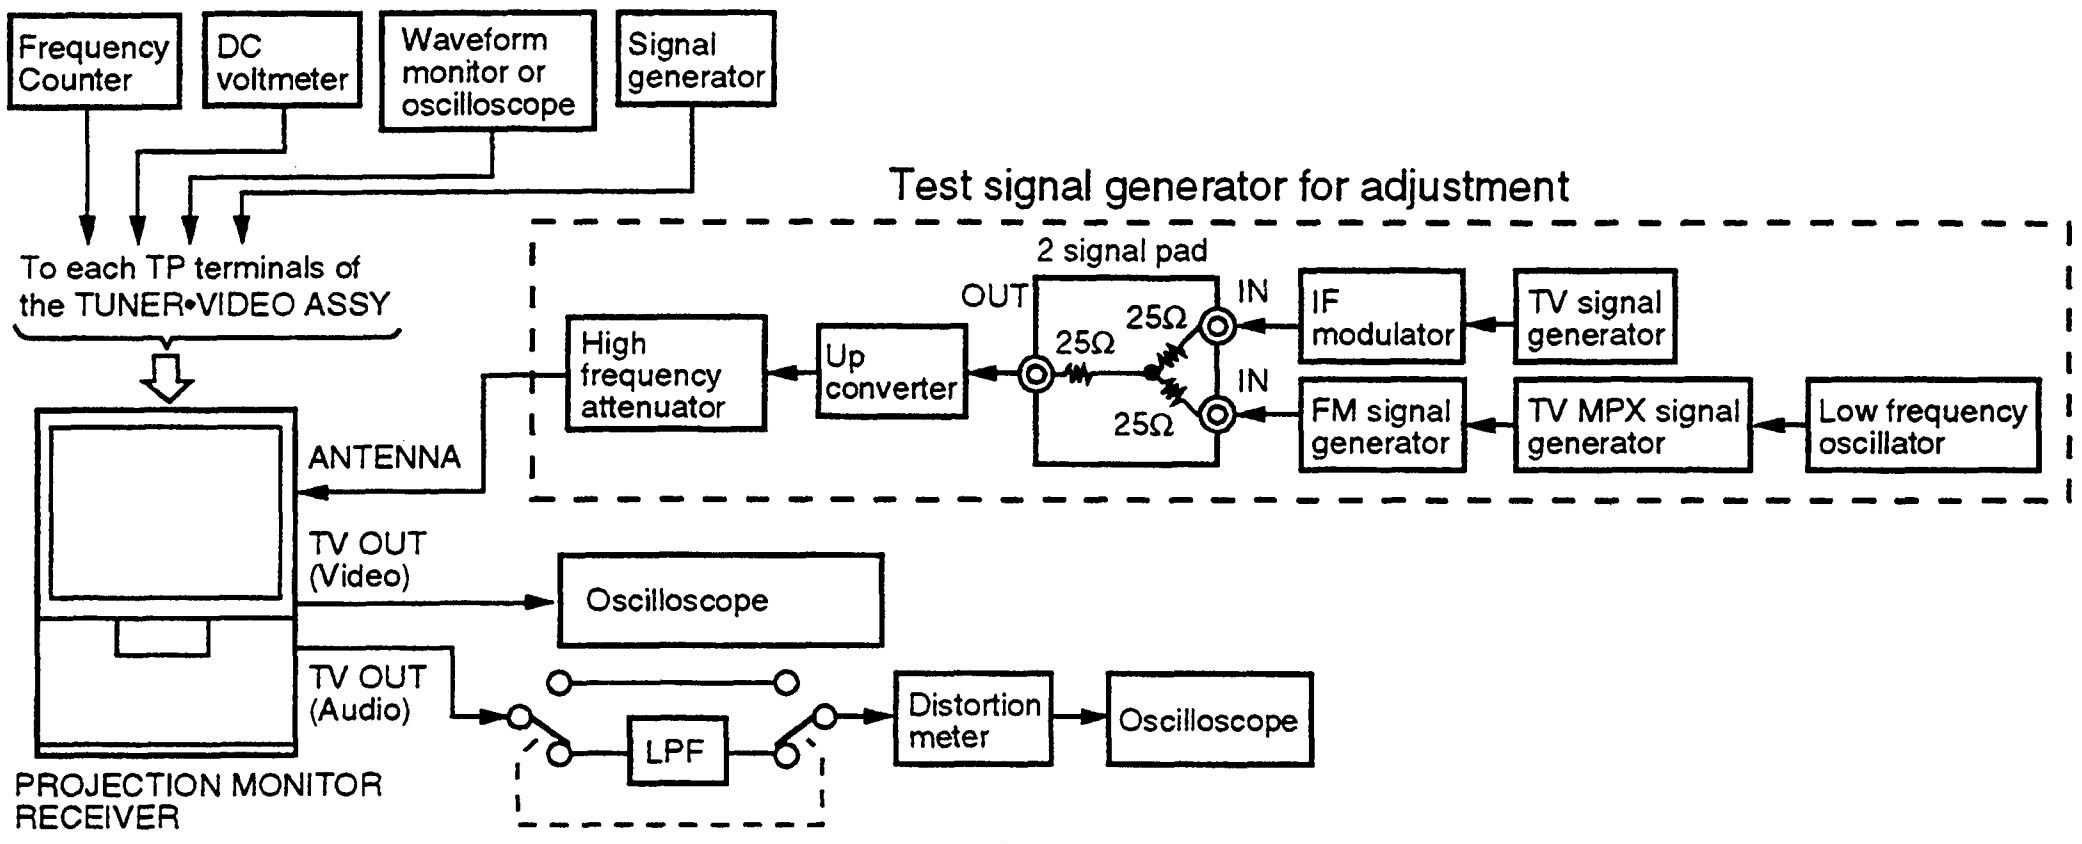
Frequency Counter
DC voltmeter
Waveform monitor or oscilloscope
Signal generator
Test signal generator for adjustment
To each TP terminals of the TUNER•VIDEO ASSY
2 signal pad
OUT
IN
IN
25Ω
25Ω
25Ω
High frequency attenuator
Up converter
IF modulator
TV signal generator
FM signal generator
TV MPX signal generator
Low frequency oscillator
ANTENNA
TV OUT (Video)
Oscilloscope
TV OUT (Audio)
LPF
Distortion meter
Oscilloscope
PROJECTION MONITOR RECEIVER

LPF : 100Hz to 10kHz : $^{+0}_{-0.5}$ dB
15.75kHz to 100kHz : less than -40dB

⓭ White Balance Adjustment

Start **1st FAC**

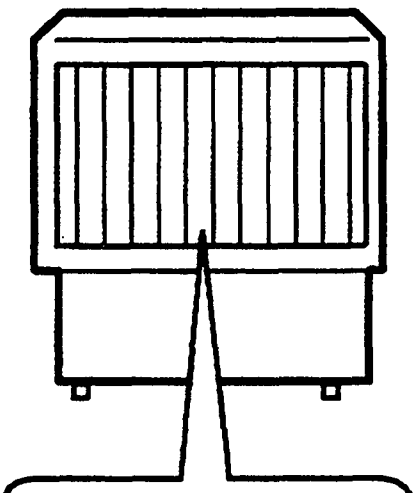

Color-bar signal without color signal

Adjust the DRV-G and DRV-B so that the bright part of the screen becomes white.

Adjust the CUT-R and CUT-B so that the dark part of the screen become gray.

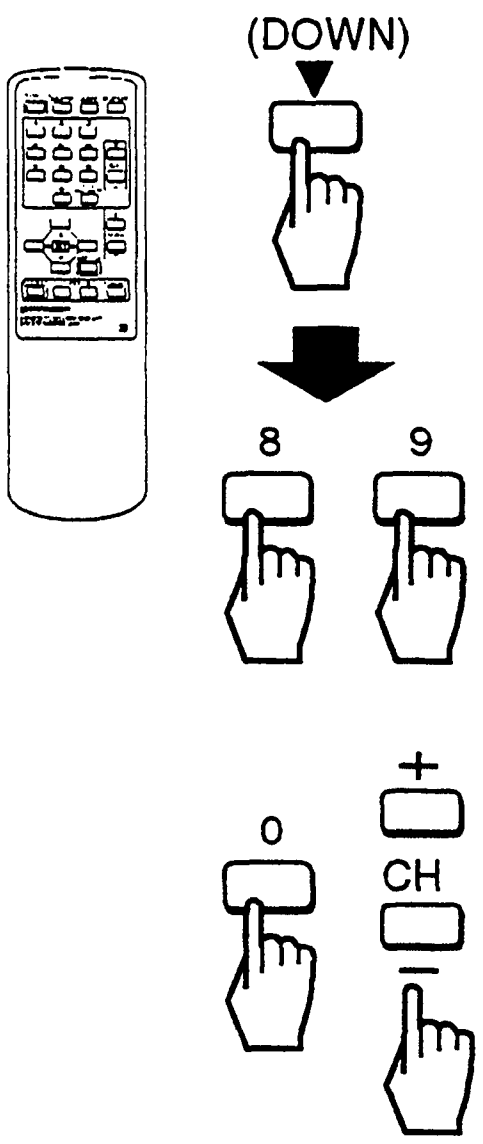

8 : DRV-G
9 : DRV-B

0 : CUT-R
CH + : CUT-G
CH − : CUT-B

⑭ PIONEER's Standard Settings

⑭-1 Sharpness Adjustment

Start **1st FAC**

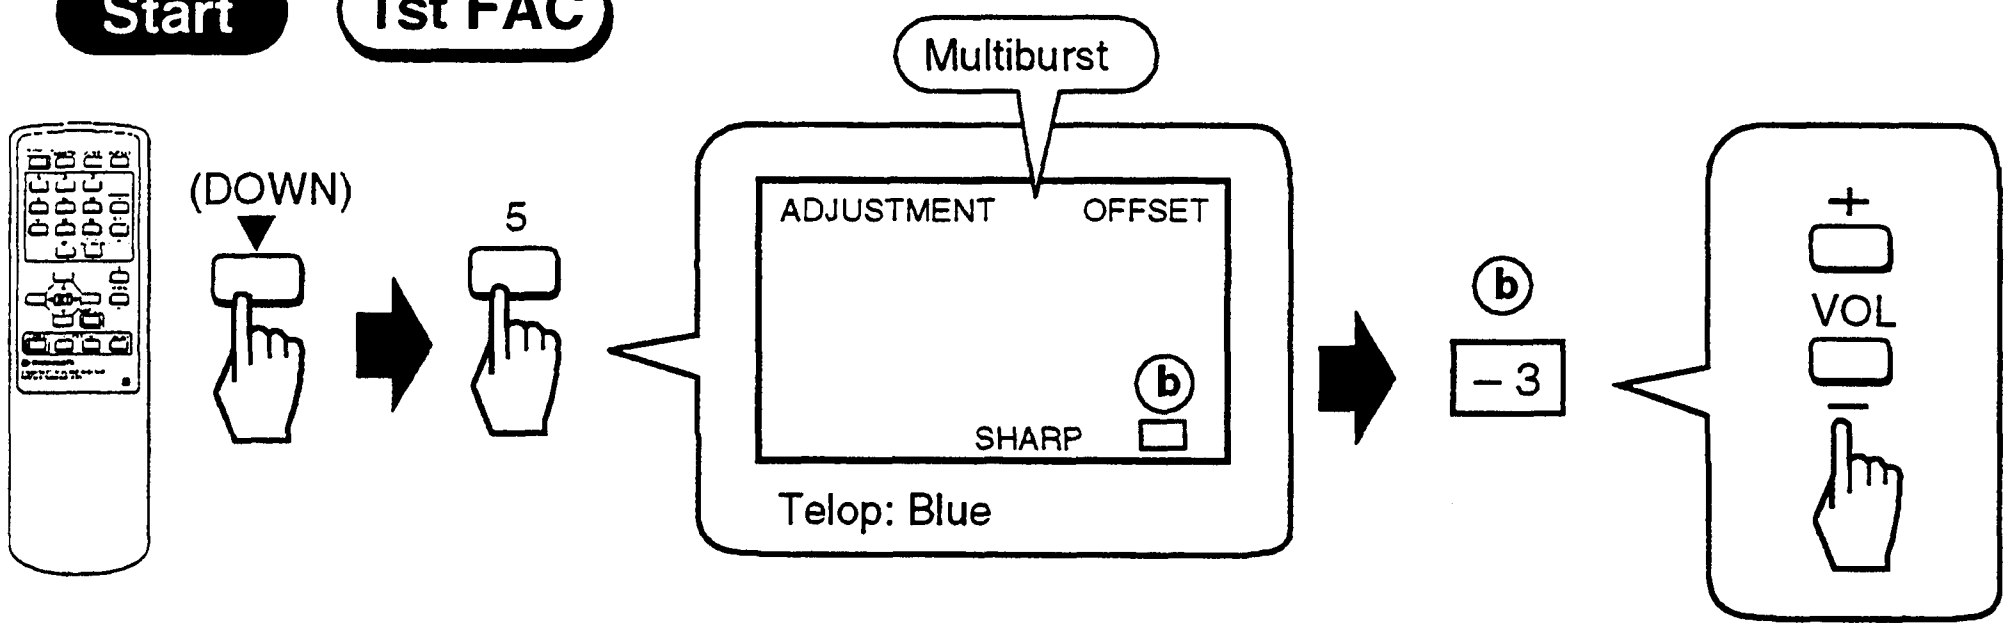
(DOWN)
5
Multiburst
ADJUSTMENT
OFFSET
ⓑ
SHARP
Telop: Blue
ⓑ
– 3
+
VOL
–

⑭-2 Color Adjustment

Start **1st FAC**

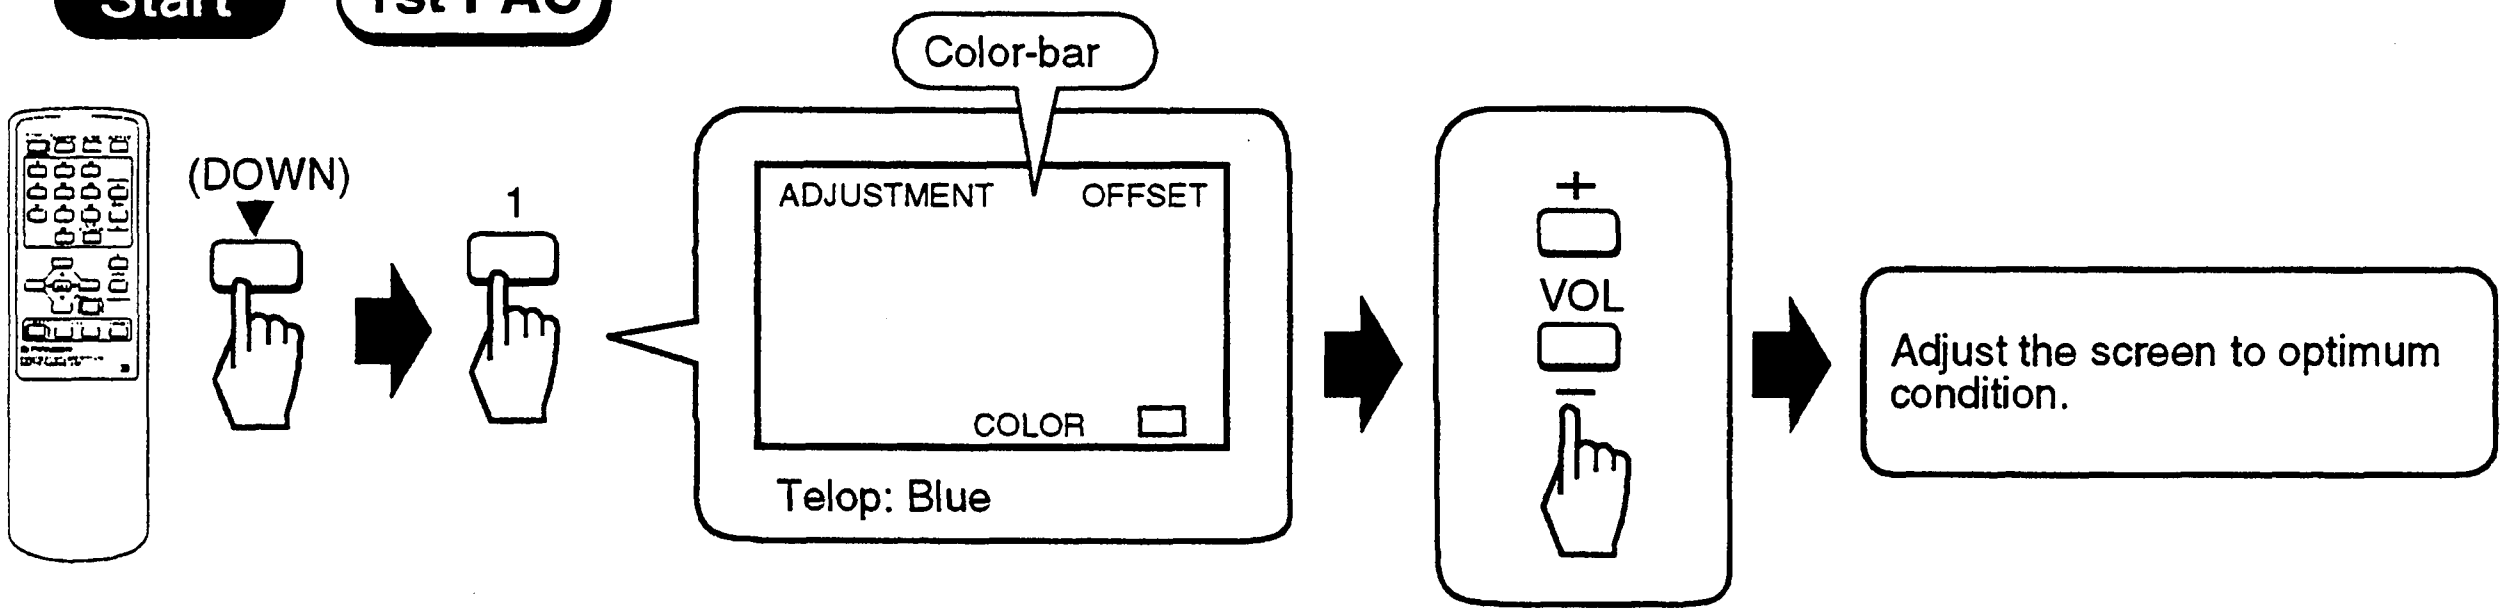
(DOWN)
1
Color-bar
ADJUSTMENT
OFFSET
COLOR
Telop: Blue
+
VOL
–

Adjust the screen to optimum condition.

⑭-3 Tint Adjustment

Start **1st FAC**

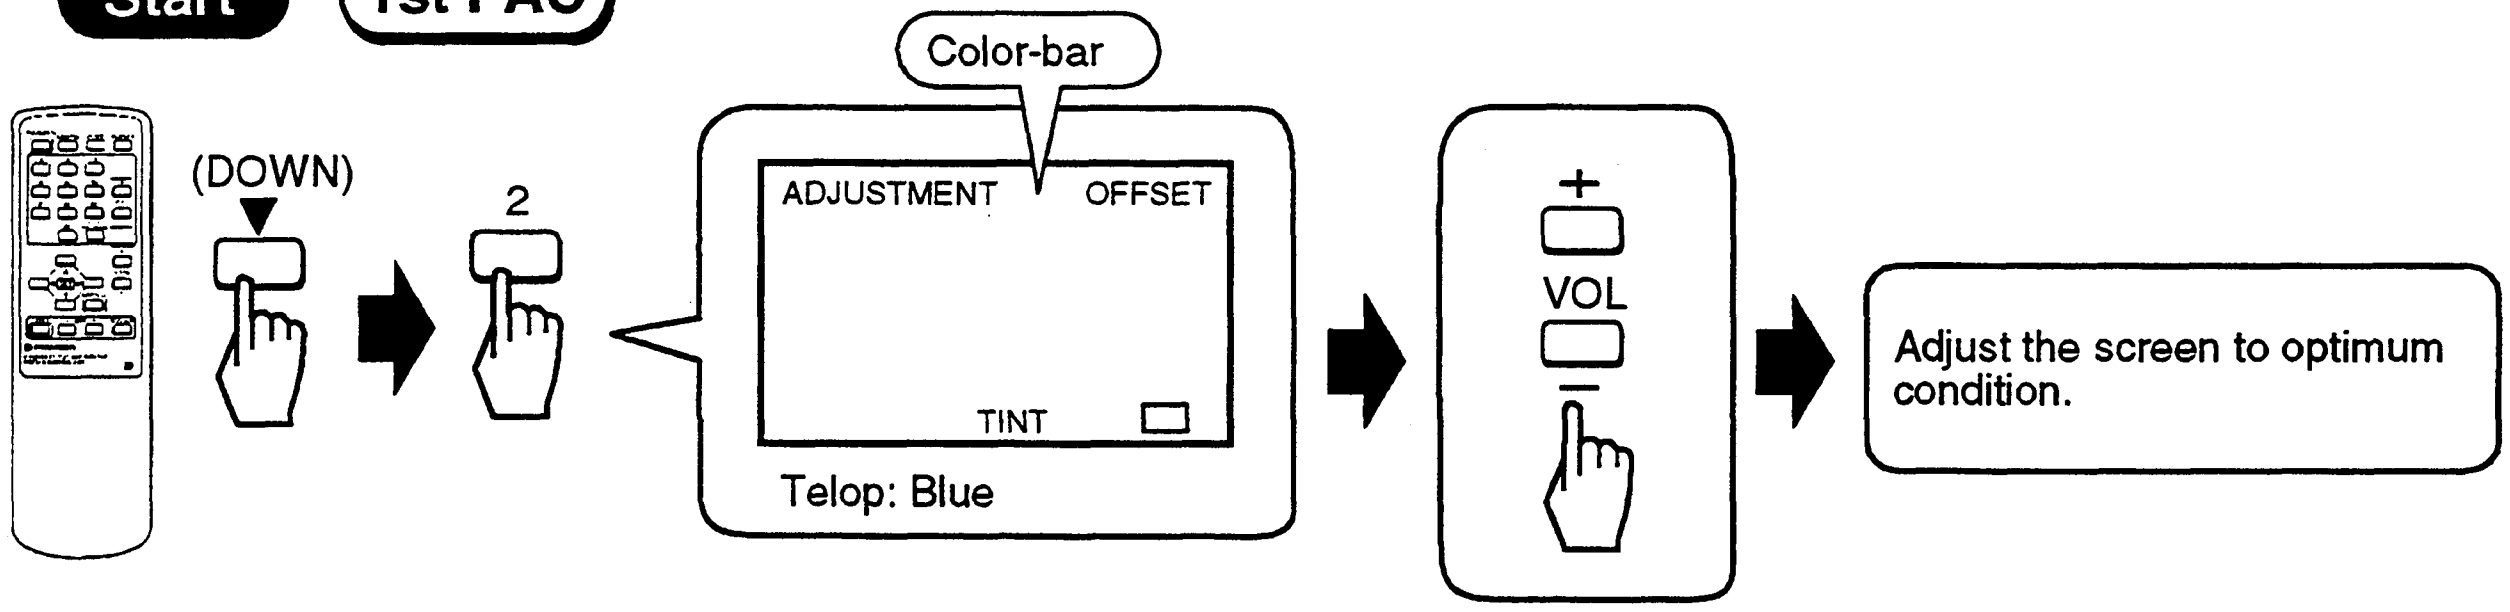
(DOWN)
2
Color-bar
ADJUSTMENT
OFFSET
TINT
Telop: Blue
+
VOL
–

Adjust the screen to optimum condition.

⑭-4 Contrast Adjustment

Start **1st FAC**

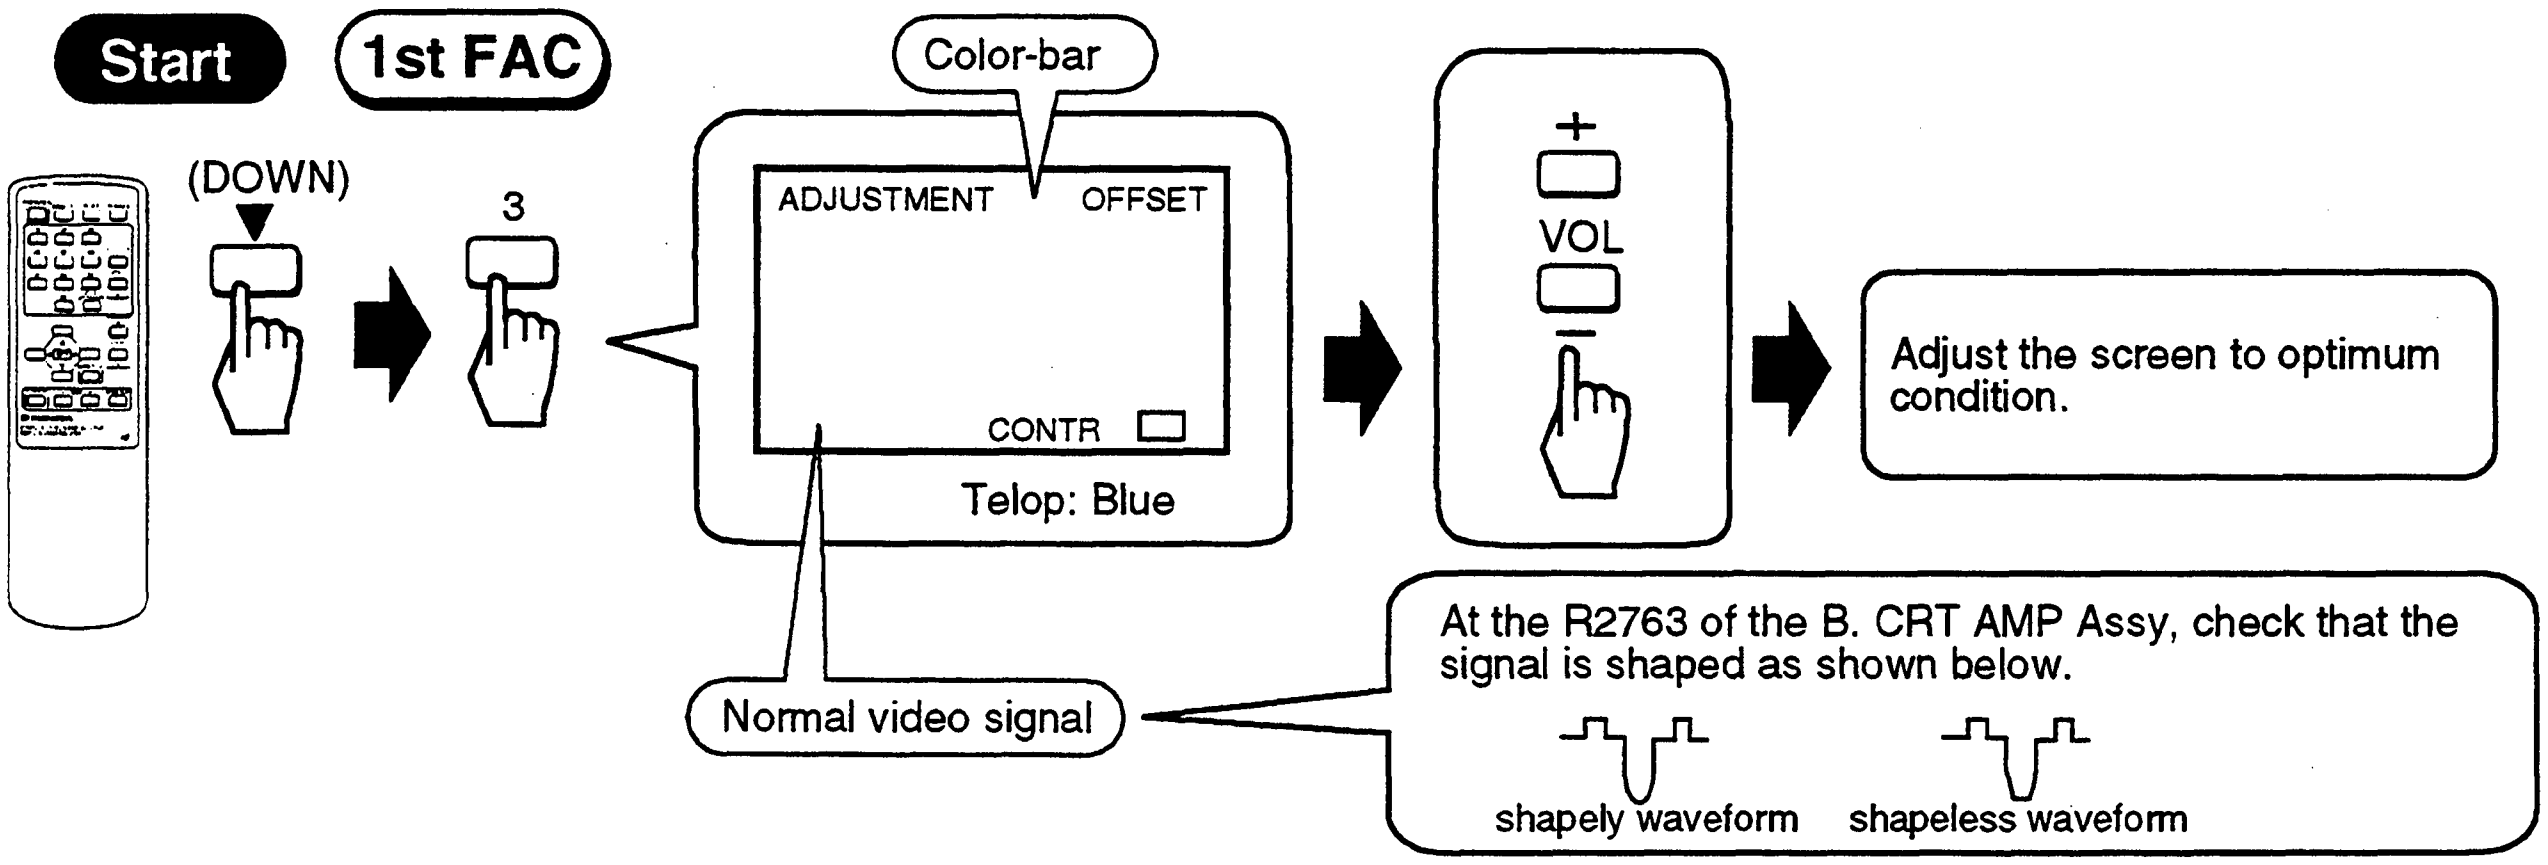
(DOWN)
3
Color-bar
ADJUSTMENT
OFFSET
CONTR
Telop: Blue
+
VOL
–
Normal video signal
shapely waveform
shapeless waveform

Adjust the screen to optimum condition.

At the R2763 of the B. CRT AMP Assy, check that the signal is shaped as shown below.

⑮ Y-signal Level Adjustment of Sub-picture (Adjustment for P IN P)

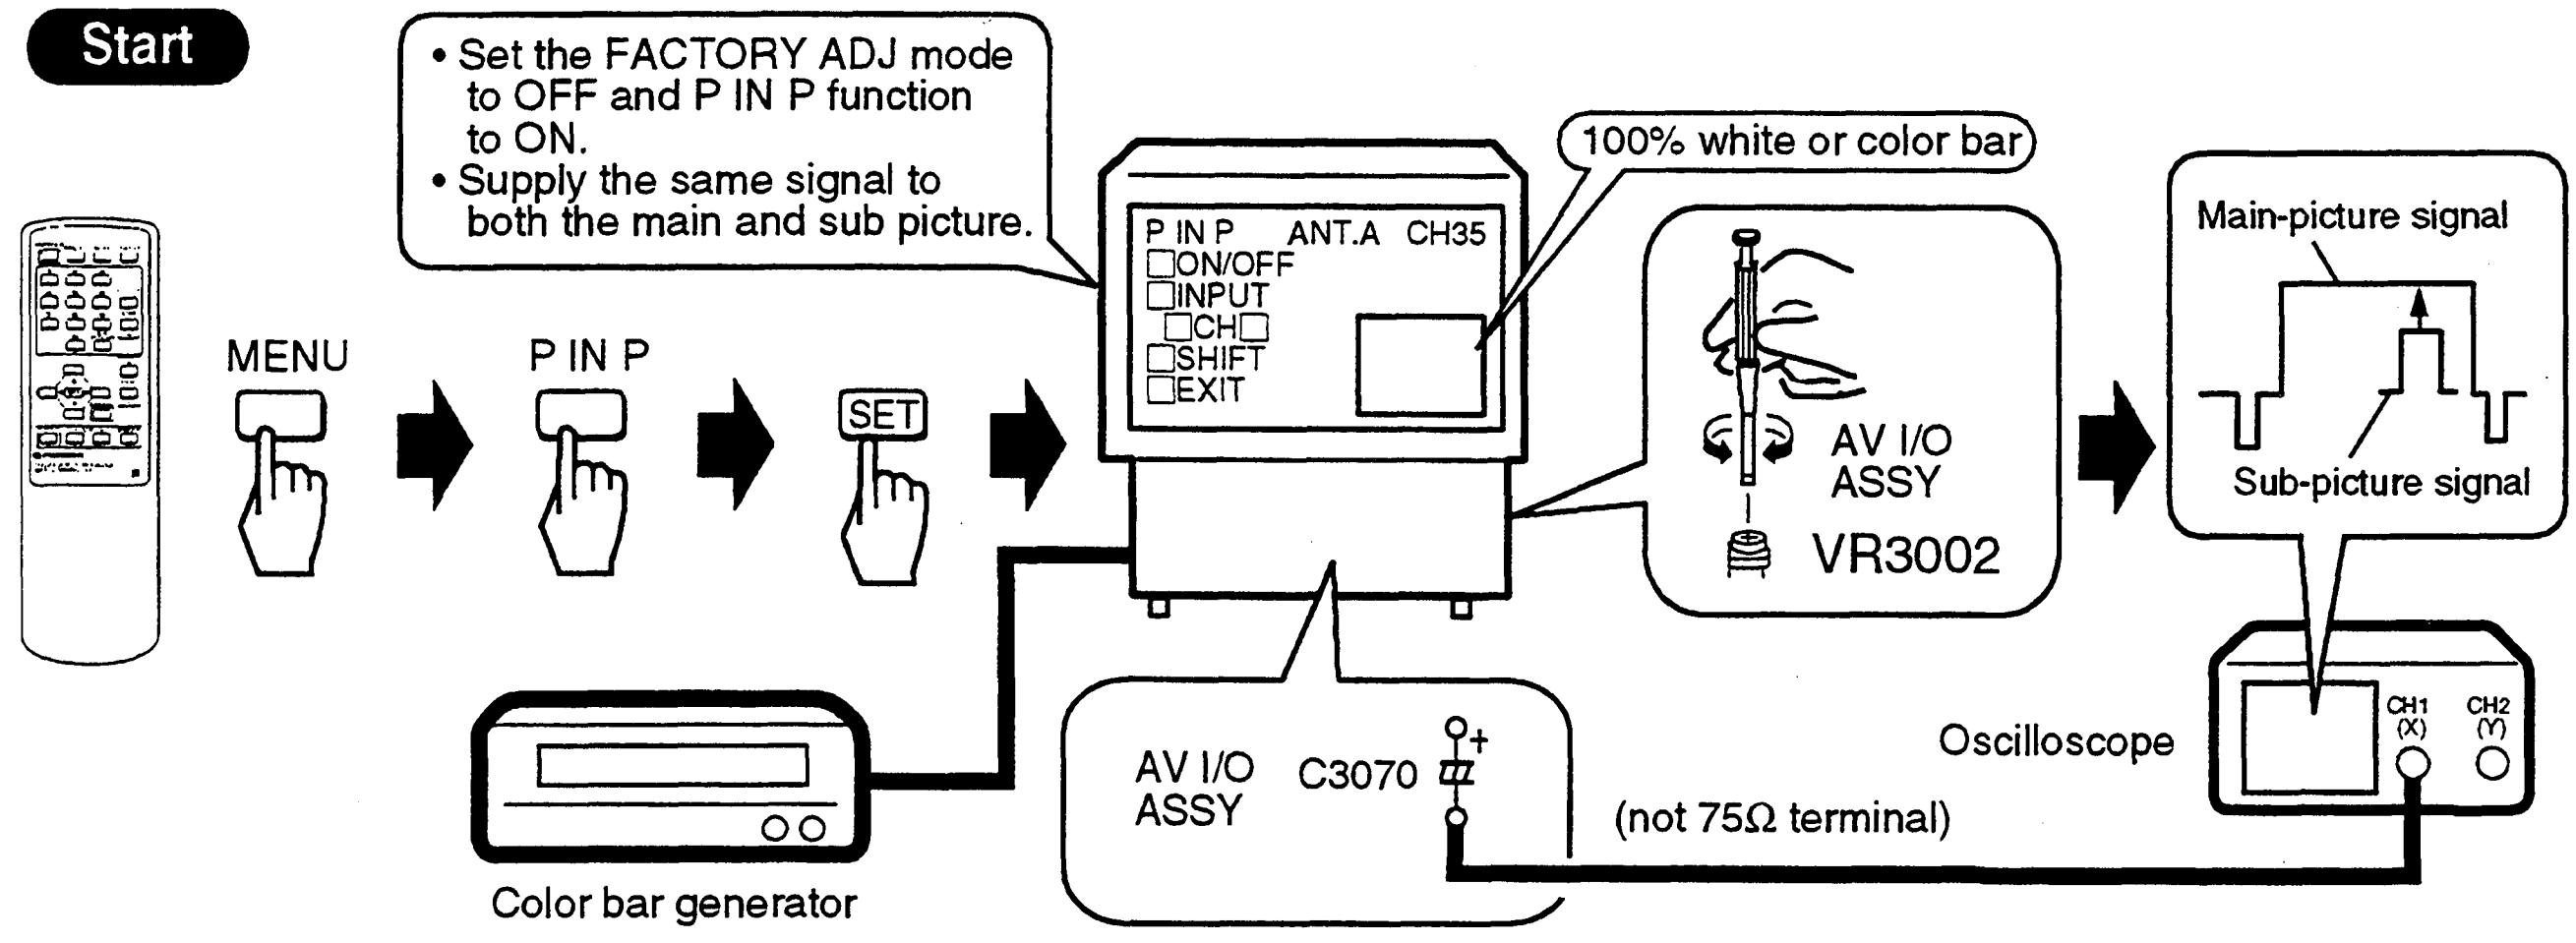

- Set the FACTORY ADJ mode to OFF and P IN P function to ON.
- Supply the same signal to both the main and sub picture.

Start
MENU
P IN P
SET
P IN P ANT.A CH35
☐ON/OFF
☐INPUT
☐CH☐
☐SHIFT
☐EXIT
100% white or color bar
AV I/O ASSY
VR3002
Main-picture signal
Sub-picture signal
AV I/O ASSY
C3070
Oscilloscope
CH1 (X)
CH2 (Y)
(not 75Ω terminal)
Color bar generator

⑯ TINT Adjustment of Sub-picture (Adjustment for P IN P)

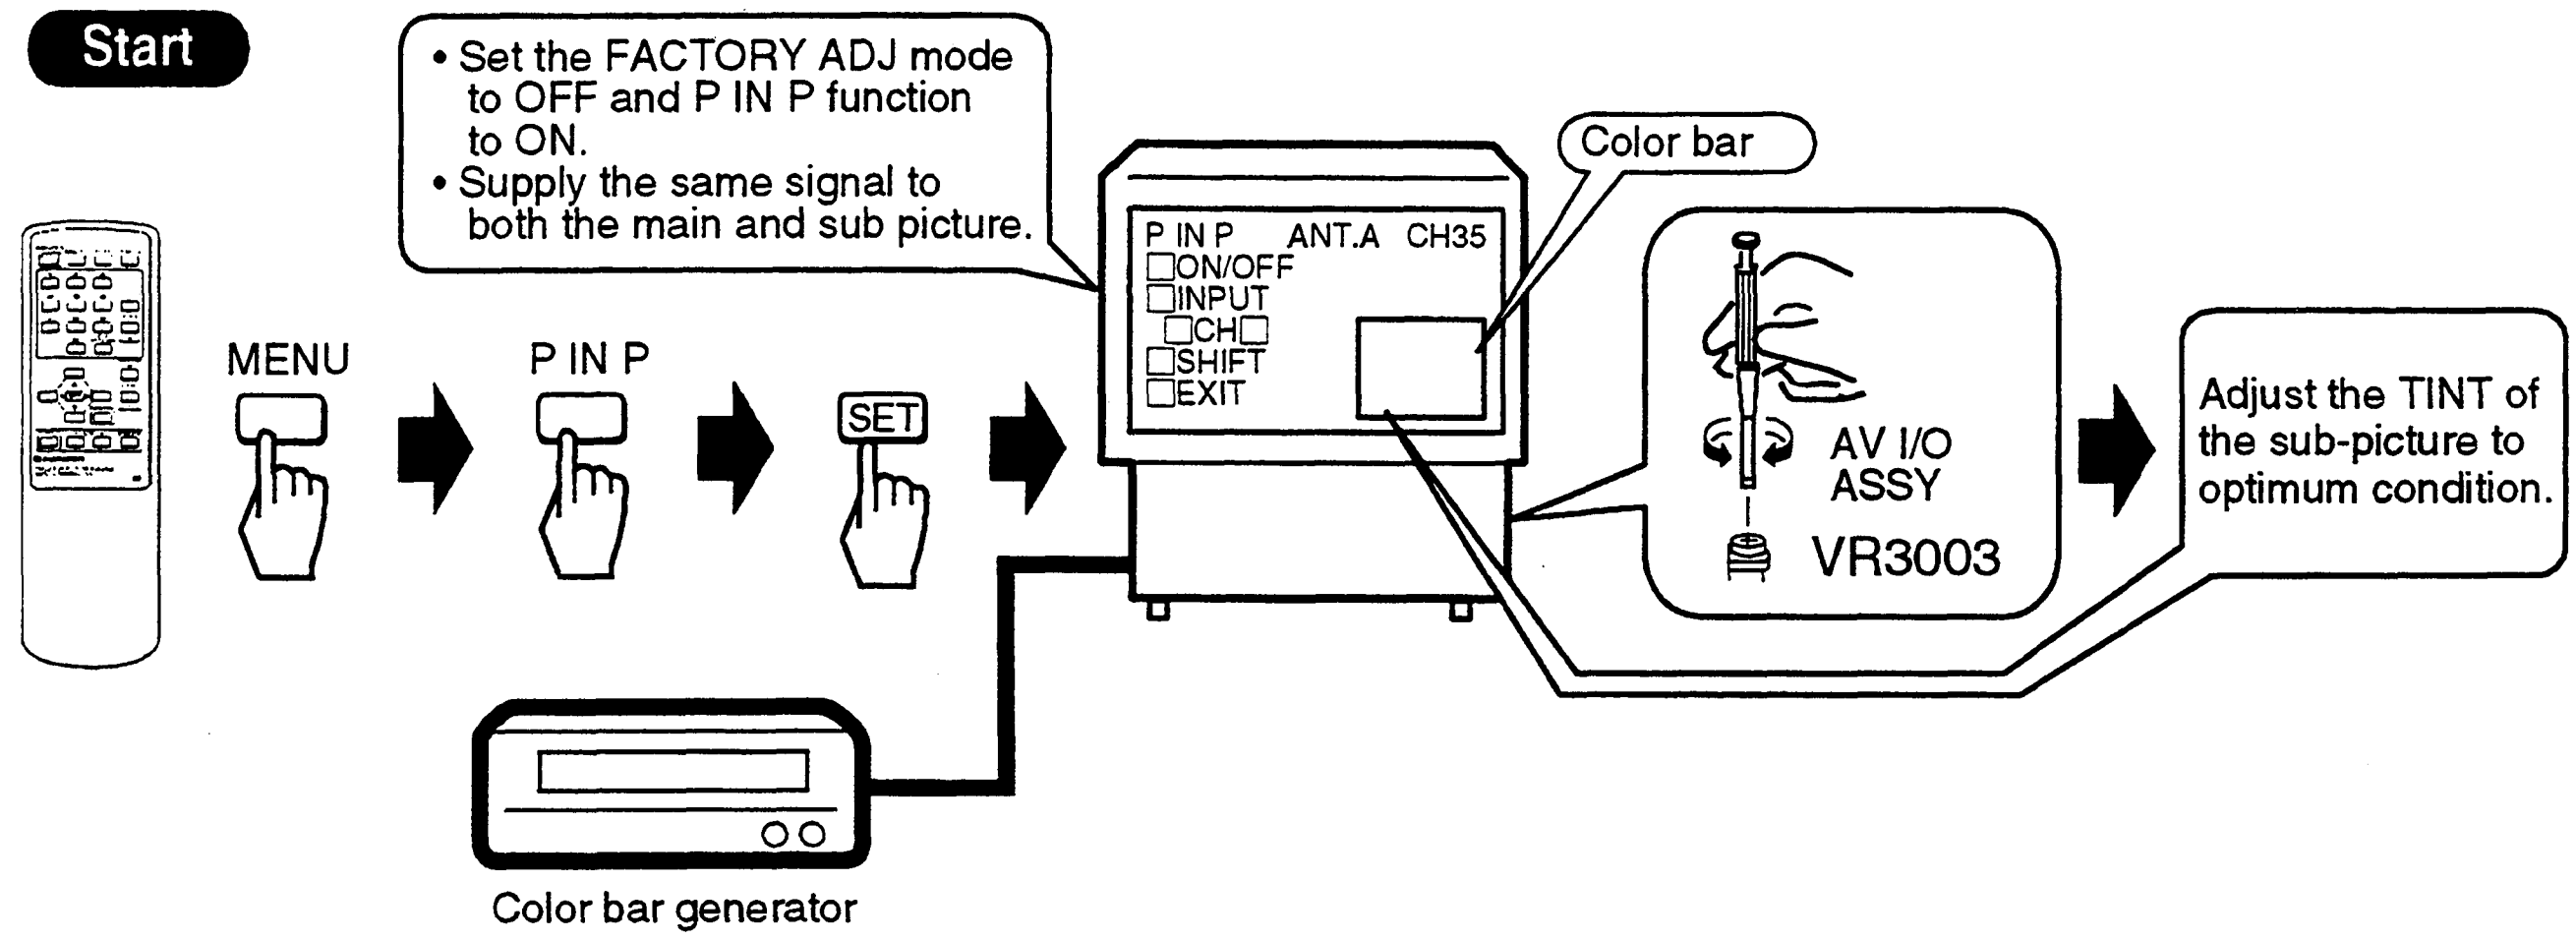

- Set the FACTORY ADJ mode to OFF and P IN P function to ON.
- Supply the same signal to both the main and sub picture.

Adjust the TINT of the sub-picture to optimum condition.

Start
MENU
P IN P
SET
P IN P ANT.A CH35
☐ON/OFF
☐INPUT
☐CH☐
☐SHIFT
☐EXIT
Color bar
AV I/O ASSY
VR3003
Color bar generator

⑰ Chroma Level Adjustment of Sub-picture (Adjustment for P IN P)

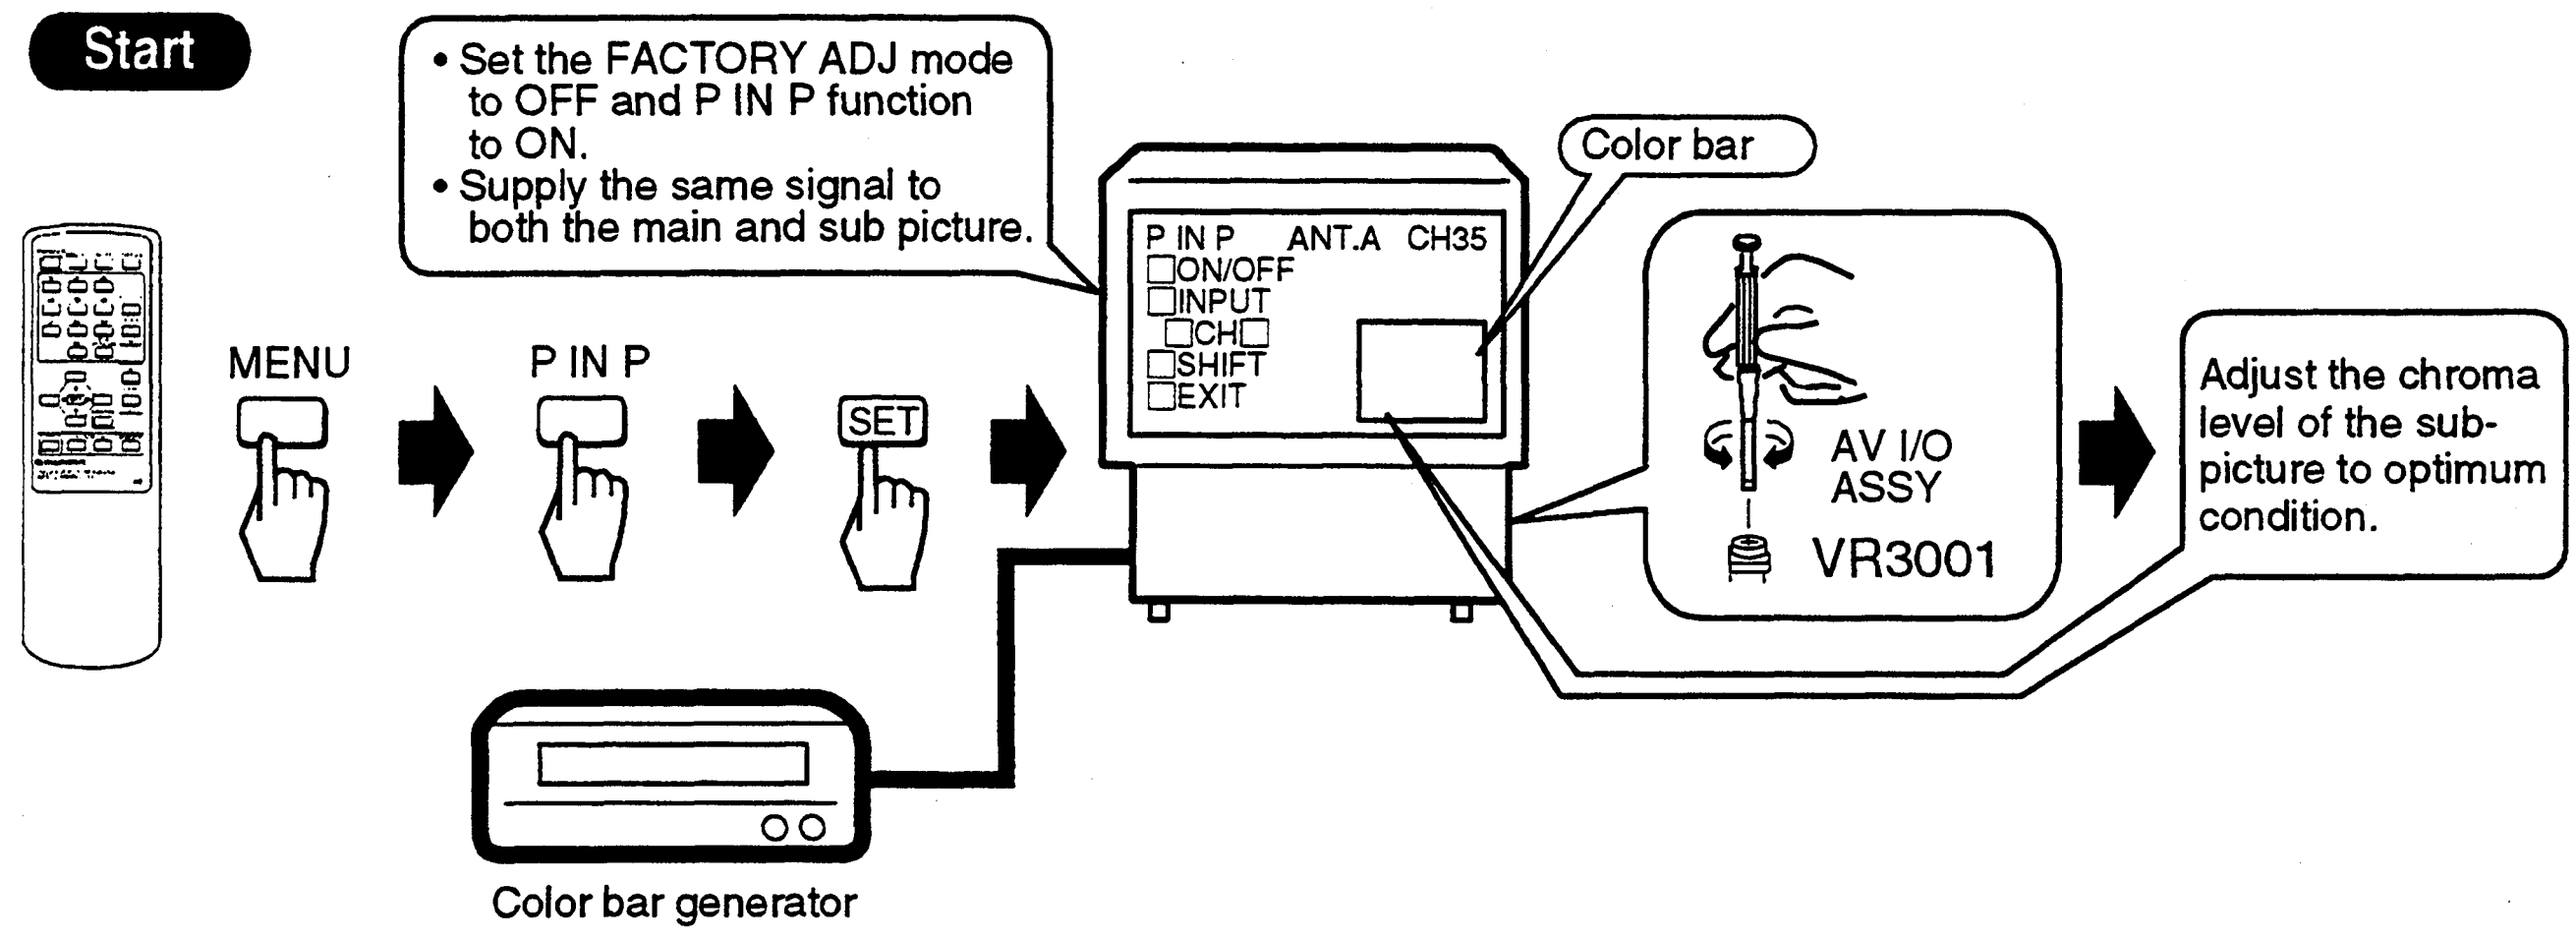

- Set the FACTORY ADJ mode to OFF and P IN P function to ON.
- Supply the same signal to both the main and sub picture.

Adjust the chroma level of the sub-picture to optimum condition.

Start
MENU
P IN P
SET
P IN P ANT.A CH35
☐ON/OFF
☐INPUT
☐CH☐
☐SHIFT
☐EXIT
Color bar
AV I/O ASSY
VR3001
Color bar generator

⑱ Write Clock Adjustment of Sub-picture (Adjustment for P IN P)

Start

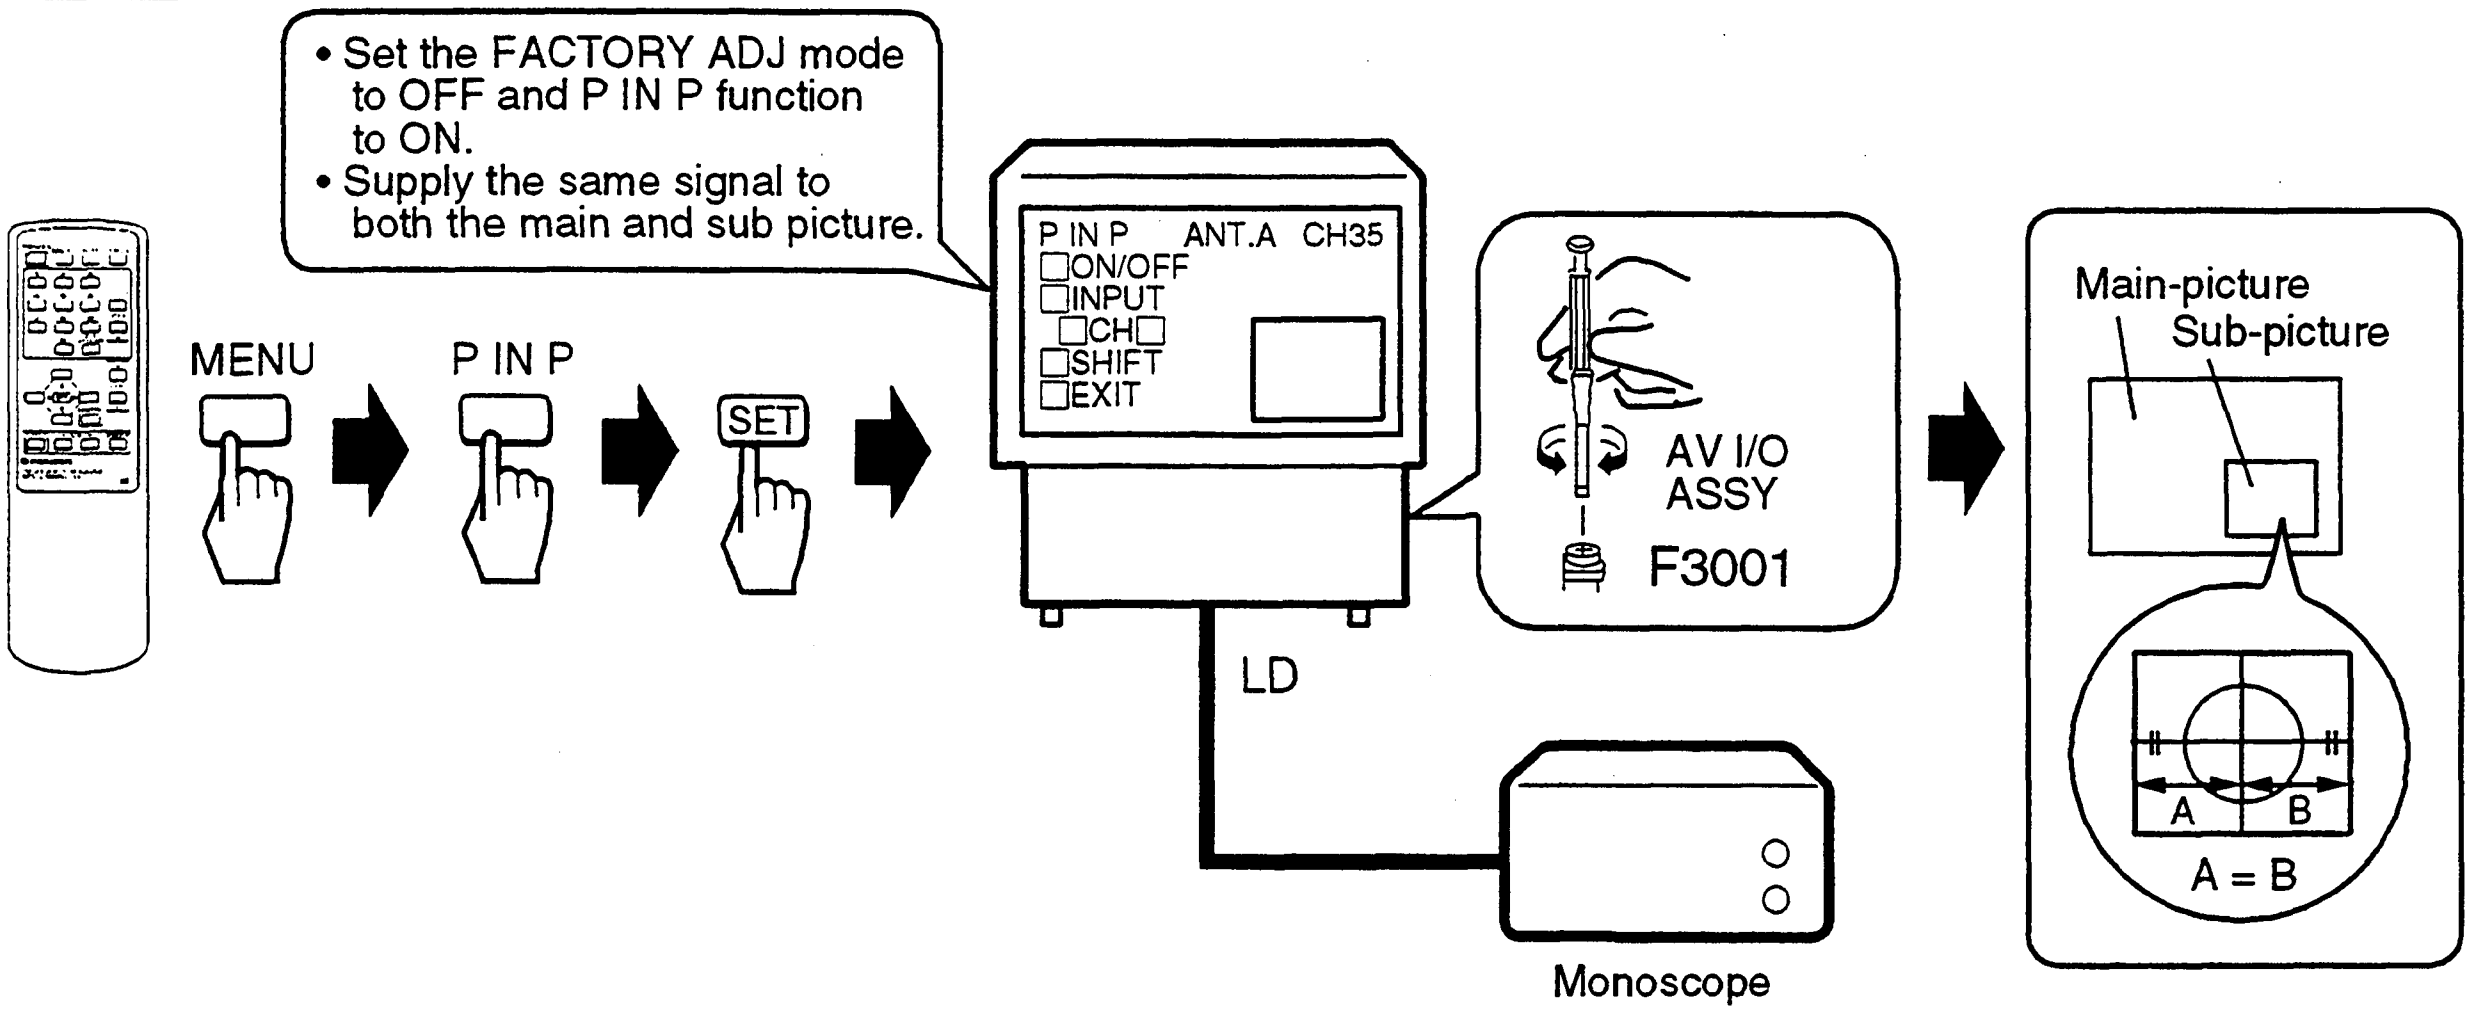

- Set the FACTORY ADJ mode to OFF and P IN P function to ON.
- Supply the same signal to both the main and sub picture.

MENU
P IN P
SET
P IN P ANT.A CH35
☐ON/OFF
☐INPUT
☐CH☐
☐SHIFT
☐EXIT
AV I/O ASSY
F3001
LD
Monoscope
Main-picture
Sub-picture
A
B
A = B

⑲ Read Clock Adjustment of Sub-picture (Adjustment for P IN P)

Start

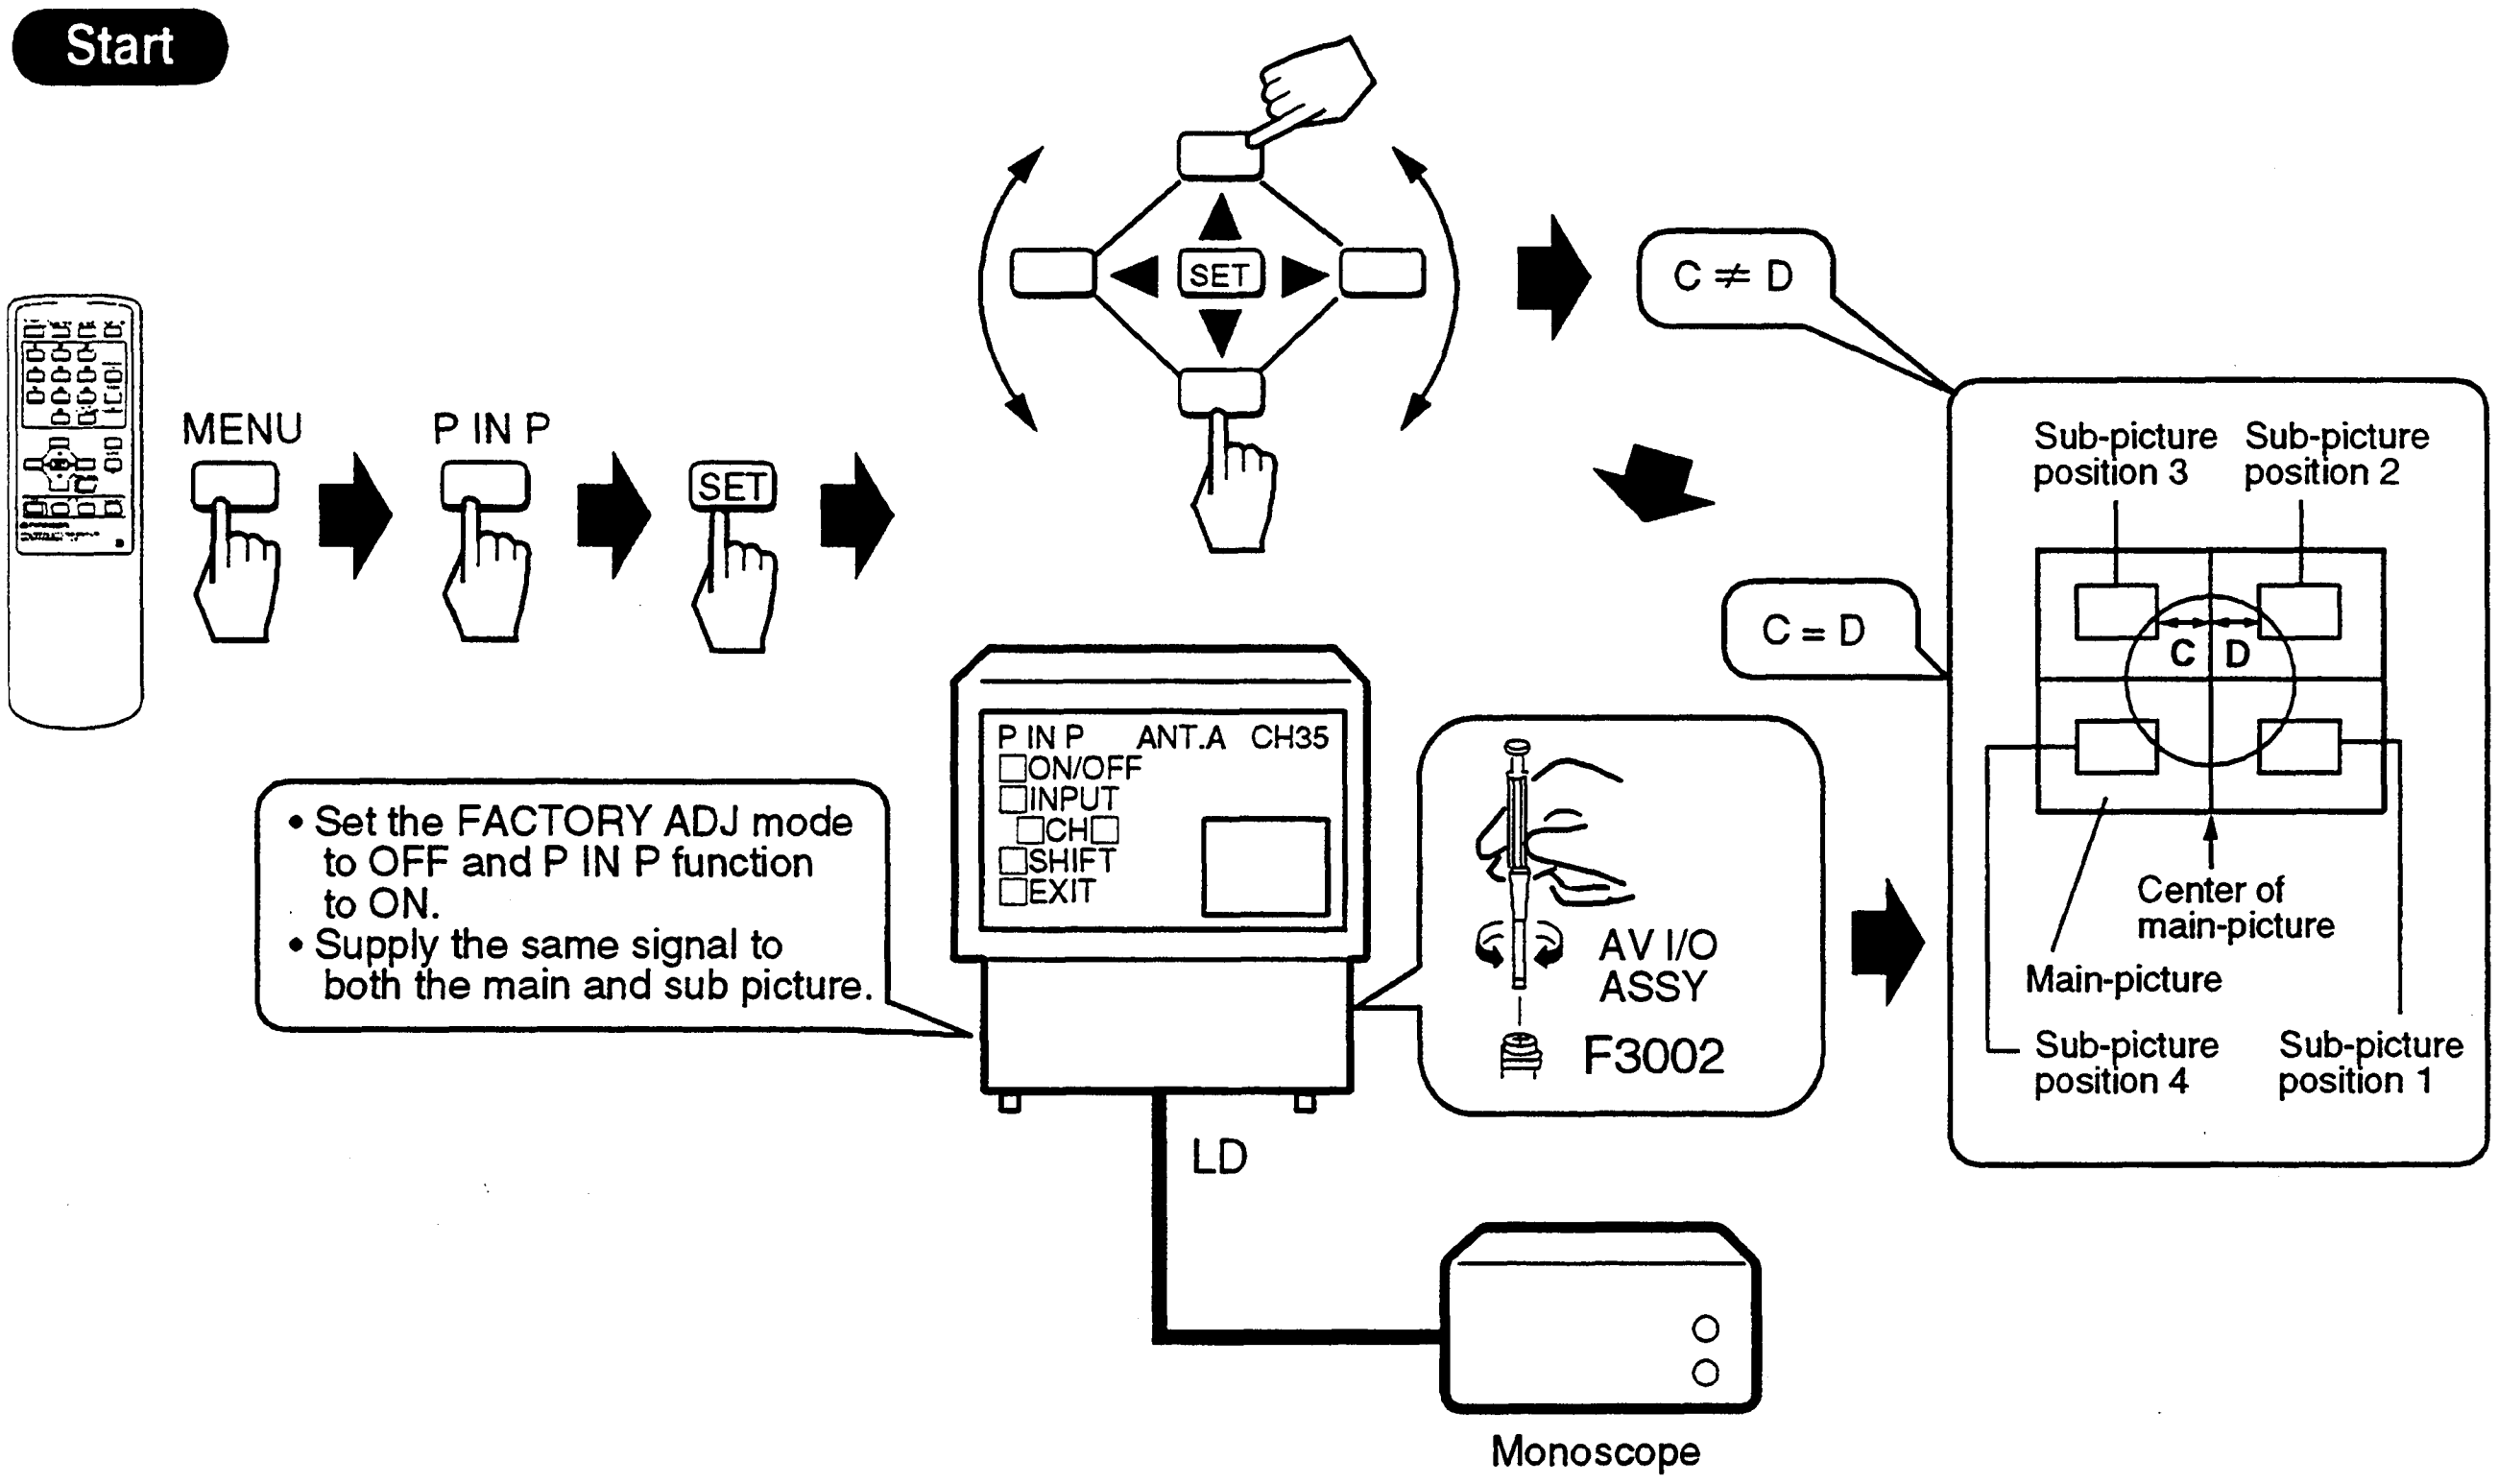

- Set the FACTORY ADJ mode to OFF and P IN P function to ON.
- Supply the same signal to both the main and sub picture.

SET
MENU
P IN P
SET
C ≠ D
C = D
Sub-picture position 3
Sub-picture position 2
C
D
Center of main-picture
Main-picture
Sub-picture position 4
Sub-picture position 1
P IN P ANT.A CH35
☐ON/OFF
☐INPUT
☐CH☐
☐SHIFT
☐EXIT
AV I/O ASSY
F3002
LD
Monoscope

7. GENERAL INFORMATION

7.1 PARTS

7.1.1 IC

- The information shown in the list is basic information and may not correspond exactly to that shown in schematic diagrams.

■ PD5395A (TUNER•VIDEO ASSY : IC901)

- **System Control Microcomputer**

- **Pin Function**

No.	Pin Name	I/O	Active	Function	No.	Pin Name	I/O	Active	Function
1	H BLK	I	H	Sync. signal input for OSD	33	VCC	—	—	+5V power supply
2	V BLK	I	H		34	OSC1	I	—	Clock input / output for display
3	KEY	I	—	Main unit key scan signal input Analog voltage input	35	OSC2	Co	—	
4	REMOTE	I	L	Remote control signal input Decipher the PIONEER's SR signal	36	RESET	I	L	System reset Reset when L is input for more than 0.95μsec. (OSC=4.19MHz)
5	H SYNC1	I	—	H. sync. count input for tuner 1 reception When number of H-SYNC lasts eight rounds of continuation by a state of 12 - 18 during 1 msec, it judges the broadcast to be it. When other state lasts six rounds of continuation, it judge it to be broadcast nothing.	37	PF2/ N.C	Co	—	P IN P sub-picture switching signal
6	H SYNC2	I	—	H. sync. count input for tuner 2 reception	38	PF1/ N.C	Co	—	
7	AFT1	Ci	—	AFT analog voltage input for tuner 1	39	INP2/ N.C	Co	—	P IN P main-picture switching signal
8	AFT2	Ci	—	AFT analog voltage input for tuner 2	40	INP1 / D.RST	Co /Ci	—	P IN P main-picture switching signal
9	N.C	—	—	Non connection	41	ANT SW.	Co	—	Antenna input A and B switching signal H:ANT. A , L:ANT. B
10	V. MUTE	Co	H	Video mute output (Input signal switch, power ON / OFF etc.)	42	SDA	Ni/o	H	I²C serial data input/output
11	H.SIZE.ADJ	No	H	PWM output for H. deflection size control	43	(E)SDA	Ni/o	H	I²C serial data input/output (for E²ROM)
12	CONV MUTE	No	L	Mute output for convergence amp IC (STK392-110) H:OFF , L:ON	44	VM.MUTE	No	H	Velocity modulation switching signal output H:ON , L:OFF
13	BASS SW	No	L	Not used (Bass boost switching signal output H:OFF, L:ON)	45	SCL	Ni/o	H	I²C serial transfer clock
14	N.C	—	—	Non connection	46	N.C	—	—	Non connection
15	V.SIZE.ADJ	No	H	PWM output for V. deflection size control	47	(E)SCL	Ni/o	H	I²C serial clock input/output (for E²ROM)
16	PIP.RST	No	H	Reset signal output for P IN P IC (HD49420FS) H:ON , L:OFF	48	V.RST	No	H	Not used
17	SRR.SW	Co	H	Switching signal output for matrix surround H:ON , L:OFF	49	DATA	Co	L	Serial data output (P IN P, convergence)
18	PORT W1	No	—	Not used (Pulse output for checking microcomputer operation)	50	CLK	Co	L	Serial clock output (P IN P, convergence)
19	N.C	—	—	Non connection	51	A MUTE	Co	H	Audio mute output H:ON, L:OFF
20	CONV.ENB	No	L	Data enable signal output of convergence IC (PM0011A)	52	ROM RST	Co	H	Reset output for E²PROM
21	OPTION	Ni	—	Not used	53	AC CLK	Ci	H	AC clock detection input Use for AC power OFF detection (Reset process for three AC wave are lacked)
22	PIP.ENB	No	H	Data enable signal output for P IN P IC	54	PORT W2	No	—	Not used (Pulse output for checking microcomputer operation)
23	S.OX	Ni	—	Not used (Signal input for S input detection H:COMP. V input , L:Y/C input)	55	RELAY	No	L	Power supply relay control signal output H:OFF, L:ON
24	AVCC	—	—	Analog power supply Apply +5V.	56	N.C	—	—	Non connection
25	HLF	—	—	Connect the external parts for CCD timing signal generating circuit	57	LIN.WHITE	No	H	PWM output for linear white level control
26	RVCO	—	—		58	C.C.MUTE	No	H	Not used
27	VHOLD	—	—	Connect the external parts for CCD reference voltage generating circuit	59	VOLUME	No	H	PWM output for audio level control
28	CVIN	I	—	Video signal input for CCD (2.0Vp-p)	60	N.C	—	—	Non connection
29	CNVSS	I	—	Connect to Vss	61	OSD BLK	Co	H	Signal output for OSD mute and velocity modulation mute
30	XIN	I	—	Input / Output pins of main clock generating circuit Connect a 8.0MHz ceramic oscillator.	62	OSD B	Co	H	Video output for OSD
31	XOUT	Co	—		63	OSD G	Co		
32	VSS	—	—	Supplies 0V to Vss.	64	OSD R	Co		

I:Input O:Output Ci:CMOS input Co:CMOS output No:N ch open-drain output Ni:N ch open-drain input

- **Main-picture and P IN P sub-picture switching signal logic**

FUNCTION	Main-picture		Sub-picture	
	INP1	INP2	PF1	PF2
LD/DVD	H	H	H	H
VIDEO	L	H	L	H
VIDEO F.	H	L	H	L
TV	L	L	L	L

■ PST9146 (TUNER•VIDEO ASSY : IC903)

- **System Reset IC**

- **Block Diagram**

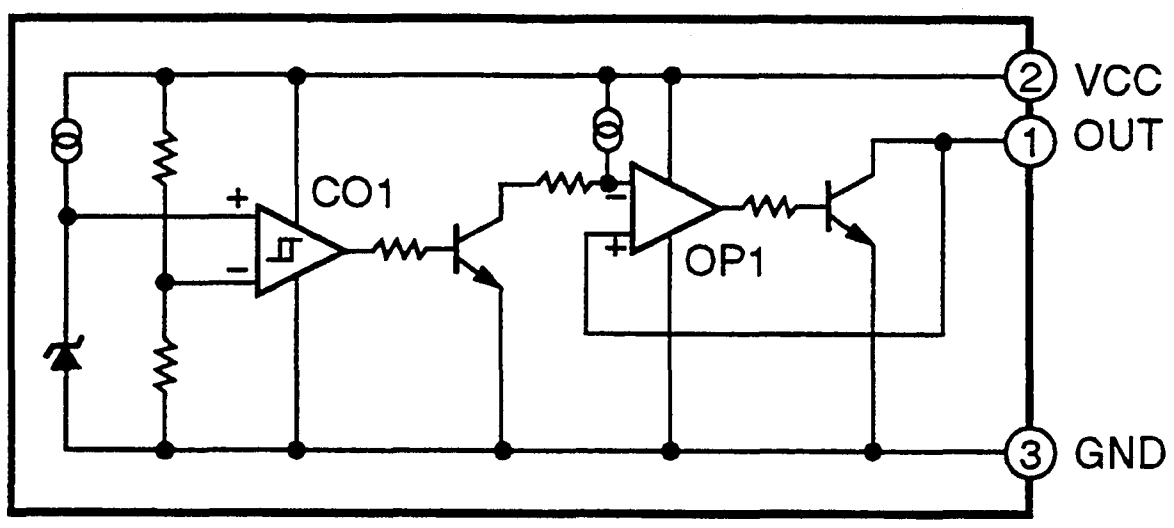

② VCC
① OUT
③ GND
CO1
OP1
+
−

■ BA7644AN (AV I/O ASSY : IC1602, IC1603)

- **Video and Audio Signal Switch**

- **Block Diagram**

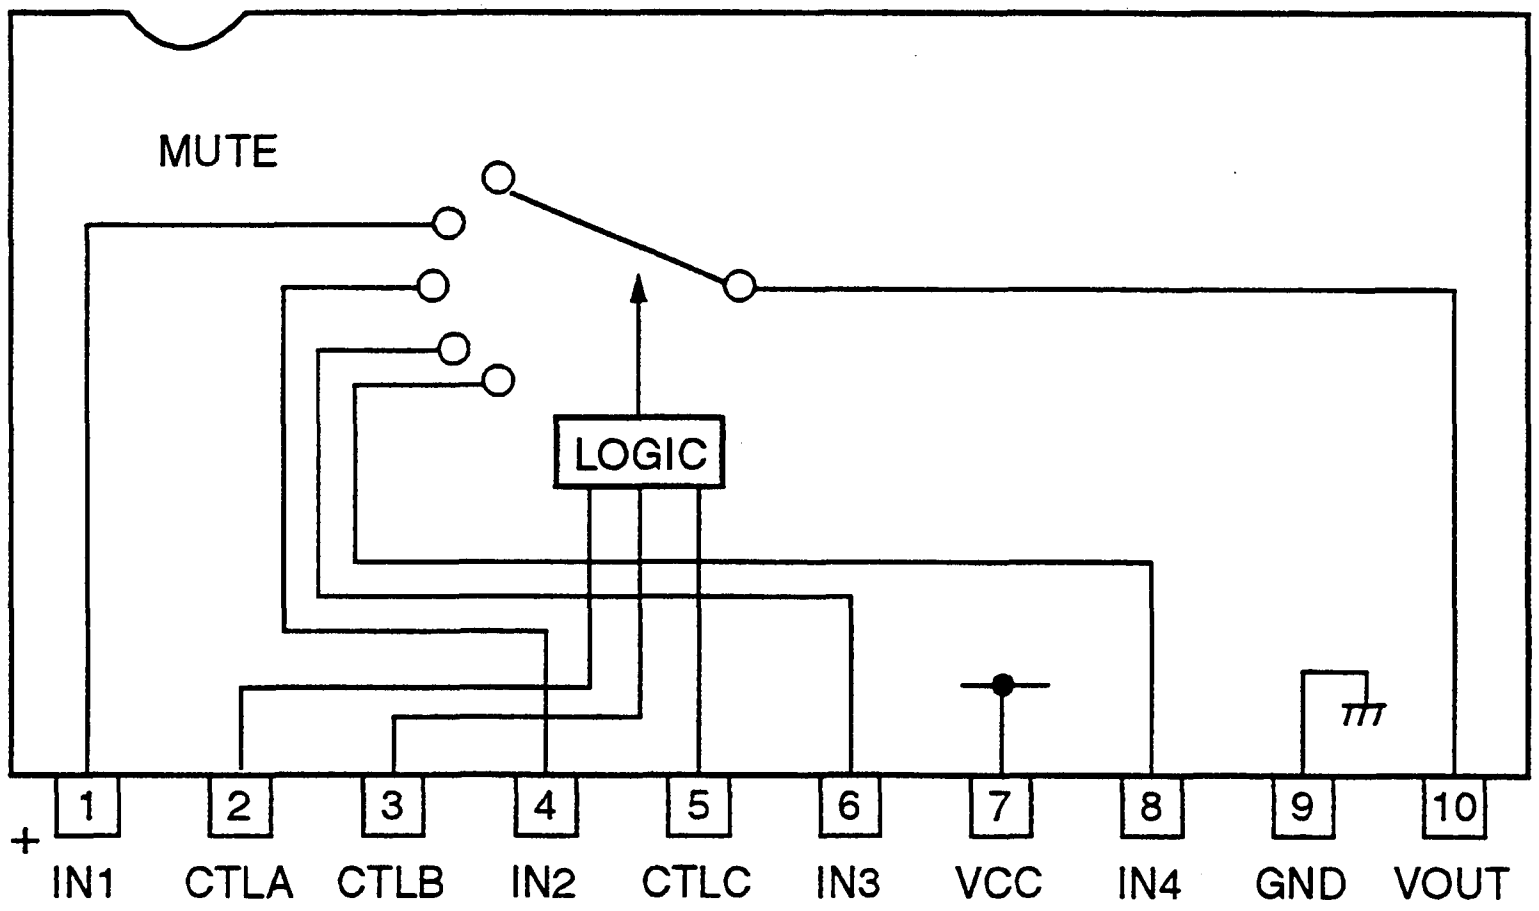

MUTE
LOGIC
+
1 IN1
2 CTLA
3 CTLB
4 IN2
5 CTLC
6 IN3
7 VCC
8 IN4
9 GND
10 VOUT

- **Truth Table**

Pin No.	2	3	5	10
—	CTLA	CTLB	CTLC	VOUT
1	L(OPEN)	L(OPEN)	L(OPEN)	IN1
4	L(OPEN)	H	L(OPEN)	IN2
6	H	L(OPEN)	L(OPEN)	IN3
8	H	H	L(OPEN)	IN4
—	*	*	H	MUTE

* : Either L (OPEN) or H approve

■ PM0011AS (CONVER CONTROL ASSY : IC2301 - IC2303)

• Digital / Analog Convergence Correction IC

• Pin Function

No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
1	INH1	I	Signal input for H 1st	22	MPYIN2	I	Multiplicator input 2
2	INH2	I	Signal input for H 2nd	23	MPYIN1	I	Multiplicator input 1
3	INH3	I	Signal input for H 3rd	24	MPYOUT	O	Multiplicator output
4	INH4	I	Signal input for H 4th	25	VOUT3	O	DA output 3 for V
5	INX1	I	Signal input for H 5th (for business)	26	VOUT2	O	DA output 2 for V
6	INX2	I	Signal input for H 6th (for business)	27	VOUT1	O	DA output 1 for V
7	ICADDR	I	Address input	28	HOUT3	O	DA output 3 for H
8	HV	—	H, V selection	29	HOUT2	O	DA output 2 for H
9	VEE	—	-5V power supply	30	HOUT1	O	DA output 1 for H
10	CLKB	I	Clock input (internal connection with pin 34)	31	CEB	—	Enable (internal connection with pin 13)
11	MUTEB	I	Mute input (internal connection with pin 33) MUTE=0V	32	DATA	—	Data (internal connection with pin 12)
12	DATA	I	Data input (internal connection with pin 32)	33	MUTEB	I	Mute input (internal connection with pin 11) MUTE=0V
13	CEB	I	Enable input (internal connection with pin 31)	34	CLKB	I	Clock input (internal connection with pin 10)
14	INJ	—	Injector Connect a 2kΩ resistor between this pin and VCC (+5V).	35	PCSEL	—	Mode switch For business : -5V , For generally : 0V
15	INV1	I	Signal input for V 1st	36	A2INP	I	OP amp 2 + input
16	INV2	I	Signal input for V 2nd	37	A2INM	I	OP amp 2 – input
17	INV3	I	Signal input for V 3rd	38	A1INP	I	OP amp 1 + input
18	INV4	I	Signal input for V 4th	39	A1INM	I	OP amp 1 – input
19	INX3	I	Signal input for V 5th (for business)	40	A1OUT	O	OP amp 1 output
20	INX4	I	Signal input for V 6th (for business)	41	A2OUT	O	OP amp 2 output
21	VCC	—	+5V power supply	42	GND	—	Ground

■ CA0005AM (CONVER CONTROL ASSY : IC2309)

• Single 2 Inputs Analog Multiplicator IC

• Block Diagram

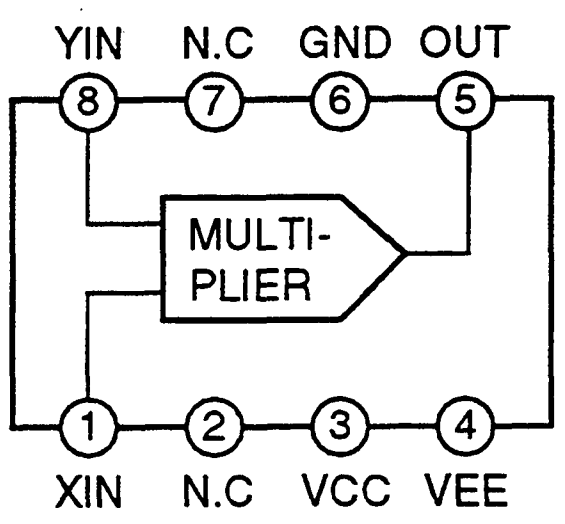

• Pin Function

No.	Pin Name	I/O	Function
1	XIN	I	X input
2	N.C	—	Non connection
3	VCC	—	Power supply
4	VEE	—	Power supply
5	OUT	O	Output
6	GND	—	Ground
7	N.C	—	Non connection
8	YIN	I	Y input

7.2 DISASSEMBLY / ASSEMBLY

7.2.1 Disassembling the Screen Frame

- Disassembly : ① → ② → ③

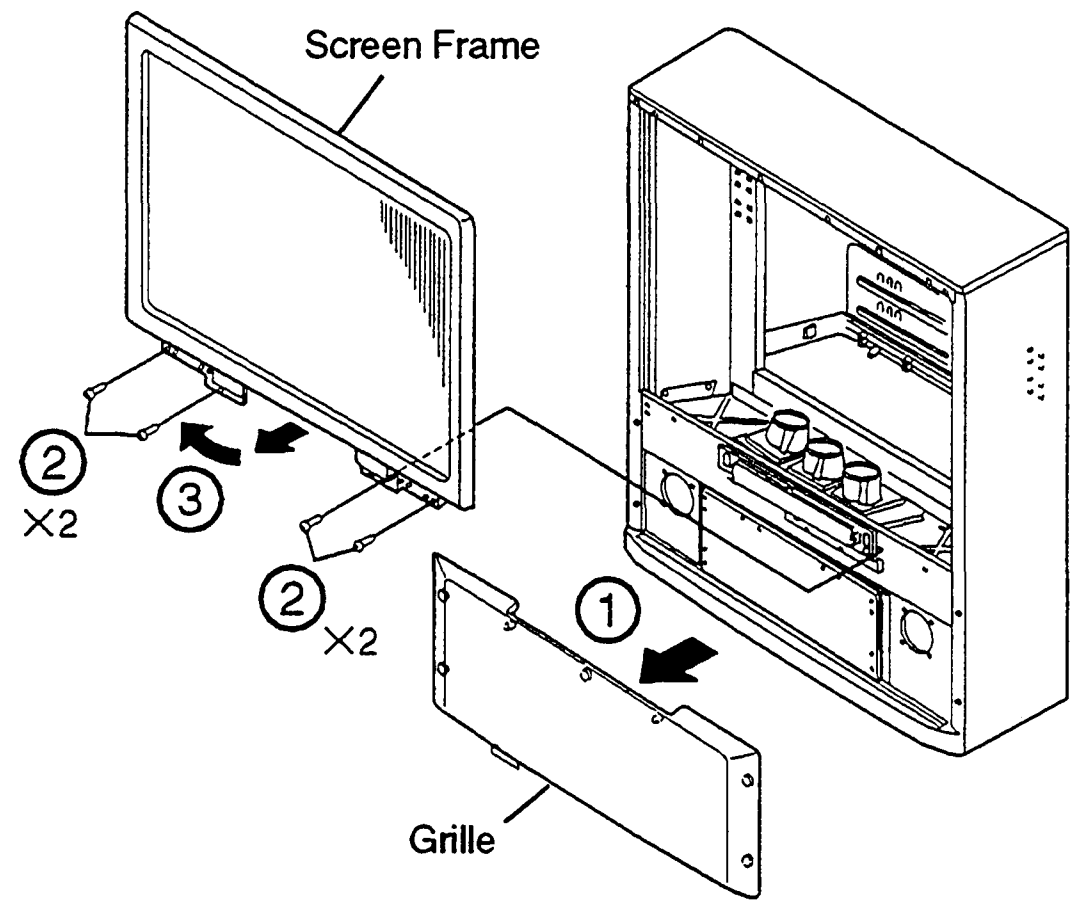
Screen Frame
②
×2
③
②
×2
①
Grille

7.2.2 Assembling the Screen Frame

- Assembly : ① → ② → ③→ ④ → ⑤→ ⑥

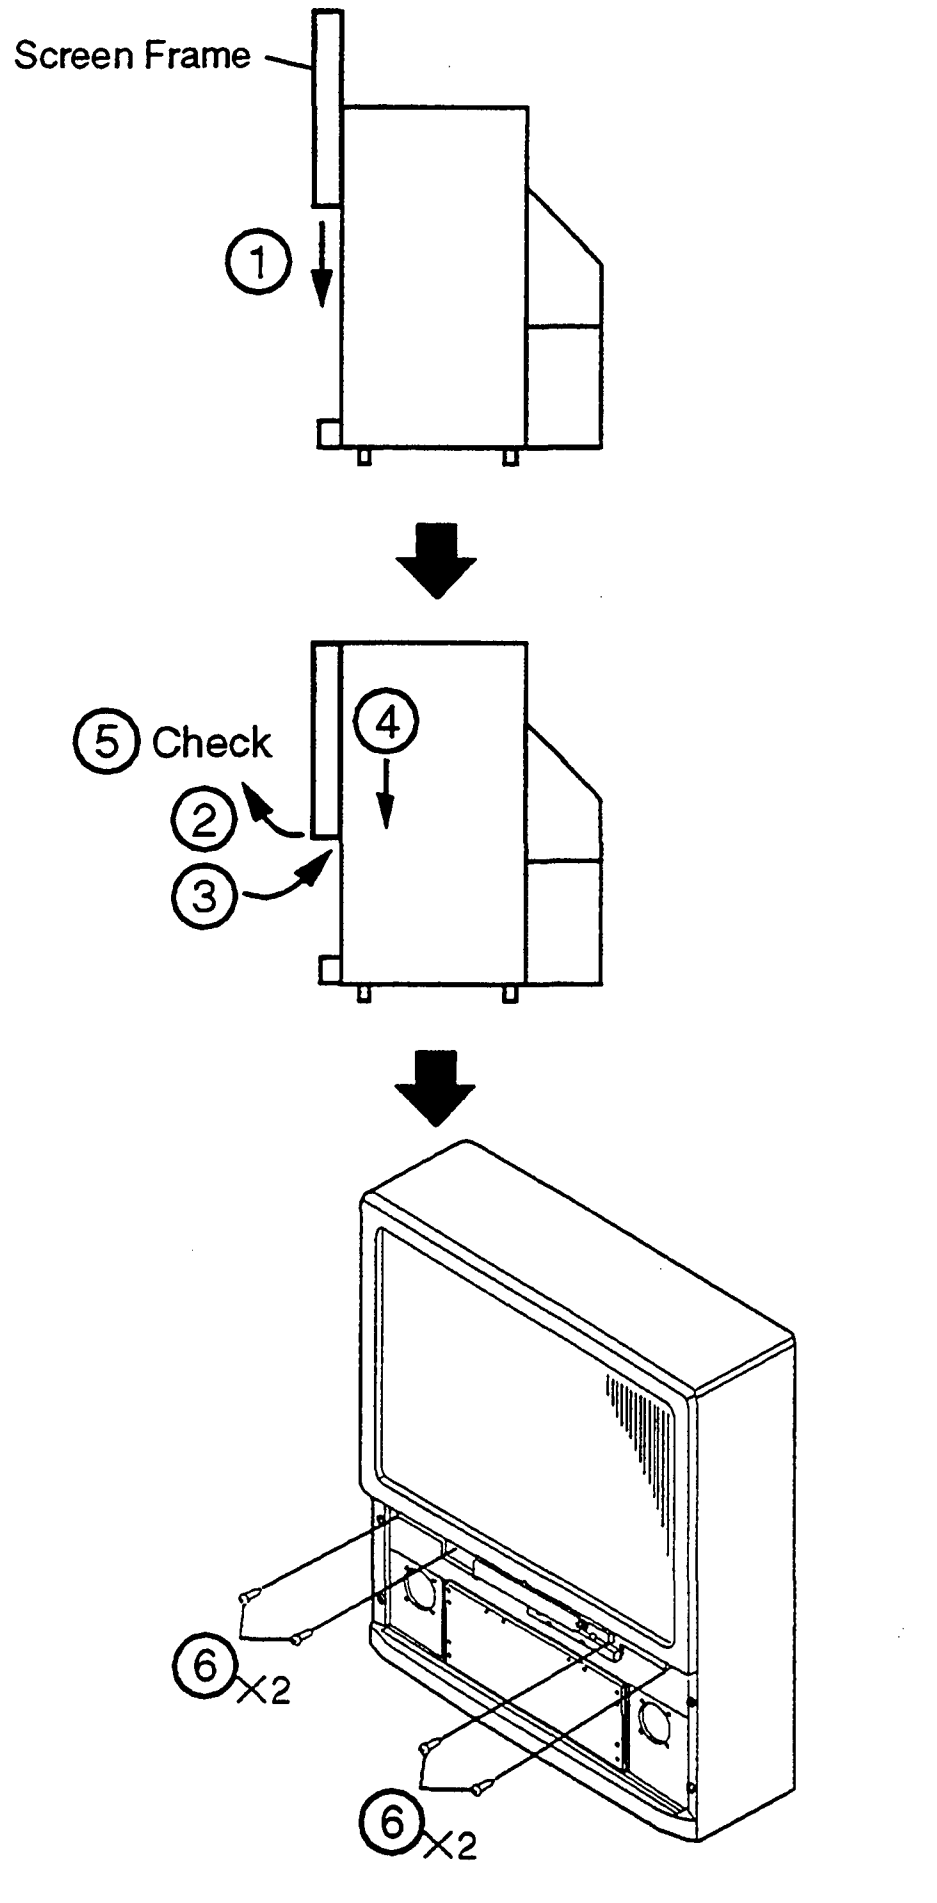
Screen Frame
①
⑤ Check
④
②
③
⑥×2
⑥×2

7.2.3 Mirror

- Disassembly : ①→②→③→④→⑤→⑥→⑦
- Assembly : ⑦→⑥→⑤→④→③→②→①

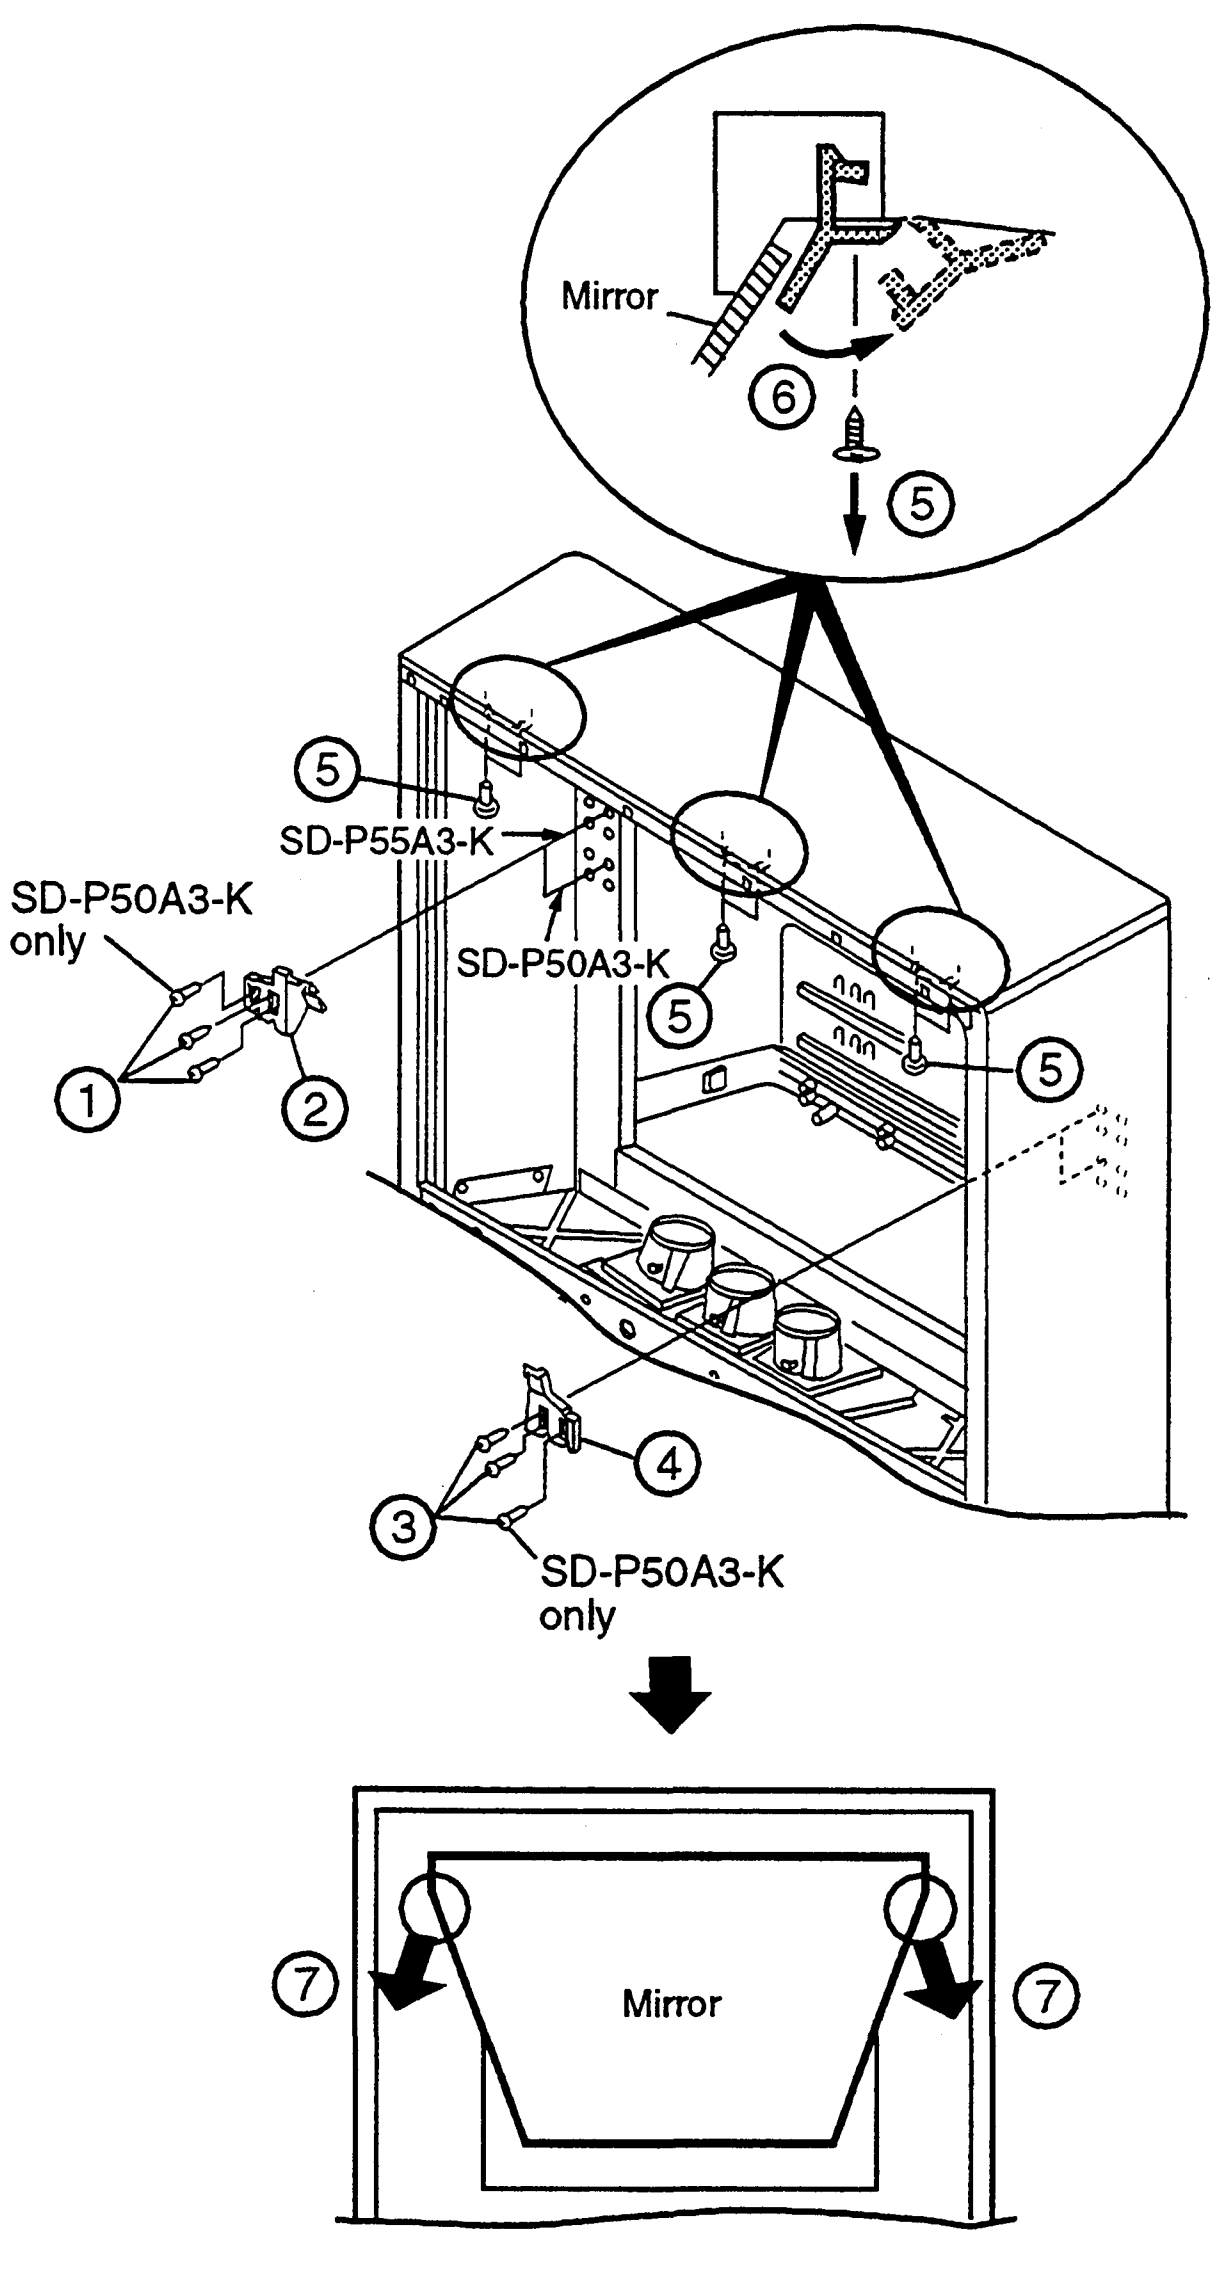
Mirror
⑥
⑤
⑤
SD-P55A3-K
SD-P50A3-K only
SD-P50A3-K
⑤
⑤
①
②
④
③
SD-P50A3-K only
⑦
Mirror
⑦

7.3 REPLACEMENT

7.3.1 CRT Assy

(1) Remove four screws ① to remove the CRT Assy, and remove the R, G or B CRT AMP Assy, VM Coil and Deflection Yoke (②).

(2) Unhook two Purse Locks ③ from Anode Cables.

(3) Remove two screws ④ to remove the HV Distributor and pull out the Anode Cable (⑤).

Caution :Refer to caution contents written with "Caution at Removing the Anode Cable From the HV Distributor" on page 115.

(4) Install the replacement CRT Assy to the CRT Stand and assemble the Deflection Yoke, VM Coil and R, G or B CRT AMP Assy.

(5) Plug the Anode Cable into the HV Distributor and assemble the HV Distributor to the CRT Stand.

(6) Perform the Anode Cable wiring.

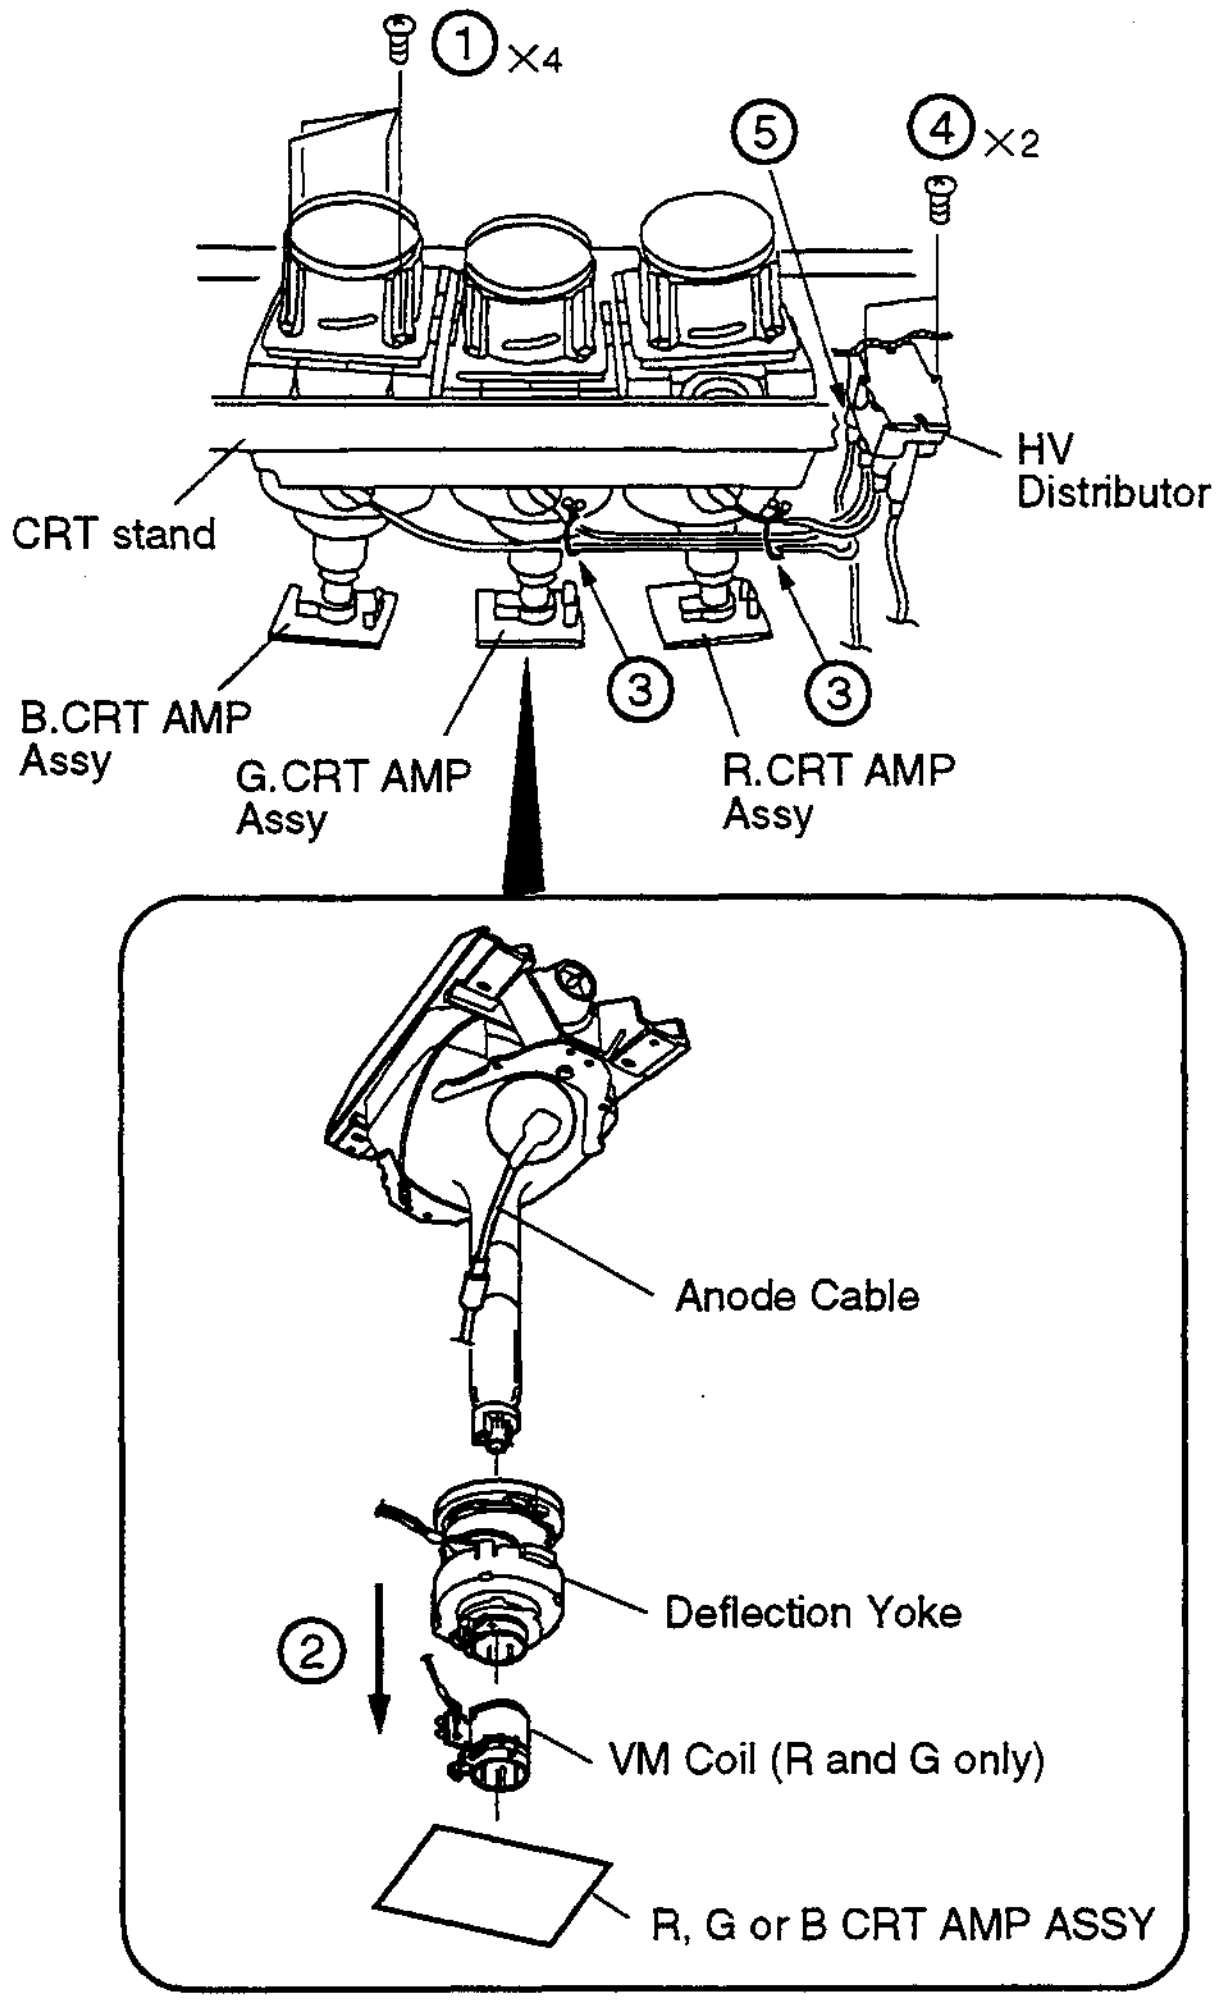
①×4
⑤
④×2
HV Distributor
CRT stand
B.CRT AMP Assy
G.CRT AMP Assy
③
③
R.CRT AMP Assy
Anode Cable
Deflection Yoke
②
VM Coil (R and G only)
R, G or B CRT AMP ASSY

Fig. 1 Replace the CRT Assy

7.3.2 POWER SUPPLY SERVICE Assy

The POWER SUPPLY SERVICE Assy seems to be Fig. 2 is constituted.

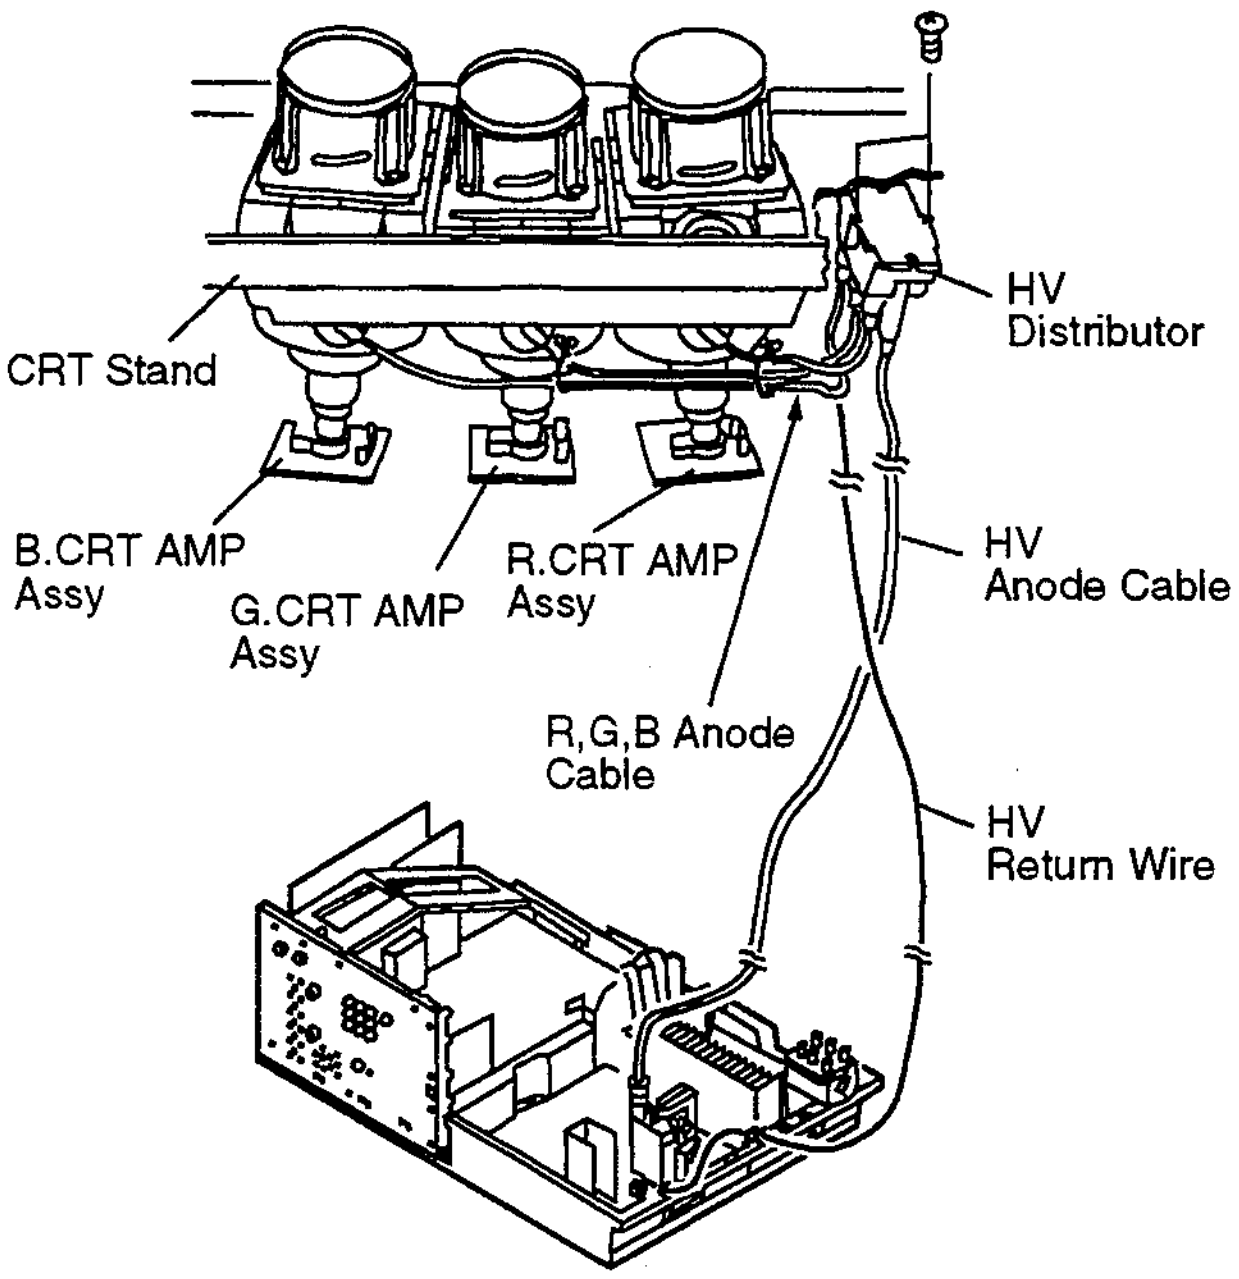
HV Distributor
CRT Stand
B.CRT AMP Assy
G.CRT AMP Assy
R.CRT AMP Assy
HV Anode Cable
R,G,B Anode Cable
HV Return Wire

Fig. 2 Replace the POWER SUPPLY SERVICE Assy

When replacing the POWER SUPPLY SERVICE Assy, replace the POWER SUPPLY Assy and HV Distributor together.

(1) Remove fixing screws which chassis is fixed in the cabinet from rear side of the cabinet and pull out the chassis.

(2) Remove two screws to remove the HV Distributor in the CRT Stand.

(3) Solve the wiring of periphery of the POWER SUPPLY Assy, disconnect cords, lead wires and connectors etc. connected to the POWER SUPPLY Assy.

(4) Remove R, G and B Anode Cables from the HV Distributor.

(5) Replace the POWER SUPPLY Assy and fixes it in the chassis.

(6) Connect cords, lead wires and connector etc. to the POWER SUPPLY Assy and does wiring.

(7) Inserts Anode Cable etc. avoided with step (4) in the HV Distributor.

(8) Fixes the HV Distributor in the CRT Stand.

(9) Fixes the chassis in the cabinet.

• Caution at Removing the Anode Cable From the HV Distributor

Anode Cable between the Flyback Transformer (FBT) is connected to the CRT through the HV Distributor.

When replacing the CRT or POWER SUPPLY SERVICE Assy, your hands may be injured when pull out direct Anode Cable from HV Distributor fixed in the CRT Stand.

When removing the R, G and B Anode Cables, HV Anode Cable etc. from the HV Distributor, remove HV Distributor from the CRT Stand, and remove it after putting it in the place where is flat, became stable.

7.4 MEASURING METHOD

Disconnect the FBT anode cable as shown in Fig. 3.

Measure at the point where the cable enters the FBT.

Caution : Take extra precaution when measuring the voltage. High voltage are also present in surrounding circuit boards. (CRT AMP Assy, POWER SUPPLY SERVICE Assy).

SERVICEMAN WARNING

Before removing the Anode Cable. turn off the power, unplug the AC plug and let the unit discharge for more than 1 minute.

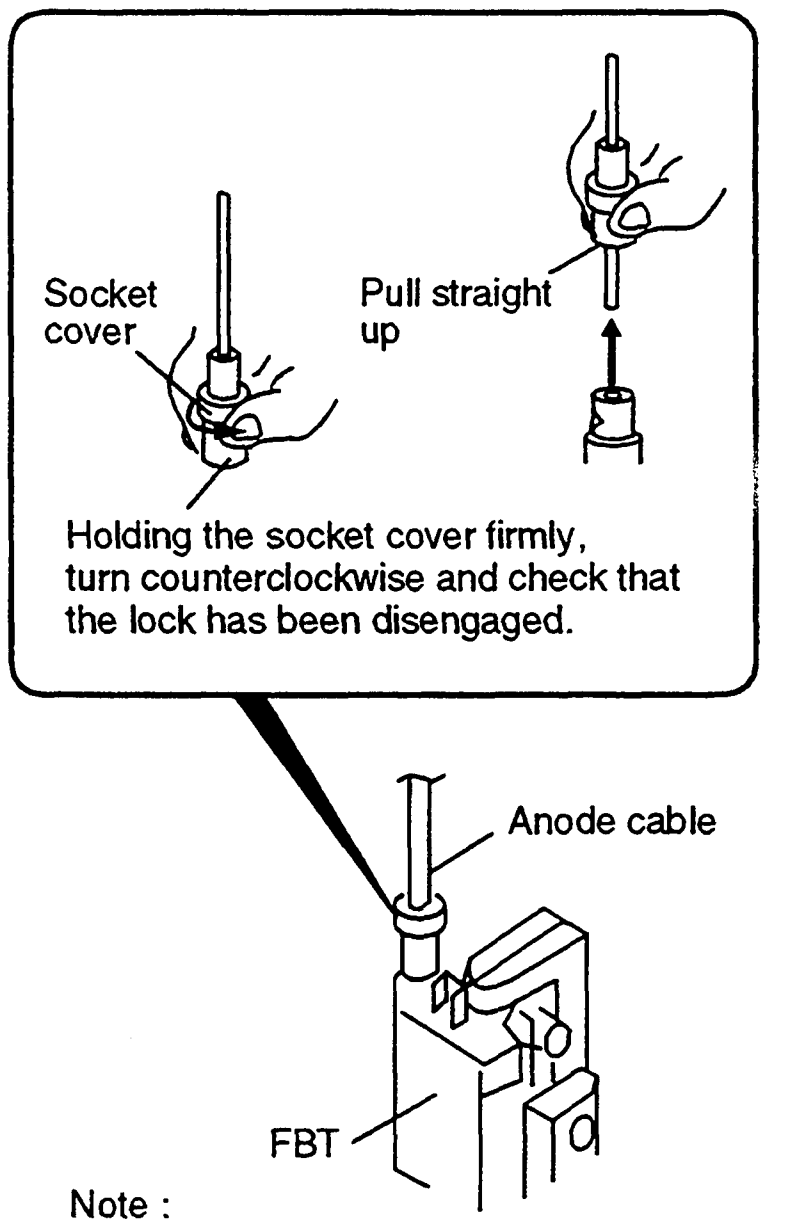

Holding the socket cover firmly, turn counterclockwise and check that the lock has been disengaged.

Note :
When reconnecting the cable, proceed in the reverse order. After reconnecting, tug on the cable to check that it is secure.

Fig. 3

7.5 WIRING DIAGRAM

Reconnect any disconnected lead wires of the Projection monitor receiver.

The important points for connection of the lead wires are as shown below.

You may find that they were connected differently. Be sure reconnect the lead wires as they were.

Note :
Ⓐ : FBT focus wire and other parts should be at least 15mm away from any other parts.
Ⓑ : Loop with a radius of 30mm or more.
Ⓒ : The anode cable and other parts should be at least 15mm away from any other parts.
Ⓓ : Loop with a radius of 50mm or more.
Ⓔ : HV return wire and FBT should be at least 15mm away from any other parts.

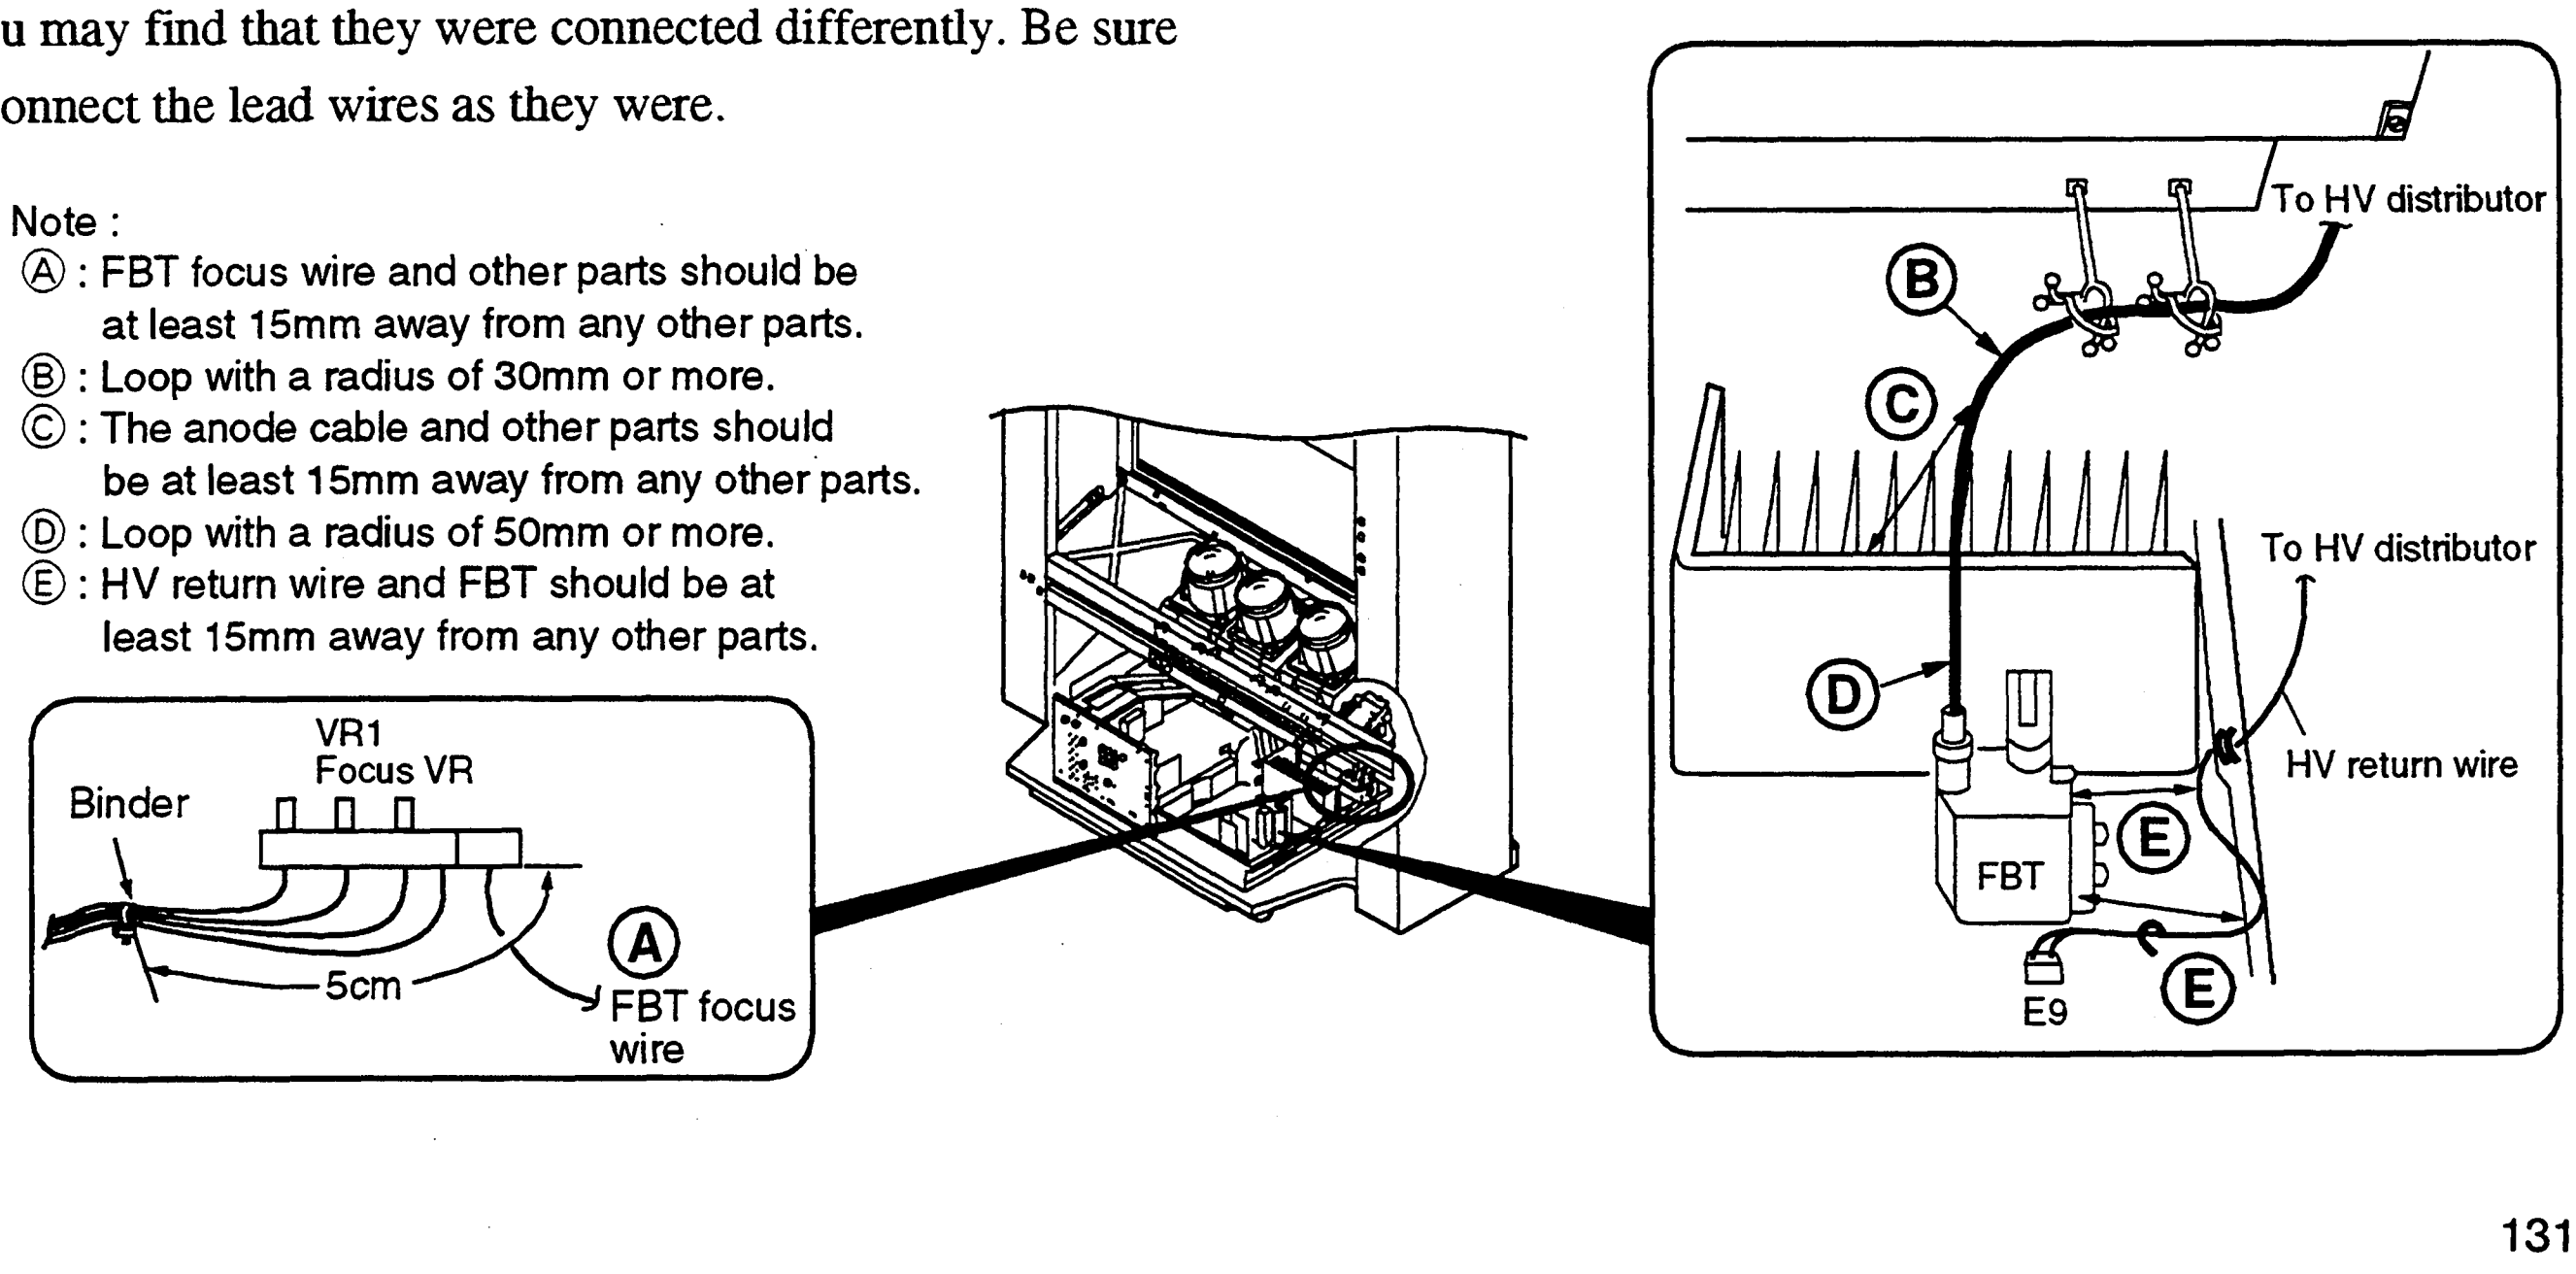

7.6 BLOCK DIAGRAM

7.6.1 PROTECTION BLOCK

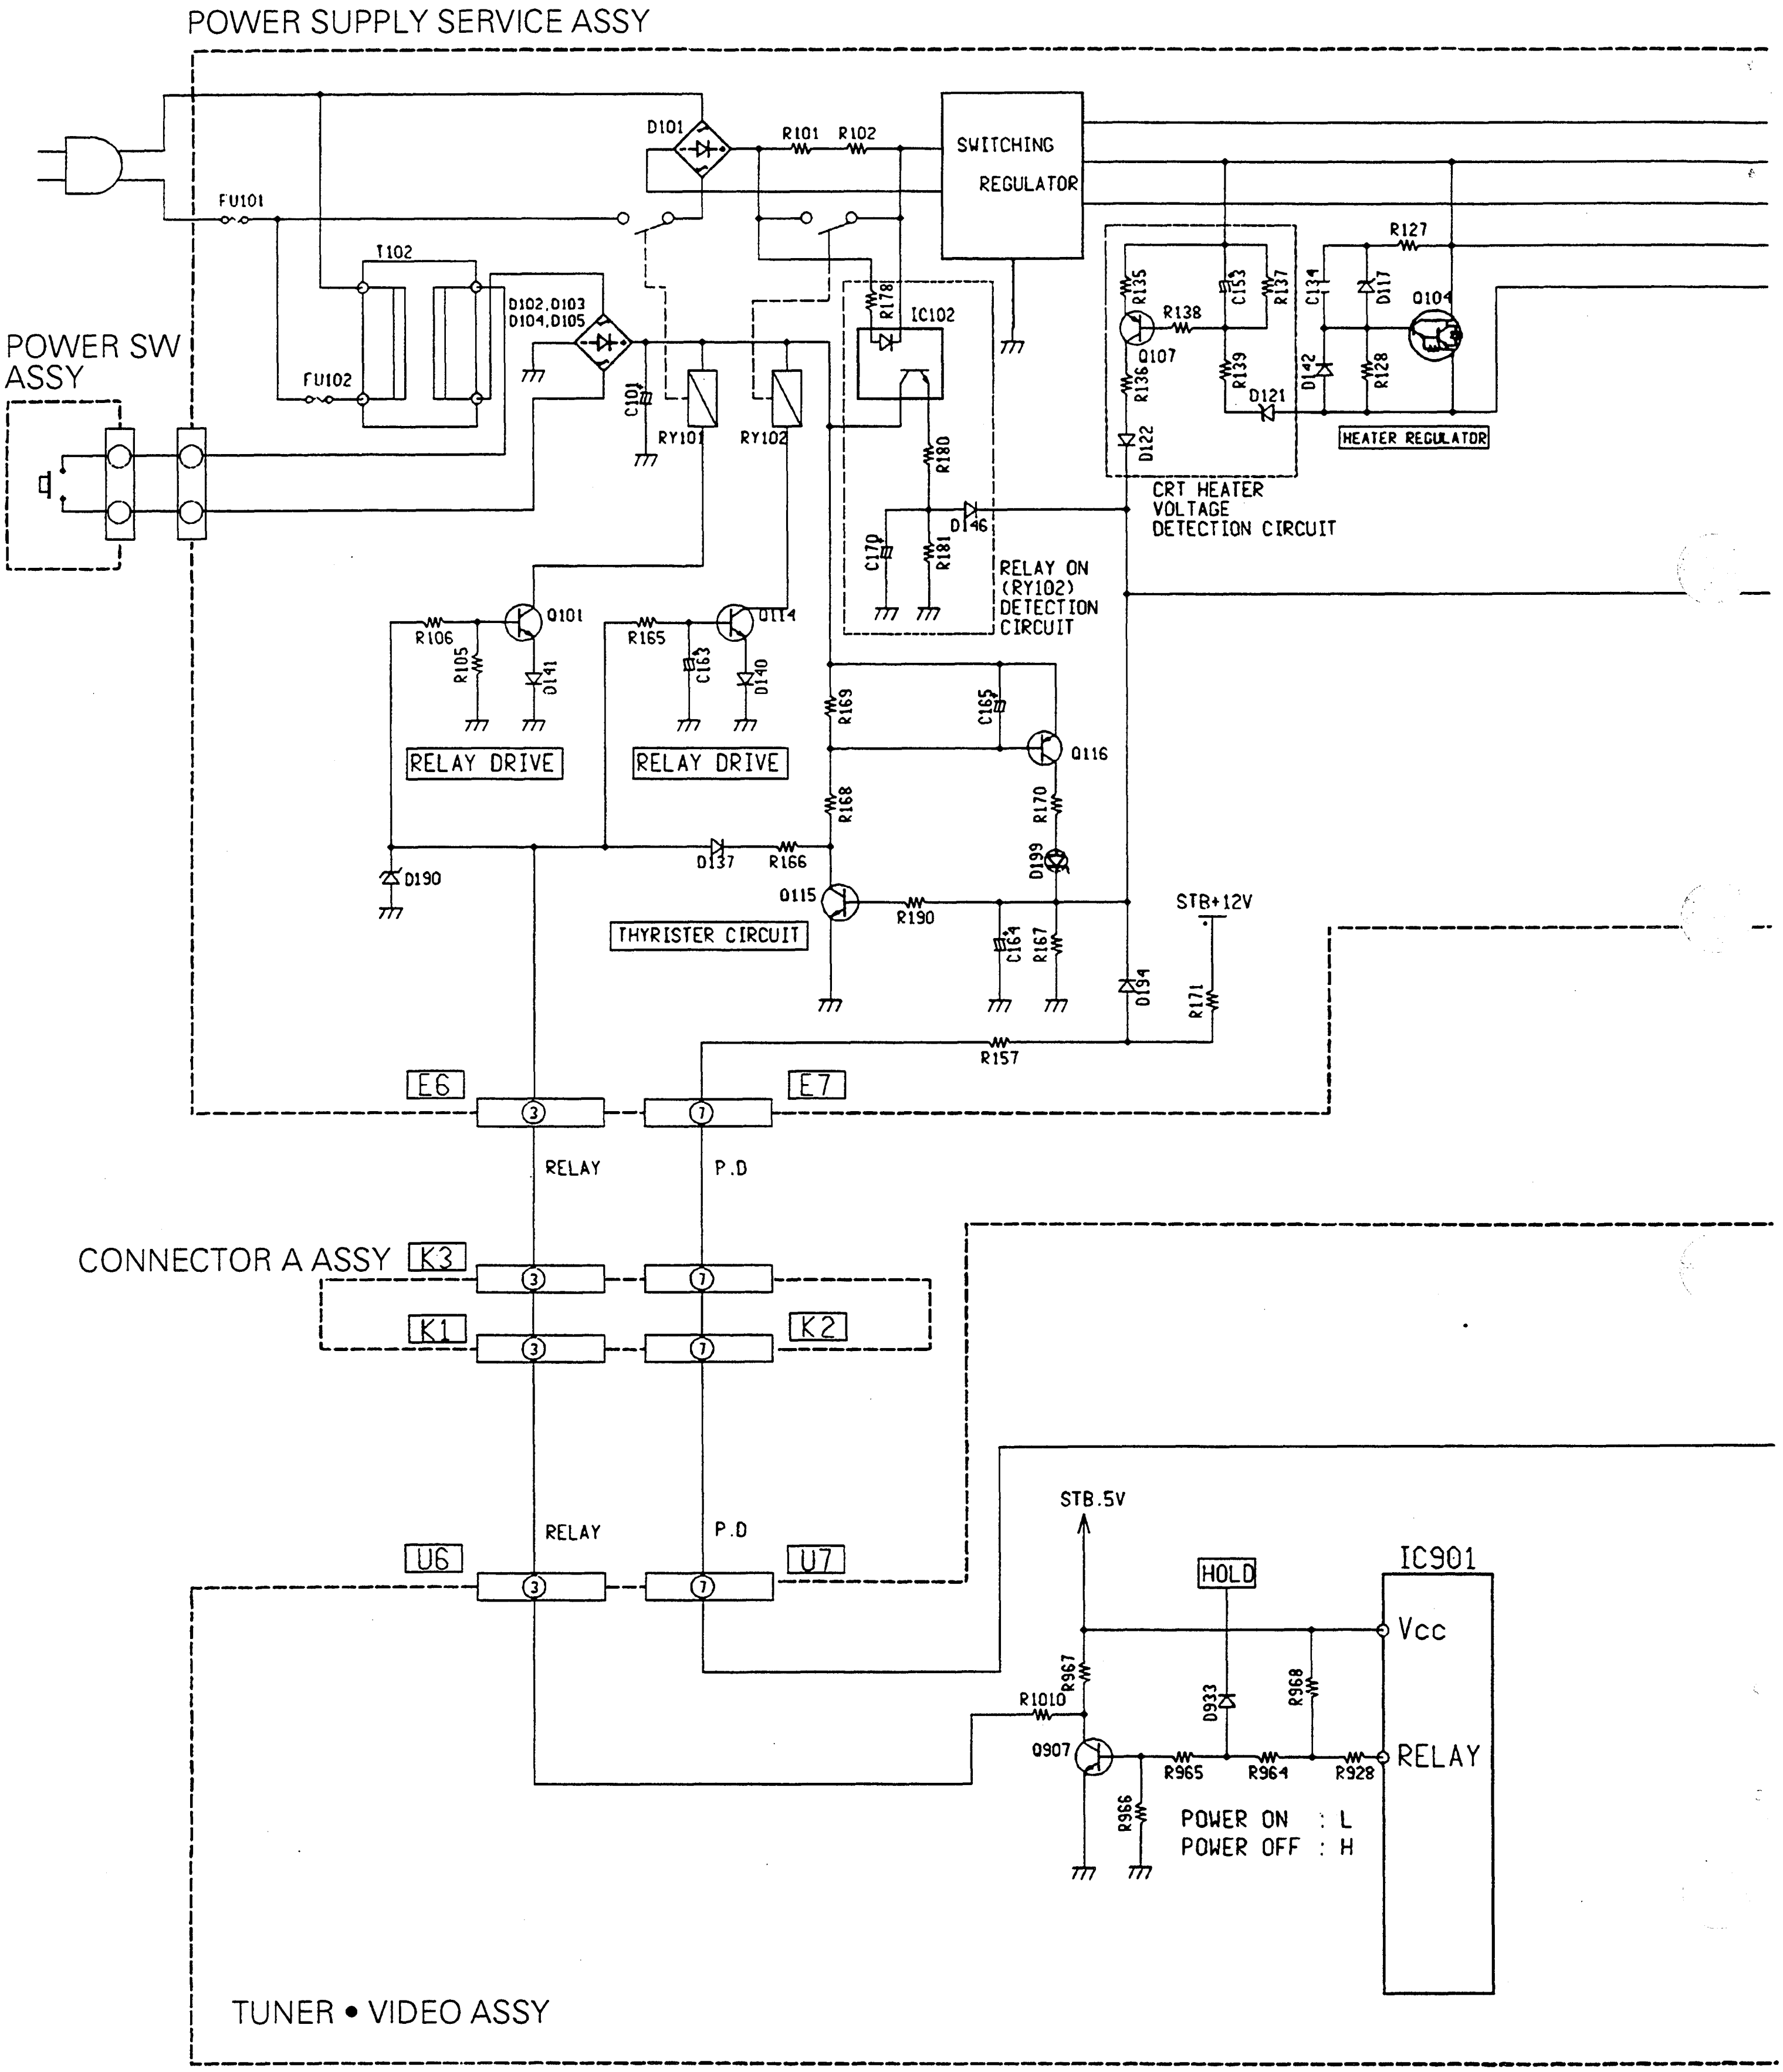
POWER SUPPLY SERVICE ASSY
POWER SW ASSY
FU101
FU102
T102
D101
R101
R102
SWITCHING REGULATOR
D102,D103
D104,D105
C101
RY101
RY102
R178
IC102
R180
C170
R181
D146
RELAY ON (RY102) DETECTION CIRCUIT
R127
R135
R138
C153
R137
C134
D117
Q104
Q107
R136
R139
D142
R128
D121
D122
HEATER REGULATOR
CRT HEATER VOLTAGE DETECTION CIRCUIT
R106
Q101
R105
D141
RELAY DRIVE
R165
Q114
C163
D140
RELAY DRIVE
R169
C165
Q116
R168
R170
D199
D190
D137
R166
Q115
R190
THYRISTER CIRCUIT
C164
R167
D194
STB+12V
R171
R157
E6
E7
RELAY
P.D
CONNECTOR A ASSY
K3
K1
K2
RELAY
P.D
U6
U7
STB.5V
HOLD
IC901
Vcc
RELAY
R967
R1010
D933
R968
Q907
R965
R964
R928
R966
POWER ON : L
POWER OFF : H
TUNER • VIDEO ASSY

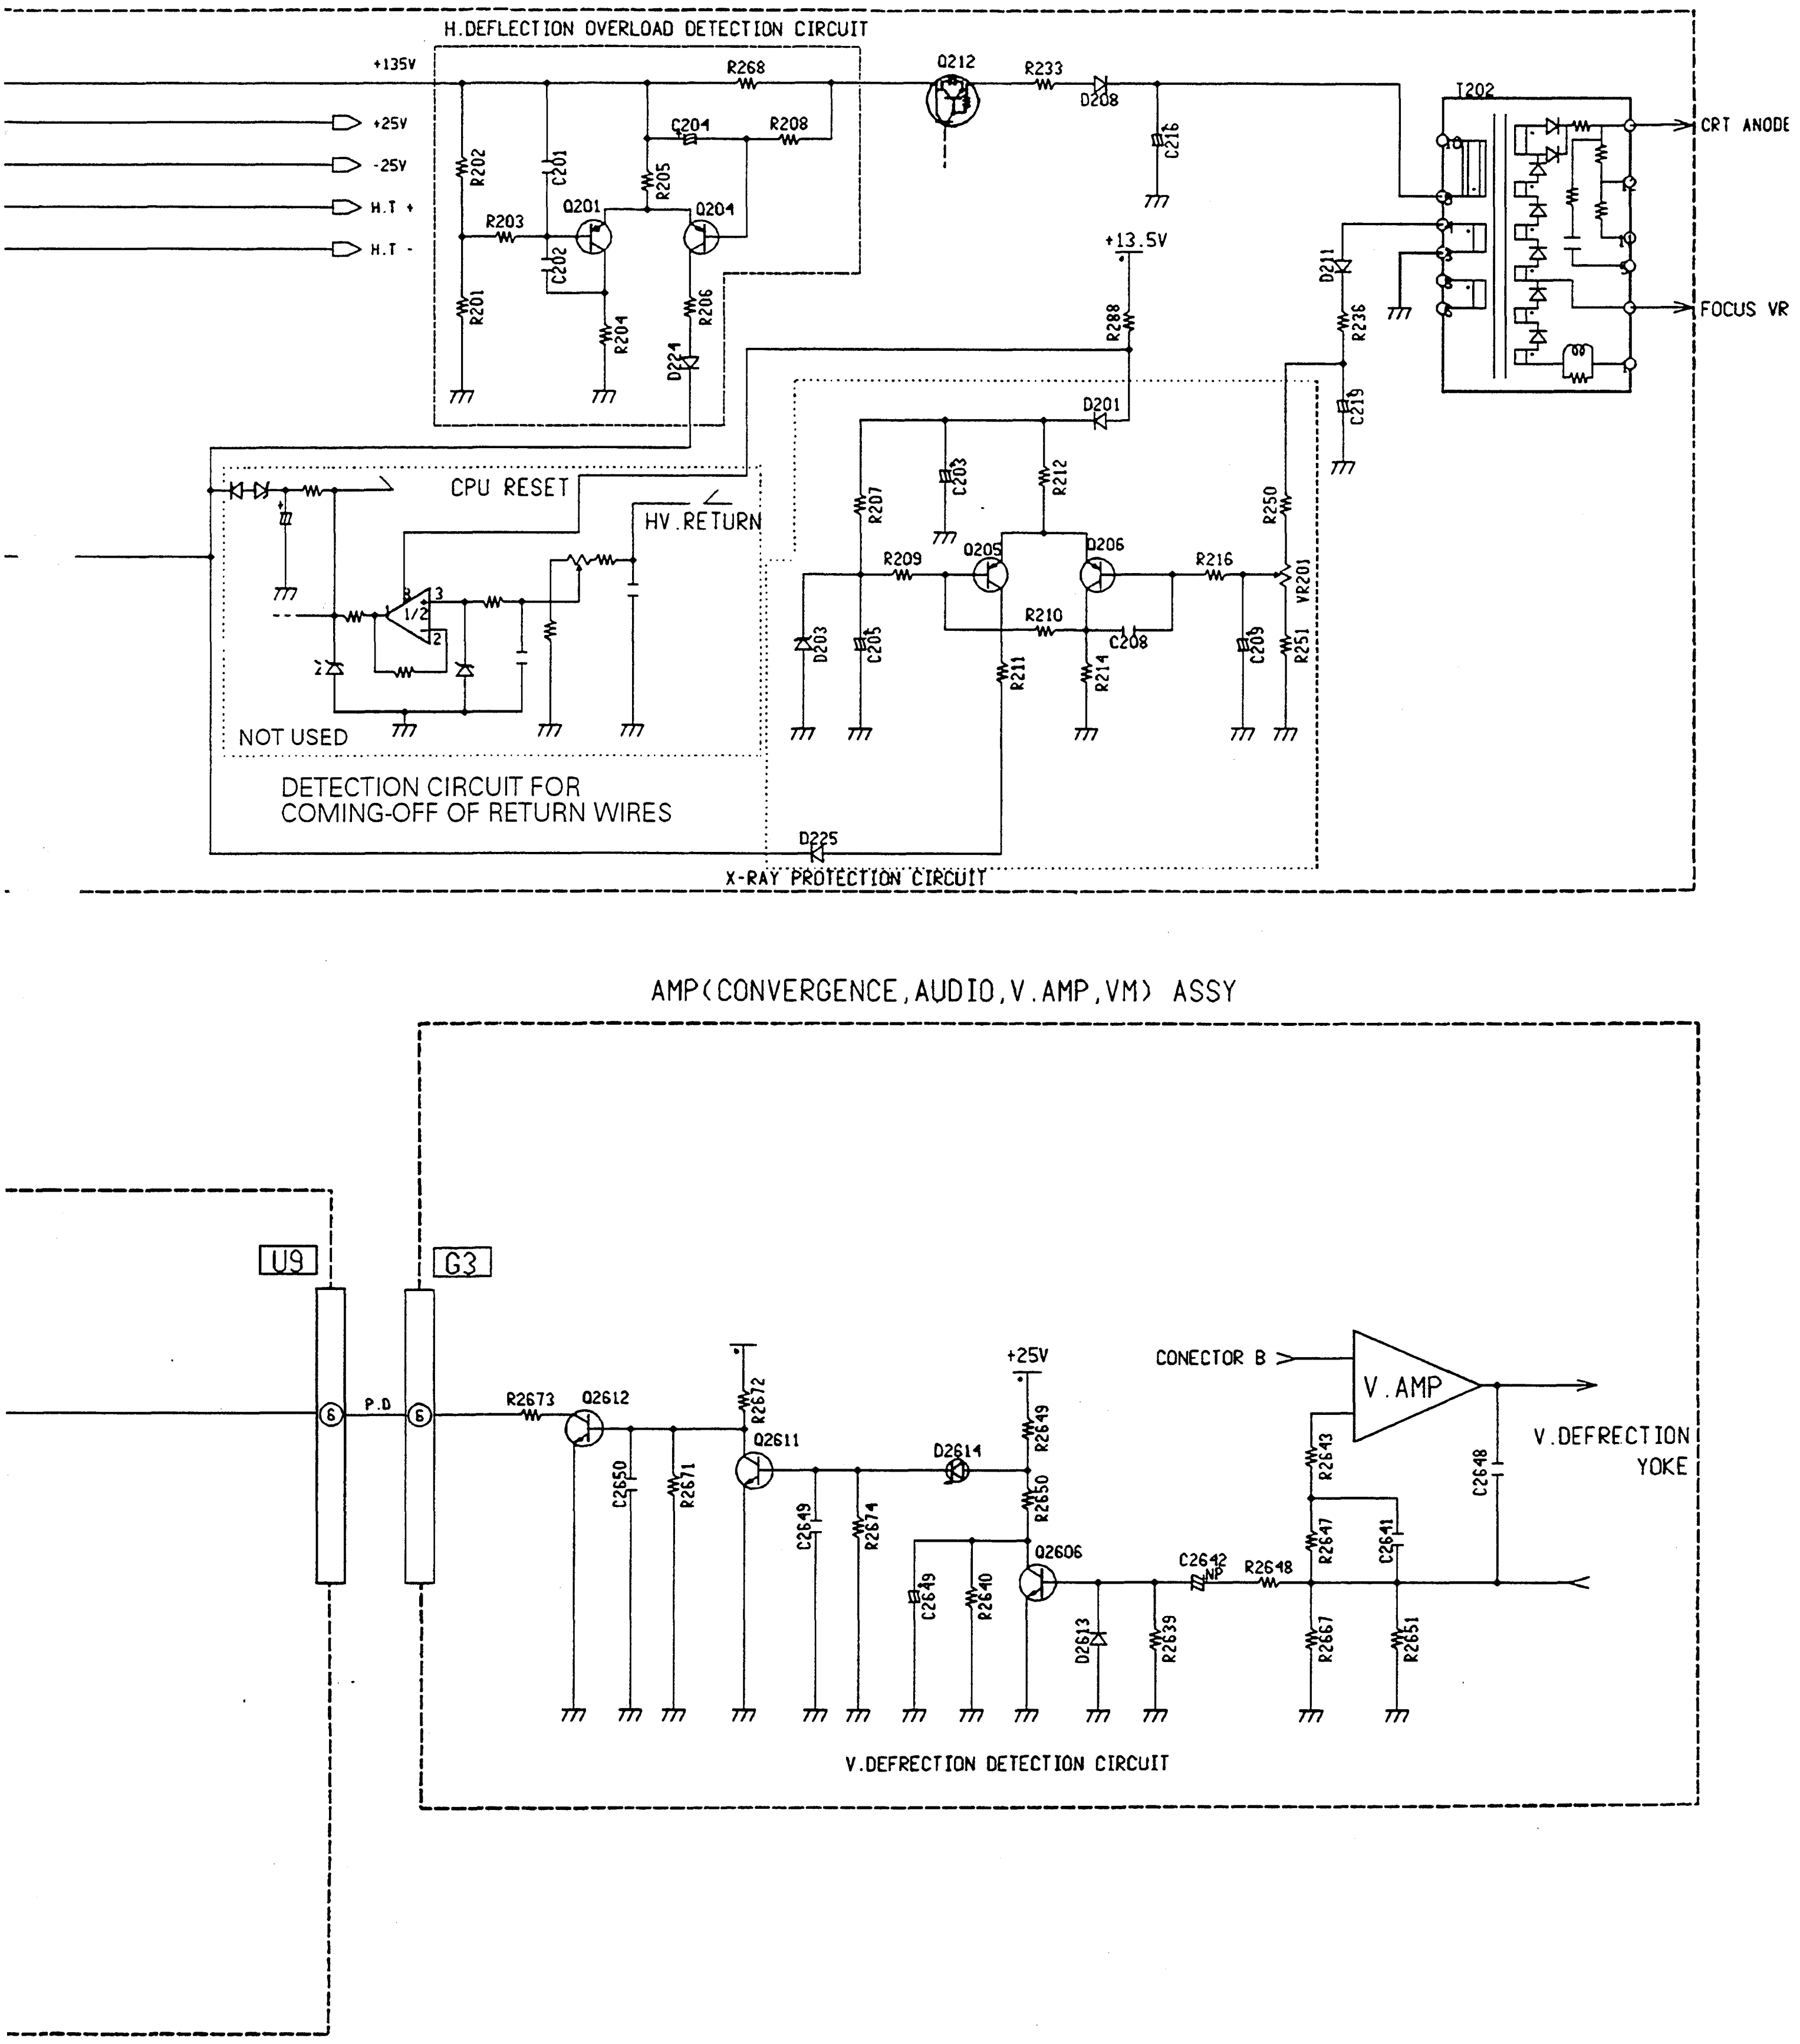
H.DEFLECTION OVERLOAD DETECTION CIRCUIT
+135V
+25V
-25V
H.T +
H.T -
R268
R202
C201
C204
R208
R205
R203
Q201
Q204
C202
R201
R204
R206
D224
Q212
R233
D208
C216
+13.5V
R288
T202
CRT ANODE
FOCUS VR
D211
R236
C219
CPU RESET
HV.RETURN
NOT USED
1/2
DETECTION CIRCUIT FOR
COMING-OFF OF RETURN WIRES
D201
R207
C203
R212
R250
R209
Q205
Q206
R216
VR201
R210
C208
D203
C205
R211
R214
C209
R251
D225
X-RAY PROTECTION CIRCUIT
AMP(CONVERGENCE,AUDIO,V.AMP,VM) ASSY
U9
G3
P.D
6
R2673
Q2612
R2672
Q2611
C2650
R2671
C2649
R2674
D2614
+25V
R2649
R2650
Q2606
C2649
R2640
D2613
R2639
C2642
NP
R2648
CONECTOR B
V.AMP
R2643
R2647
C2641
R2667
R2651
C2648
V.DEFRECTION
YOKE
V.DEFRECTION DETECTION CIRCUIT

7.6.2 H.V. BLOCK AND CIRCUIT BLOCK

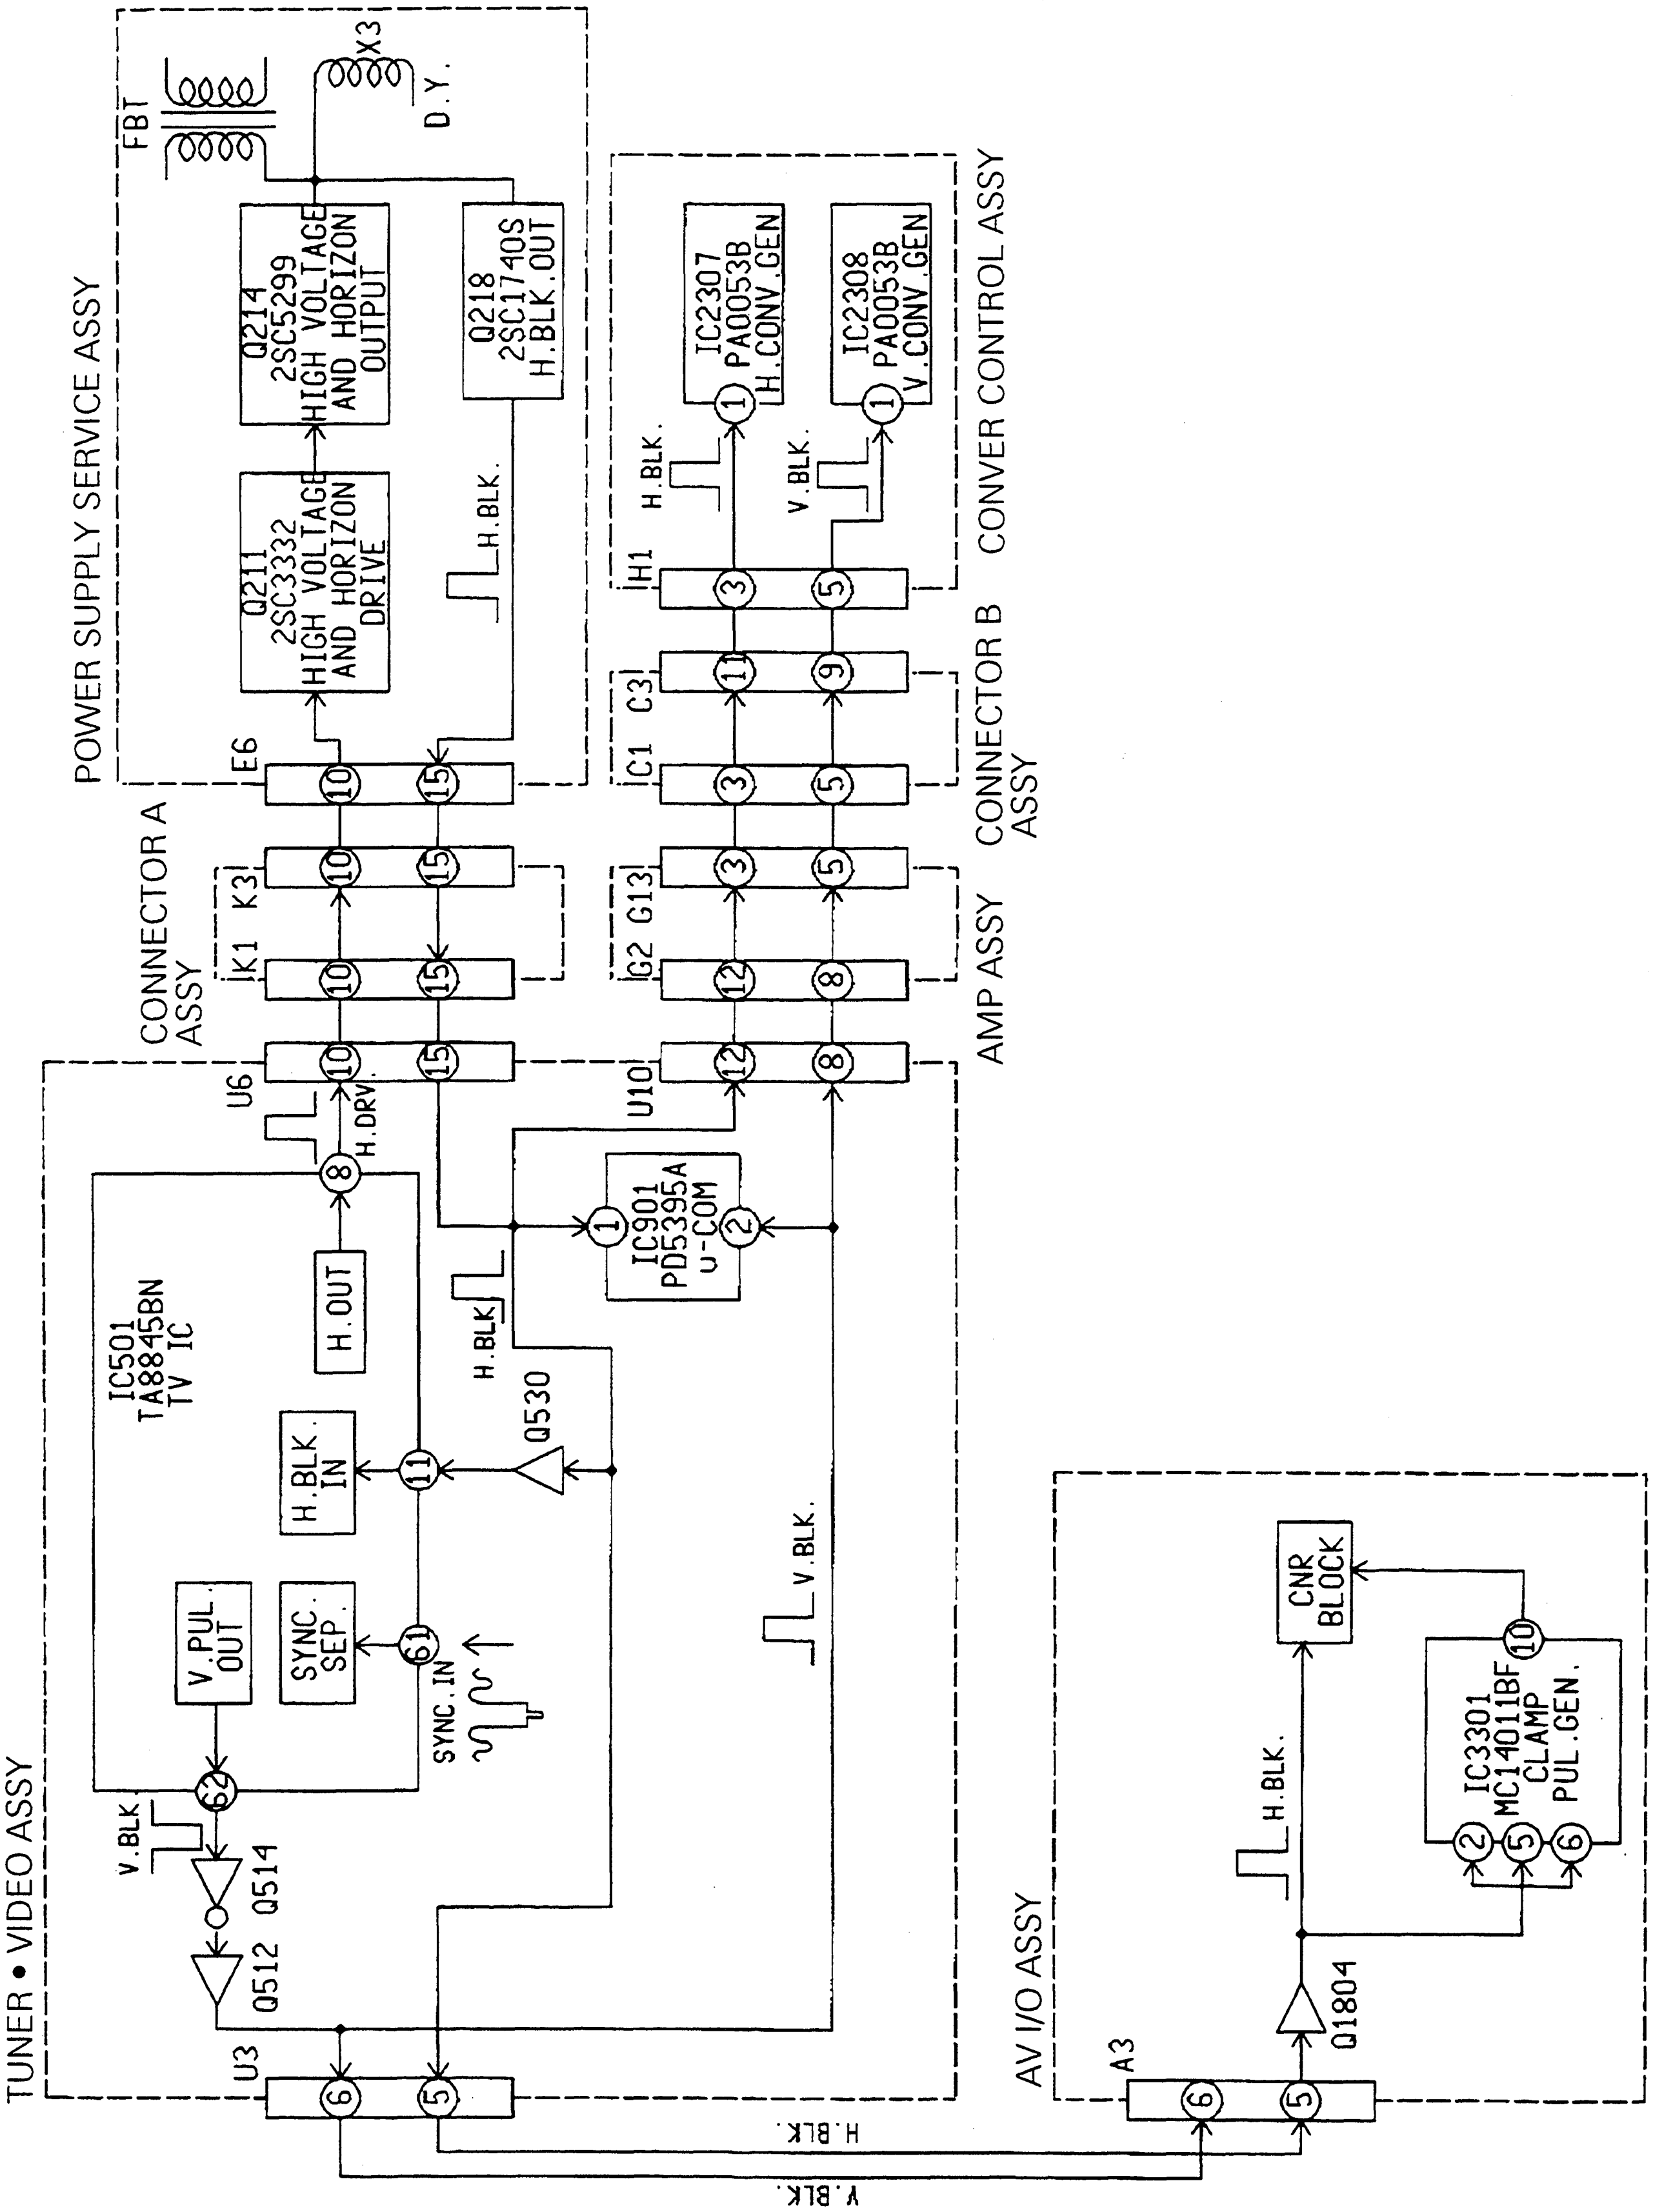
POWER SUPPLY SERVICE ASSY
FBT
X3
D.Y.
Q211 2SC3332 HIGH VOLTAGE AND HORIZON DRIVE
Q214 2SC5299 HIGH VOLTAGE AND HORIZON OUTPUT
Q218 2SC1740S H.BLK.OUT
H.BLK.
E6
CONNECTOR A ASSY
K1 K3
CONVER CONTROL ASSY
IC2307 PA0053B H.CONV.GEN
IC2308 PA0053B V.CONV.GEN
H.BLK.
V.BLK.
H1
CONNECTOR B ASSY
C1 C3
AMP ASSY
G2 G13
U6
U10
H.DRV.
IC901 PD5395A μ-COM
IC501 TA8845BN TV IC
H.OUT
H.BLK. IN
SYNC. SEP.
V.PUL. OUT
SYNC.IN
H.BLK
Q530
V.BLK.
V.BLK
Q514
Q512
TUNER • VIDEO ASSY
U3
AV I/O ASSY
A3
Q1804
CNR BLOCK
IC3301 MC14011BF CLAMP PUL.GEN.
H.BLK.
H.BLK.
V.BLK.

8. PANEL FACILITIES AND SPECIFICATIONS

■ PANEL FACILITIES

• FRONT PANEL

A flip-down door conceals the control panel. Push gently and release, to open the door. To close the door, lift it back up into place.

NOTE:
If you accidentally pull the door, it may not shut properly. Push the door back in to shut it.

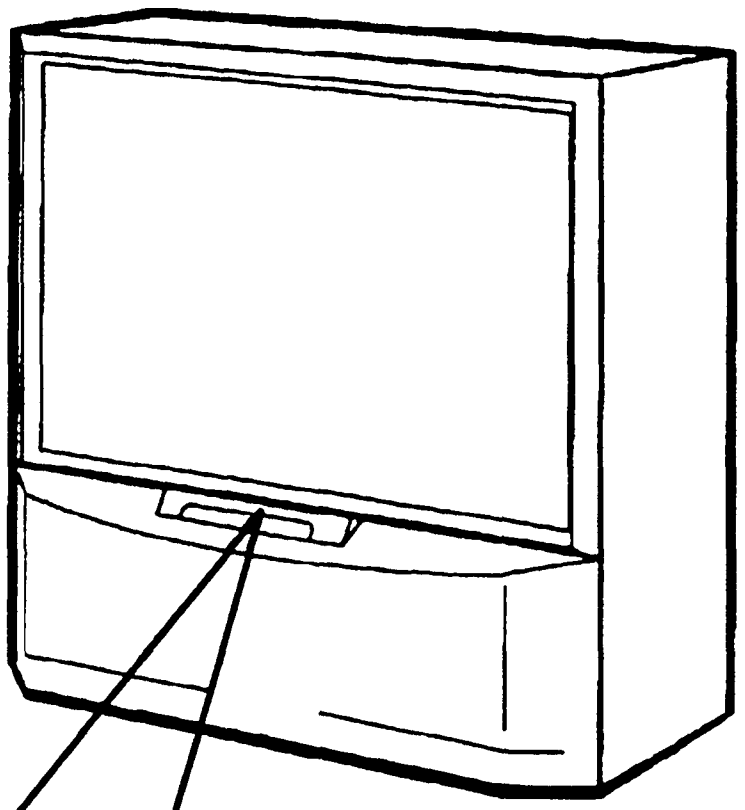

① **POWER STANDBY/ON indicator**

② **MAIN POWER switch**
Press once to turn on the power (STANDBY MODE). Press again to turn off the power.

③ **REMOTE SENSOR**
This sensor picks up infrared signals from the remote control unit.

④ **POWER switch (STANDBY/ON)**
Press once to turn on the power. Press again to turn off the power.

⑤ **INPUT SELECTOR button**
Press to select your program source; TV, Videodisc player and VIDEO. Each press of the INPUT SELECTOR changes the selection to the next source.

⑥ **CHANNEL buttons**
Press plus (+) or minus (–) to tune to a higher or lower channel. Only the preset channels can be tuned in using these buttons.

⑦ **VOLUME buttons**
Press plus (+) button to increase the volume, press minus (–) button to decrease it.

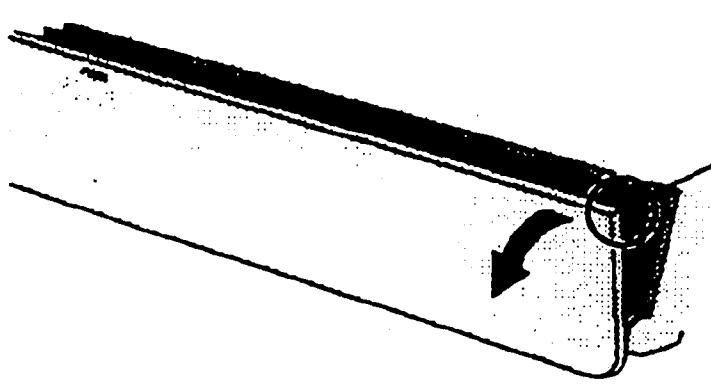

In some cases, the door may only open slightly when pushed. In such cases, open the door with your finger as shown in the figure below.

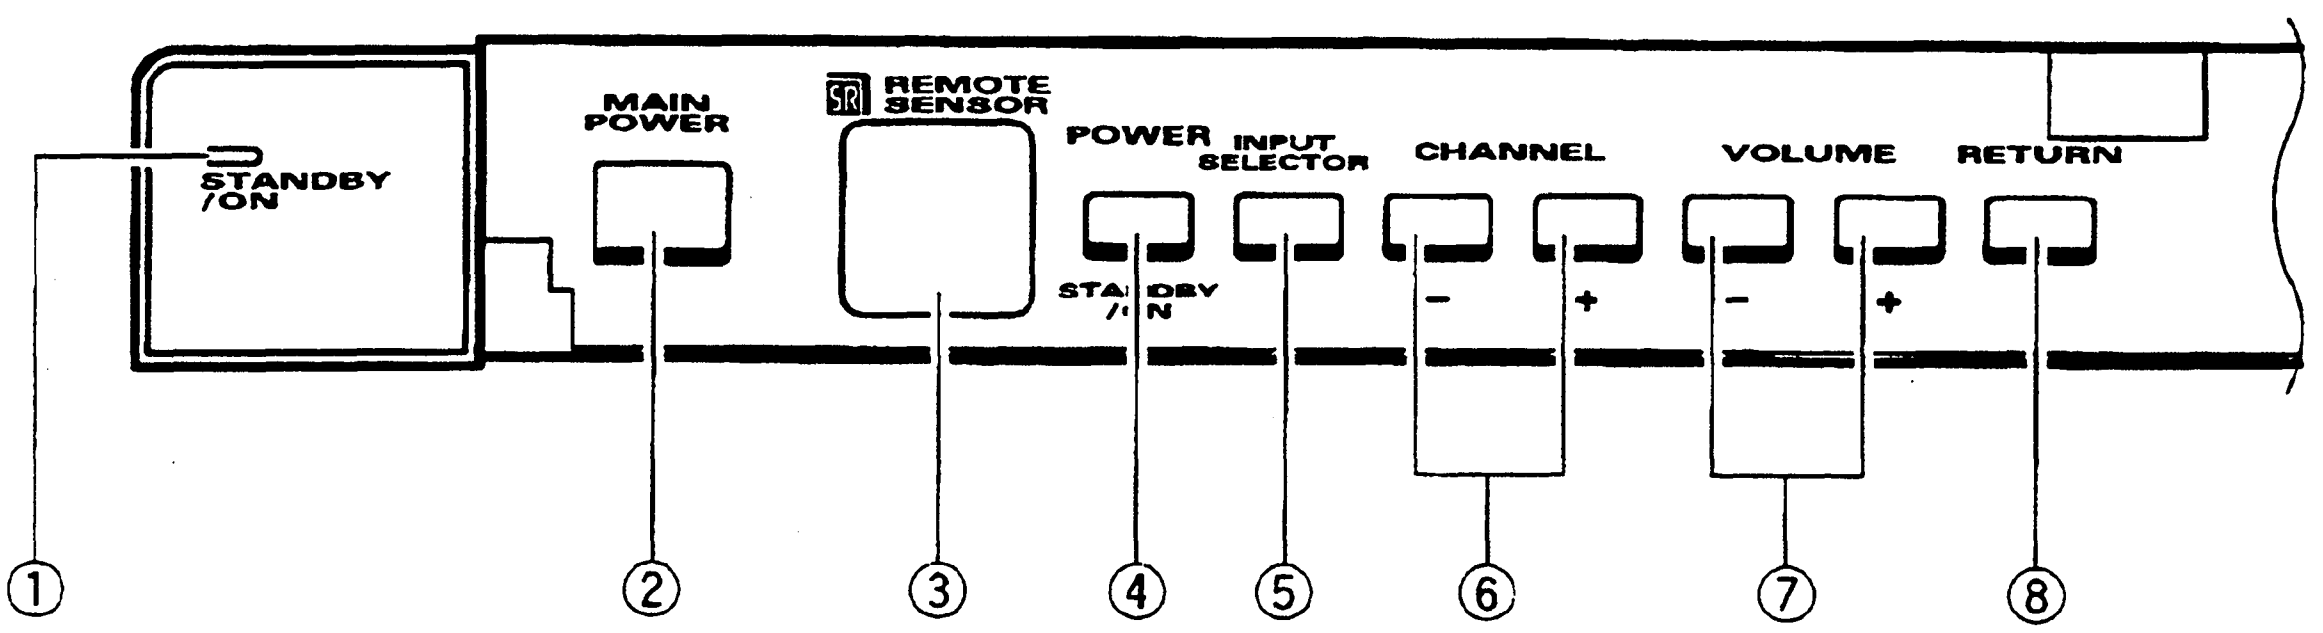

⑧ RETURN button

Press to set the Projection Monitor to its initial mode instantly if either sound or picture disappear from the speaker system or the screen during adjustment.

- Adjust the Projection Monitor again after pressing the RETURN button, as all settings have been cleared.

When the RETURN button is pressed, the Projection Monitor is set as follows:
PICTURE: Parameters, set to 0.
VOLUME: Remains at the last setting.
P-IN-P/MUTE/VNR: Set to OFF.
INPUT SELECTOR: Set to TV.
TV CHANNEL: Remains at the last channel set.
MTS: Remains at the last setting.
CC: OFF
COLOR TEMP: NORMAL
AV MEMORY: STANDARD

- When this button is pressed during the outer point convergence, the outer point convergence returns to the initial mode

⑨ VIDEO F. INPUT

These inputs are for Video Movie and VCR. Use RCA-type pin plug cords (the same as those used in Hi-Fi systems) for connections. When the audio source to be connected is monaural, connect the source to the L-(MONO) jack.

NOTE:

On rare occasions, an electrical discharge may occur inside the CRT. It makes a short, sharp pop and either no sound is produced or the volume level changes by itself. The Picture-in-Picture function will be cancelled automatically if an electrical discharge occurs when this function is engaged. However, VNR resume automatically when an electrical discharge occurs. When other abnormal functioning is suspected, turn off the power of the unit with the ①MAIN POWER switch, and after some time, turn on the power with ①MAIN POWER switch and ②POWER switch. If the abnormal functioning cannot be corrected, contact an authorized PIONEER service center.

CAUTION:

Do not press any operation button on the Projection Monitor or the remote control unit while recording. Signals from the MONITOR OUTPUT jacks may be temporarily interrupted when a button is pressed.

ATTENTION

The Projection Monitor Receiver will not function properly in the following cases.

- Lightning storms.
- High static electricity environment.
- Poor voltage regulation in the power source.

If the Projection Monitor does not operate properly, reset it as follows:

1. Unplug from the power supply for approximately 1 minute.
2. Plug the power cord in a receptacle again to reset it.

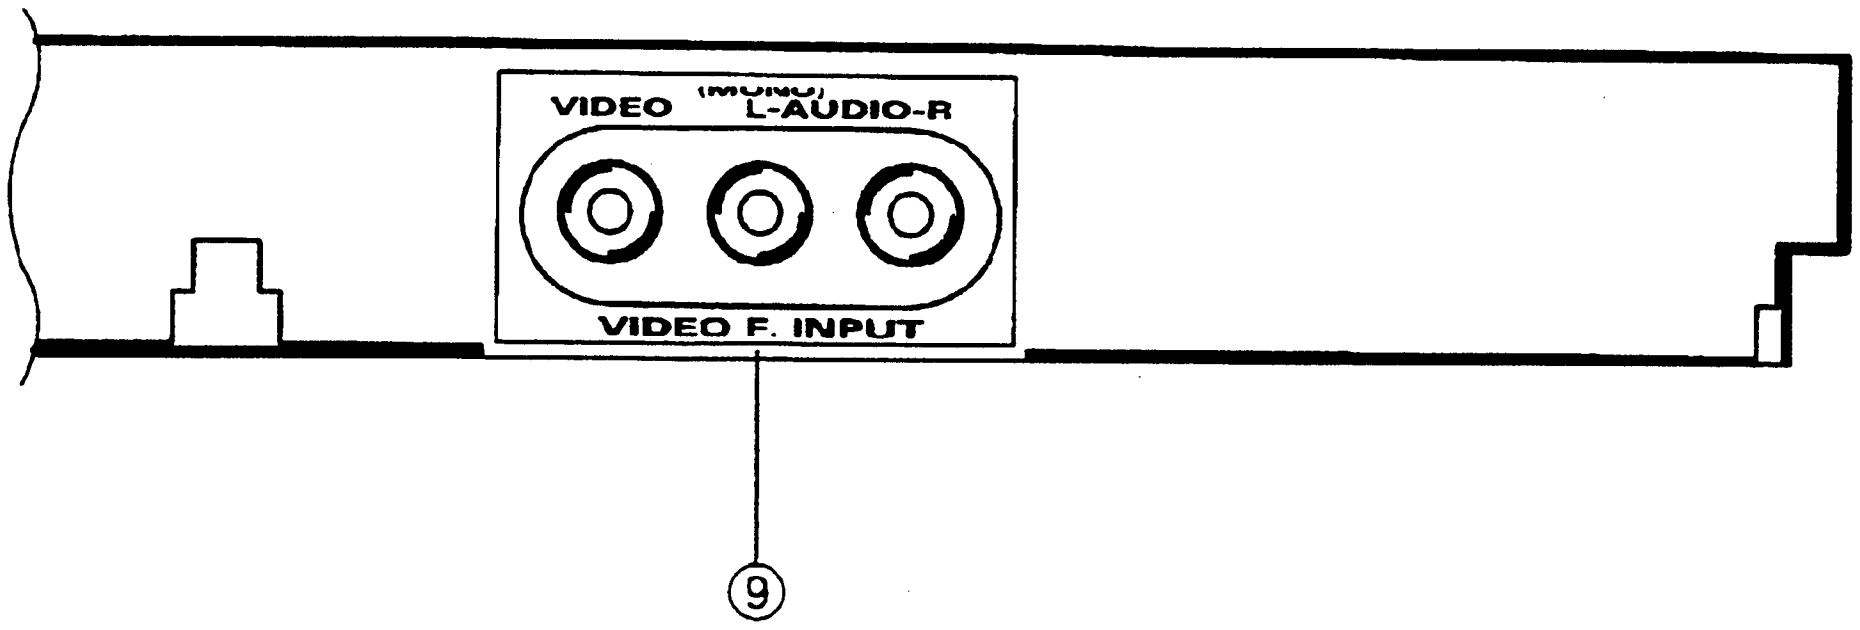

• REMOTE CONTROL UNIT

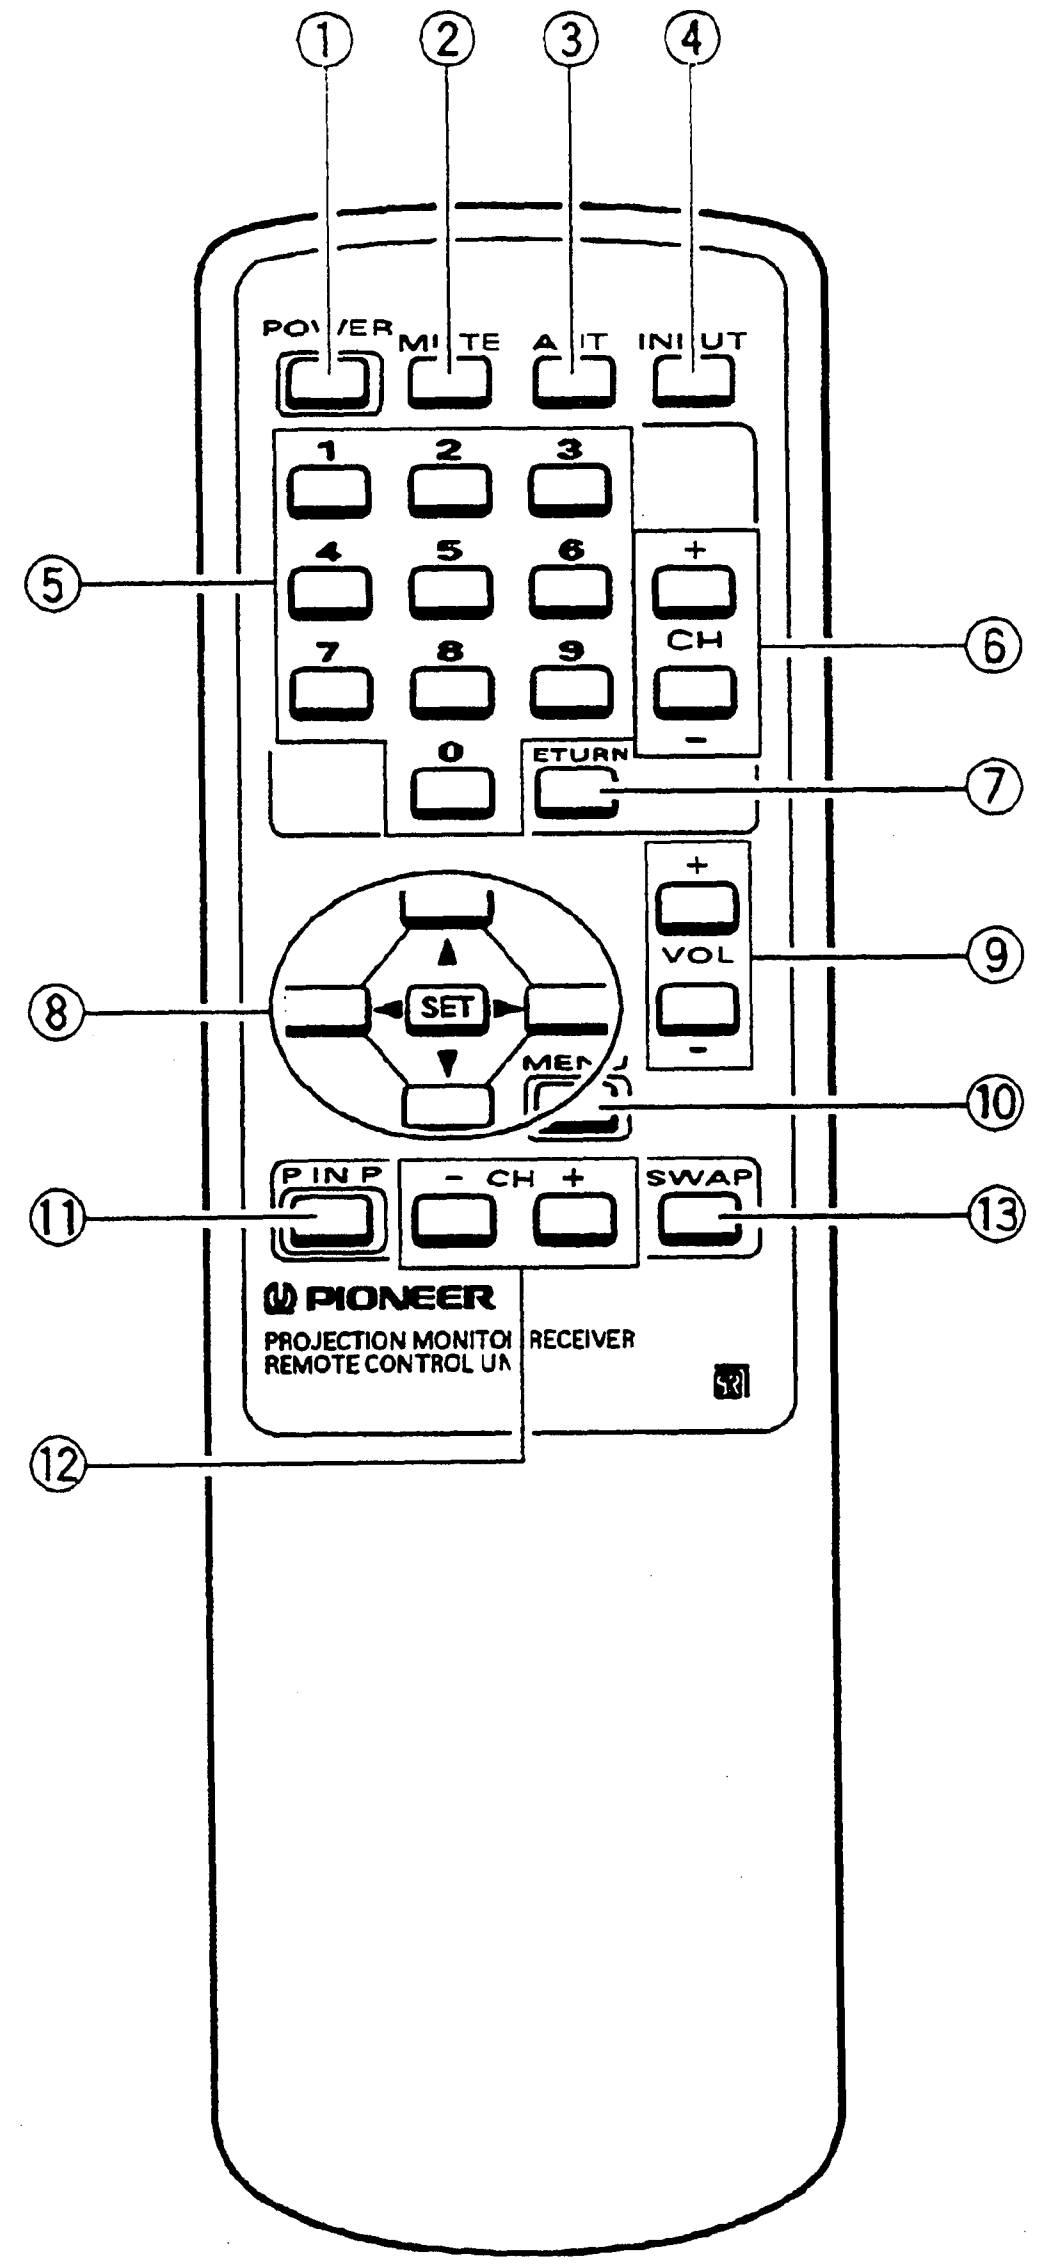

① **POWER button (STANDBY/ON)**
Turns the power of the monitor on and off.

② **MUTE button**
Press to temporarily turn off the sound. Press again to return to the previous volume level. The volume display will turn red while the mute function is set and will disappear from screen when the mute function is canceled.

③ **ANT (antenna selector) button**
Press to switch between ANTENNA-A and ANTENNA-B when you wish to watch TV.

④ **INPUT button**
Press the button to select the source you wish to watch.

⑤ **Direct channel selection buttons**
Press the button (or buttons) that corresponds to the channel that you wish to watch.

⑥ **CH (channel) +, – buttons**
Press plus (+) or minus (–) to tune in a higher or lower channel. Only the preset channels can be tuned in using these buttons.

⑦ **CH RETURN (channel return) button**
Press to switch between the current channel and the channel you were watching immediately before.

⑧ **Select / Adjust / Set buttons (SET, ◄, ►, ▲, ▼)**
◄, ►, ▲, ▼: Press to select, adjust or set items on the menu screen.
SET: Press to activate the selected function.

⑨ **VOL (volume) +, – buttons**
Press plus (+) button to increase the volume, press minus (–) button to decrease it.
Volume level will appear on the screen as numbers and a bar graph. '63' indicates the maximum volume level.
The display will disappear from the screen after 2 seconds.
* Volume display will change color automatically according to the selected input mode.

⑩ **MENU button**
Press to turn on the menu screen for use in function selection. Press again to return to normal TV screen.

⑪ **P IN P button**
Press to turn the Picture-in-Picture function on and off.

⑫ **CH (Channel) +, – buttons**
These buttons can be operated when the Picture-in-Picture function is turned on and the sub picture is in the TV input mode only. Press plus (+) or minus (–) button to tune in a higher or lower channel of the sub picture.
Only the preset channels can be tuned in using these buttons.

⑬ **SWAP button**
When the Picture-in-Picture function is turned on, press to switch between main picture and sub picture.
When ANT A broadcasts are seen on the Main picture, SWAP can be performed.
When ANT B broadcasts are seen on the Main picture, SWAP cannot be performed.

■ SPECIFICATIONS

Display section

Reception system ... American TV standard NTSC system
Screen size .... 62" (SD-P62A3-K)
55" (SD-P55A3-K)
50" (SD-P50A3-K, SD-P50A3-Q)
CRT .... 7" High focus CRT x 3
Brightness (White peak)
.... 350 Foot-Lambert (SD-P62A3-K)
450 Foot-Lambert (SD-P55A3-K)
540 Foot-Lambert (SD-P50A3-K, SD-P50A3-Q)
[White window signal input contrast Max.]
Horizontal resolution
.... More than 1000 lines (SD-P62A3-K, SD-P55A3-K)
1000 lines (SD-P50A3-K, SD-P50A3-Q)
[Input digital test pattern (1000 lines resolution)]
Input terminals .... 3 video input systems
S-VIDEO input jack (Y/C separate INPUT) x 1
3 audio input systems
Output terminals .... MONITOR OUTPUT
Video output, audio output (For recording) x 1
Input signal ... Video signal: 1.0 Vp-p ±0.2V (75 ohms load)
Audio signal: 500mV rms
Input impedance .... Video input: 75 ohms ±10%
Audio input: 22 kilo-ohms or more
Input signal polarity .... Synchronized negative
Output terminal signal ratings:
Output terminals
(VIDEO) .... Video signal: 1Vp-p (75 ohms load)
Audio signal: 500 mV rms (100% modulation)
Output impedance .... Video output: 75 ohms ±10%
Audio output: Less than 1 kilo-ohms
Sub woofer output: Less than 1 kilo-ohms

Tuner section

Circuit type .... Video signal detection:
PLL full synchronous detection
PLL digital synthesizer system
Audio multiplex: BTSC system
Reception channels ... VHF; CH2~CH13, UHF; CH14~CH69
CATV (STANDARD, AIR, IRC or HRC)
CATV 1-125 CH
Antenna terminals
.... Antenna terminal, 75 ohms UNBAL,
F-type connector (VHF, UHF MIXED)

Amplifier section

Effective output
Front both channels driven .... 2W + 2W
(THD. 1% 1 kHz, 16 ohms)
Built-in speaker system .... 10 cm (3-15/16 in) full range x 2

Electrical section, miscellaneous

Power requirements .... 120 V AC, 60 Hz
Power consumption .... 230 W, 480 VA (CSA)
External dimensions
SD-P62A3-K .... 1360 (W) x 635 (D) x 1523 (H) mm
53 9/16 (W) x 25 (D) x 59 31/32 (H) inch
SD-P55A3-K .... 1218 (W) x 578 (D) x 1417 (H) mm
47 15/16 (W) x 22 3/4 (D) x 55 25/32 (H) inch
SD-P50A3-K, SD-P50A3-Q
.... 1116 (W) x 578 (D) x 1340 (H) mm
43 15/16 (W) x 22 3/4 (D) x 52 3/4 (H) inch

Weight of main unit
SD-P62A3-K .... 111 kg (244 lb 12 oz)
SD-P55A3-K .... 104 kg (229 lb 5 oz)
SD-P50A3-K, SD-P50A3-Q .... 94 kg (207 lb 4 oz)

Wireless remote control unit

Operation system .... Infrared remote control system
Power source
Two DURACELL®"AA" MN1500 1.5 V
alkaline dry cell batteries
Dimensions .... 54 (W) x 19.4 (H) x 175 (D) mm
2 1/8 (W) x 3/4 (H) x 6 7/8 (D) inch
Weight .... 75 g (2.65 oz) (without batteries)

Accessories

Operating instructions 1
Warranty card 1
Remote control unit 1
DURACELL®"AA" MN1500 1.5V
Alkaline dry cell batteries 2

NOTE:
Specifications and design are subject to possible modifications without notice due to improvements.